

RYOBI® Phone Works Smartphone Compatiblity

	RPW-5000	RPW-1000	RPW-2000	RPW-1600	RPW-3000
	Inspection Scope	Laser Distance Measurer	IR Thermometer	Laser Level	Moisture Meter
iPhone 4	•	•	•	•	•
iPhone 4S	•	•	•	•	•
iPhone 5	•	•	•	•	•
iPhone 5C	•	•	•	•	•
iPhone 5S	•	•	•	•	•
iPhone 6	•	•	•	•	•
iPhone 6+	•	•	•	•	•

[•] The audio setting found in Settings under 'Accessibility' must have mono turned off.



G2	•	•	•	•	•
G3	•	•	•	•	•
Optimus	•	•	•	•	•
Flex	•	•	•	•	•

Google

Nexus 6	•	•	•	•	•
Nexus 5	•	•		•	•
Nexus 4	•	•	•	•	•

1 ONEPLUS

One • • • •	
-------------	--

SONY

Experia Z	•	•	•	•	•

	RPW-5000	RPW-1000	RPW-2000	RPW-1600	RPW-3000
SAMSUNG	Inspection Scope	Laser Distance Measurer	IR Thermometer	Laser Level	Moisture Meter
Galaxy Alpha	•	•	•	•	•
Galaxy S5	•	•	•	•	•
Galaxy S4*	•	•	•	•	•
Galaxy S4 Mini	•	•	•	•	•
Galaxy S3	•	•	•	•	•
Note 4	•	•	•	•	•
Note 3	•	•	•	•	•
Note 2	•	•	•	•	•
Note	•	•	•	•	•
Rugby Pro	•	•	•	•	•
Galaxy Avant	•	•	•	•	•

- * AT&T Samsung Galaxy S4 I337 and I337M Pending Compatibility Testing.
- The audio setting found in Settings under 'Accessibility' must have mono turned off.
- Users with Android devices must have the volume on their phone turned all the way up to maximum AFTER a Phone Works device has been plugged in.



Moto X	•	•	•	•	•
Droid Razr Maxx	•	•	•	•	•
Droid Razr	•	•	•	•	•
Droid Mini	•	•	•	•	•
Droid Turbo	•	•	•	•	•
Atrix	•	•	•	•	•



One M8**	•	•	•	•	•
One M7**	•	•	•	•	•

^{**} BoomSound must be turned off for Phone Works devices to function properly.







