


Travel adaptor with 2 USB Ports

Please read the instructions in details before using this appliance.

Product overview:

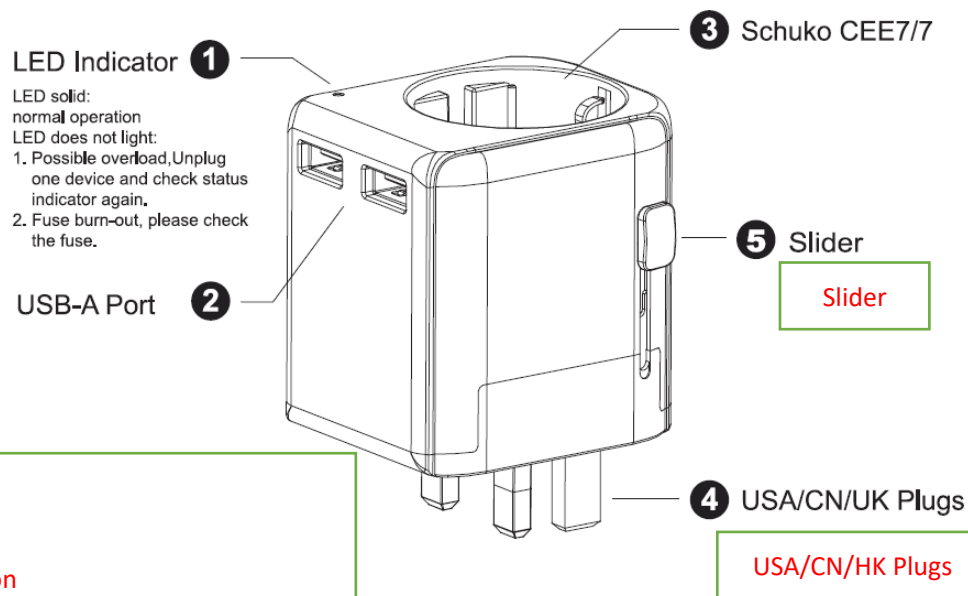

LED Indicator

Led solid:

Normal operation

LED does not light:

1. Possible overload. Unplug one device and check status indicator again.
2. Fuse burn-out, please check the fuse.

Ratings: 100-250Vac 10A MAX, 2500W MAX

USB Output: 5V dc 2.4A MAX(Total), 2.4A Max Per port

Dimensions: 60mm x 50mm x 60mm

 
Weight: 100g

Operating Temperature: 0°C - 35°C


Applicable Outlets

Adapter can accept Type E,F,C plugs.


Adapter can accept Type E,F,C Plugs





Type B

 


Type G

 

Type I

 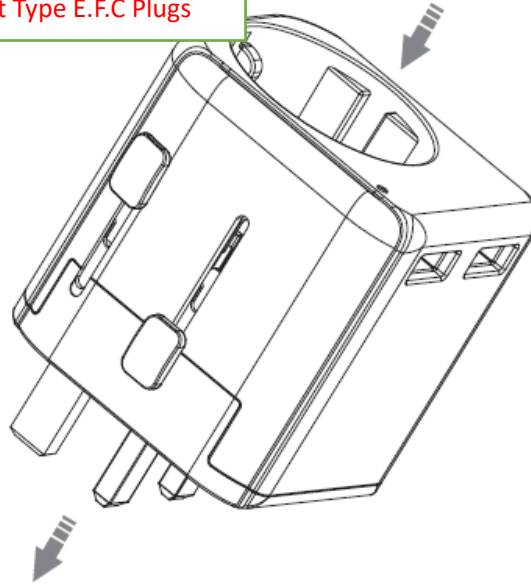

Type E

 

Type F



Type C

Adapter can plug into Type B, G, I outlets.


Adapter can plug into Type B, G, I outlets

How to use the adapter:

Attentions:


1. Please make sure that the button is reset when the button is pushed out and retracted to the bottom, and if the button is not reset, it means that the plug has not been pushed in place and will affect the normal use.
2. Only one plug-type can be used at one time by sliding the knob selection, other plug-pins are locked automatically.

Use US Plug:

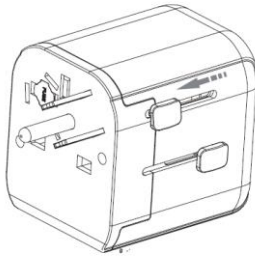


Slightly press the button and slide to the down for USA plug completely as shown.
 Recover the plug: press and hold the "USA" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Use CN Plug:

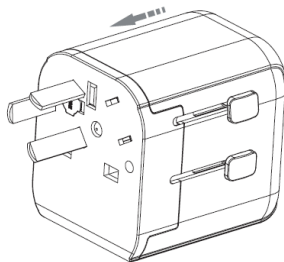


Slightly press the button and slide to the down for USA plug completely as shown.
 Recover the plug: press and hold the "CN" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Use UK Plug:

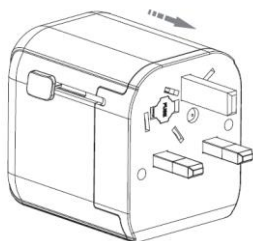

Slightly press the button and slide to the down for USA plug completely as shown.
 Recover the plug: press and hold the "UK" button to release and continue to pull up, until the plug completely pull the top and then release the button, then the button will reset and lock the plug.

Replacement of the fuse

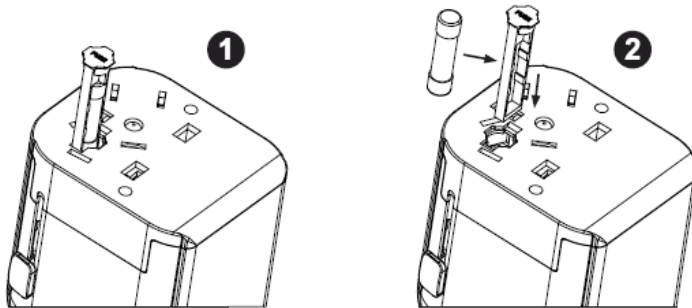

1. Tap up the fuse box marked “fuse” with a hard object, and then take out the fuse, as shown in Figure 1.

2. Insert a new fuse into the fuse box, and then insert the fuse box into the product, as shown in Figure 2.

Fuse specification: 250Vac, Max 10A, 6.3*25.4mm

Caution:

- Always disconnect Adapter from the outlet when not in use.
- Before use, please read this instruction carefully! This product does not convert voltage(AC-AC), in order to avoid possible damage to your device or other safety hazards, please make sure the power outlet you intend to use has the proper voltage to run your device before using this adapter.
- Indoor use only



CAUTION: Misuse can lead to electrical shock.



Waste electrical products should not be disposed of with household waste. Please recycle where facilities exist. Check with your Local Authority for recycling advice.

