500L



300L



Multi Functional Water Tank User's Manual


CONTENT

1.Technical data	1
1.1 Technical data	1
1.2 Inner Structure	2
2.Introduction	3
2.1Main components	3
2.2Outlines and dimensions	5
3.Application illustration	7
4.Installation	13
4.1 Installation of temperature sensor	13
4.2 Mechanical temperature controller	14
5 Wiring Diagram	14



1.Technical data

1.1 Technical data

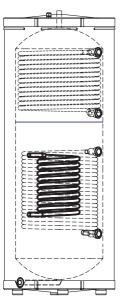


Model			MWT 300.4-3H	MWT 500.4-3H	
Water volume		L	300	500	
NI-4 diameter	Height	mm	1560	1850	
Net diension	Dia.	mm	630	700	
Inside shell ma	terial		304 stainle	ess steel	
Outside shell m	naterial		304s.s/pain	tion metal	
Insulation mate	Insulation material		Polyurethane injection foam		
Insulation thickness		mm	50		
Emtpy weight		kg	95	120	
Solar coil mate	Solar coil material		304 stainless steel		
Solar coil tube	Solar coil tube diameter		22	22	
Solar coil lengt	h	m	10	15	
Shower coil material			304 s.s		
Shower coil tube diameter		mm	22	22	
Shower coil length		m	20	20	
Electric heater		kw	3	3	



1.Technical data

1.2 Inner structure

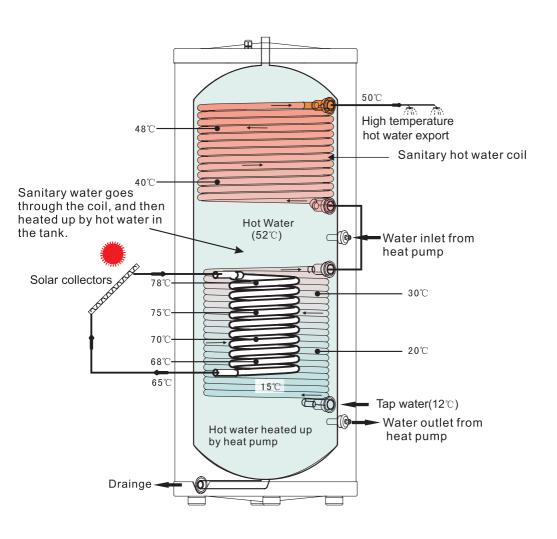





2.1 Main components

Item on	Name	Size
1	Water inlet from other heating source	G1"female
2	Water outlet to radiator	G1"female
3	Solar coil water inlet	G1"female
4	Handle	
5	Water inlet from radiator	G1"female
6	Solar coil water outlet	G1"female
7	Water inlet from floor heating	G1"female
8	Water outlet to other heating source	G1"female
9	Drainage	G3/4" female
10	Temperature meter	
11	Electric heater	3 KW
12	Shower coil 1 water outlet	G1"female
13	Shower coil 1 water inlet	G1"female
14	Shower coil 2 water outlet	G1"female
15	Water inlet from heat pump	G1"female
16	Water outlet to floor heating	G1"female
17	Shower coil 2 water inlet	G1"female
18	Water outlet to heat pump	G1"female
19	Temperature sensor hole	
20	Magnesium rod installation	G1"female
21	Electric heater	G2"female
22	Expansion tank	G3/4"male

MWT 300.4-3H

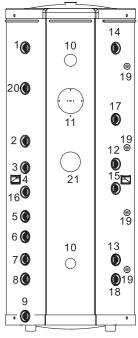

Front view

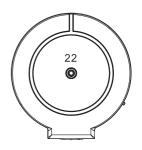


Top view




MWT 500.4-3H

Item on	Name	Size
1	Water inlet from other heating source	G1"female
2	Water outlet to radiator	G1"female
3	Solar coil water inlet	G1"female
4	Handle	
5	Water inlet from radiator	G1"female
6	Solar coil water outlet	G1"female
7	Water inlet from floor heating	G1"female
8	Water outlet to other heating source	G1"female
9	Drainage	G3/4" female
10	Temperature meter	
11	Electric heater	3 KW
12	Shower coil 1 water outlet	G1/2"female
13	Shower coil 1 water inlet	G1"female
14	Shower coil 2 water outlet	G1"female
15	Water inlet from heat pump	G1"female
16	Water outlet to floor heating	G1"female
17	Shower coil 2 water inlet	G1"female
18	Water outlet to heat pump	G1"female
19	Temperature sensor hole	
20	Magnesium rod installation	G3/4" female
21	Electric heater	G2"female
22	Expansion tank	G3/4"male

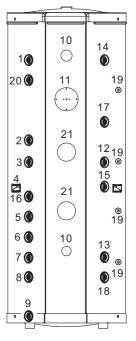

Front view

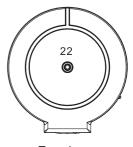


Top view





2.2 Outlines and dimensions


MWT 300.4-3H

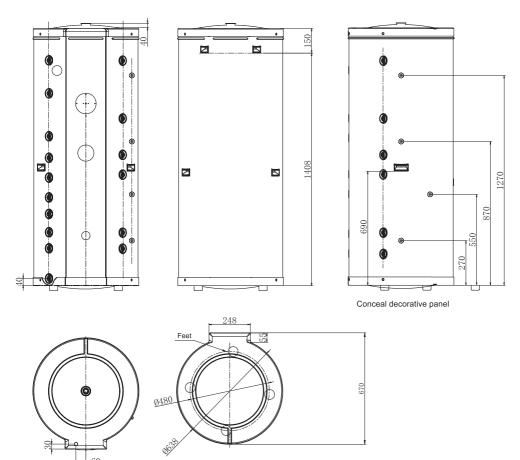


MWT 500.4-3H

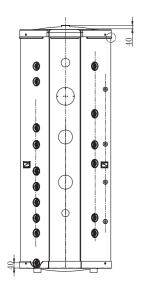

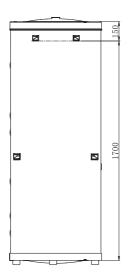


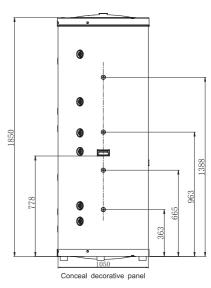

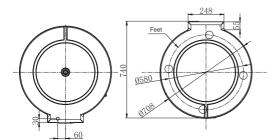




3.1 Total system graph

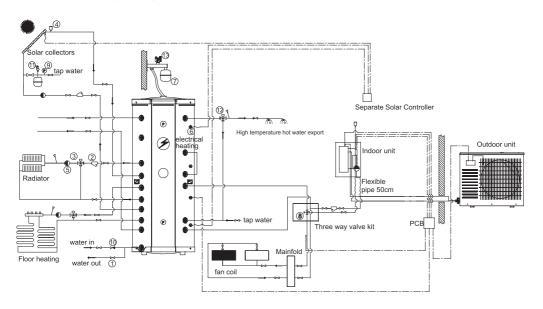

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	
2	filter ball	-5-	9	pressure gage	P
3	shunt valve	-₩-	10	non-return valve	->-
4	automatic air valve	Ą	11	T/P valve for solar system	\$
5	water pump	•	12	water mixing valve	→ \$-
6	sensor	~~	13	safety valve	to the second
7	expansion tank	P			




3.2. Air Water + Multifunctional Tank

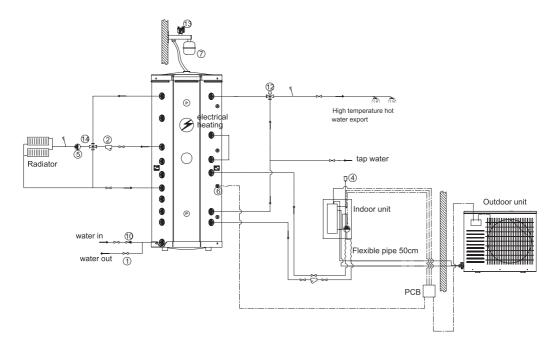

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	-100
2	filter ball	-5>-	9	pressure gage	P
3	shunt valve	→	10	non-return valve	₩
4	automatic air valve	Ţ	11	T/P valve for solar system	Ġ.
5	water pump	•	12	water mixing valve	-₩-
6	sensor	~~	13	safety valve	
7	expansion tank	P	14	water mixing valve	


3.3 Air Water+Multifunctional Tank+Solar Collectors

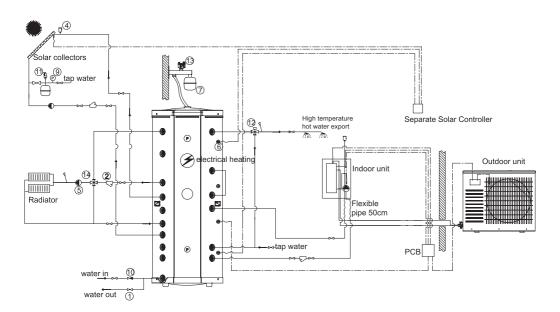

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	
2	filter ball	-5>-	9	pressure gage	P
3	shunt valve	-t×3	10	non-return valve	->-
4	automatic air valve	Ţ	11	T/P valve for solar system	â
5	water pump	•	12	water mixing valve	-₩-
6	sensor	~~	13	safety valve	
7	expansion tank	P	14	water mixing valve	




3.4 AW 24.4 To Tank In Combine With "pellets/wood/oil burner".

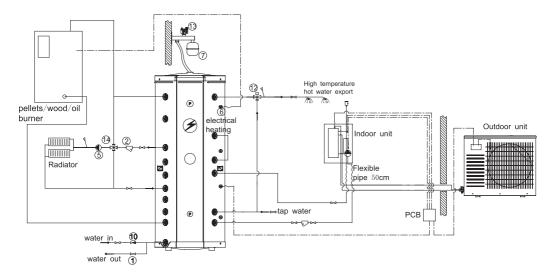

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	
2	filter ball	-5-	9	pressure gage	P
3	shunt valve	-1 2 51—	10	non-return valve	₽
4	automatic air valve	Ţ	11	T/P valve for solar system	-Gap
5	water pump	•	12	water mixing valve	-₩-
6	sensor	~~	13	safety valve	
7	expansion tank	P	14	water mixing valve	-1 4 1-


3.5 With bivalent valve and radiator system only

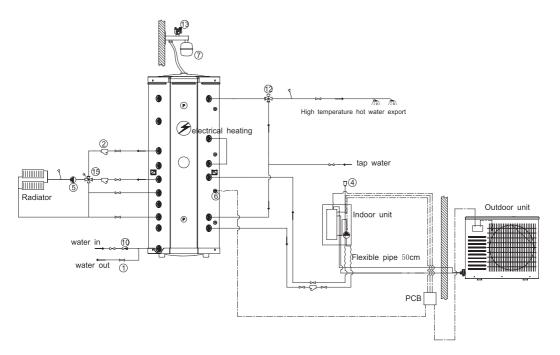

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	
2	filter ball	-6>-	9	pressure gage	P
3	shunt valve	-t×3	10	non-return valve	->-
4	automatic air valve	Q	11	T/P valve for solar system	â
5	water pump	•	12	water mixing valve	-₩-
6	sensor	~~	13	safety valve	
7	expansion tank	P	14	water mixing valve	<u></u>
			15	biavlent valve	*-



3.6 With bivalent valve, radiator and radiator

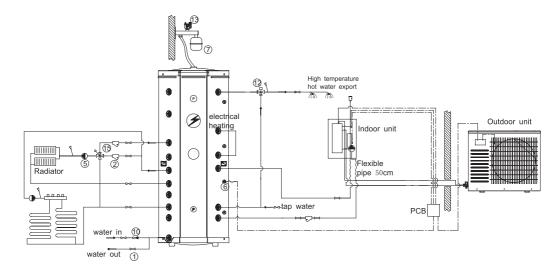

No	Name	legend	No	Name	legend
1	shutoff valve	->>-	8	electric the 3-way valve	
2	filter ball	-8>-	9	pressure gage	P
3	shunt valve	-tx1-	10	non-return valve	->-
4	automatic air valve	Ą	11	T/P valve for solar system	ê
5	water pump	•	12	water mixing valve	→ ₩
6	sensor	~~	13	safety valve	Ø
7	expansion tank	P	14	water mixing valve	
			15	biavlent valve	- N



4.Installation

4.1 Installation of temperature sensor

Temperature sensor should be put into the water tank as follows:

1. Remove the plastic cover for installing the temperature sensor on the water tank, screw off the plastic nut and remove the "O" ring.







2. Pass the temperature sensor through the plastic nut and reinstall the $\mbox{"O"}$ ring.







3. After the temperature sensor passes through the plastic cover and completely goes into the temperature sensor hole on the tank, please screw tightly the plastic nut.









4.Installation

4.2 Mechanical temperature controller

When the water temperature gets or higher than the set temperature, the electric heater will be turned off.





 30° C is the lowest set Temp.

75 °C is the highest set Temp.

Note: There are several reserved places for temperature sensors on the water tank, please choose the suitable ones according to real application.



5. Wiring Diagram

