



ALASVALO | DOWNLIGHT ARMATUR | DOWNLIGHT

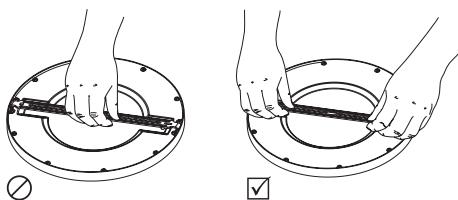

Ennen asennusta, irrota kannake valaisimesta.

Before installation, take out the bracket from panel.

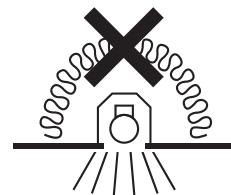


Valaisinta ei saa asentaa suoraan eristemateriaaliin.


Denna armatur är inte avsedd för att täckas med värmeisolering.

The luminaire is not suitable for covering with thermally insulated material.


PINTA-ASENNUS / WITHOUT MOUNTING HOLE

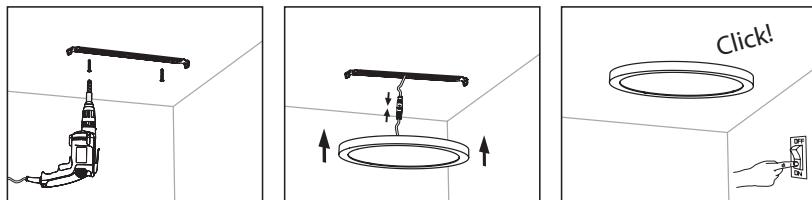


VALAISIMEN IRROTUS / UNINSTALLING

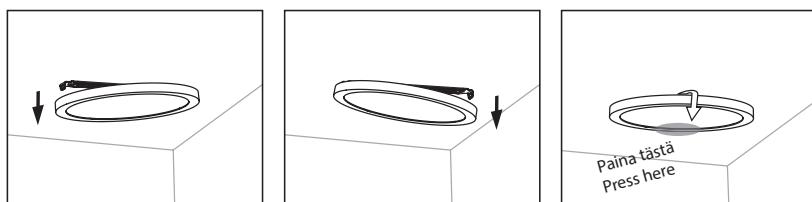

PUOLIUPPOASENNUS / WITH MOUNTING HOLE READY

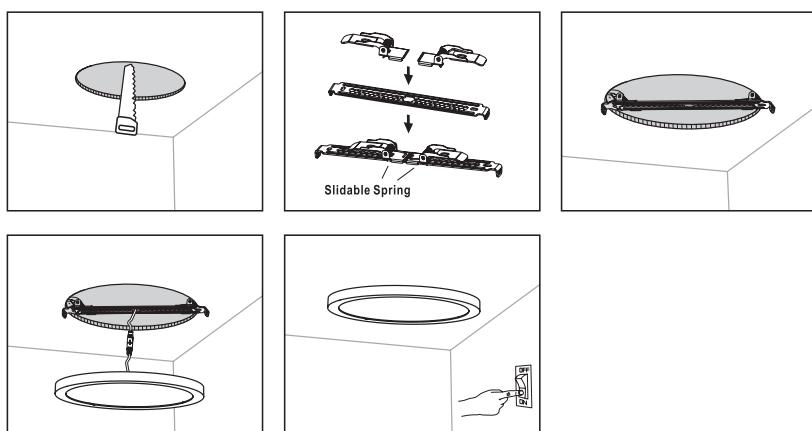

VALAISIMEN IRROTUS / UNINSTALLING

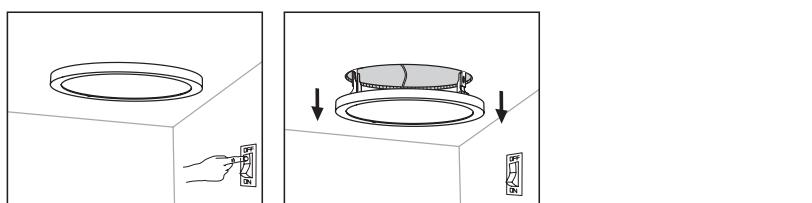

Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainostaan syöttöjännitettä ja taajuutta joka on merkity valaisimeen/liitintälaitteeseen. Kytke virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa. Valonlähde ei voi vaihtaa. Vaihda tilalle uusi valaisin, jos valonlähde rikkoutuu (⚠).

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt av stömmen för installation eller service. Denna monteringsanvisning bör sparas och finns tillgänglig vid installation eller framtida service. Ljuskälla kan inte bytas ut, vänligen byt ut till en ny armatur om ljuskällan går sönder (⚠).

Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver.

Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance. The light source of this fixture cannot be replaced, please replace a whole new fixture if the light source is broken (⚠).