


Valaisinkaluste ei sis. / Upphäng ej inkluderat / Electrical fitting not included

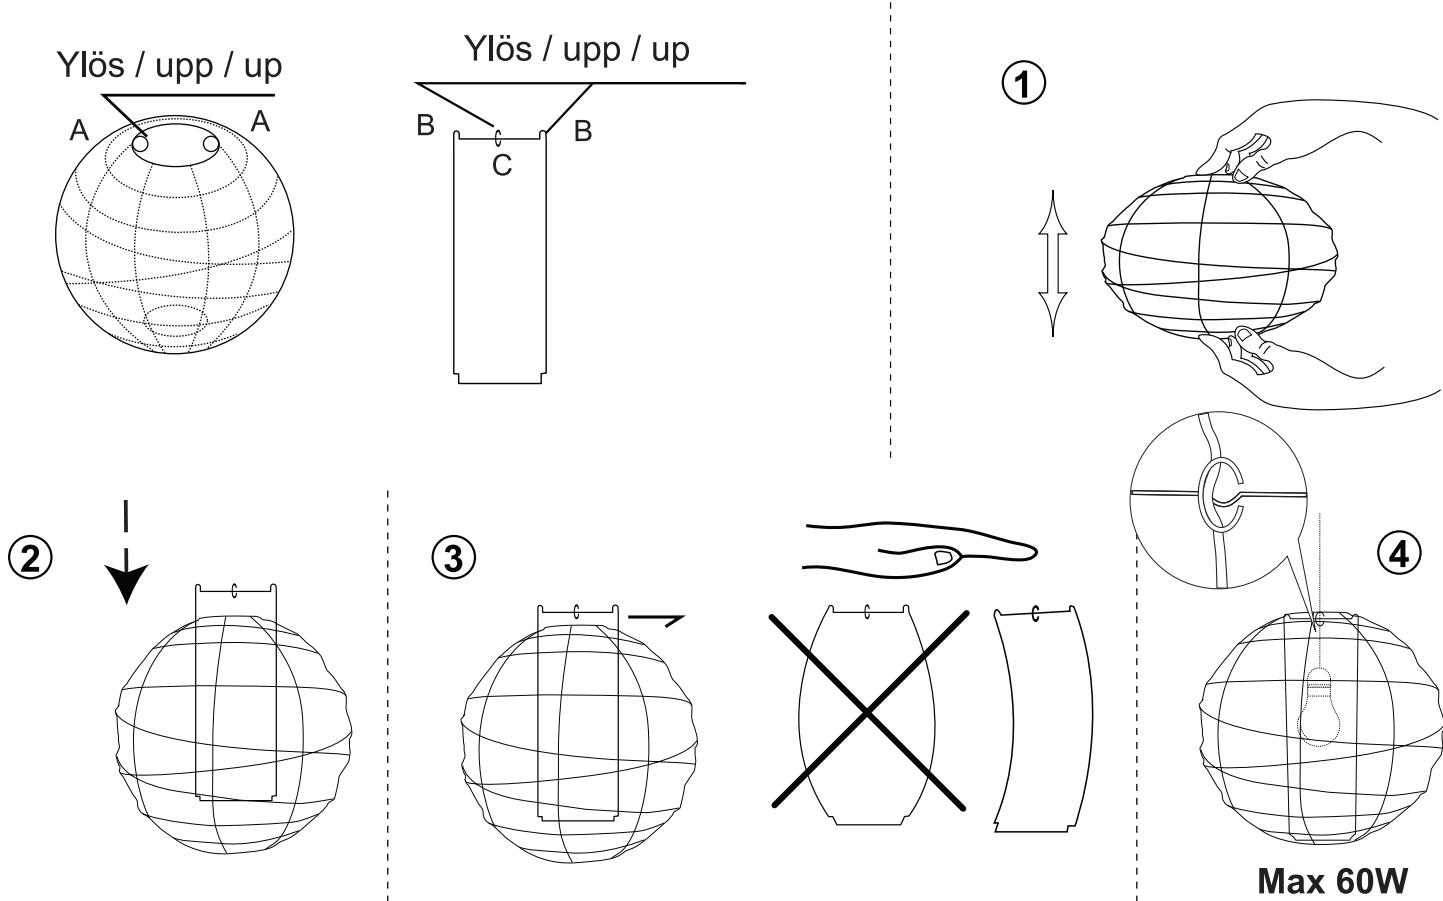

## FIN

1. Laajenna paperivarjostin varovaisesti kuvan 1 osoittamalla tavalla.
2. Aseta expanderi varjostimeen kuvan 2 osoittamalla tavalla.
3. Asenna expanderi varjostimeen kuvan 3 osoittamalla tavalla, korokkeet B asennetaan silmukoihin A. Tämän tulsi tehdä erittäin varovaisesti niin ettei varjostin vaurioidu.
4. Asenna (erikseen hankittava) valaisinkalusteen johto pidikkeen (C) läpi varjostimeen niin että poltin asettuu varjostimen keskelle (tärkeää). **Korkein saliitu polttimon teho on 60W**

## SWE

1. Utvidga rispappers-skärmen enligt bild 1.
2. Placer expandern i skärmen enligt bild 2.
3. Installera expanderi i skärmen enligt bild 3, förhöjningarna B i expandern placeras i öglorna A i skärmen. Detta bör göras försiktigt, så att inte skärmen skadas.
4. Installera upphängets (ei inkluderat) kabel genom hållare C, så att brännaren kommer i centrum av skärmen (viktigt). **Brännarens största tillåtna effekt är 60W.**

## EN

1. Expand the shade as shown in picture 1
2. Place the expander in the shade as shown in picture 2
3. Install the expander as shown in picture 3, the notches B in the expander are to be placed in the loops A of the shade. Be very careful when doing this, so that the shade is not damaged.
4. Install the cable of the electrical fitting (not included) through the holder C, so that the bulb will be positioned in the center of the shade (important). **The maximum allowed wattage of the bulb is 60W**