
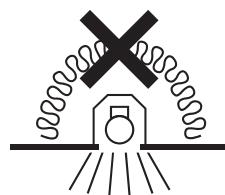


Plano

IP20  -O- 5 x 2,5 **-O-** 3 x 2,5 **-O-** 3 x 1,5 **DALI-2** PF≥0.9 



Moduulivalaisin | Modularmatur | Modular luminaire

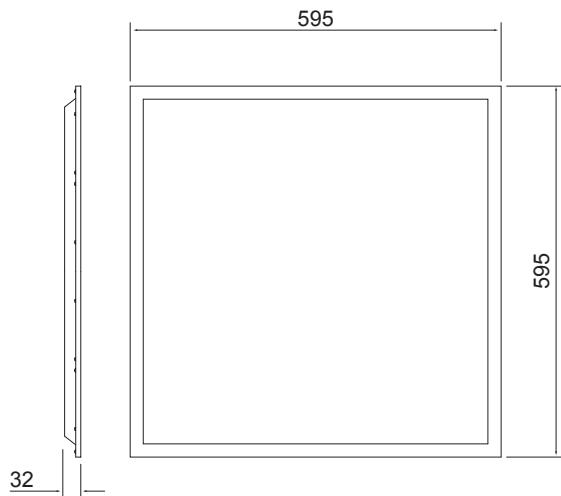


Valaisinta ei saa asentaa suoraan eristemateriaaliin.

Denna armatur är inte avsedd för att täckas med värmeisolerande material.


The luminaire is not suitable for covering with thermally insulated material.

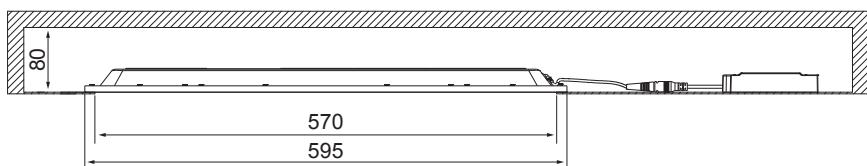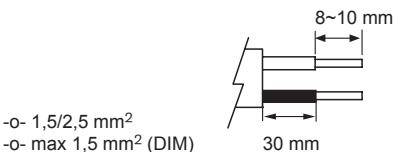





On/off / DIM

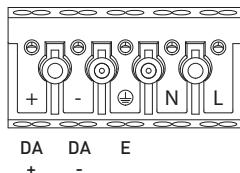

E = Maadoituksen jatkaminen / päätyminen
E = Anslutning / avslutning av jordningsledning
E = Continuity / termination of earth wires

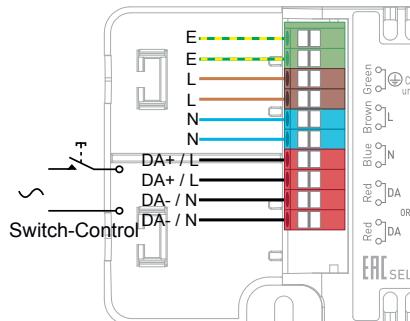

Dali-2
Suorapainikeohjaus (230V)
Push-button control (230 V)
Tryckknapsstyrning (230 V)

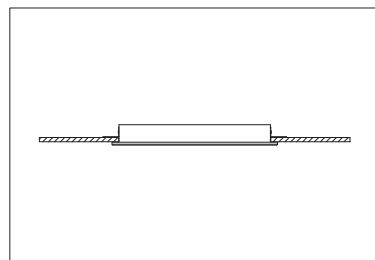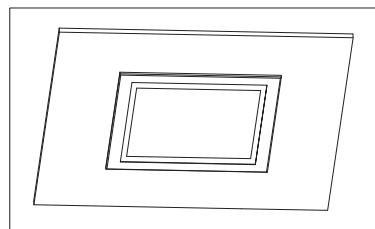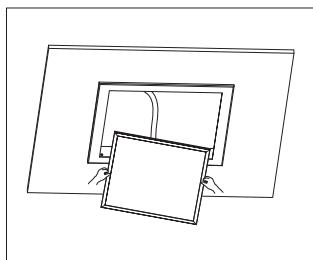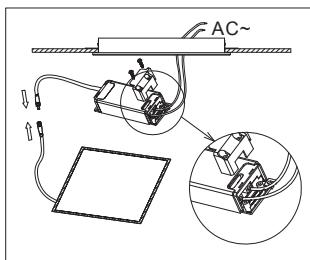

FI Tämä tuote sisältää energiatehokkuusluokan E valonlähteitä.

Valaisimen saa asentaa vain sähköalan ammattilainen. Käytä ainostaan syöttöjännettä ja taabuat jo ka on merkity valaisimeen/liitintälaitteeseen. Kytke virta pois päältä ennen asennusta tai huoltoa. Tämä asennusohje on säilytettävä ja sen on oltava käytössä asennuksessa ja huollossa. Tämän valaisimen valonlähte ei ole vaihdettavissa. Kun valonlähte rikkoutuu, koko valaisin on poistettava käytöstä.

SE Denna produkt innehåller en ljuskälla med energieffektivitetsklass E.

Vi rekommenderar att installationen görs av en behörig elektriker. Använd endast driftspänning och frekvens som är märkt på armaturen/förkopplingsdonet. Bryt strömmen före installation eller service. Denna monteringsanvisning bör sparas och finnas tillgänglig vid installation eller framtida service. Ljuskällan till denna armatur kan inte bytas ut. När ljuskällan når sin livslängd ska hela armaturen bytas ut.

EN This product contains a light source of energy efficiency class E.

Only a professional electrician is allowed to do the installation. Use only rated voltage and frequency as marked in the fixture/driver. Switch off the current before installation or service. This mounting instruction must be kept available during installation and for future maintenance. The light source of this luminaire is not replaceable; when the light source reaches its end of life the whole luminaire shall be replaced.