


SIT 2047-2
531823

SE SERVICEINSTRUKTION - Byte av drossel för F470

GB SERVICE INSTRUCTIONS - Replacement of choke for F470

FI HUOLTO-OHJE - Kuristimen vaihto mallissa F470

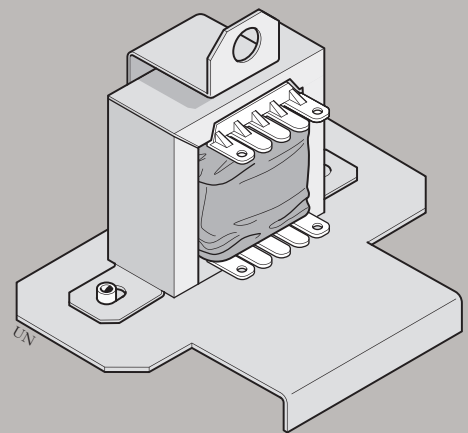

 **NIBE**


English

General

These service instructions describe switching the supply cables for the compressor, which must be carried out when replacing the choke on NIBE F470. Read through all of the instructions before starting work.

CONNECTION

When replacing choke in F470, check that the supply to the compressor is connected as shown in the chart below. Cable W112 (brown) and the neutral wire in cable W113 (blue) must be connected to the input terminal block X1 on the EMC board.

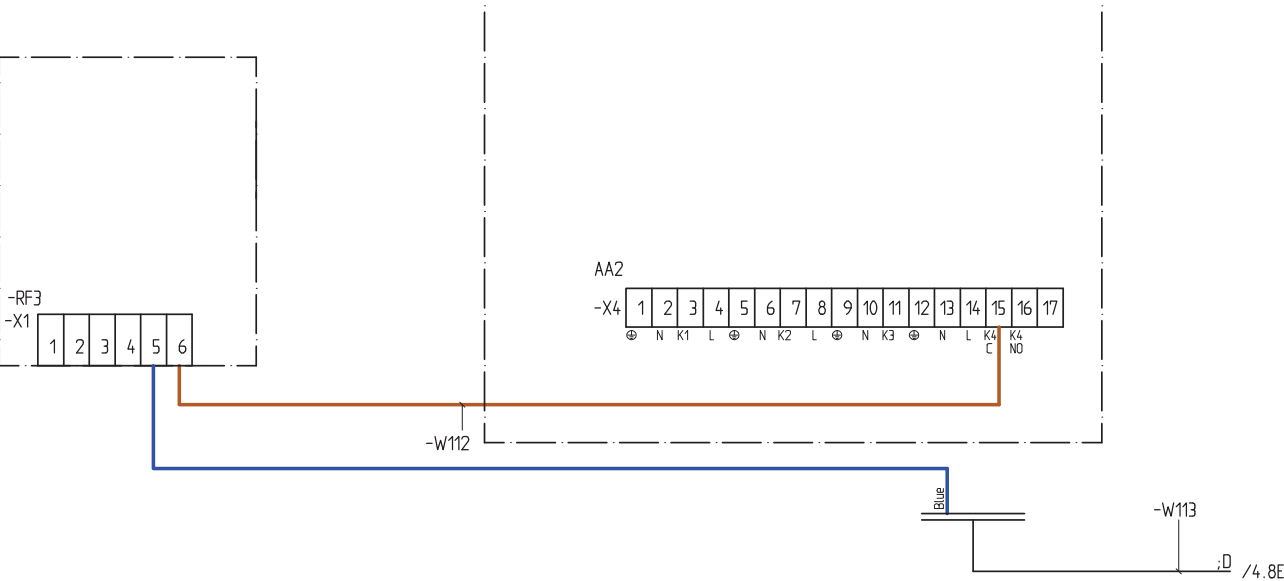

CONTENTS

Quantity	Description
----------	-------------

1 x	Choke
-----	-------



NOTE

The installation must be carried out by qualified personnel in a professional manner and according to applicable regulations.


Finnish

Yleistä

Tässä huolto-ohjeessa selostetaan kompressorin syöttökaapelien kytkentä, joka tulee suorittaa NIBE F470:n kuristimen vaihdon yhteydessä. Lue tämä ohje huolella ennen töiden aloittamista.

KYTKEMINEN

F470:n kuristimen vaihdon yhteydessä on tarkastettava, että kompressorin syöttö on kytketty alla olevan kytkentäkaavion mukaan. Kaapeli W112 (ruskea) ja nollajohdin kaapelissa W113 (sininen) kytketään EMC-kortin tuloliittimeen X1.

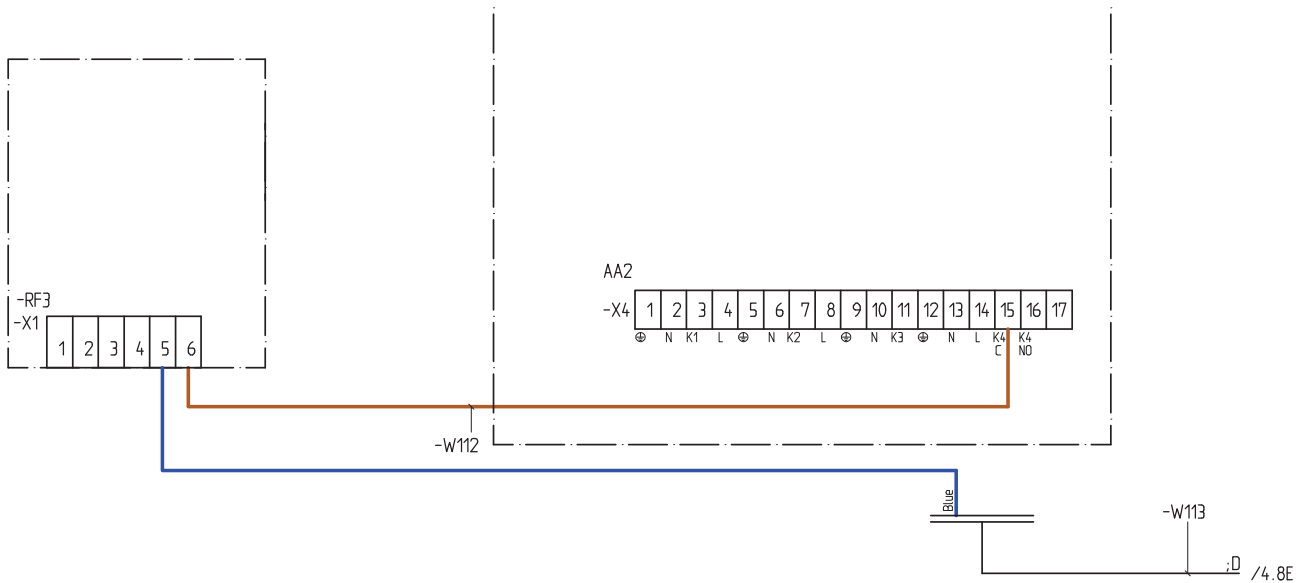

SISÄLTÖ

Lukumää- Kuvaus rä

1 kpl Kuristin



HUOM!

Asennuksen saa suorittaa vain valtuutettu henkilöstö asianmukaisella tavalla voimassa olevien määräysten mukaan.

NIBE Energy Systems
Hannabadsvägen 5
Box 14
SE-285 21 Markaryd
info@nibe.se
nibe.eu

SIT SV 2047-2 531823

This manual is a publication from NIBE Energy Systems. All product illustrations, facts and specifications are based on current information at the time of the publication's approval. NIBE Energy Systems makes reservations for any factual or printing errors in this manual.

©2020 NIBE ENERGY SYSTEMS

