


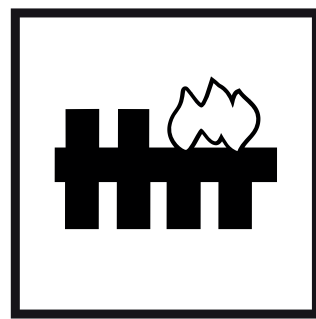

POLTTAMINEN

1. ASETA PELLETTIBOXI SITEN, ETTÄ SE PEITTÄÄ ARINAN MAHDOLLISIMMAN HYVIN.
2. TÄYTÄ BOXI PELLETEILLÄ YLÄREUNOJEN TASOLLE. LISÄÄ KORKEINTAAN 1/2 DESILITRAA SYTYTYSNESTETTÄ TAI SYTYTYSPALA PELLETTIEN PÄÄLLE.
3. SYTYTÄ PELLETTIT JA SÄÄDÄ ARINAN ILMANTULO TÄYSIN AUKI. PIDÄ LUUKUN ILMA-AUKOT KIINNI.


PELLETIT SYTTYVÄT JA PALO VOIMISTUU NOIN 15 MIN. KULUESSA KUN LIEKKI SAA ILMAA BOXIN SIVUILTA.

LIEKIN VOIMAKKUUTTA VOIT MUUTTA A ARINAN ILMANTULO A SÄÄTÄMÄLLÄ. PALOA IKA NOIN 1 TUNTI LIEKIN VOIMAKKUUDESTA JA ILMAMÄÄRÄSTÄ RIIPPUEN. OIKEA LIEKIN VOIMAKKUUS JA ILMAMÄÄRÄ ON TESTATTAVA UUNIKOHTAISESTI.

KUN PELLETTIT OVAT PALANEET HIILIVAIHEESEEN (SININEN LIEKKI), VOIT LISÄTÄ ARINAN ILMANTULO A LOPPUPALAMISEN VOIMISTAMISEKSI.

ÄLÄ SULJE SAVUPELTIÄ ENNEN KUIN HIILLOS ON TUMMUNUT (HÄKÄVAARAN VUOKSI) !

M590150600

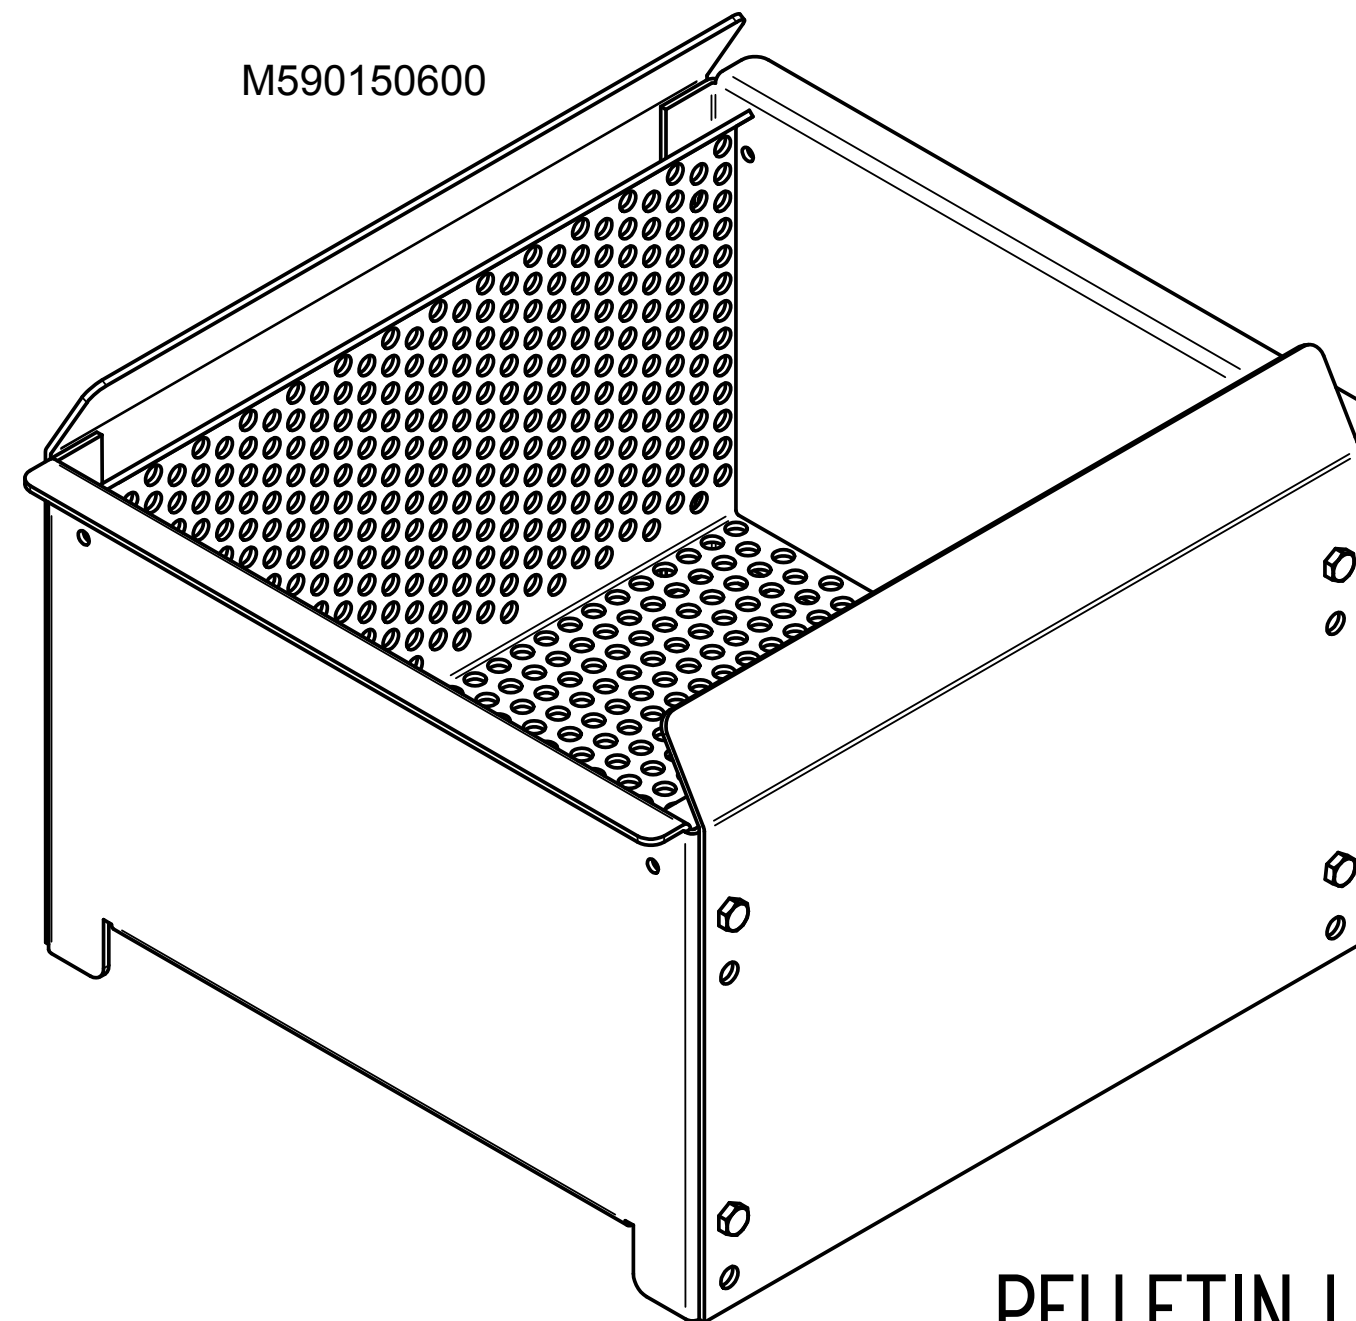

49900030

PELLETTIBOXI

ARINALLISIIN ja ARINATTOMIIN
TULISIJOIHIIN

250 X 280 X 190mm
TILAVUUS 5,0 LITRAA


PELLETIN LISÄÄMINEN

KUN PELLETTIT OVAT PALANEET NOIN 2 CM PAKSUUTEEN (PUNAINEN HIILLOS) PELLETTIÄ VOIDAAN LISÄTÄ KAHDELLA ERI TAVALLA.

1. VEDÄ LOPUT HEHKUVAT HIILET BOXIN ETUREUNAAN JA LISÄÄ PELLETTIÄ (NOIN 2 LITRAA) HIILLOKSEN TAAKSE SITEN, ETTÄ HIILLOS EI JÄÄ PELLETTIEN ALLE.
- TAI
2. LISÄÄ PELLETTIÄ HIILLOKSEN PÄÄLLE BOXIN KESKELLE (NOIN 1.5 LITRAA) SITEN ETTÄ PELLETTI EI PEITÄ HIILLOSTA KOKONAAN.

NÄIN TOIMIMALLA VOIT JATKAA POLTTAMISTA HALUAMASI AJAN.

ÄLÄ LISÄÄ PELLETTIÄ KUUMAN HIILLOKSEN PÄÄLLE SITEN, ETTÄ HIILLOS PEITTYY KOKONAAN ! SYTTYMINEN KESTÄÄ KAUA JA MUODOSTAA PALJON SAVUA !

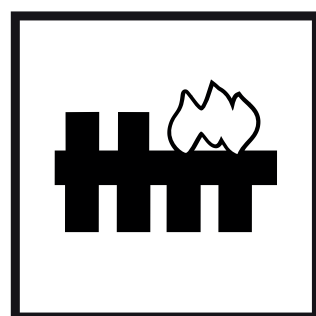

BURNING


1. PLACE THE PELLET BOX SO THAT IT COVERS THE GRATE AS WELL AS POSSIBLE.
2. FILL IN THE BOX WITH THE PELLETS TO THE UPPER EDGE. ADD 1/2 DECILITRES OF LIGHTER FLUID ON THE PELLETS.
3. FIRE THE PELLETS AND ADJUST THE INCOMING AIR OF THE GRATE IN AN OPEN POSITION. KEEP THE AIR HOLES OF THE FIREPLACE DOOR CLOSED.

THE FIRE GETS STRONGER AS THE PELLETS CATCH FIRE IN 15 MINUTES TIME.

YOU CAN ADJUST THE POWER OF THE FLAME BY CHANGING THE INCOMING AIR OF THE GRATE. BURNING TIME IS 1 HOUR DEPENDING ON THE STRENGTH OF THE FLAME AND THE AMOUNT OF INCOMING AIR. THE RIGHT STRENGTH OF THE FLAME AND INCOMING AIR MUST BE TESTED CASE BY CASE.

AS THE PELLETS HAVE BURNED TO A COAL PHASE (BLUE FLAME) YOU CAN ADD INCOMING AIR TO MAKE THE AFTER-BURNING STRONGER.

DO NOT CLOSE THE SMOKE DAMPER UNTIL THE COALS HAVE EXTINGUISHED (DANGER OF CARBON MONOXIDE) !

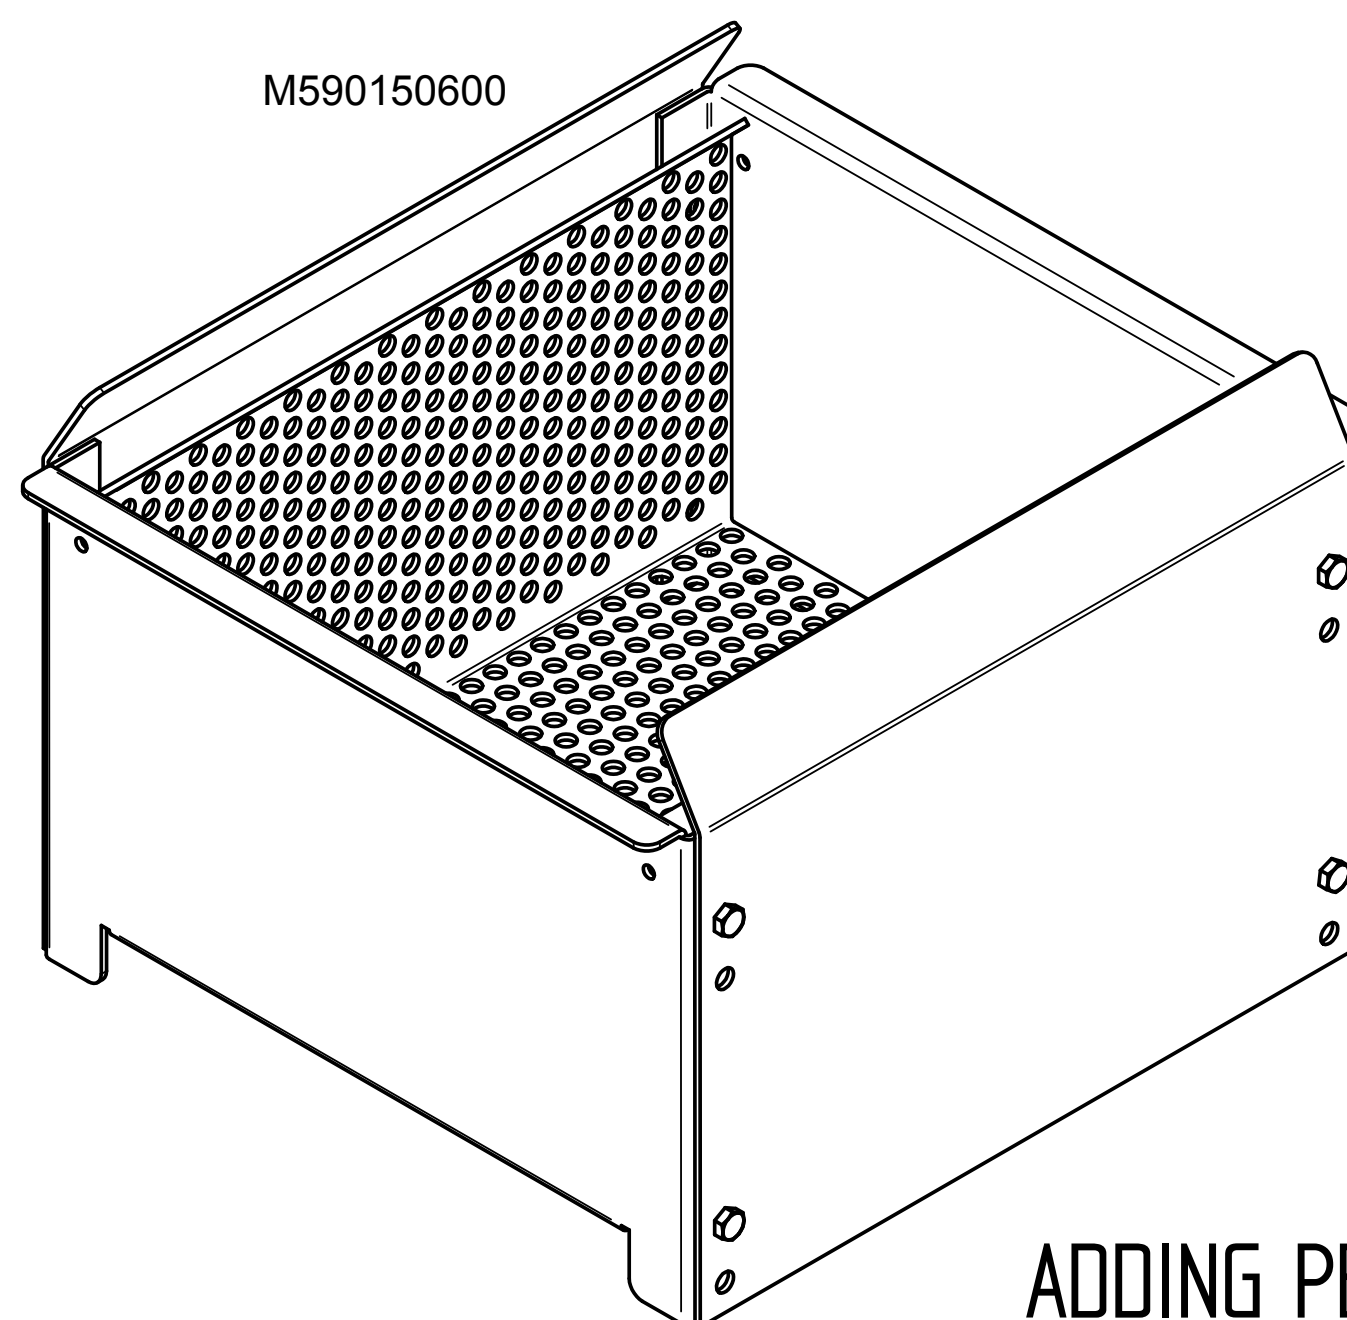

49900030 PELLET BOX

FOR FIREPLACES WITH GRATE
AND WITHOUT GRATE
250X280X190mm
CAPACITY 5,0 LITRES

ADDING PELLETS

AS PELLETS HAVE BURNED TO RED COALS (2 CENTIMETERS LEVEL) YOU CAN ADD PELLETS IN TWO DIFFERENT WAYS.

1. PULL THE REST OF THE RED COALS TO THE FRONT OF THE BOX AND ADD 2 LITRES OF PELLETS TO THE BACKSIDE OF THE COALS SO THAT THE RED COALS ARE NOT COVERED.

OR

2. ADD 1,5 LITRES OF PELLETS ON TOP OF THE RED COALS TO THE MIDDLE OF THE BOX SO THAT IT DOES NOT COVER ALL OF THE RED COALS. IN THIS WAY YOU CAN KEEP BURNING FOR SOME TIME.

DO NOT ADD PELLETS ON TOP OF THE RED COALS BY COVERING THEM COMPLETELY ! FIRING THE PELLETS TAKES A LONG TIME AND IT CREATES A LOT OF SMOKE !