



PROGRAMA CLASSIC FRAME SCREW, UNHARDENED

Mounting in wood, concrete and brick

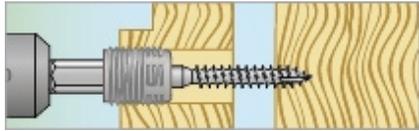


1. Mounting in wood


Installation depth min. 45 mm. Drill through 14 mm holes with Frame screw drill DLT 5. If the frame is pre-drilled, installation takes place directly.

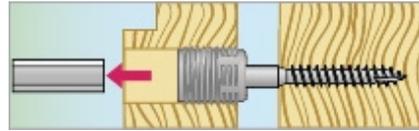

2. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.

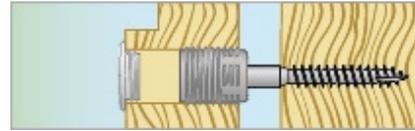

3. Cover the hole with a plastic cover in appropriate color. Also available in wood.

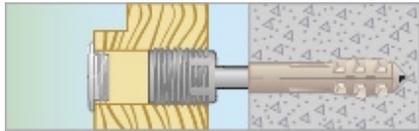

Mounting in concrete / brick

Use Progama 70 or 90 mm together with Nylonplug N. Use Frame screw tool UN-T or KMN, use the same tools for adjusting.