


## Installation North America only



For full installation videos of  
screwing or gluing the panels  
scan QR code or visit  
[fibosystemusa.com](http://fibosystemusa.com)

### HOW TO SEAL FIBO WALL PANELS


For watertight system, apply Fibo Seal as shown beneath. All cutting surfaces must be sealed, also when drilling holes or pipe penetration. Incorrect installation will void your warranty. Use Fibo Clean and Fibo Wipes to remove excessive sealant. Film from cleaning accessories shall be removed immediately from the panels.

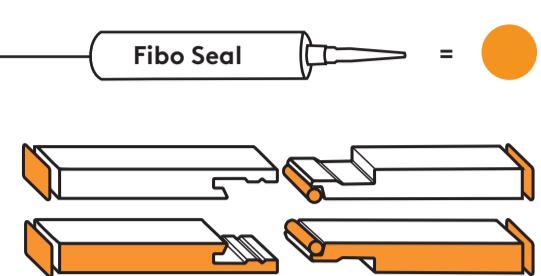

### 1 CHOOSE PREFERRED BACKWALL




Make sure the backwall is level and the corners are straight 90°. For uneven walls we recommend using OSB Strips and if necessary extra shims to even out.

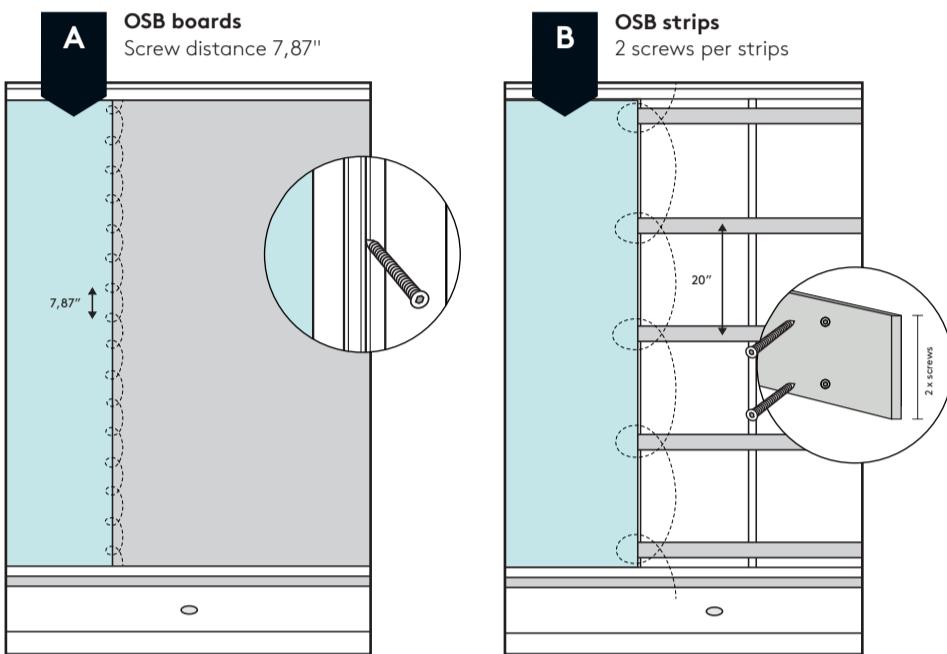


### 2 NICHES AND FAUCETS




#### Faucet

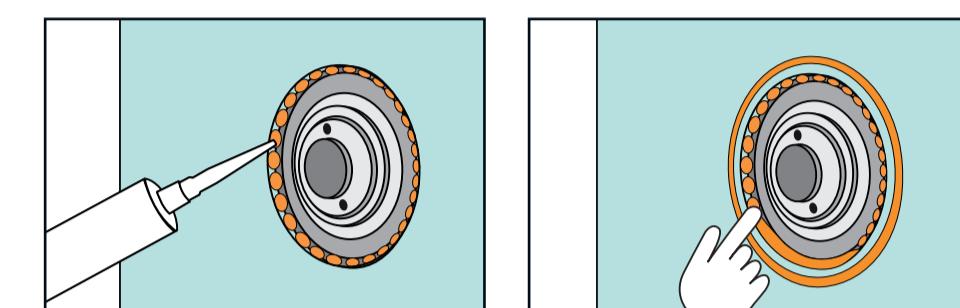

#### Niche

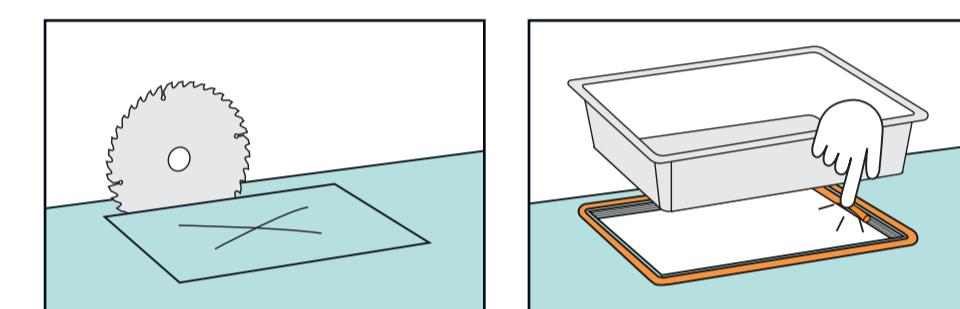

### 3 ALCOVE - STANDARD WALLPANEL

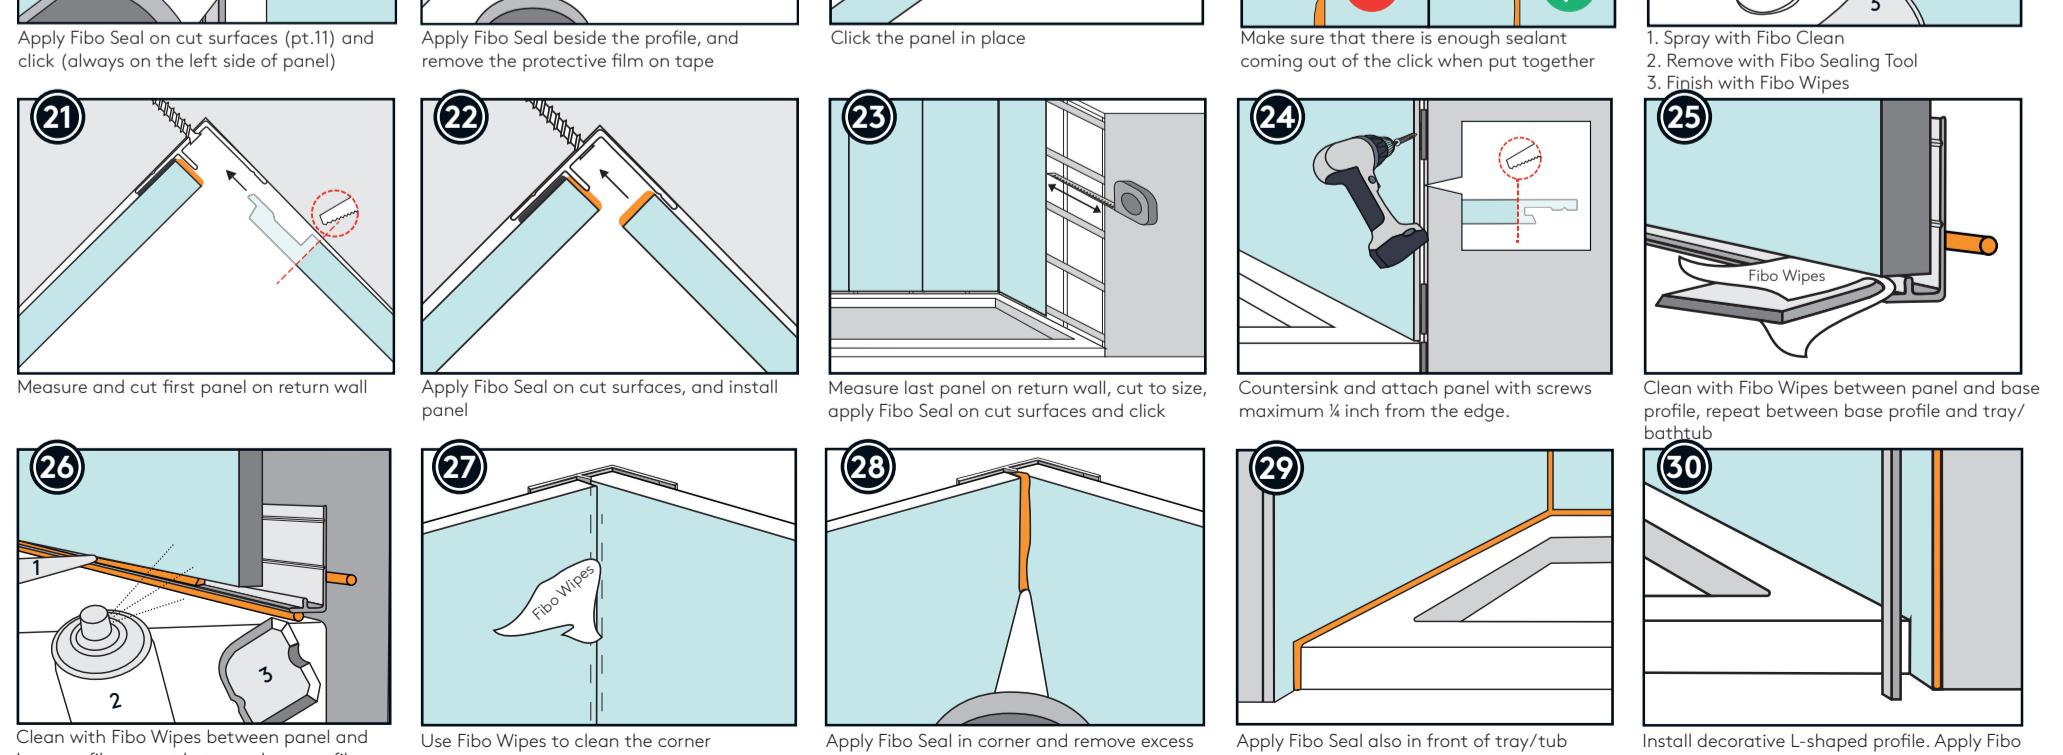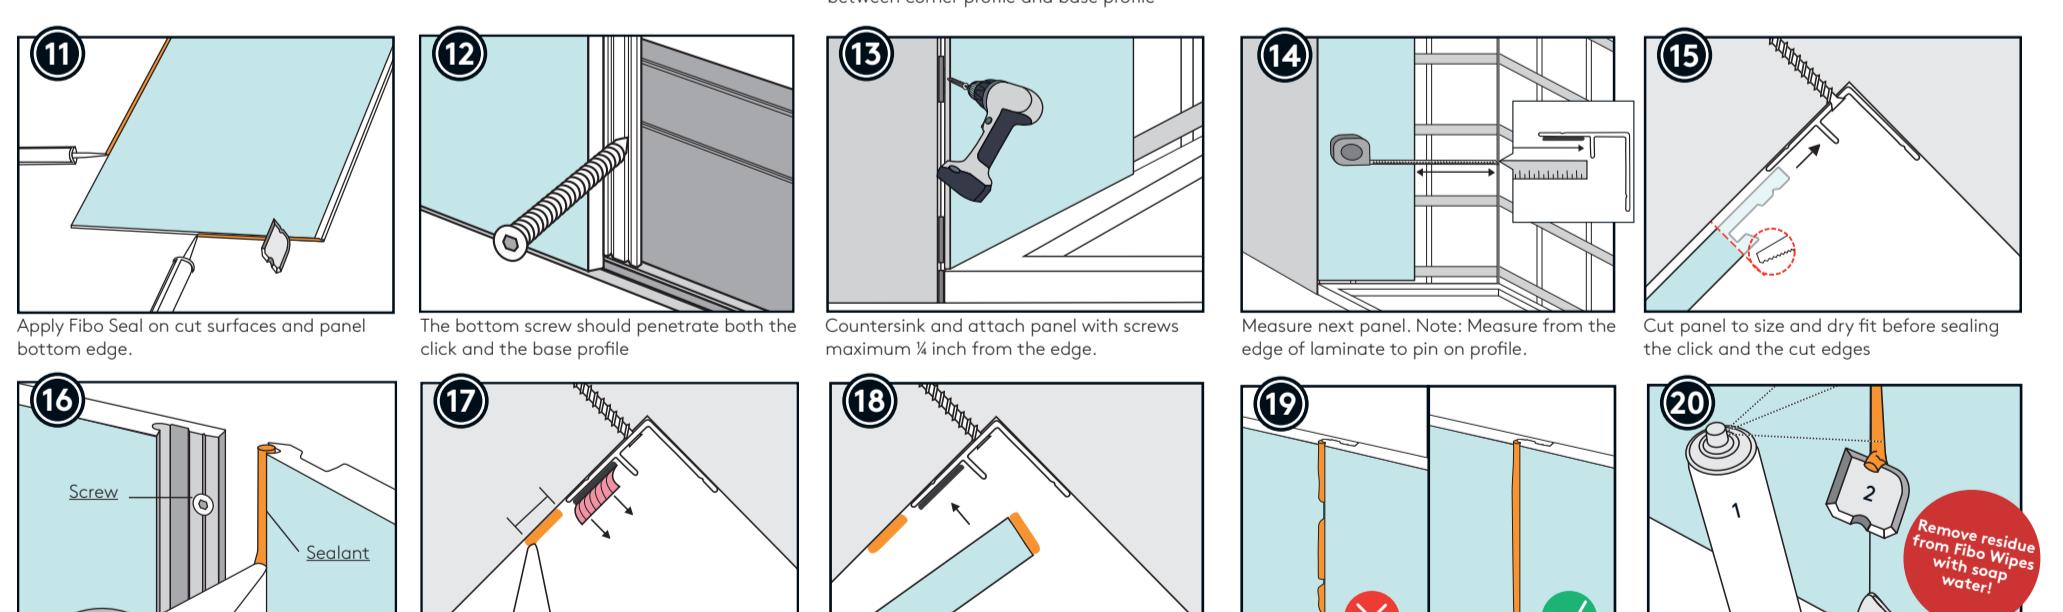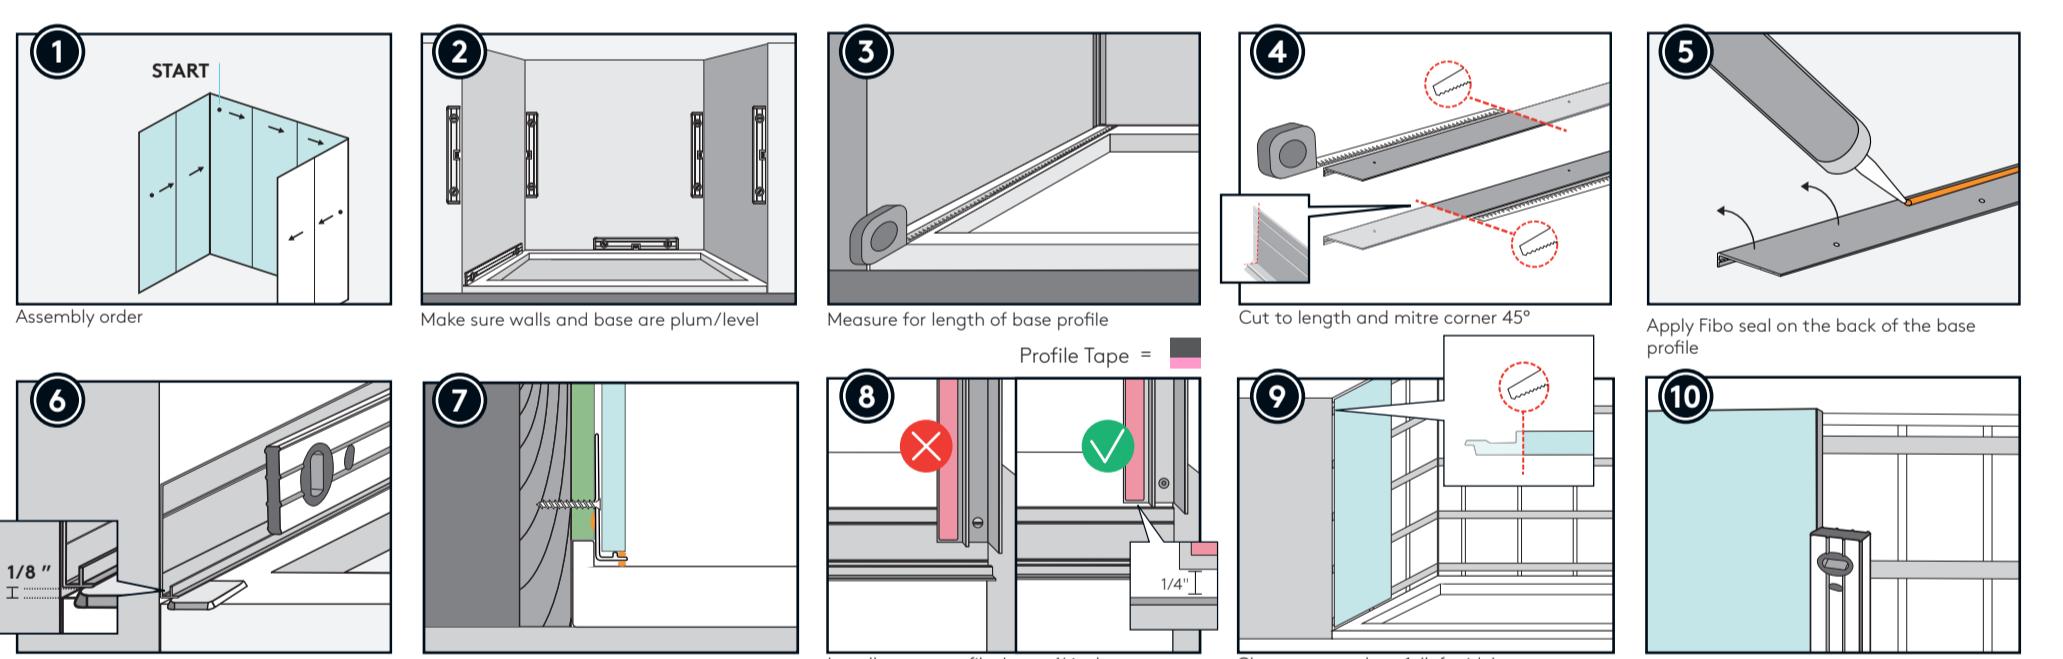


Fibo N° WP0423

# Wall panel

## Veggpanel

READ  
BEFORE  
OPENING  
PACKAGE!

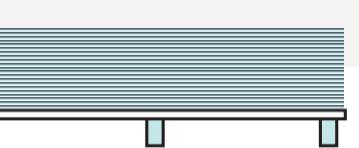


#### Storage | Lagring

Keep panels dry stored and flat in package until installation.  
Lagre panelene tørt og lagende i emballasjen frem til montering.





#### Min. 72 hours | Min. 72 timer

Store panels in package in room conditions for at least 72 hour acclimatization (longer if they have been kept in a cold area). Humidity in the room must be above 30% during installation.  
Akklimatiser emballerte paneler i romtemperatur i minst 72 timer (mer hvis de har vært på kaldt lager). Luftfuktigheten i rommet må være mer enn 30% både under og etter montering.

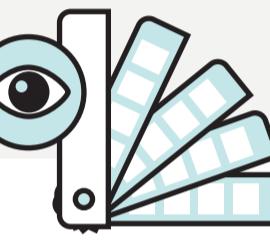

#### Visual control | Visuell kontroll

Colourmatch and check for flaws before installation.  
Kontroller farge og sjekk for andre feil før montering.

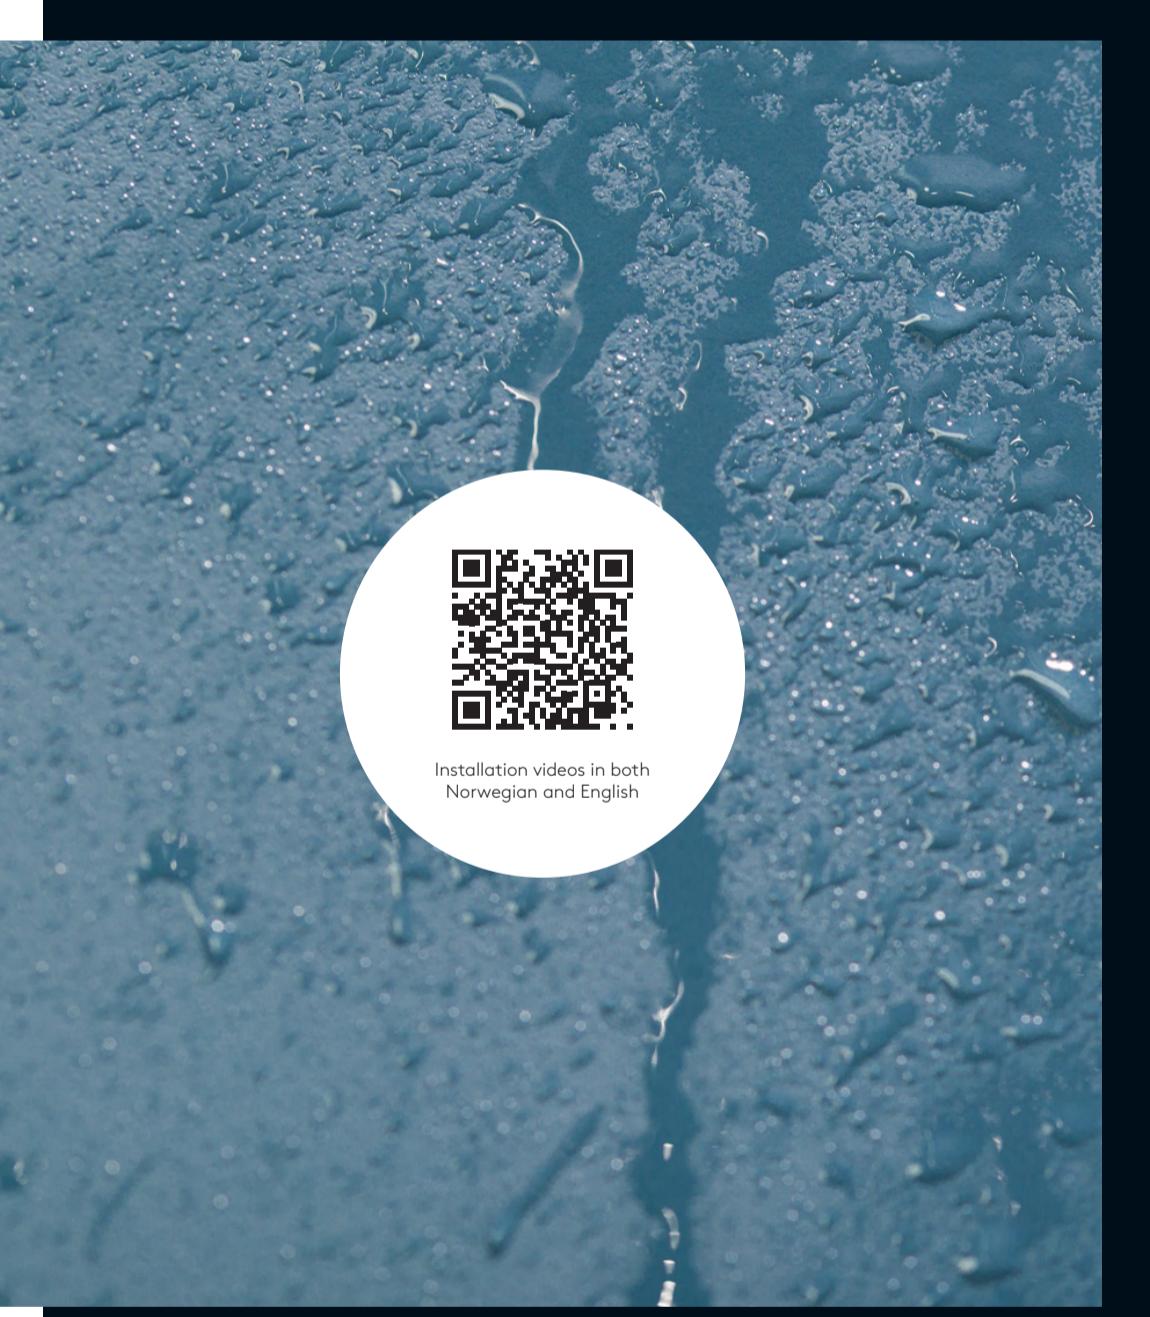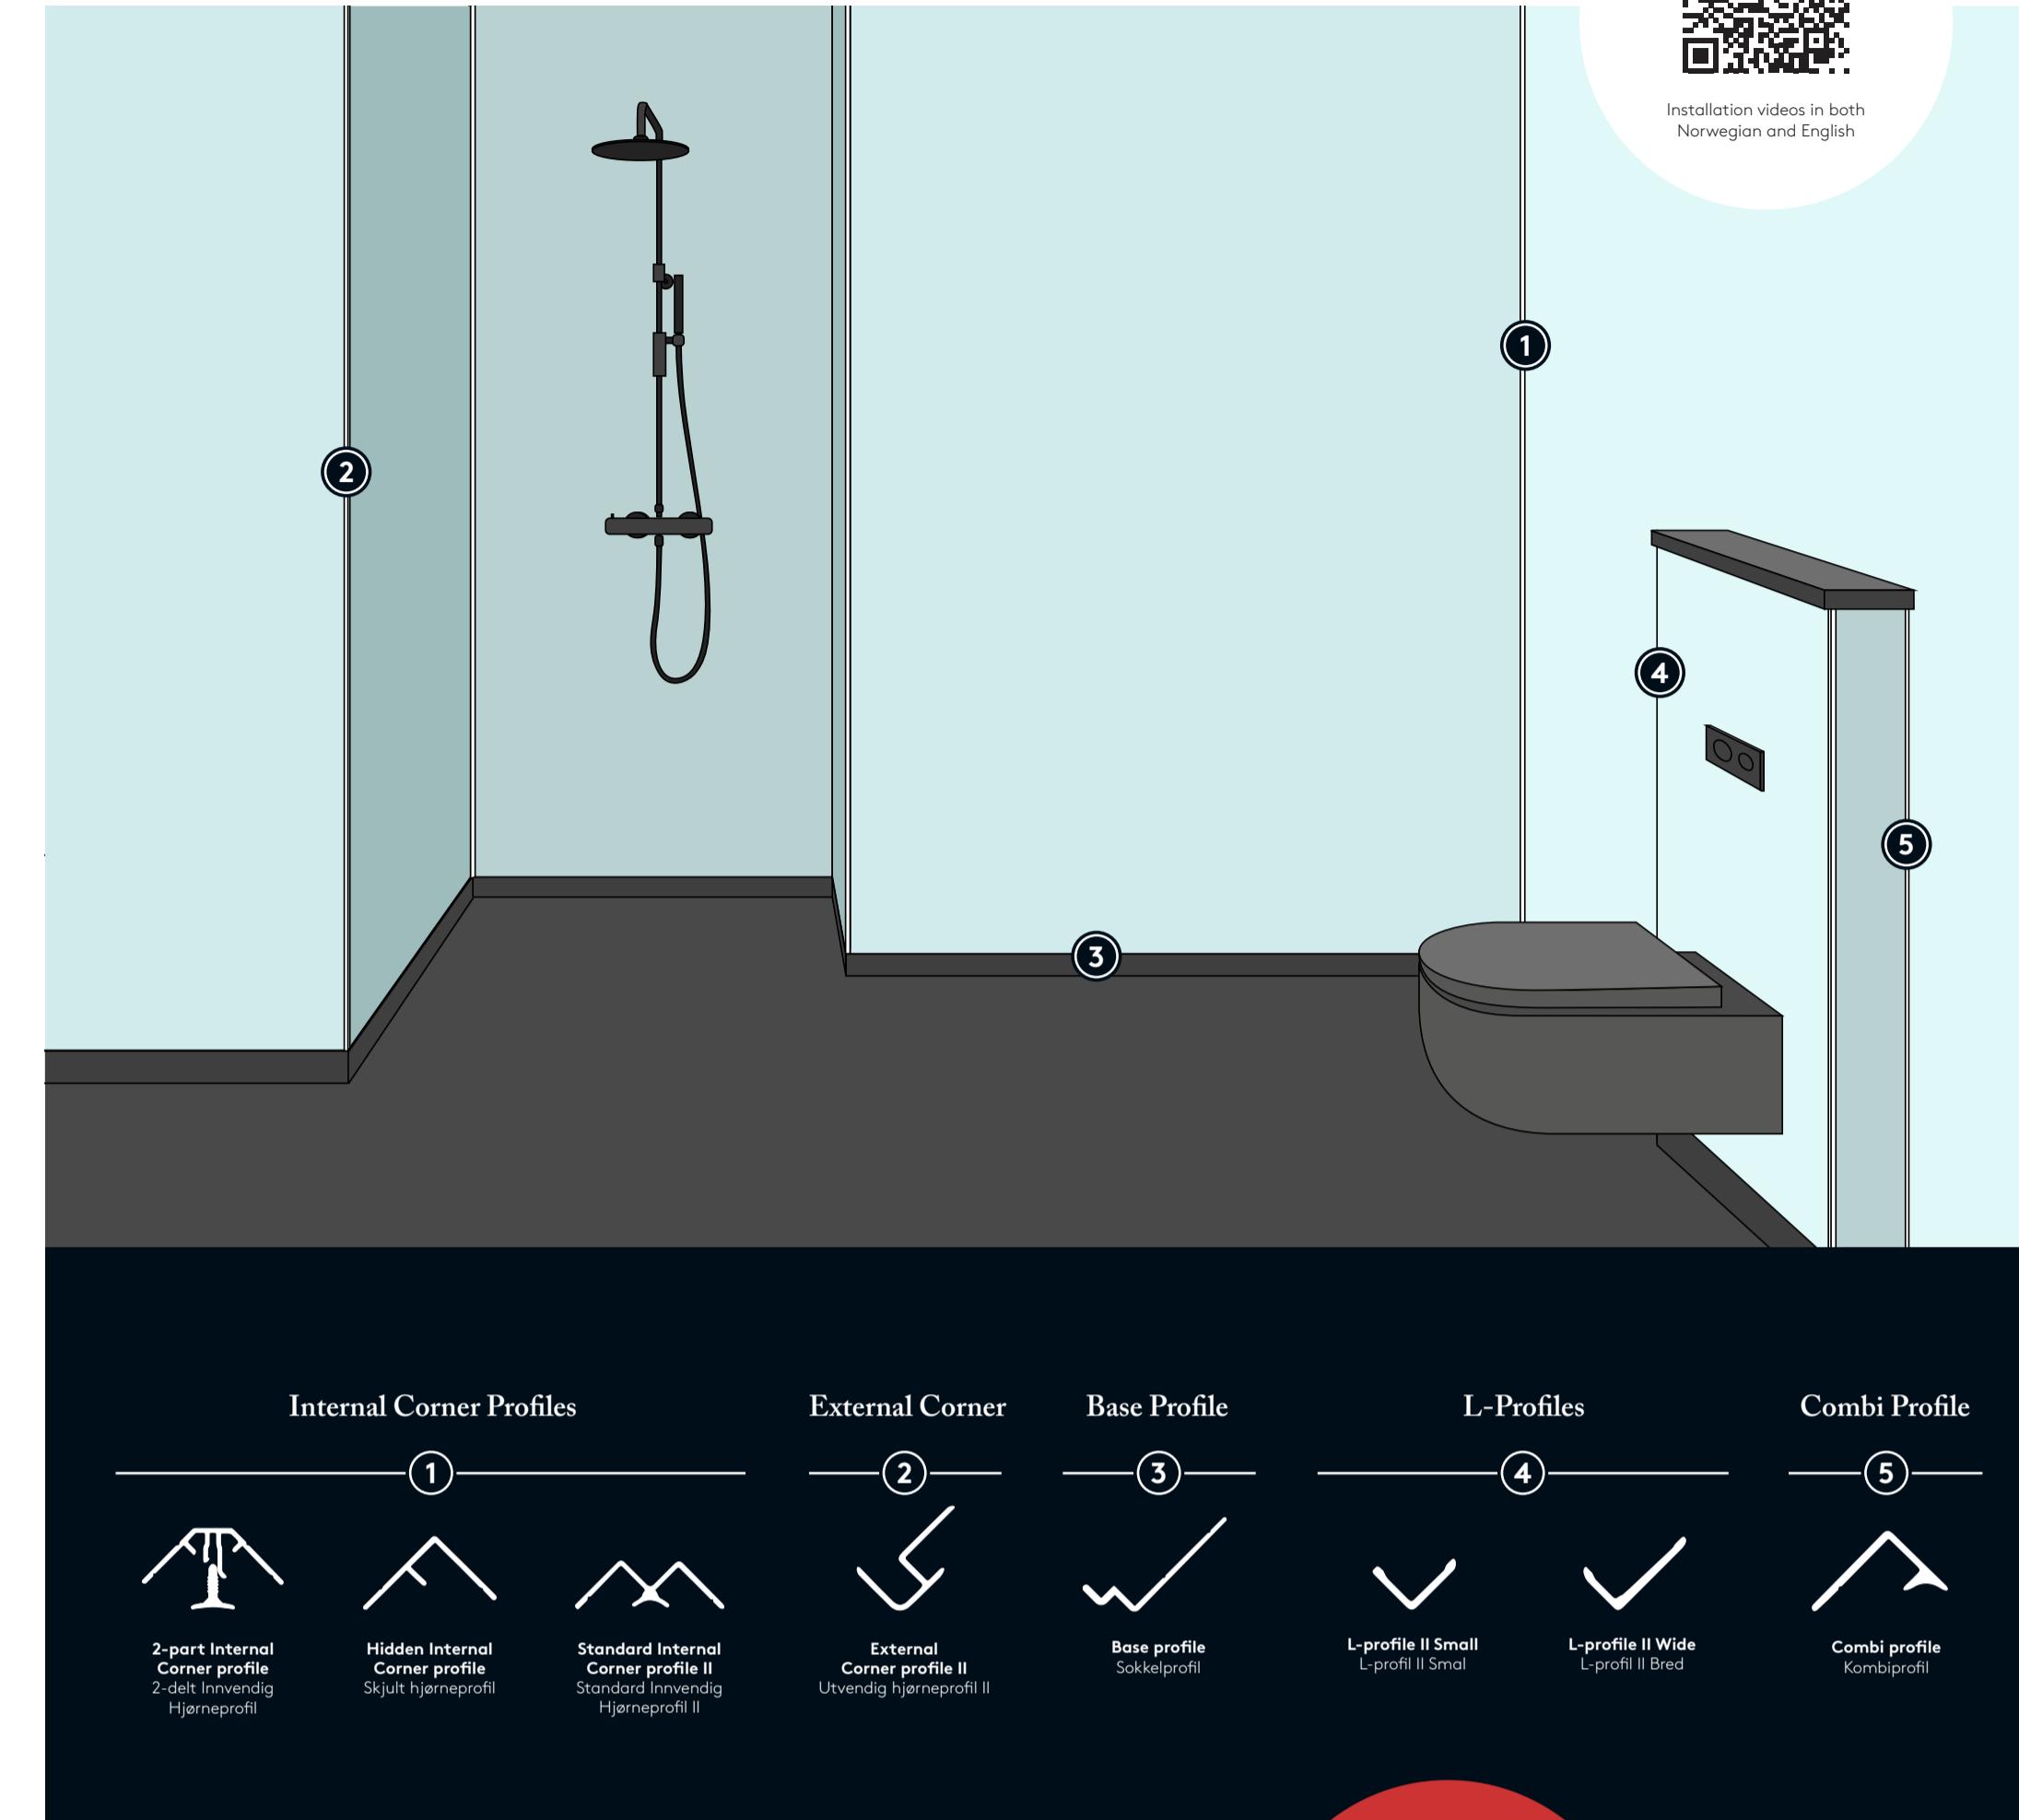

Installation videos in both  
Norwegian and English

### Walls built for life

To ensure that your walls are durable and will last for decades, Fibo wall panels are made from a plywood core layered between a balancing layer and a decorative high pressure laminate that is easy to clean and maintain. Fibo Aqualock makes the installation easy and provide a consistent result. Please visit our webpage for cleaning and maintenance guidance of the system


For å sikre holdbarhet på dine vegg i flere tiår, er Fibo veggpanel produsert med en kjerne av kryssfiner mellom balanselaminat i bakkant og et dekorativt høytrykksplaminat i front som er enkelt å rengjøre og vedlikeholde. Fibo Aqualock gir enkel montering og et varig resultat. Besök nättsiden för instruktion om Drift, Vedlikehold och Rengöring (FDV)




Fibo replaces vapor barrier when all joints are sealed.

Fibo erstatter dampsporre på yttervegg når alle overganger er forseglert.


#### TOOLS YOU NEED | VERKTØY DU TRENGER

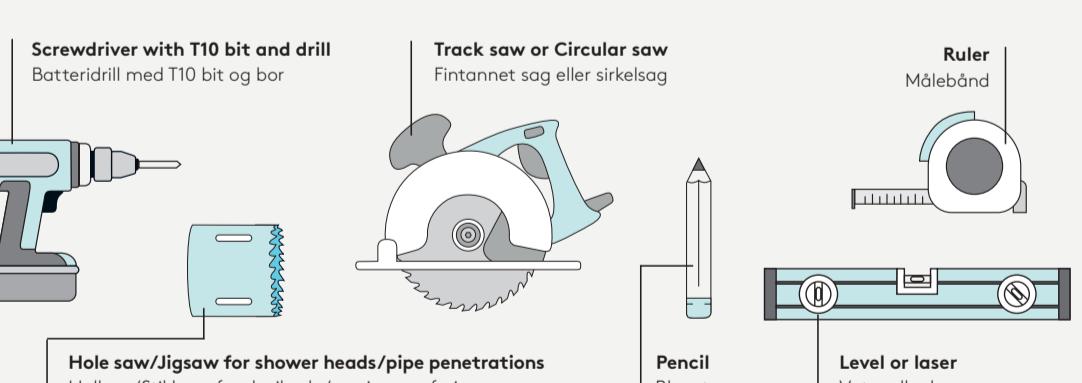

**WARNING:** Power tools must be used with caution to prevent damaged panels.  
ADVARSEL: Verktøy må håndteres med forsiktighet for å unngå skade på paneler.

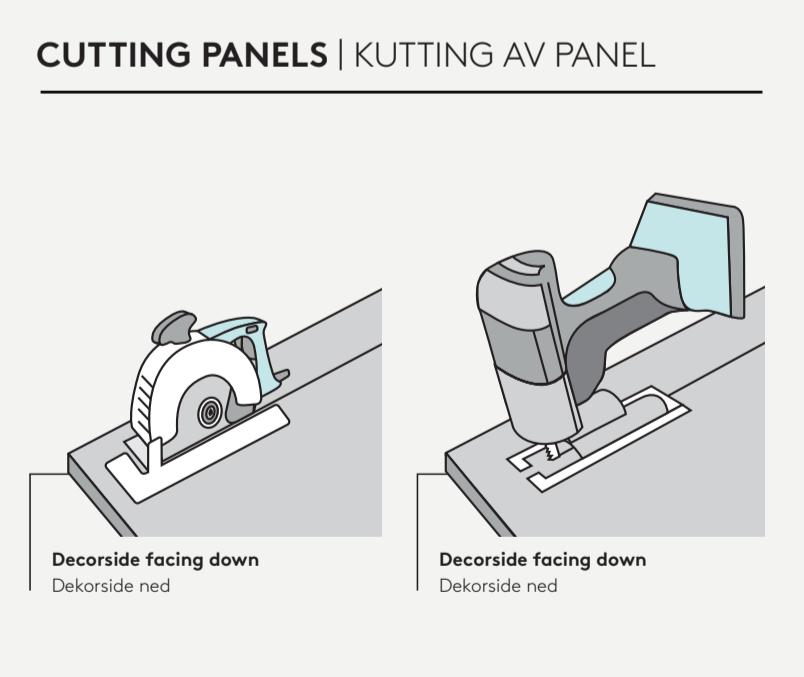

#### HOW TO SEAL SCREW HOLES | HVORDAN TETTE SKRUEHULL I PANEL

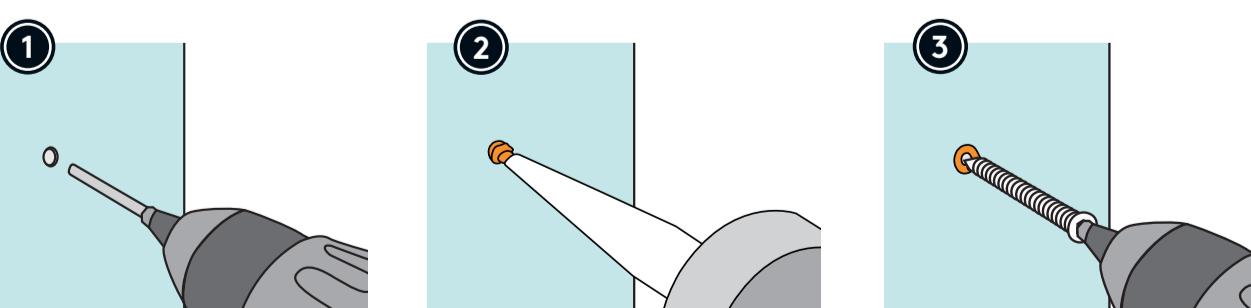

#### CLEANING & MAINTENANCE | RENGJØRING & VEDLIKEHOLD

Extend the life of the sealant by correct cleaning, in accordance with "Cleaning & Maintenance" documents of fibosystem.com. In particular, sealant in the base profile and hidden internal corner profile should be cleaned regularly, if the sealant becomes brittle or damaged over time, it must be treated immediately.

A moist Fibo Sponge can be used on particularly difficult surfaces. Follow the instructions for use on the product's packaging.

Fuktet melaminrens (Fibo Sponge) kan brukes på særlig vanskelige flakker. Følg bruksanvisning på produktets emballasje.

For more information and warranty conditions.  
For mer informasjon og garantisatsjoner.



Inspiration and installation videos at [fibosystem.com](http://fibosystem.com) / E-mail: [info@fibosystem.com](mailto:info@fibosystem.com)

Inspirasjon og monteringsfilmer på [fibosystem.no](http://fibosystem.no)



Installation videos in both  
Norwegian and English

- [www.fibosystem.com](http://www.fibosystem.com)
- [www.fibo.no](http://www.fibo.no)
- [www.fibo.se](http://www.fibo.se)
- [www.fibosystemusa.com](http://www.fibosystemusa.com)
- [www.fibo.co.uk](http://www.fibo.co.uk)
- [www.fibosystem.fi](http://www.fibosystem.fi)
- [www.fibosystem.dk](http://www.fibosystem.dk)

# Fibo

## Installation steps 1-5 Monteringssteg 1-5

**FIBO SEAL MUST BE USED IN ALL PANEL JOINTINGS (INCL. DRY AREA)**  
TO REDUCE RISK OF JOINT OPENING OVER TIME.


FIBO SEAL SKAL BENYTTE I **ALLE PANELSKJØTER** (INKL. TØRRE SONER)  
FOR Å REDUSERE RISIKO FOR AT TØRKESPREKKER OPPSTÅR OVER TID.

FOR NORTH  
AMERICA SEE  
LAST PAGE!

### 1 BACKWALL OPTIONS VELG RIKTIG BAKVEGG

Extra support in backwall must be used if heavy objects such as cabinets, toilets, shower seats, support handles or similar is to be installed.  
Flatness tolerance: Maximum flatness deviation of +/- 2 mm / 2 meters. There is no need for extra membrane behind our wall panels.

Benytt ekstra støtte i bakvegg dersom det skal monteres tunge gjenstander som skap, toalett, dusjsete, stettehåndtak eller lignende.  
Planhetstoleranse: Maksimalt planhettsavvik på +/- 2 mm / 2 meter. Det er ikke behov for dampspeire eller membran bak veggpanelene.

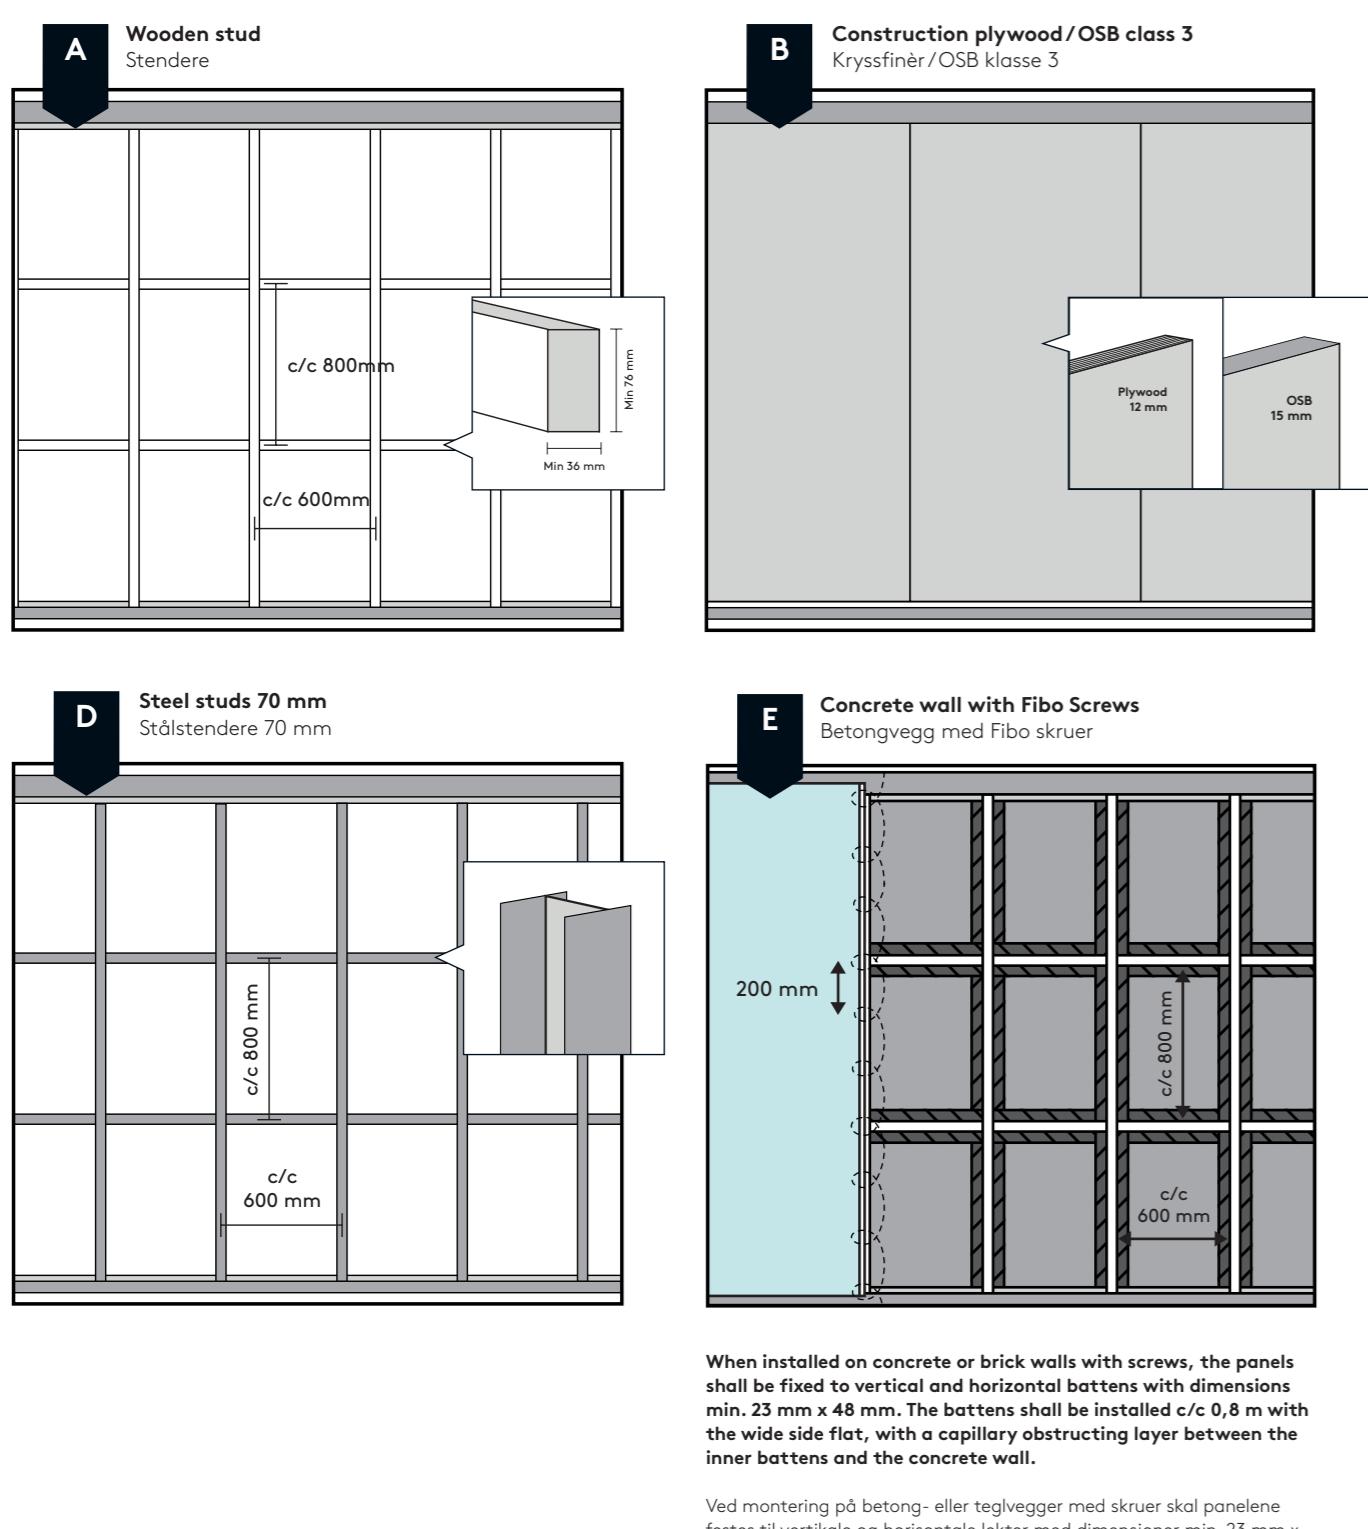

When installed on concrete or brick walls with screws, the panels shall be fixed to vertical and horizontal battens with dimensions min. 23 mm x 48 mm. The battens shall be installed c/c 0.8 m with the wide side flat, with a capillary obstructing layer between the inner battens and the concrete wall.


Ved montering på betong- eller teglvegger med skruer skal panelene festes til vertikale og horisontale lekter med dimensjoner min. 23 mm x 48 mm. Lekterne skal monteres c/c 0,8 m med bred side mot vegg, med kapillært hindrende lag mellom de interne lektene og betongveggen.

### 2 SOLUTIONS FOR APERTURES FOR PIPES LØSNINGER FOR RØRGJENNOMFØRING

Cutting surfaces must be sealed when drilling holes for pipe penetration. For complete installation guidance, follow the wall box producers' instructions. The ones illustrated are EAD 030437-00-0503 approved systems. Approval for PP- and copper pipes is documented through SINTEF Technical Approval 2289.

Kuttflater skal forsiegles ved hulltoking til rørgjennomføring. For fullstendig monterings-anvisning av EAD 030437-00-0503 godkjente løsninger, følg vegboxens produsentenes anvisninger. Godkjenning av PP- og kobberrør er dokumentert i SINTEF Teknisk Godkjenning 2289.

First step in all cases

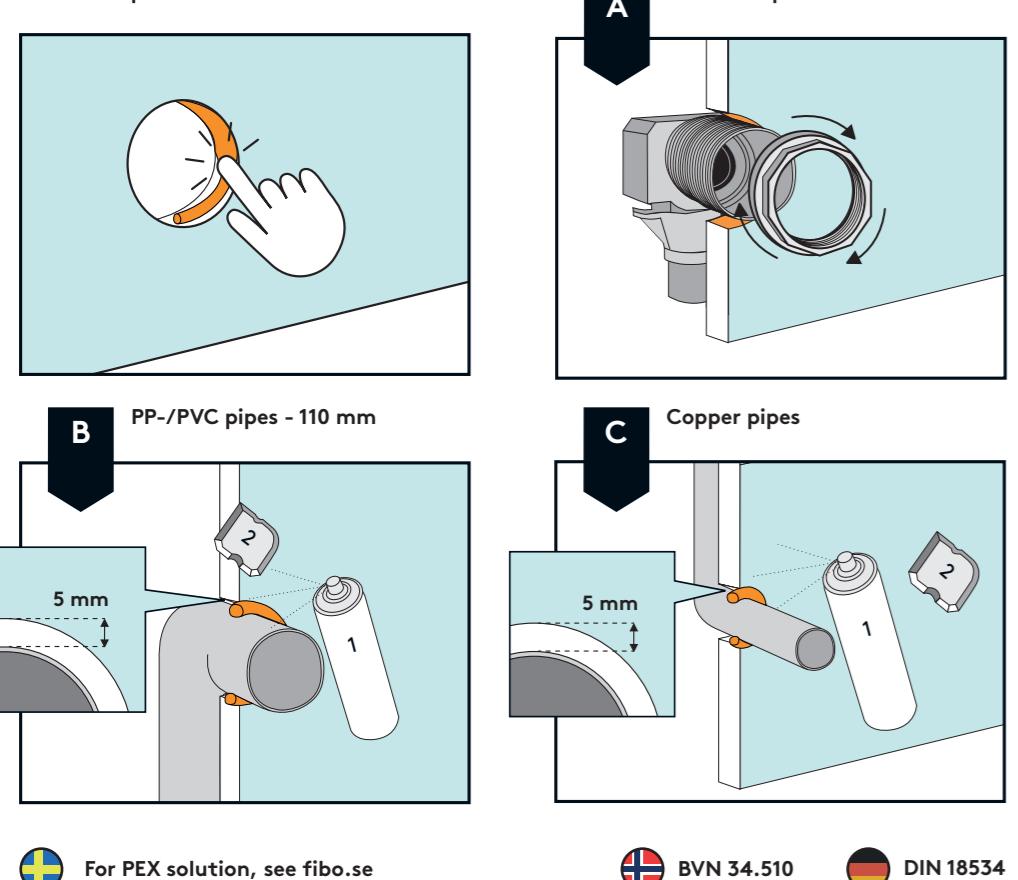

For PEX solution, see fibo.se

BNV 34.510 DIN 18534

### 3 SEALING FINISH, STACKING PROFILE AND EXTERNAL CORNER PROFILE AVSLUTNING MOT TAK, SKJØTEPROFIL OG UTVENDIG HJØRNEPROFIL

\*Not available in the UK

Fibo Seal = orange dot

Fibo Seal in combination with screws, or glue with initial grab. Make sure to screw the first panel as shown.

Ved liming av panel til vegg av betong, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<85% / CM<2%), jenv og rengjort. Husk skruer på første panel - se figur.

Avoid use of excessive force when installing. This may harm the Aqulock.

When gluing panel to a concrete wall, make sure the back wall is dry (RH<85% / CM<2%), even and dust free. Place panel into position and secure with pressure. Make sure to screw the first panel as shown. In the UK it is allowed to glue on tiles. Check national building regulations for more.

Ved montering på betongvegg med skruer, sørk for at veggene er tørr (RH<8