


## CRYSTAL CLEAR POLYCARBONATE GREENHOUSE

# Instruction Manual

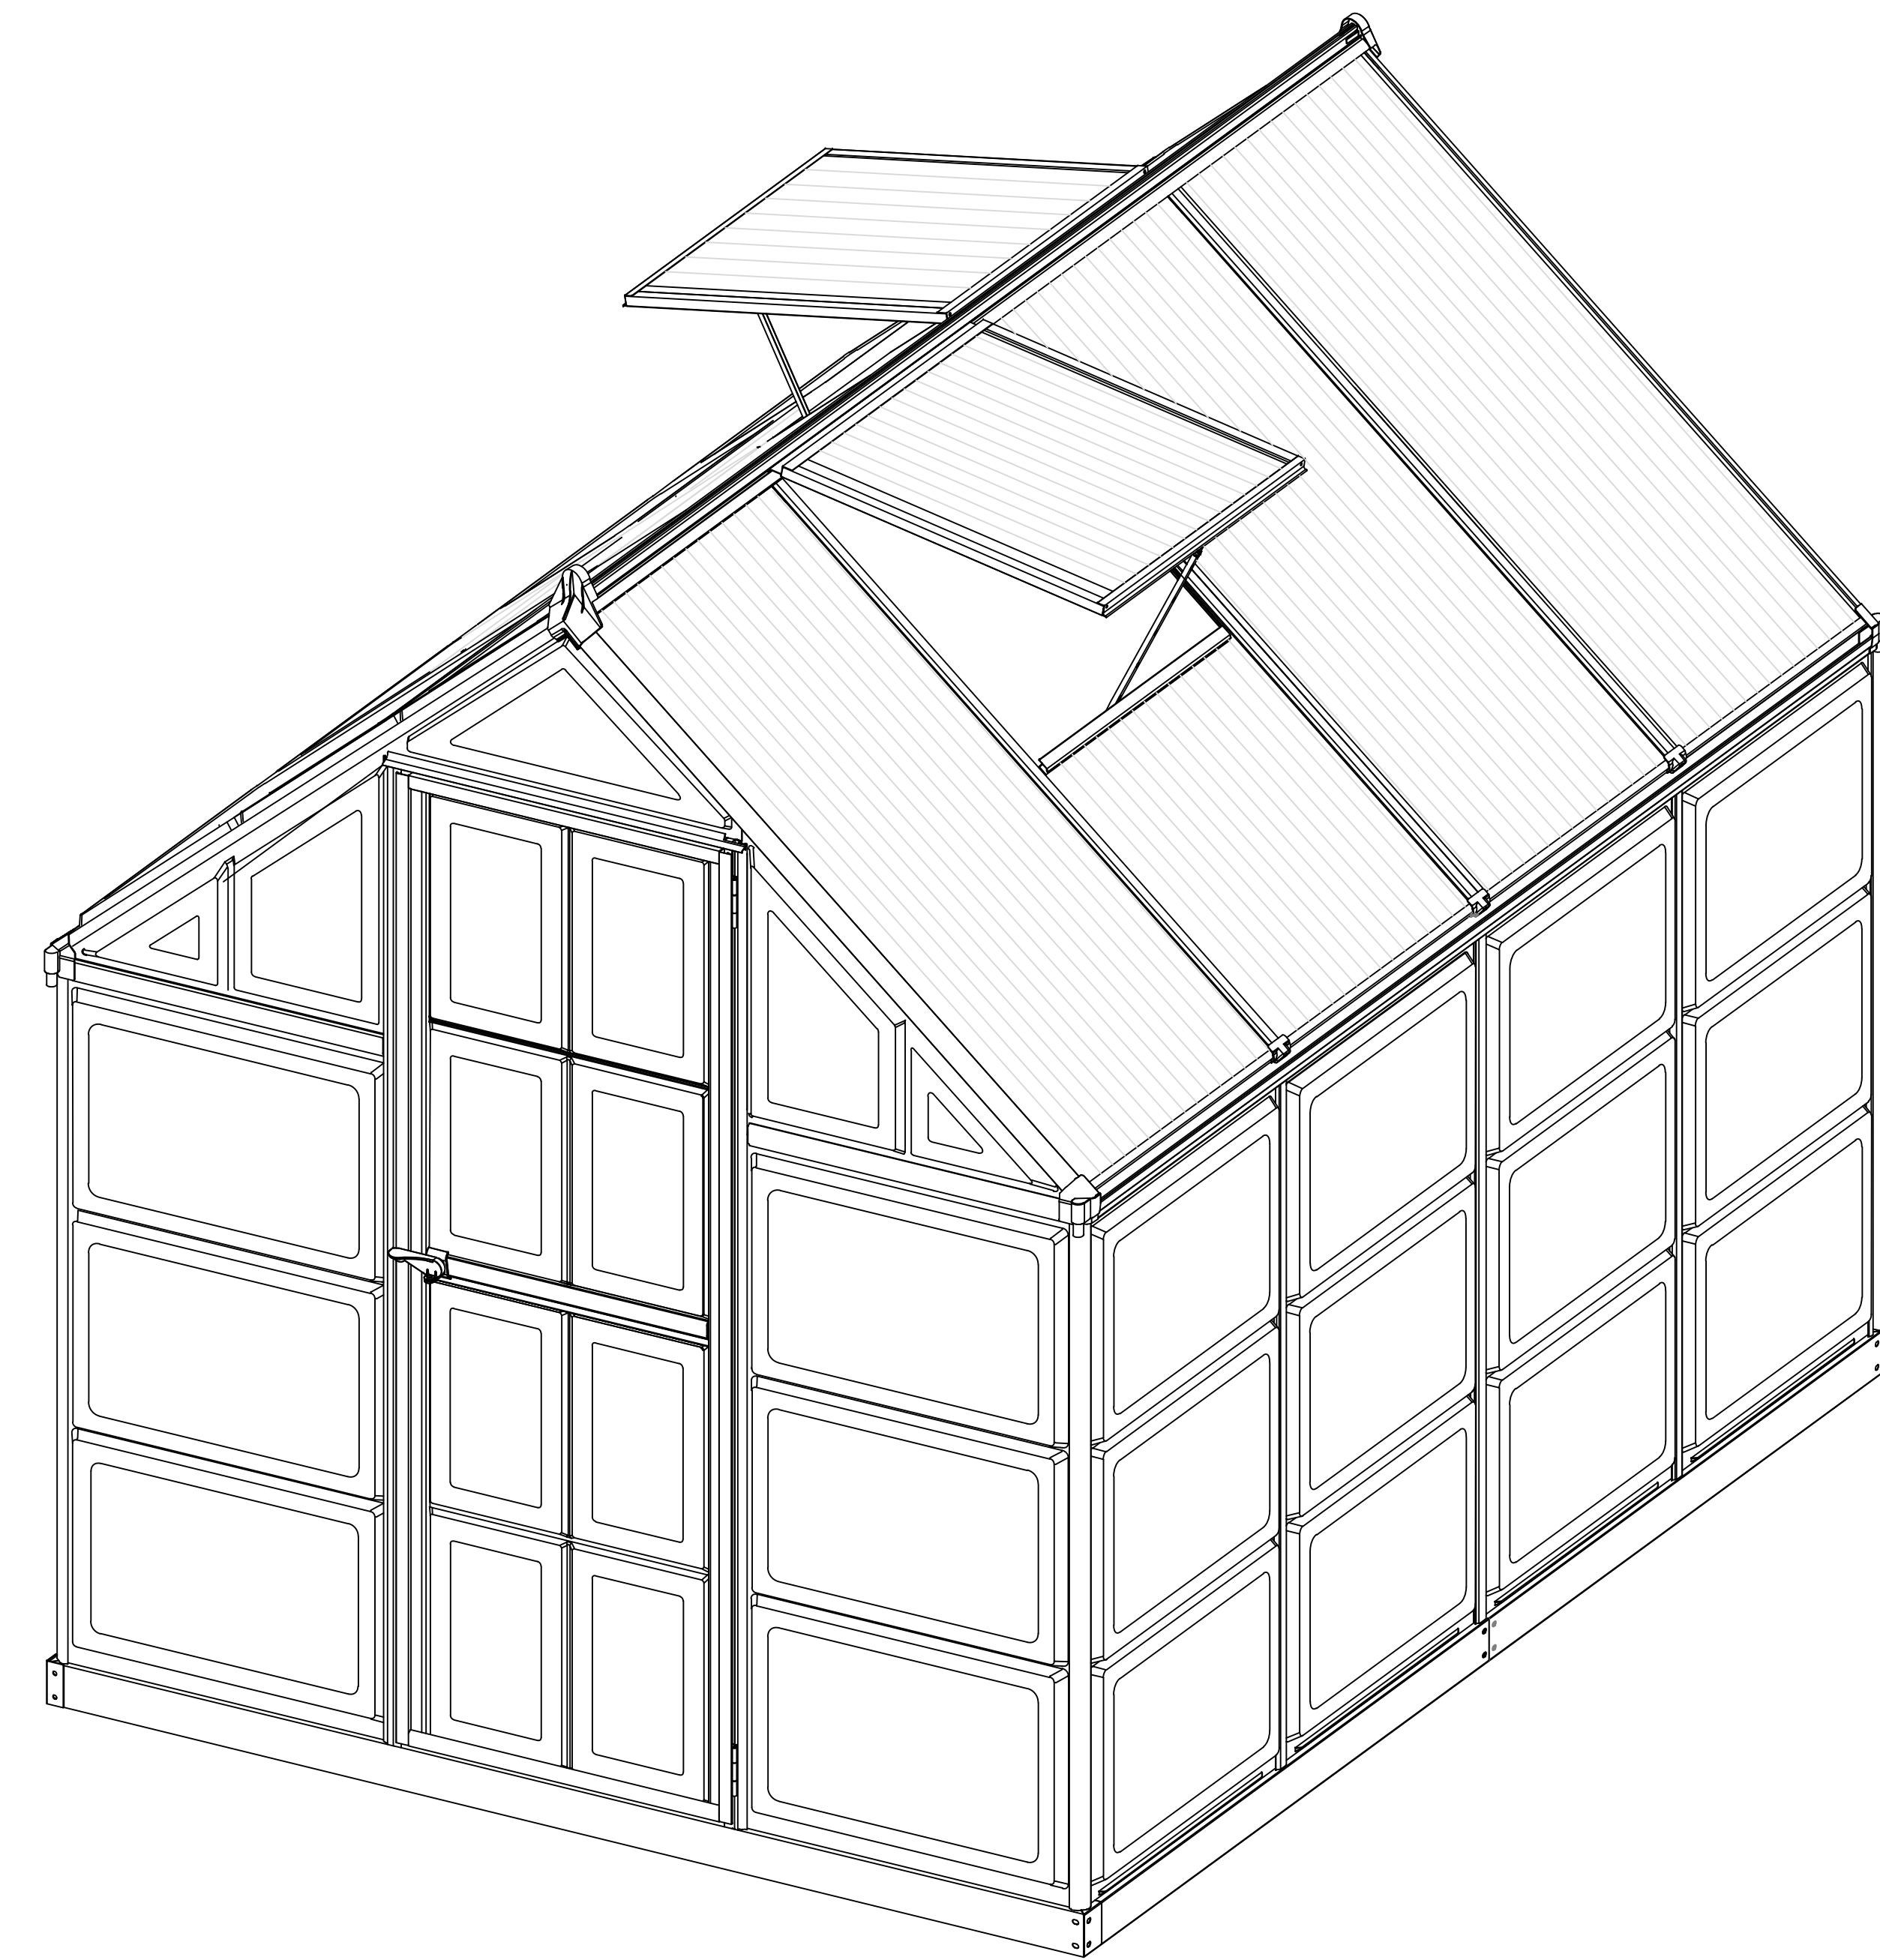

**6' X 8' FT**

### **IMPORTANT**

You must read these instructions carefully before you start to assemble this .Please ensure that you find all parts in the carton box in the correct type and quantity as mentioned in the list illustrated in every page accordingly.

Please carry out the steps in the order set out in these instructions.

Do not tighten the steps in the until completing on the assembly of the polycarbonate panels.

Keep these instructions in a safe place for future reference.

**Revision Date: 2023-06-10**

Installation directory	page number
1、 Precautions and Tool Configuration	..... 1;
2、 Other precautions and product size drawings	..... 2;
3、 parts list	..... 3-4;
4、 Door installation	..... 5-12;
5、 Window installation	..... 13-15;
6、 Foundation installation	..... 16-17;
7、 Rear wall installation	..... 18-24;
8、 Front wall installation	..... 25-30;
9、 Right wall installation	..... 31-35;
10、 Left wall installation	..... 36-40;
11、 Installation of front and rear wall tops	..... 41-48;
12、 Installation of inclined roof windows	..... 49-56;
13、 Plastic parts and door installation	..... 57-60;



SAFETY ADVICE

We strongly recommend the use of work gloves during assembly.

Do not attempt to assemble the aluminum greenhouse in windy or wet conditions,

Do not touch overhead power cables with the aluminum profiles.

Always wear shoes and safety goggles when working with extruded aluminum.

Dispose of all plastic bags safely-keep them out of reach of small children.

The aluminum greenhouse must be positioned and fixed on a flat level surface.

Do not lean against or push the aluminum greenhouse during construction.

Keep children away from the assemble area.

Do not position your aluminum greenhouse in an area exposed to excessive wind.

Do not attempt to assemble this aluminum greenhouse if you are tired ,have taken drugs or alcohol or if you are prone to dizzy spells.

If using a step ladder or power tools ensure that you follow the manufacturer's safety advice.

Hot items such as recently used grills, blowtorches etc.must not be stored in the aluminum carport.

Ensure there are no hidden pipes or cables in the ground before inserting the pegs.

GENERAL ADVICE

This is a multi-part assembly, Allow at least 3 hours to assemble this product for 3 people.

Selecting a site-choose a sunny level position away from overhanging trees.

If you are fixing your aluminum greenhouse directly to a solid concrete foundation use the predrilled holes in the metal base supplied.

The component parts should be checked and laid out close to hand.

Keep all small parts(screws etc)in a bowl so they do not get lost.

Keep roof clear from snow and leaves.

CARE & MAINTENANCE

When your aluminum greenhouse needs cleaning, use a mild detergent solution and risen with cool clean water.

Do NOT use acetone, abrasive cleaners or other special detergents to clean the clear panels.

TOOLS & EQUIPMENT REQUIRED


Protective Equipment:

- 1.Helmet
- 2.Glove
- 3.Long Sleeve Cotton Overalls
- 4.Emergency Medicine Cabinet
- 5.Eye Shield



Measure (metric):

- 1.The Tape (5 m)
- 2.Angle Square
- 3.Level Meter

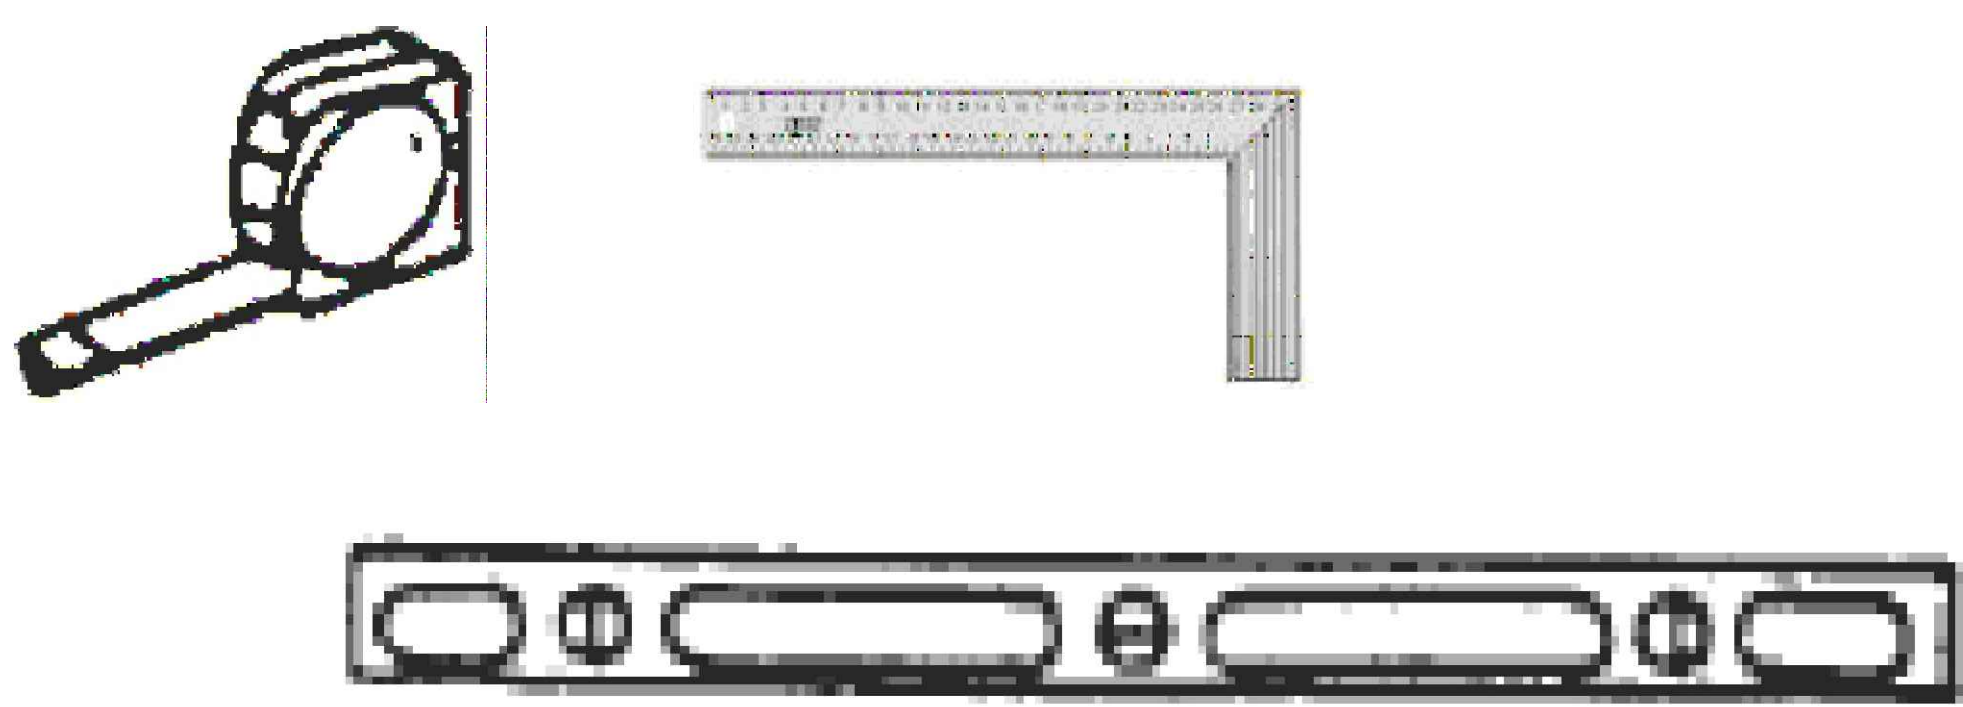

Installation Tool:

- 1.Triangle Stairs≈1.5m Height
- 2.Spanner 10mm (Ratchet Wrench is better)
- 3.Spanner 14mm (Install the expansion screw)
- 4.Hexagon wrench 5mm
- 5.Electric screwdriver+5mm Hexagon wrench (suggest)
- 6.Wooden Mallet
- 7.Marking Pen
- 8.Silicon
- 9.Percussion bit(8mm and 10mm)
- 10.Knife
- 11.Phillips screwdriver






## OTHER CAUTIONS

1. 3 people required, one is for measuring & taking marks to ensure the installation dimension, the second person is responsible for the installation and the last one do as assistant and assure the safety.
2. Firstly, make sure the green house is strong enough for installation.  
A brick concrete structures is the best choice.
3. High-power electric tools are required, ensure the normal work of them and highly pay attention to electric safety.
4. Be careful when using the kind of blunt tools, like hammer.
5. Wearing long sleeve cotton overalls, gloves and helmet during installation and wear safety glasses when using power tools .
6. Don't look up when working in high position, or the drop screws may hurt your eyes and suffocation causing accidentally when falling into your mouth.
7. No climbing, No standing on the greenhouse to avoid falling down.
8. If injured, please rush him/her to a nearby hospital.

















## PRODUCT SIZE
















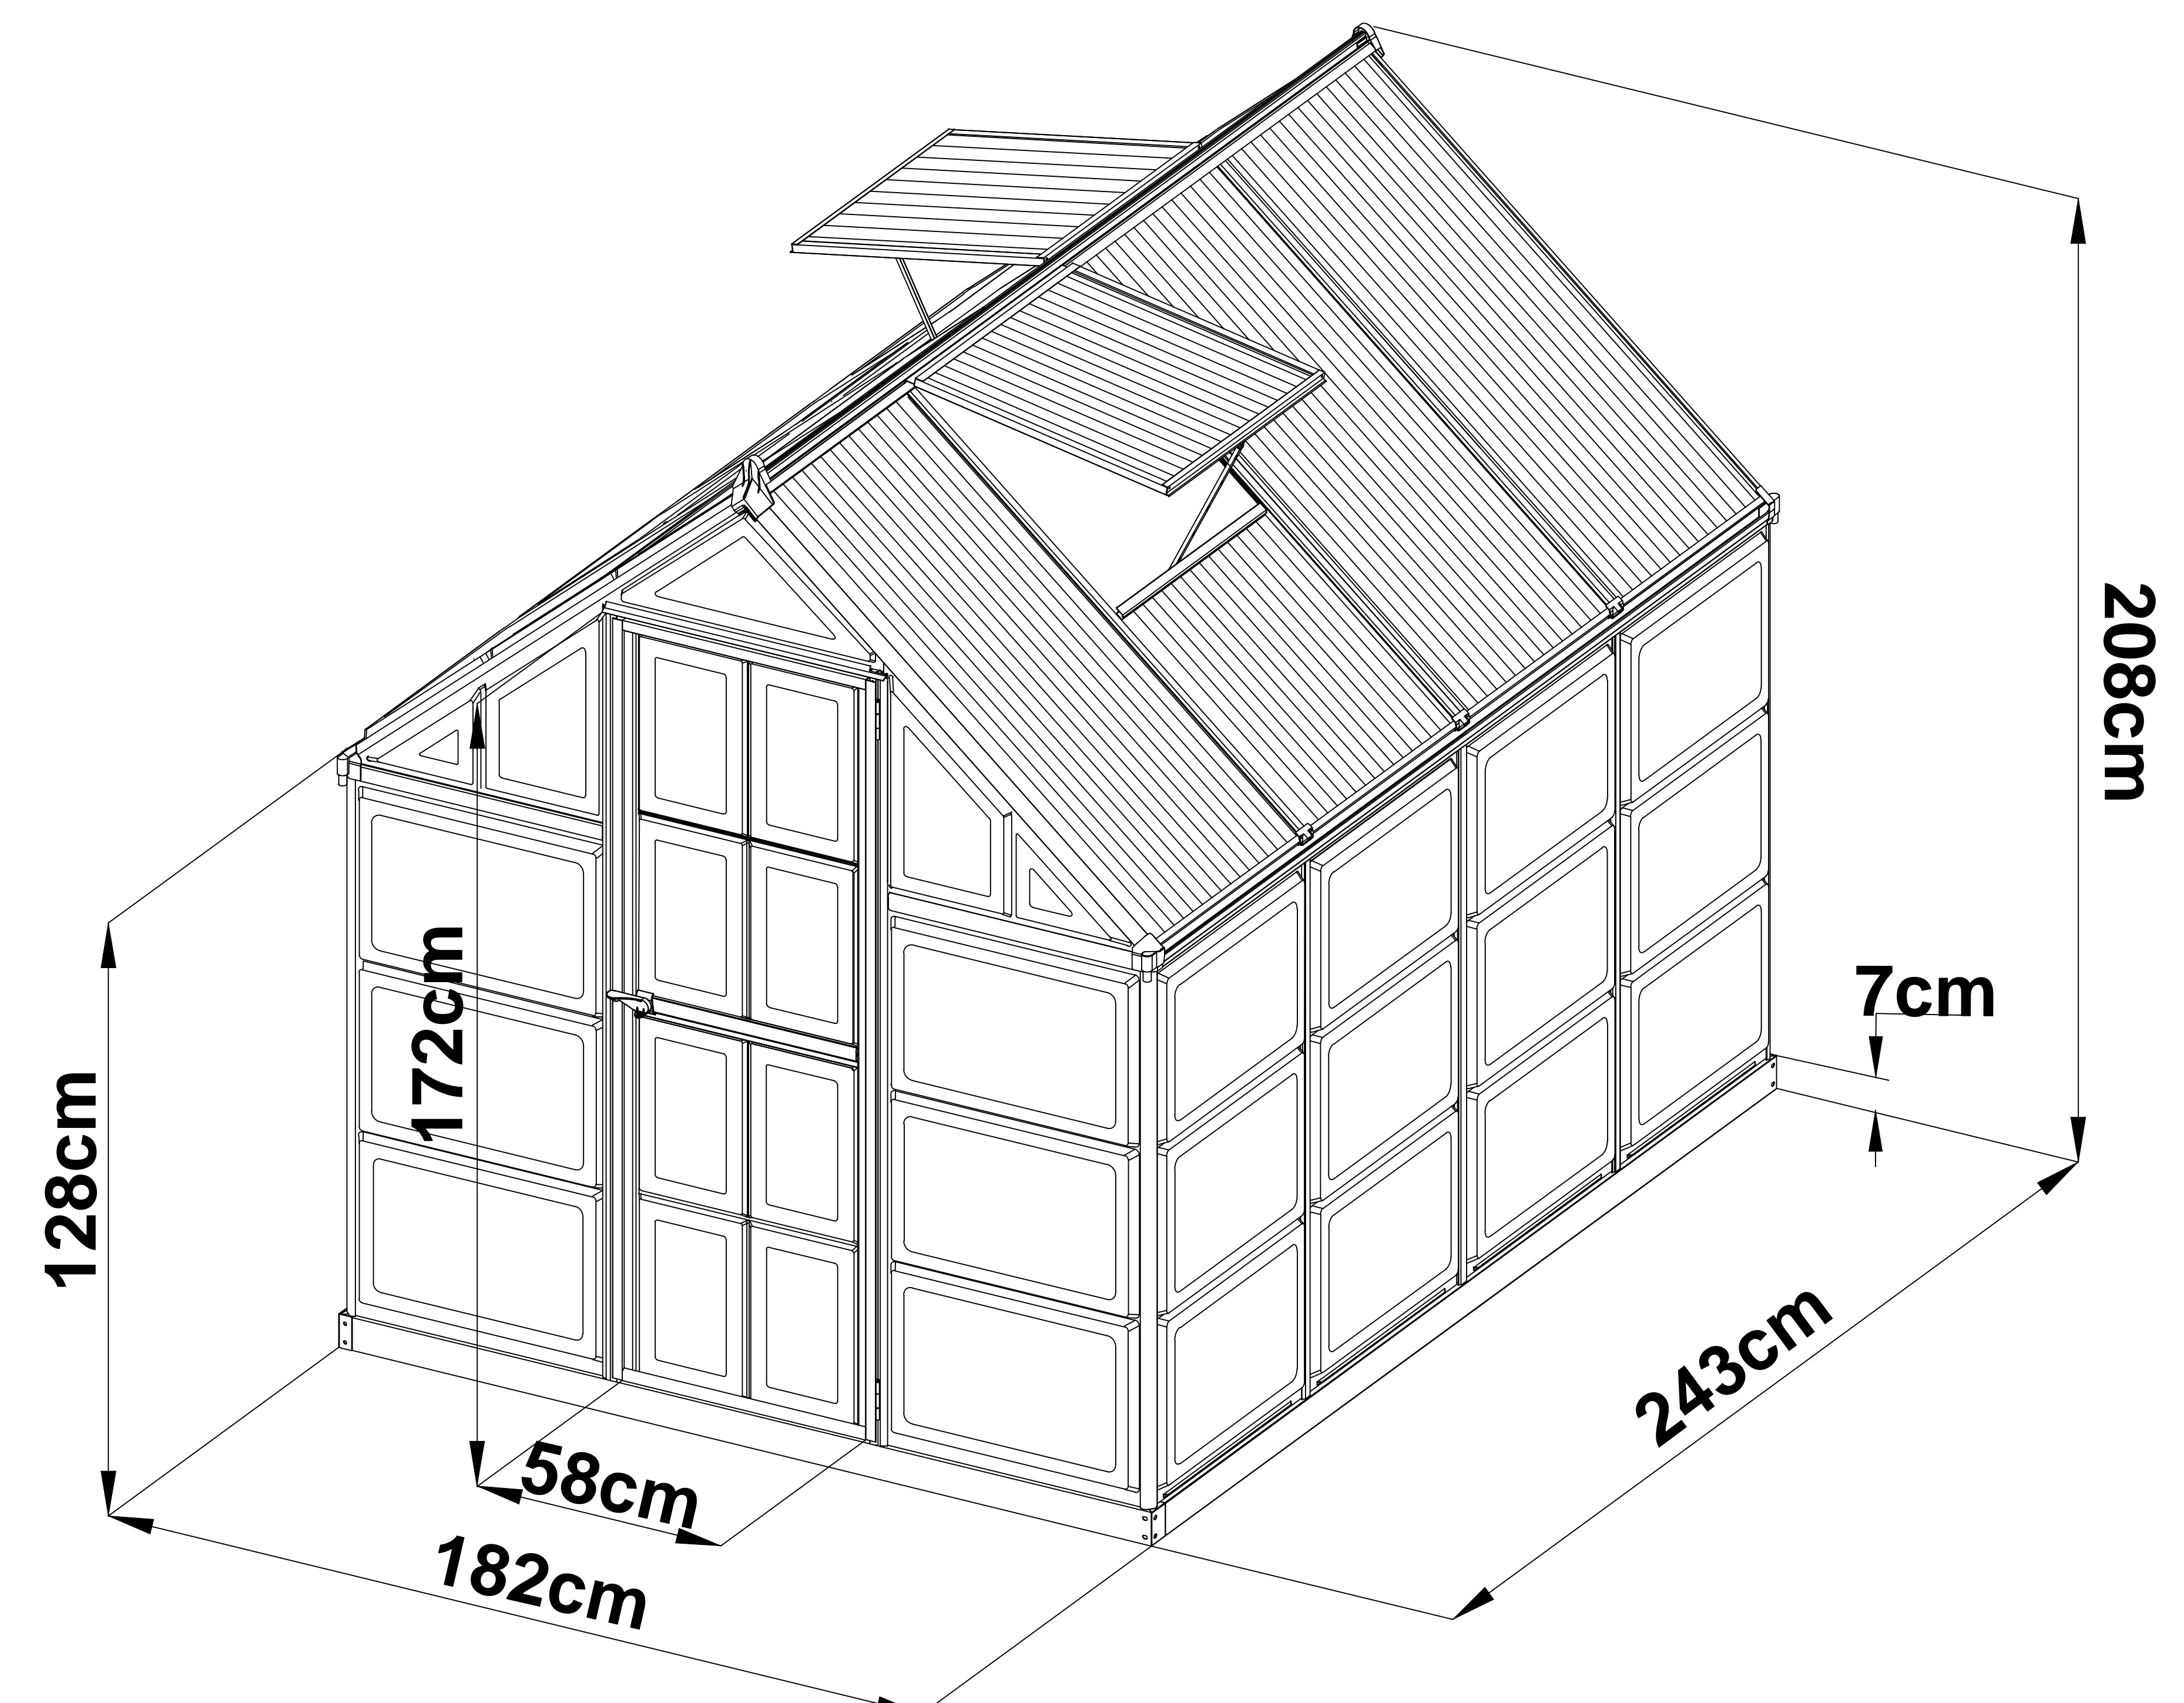


















Contents

3

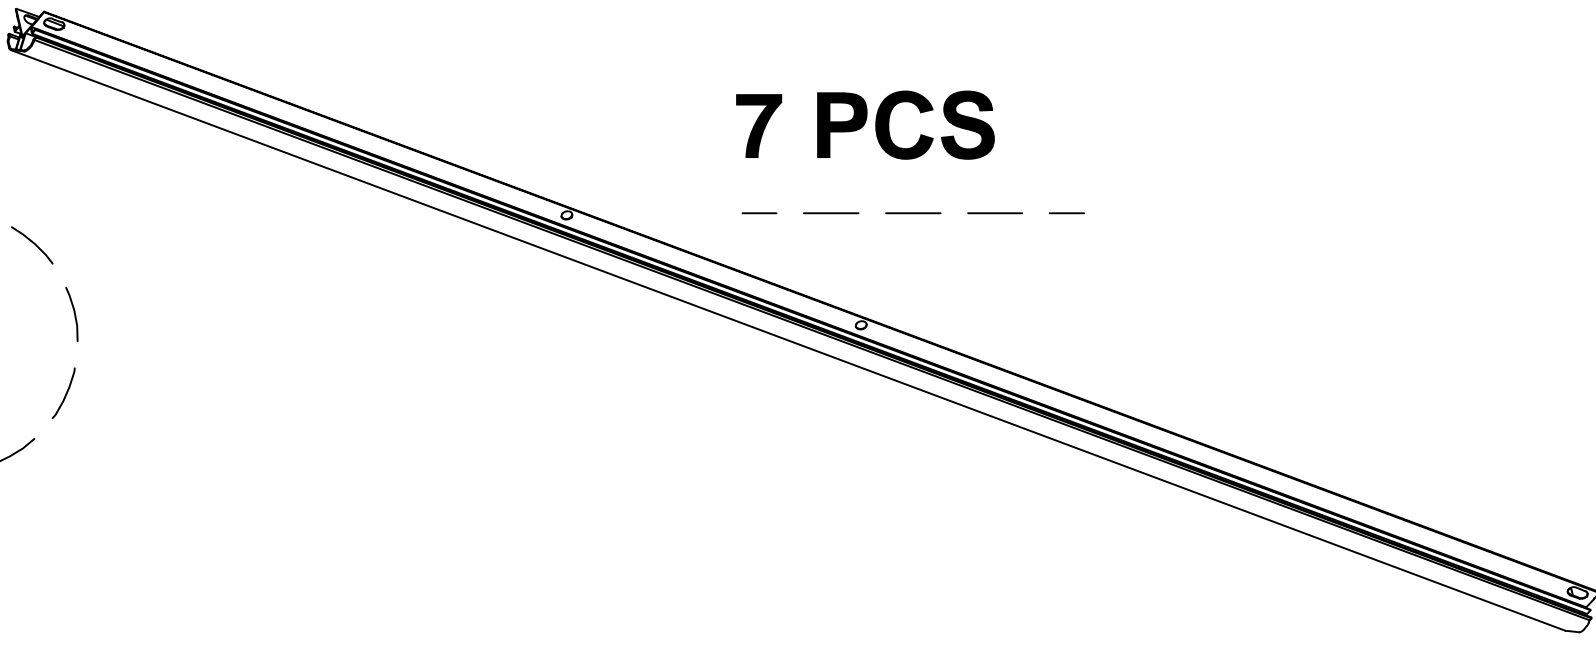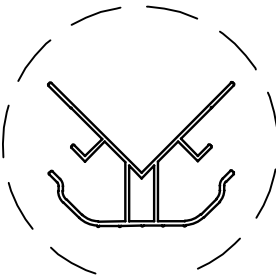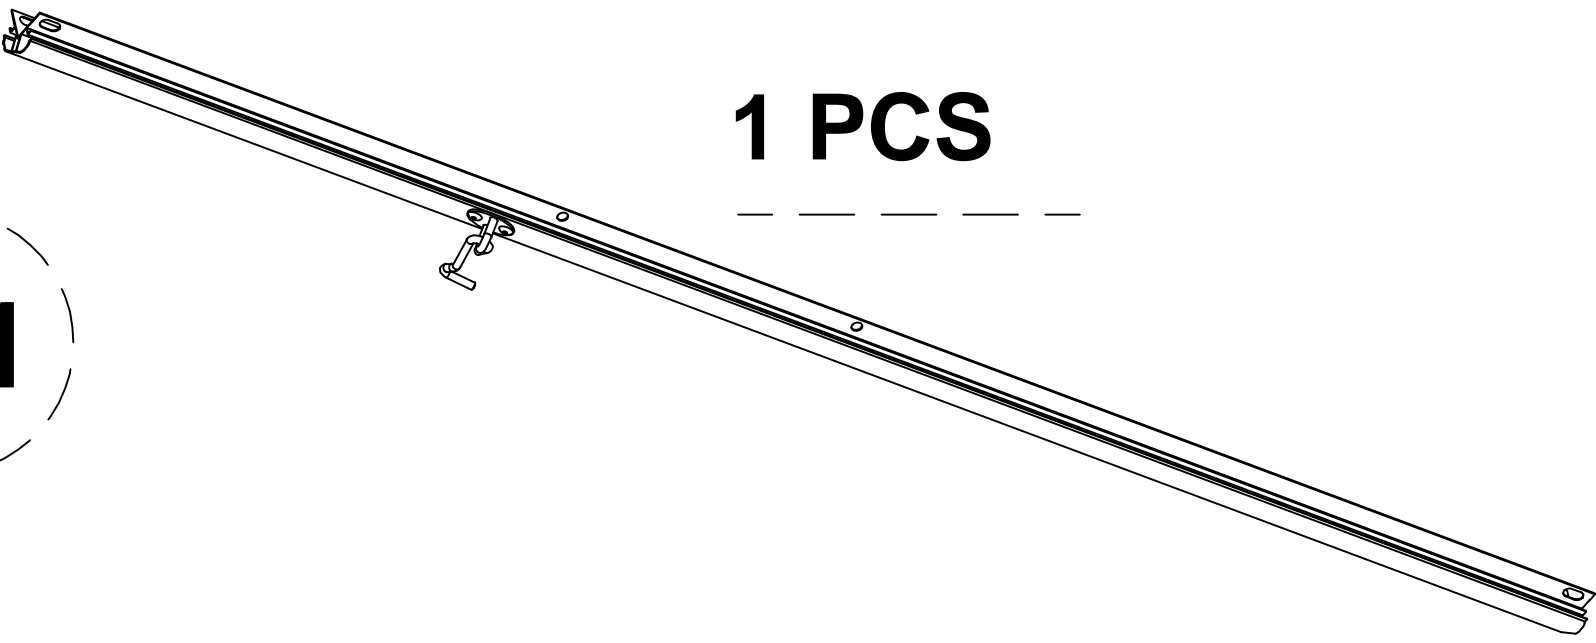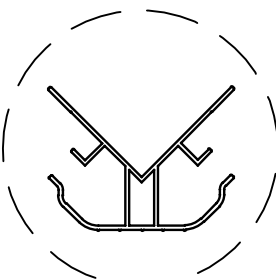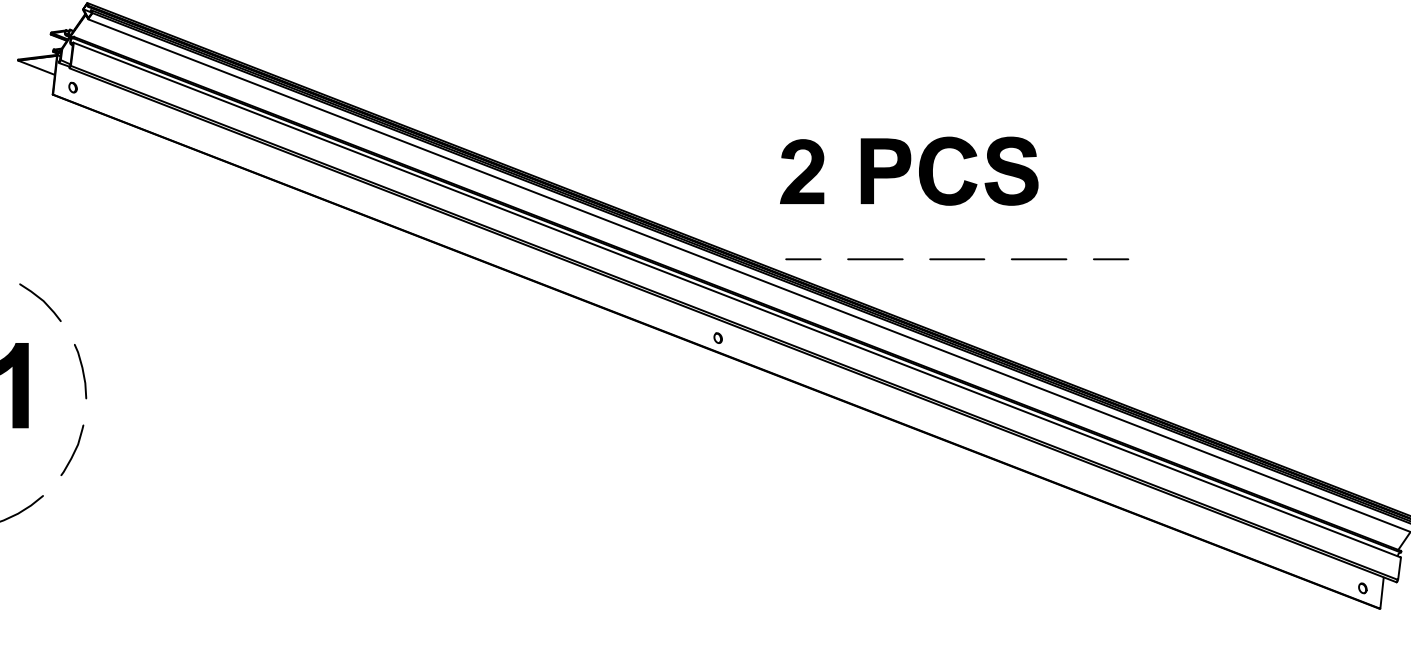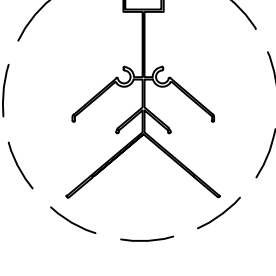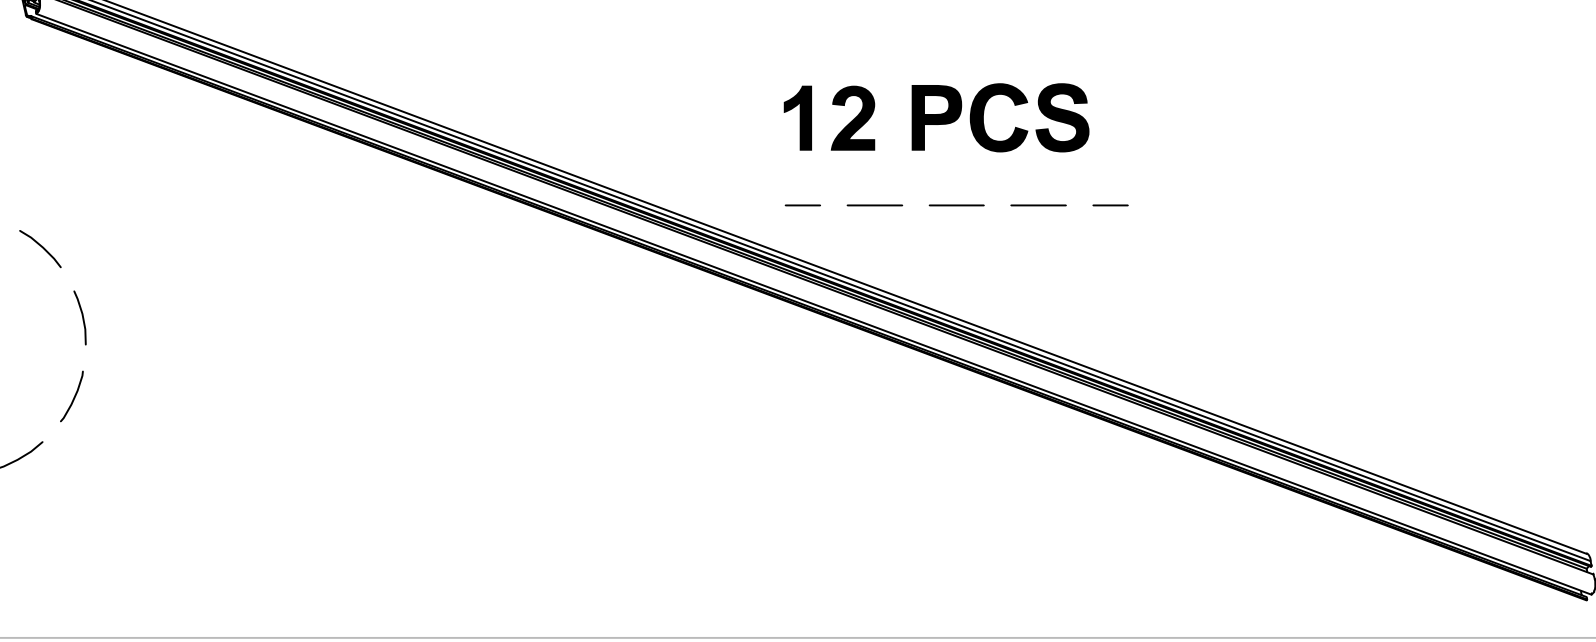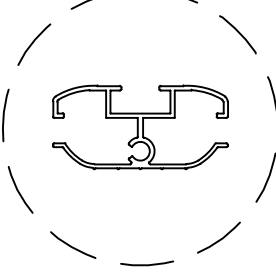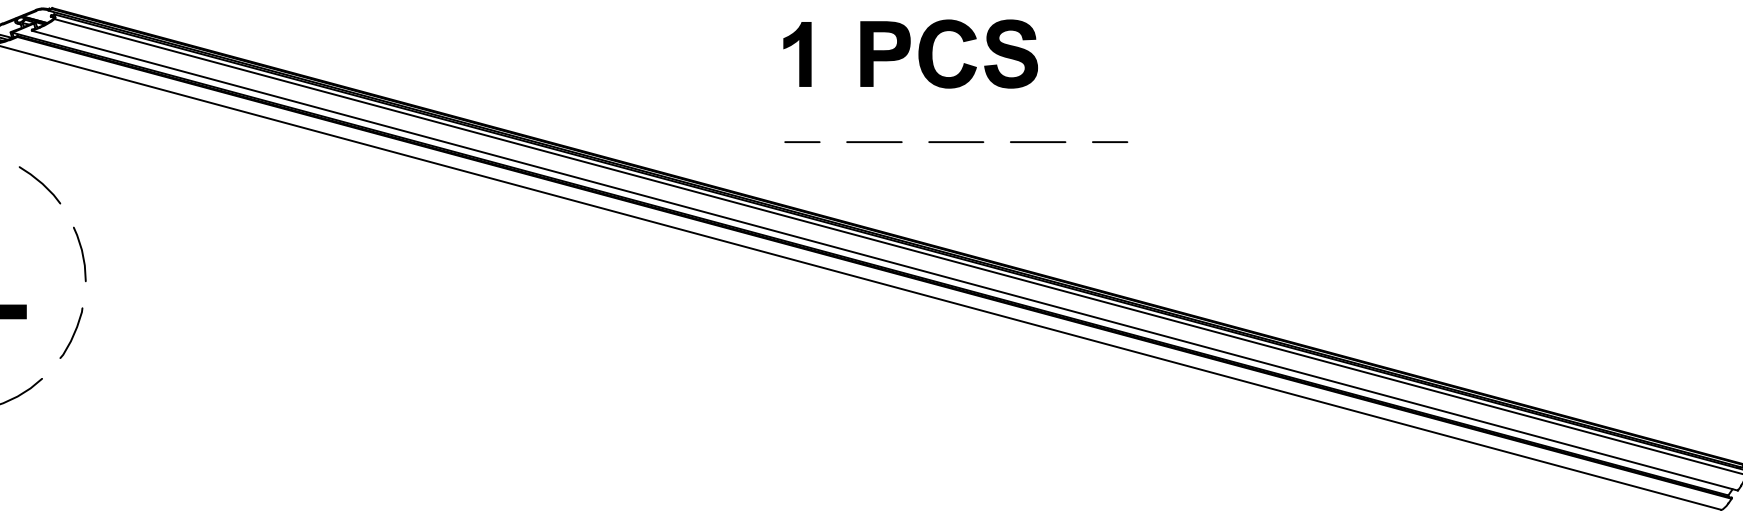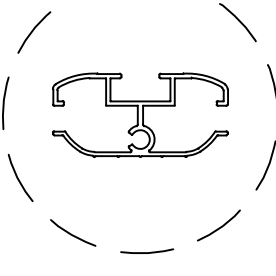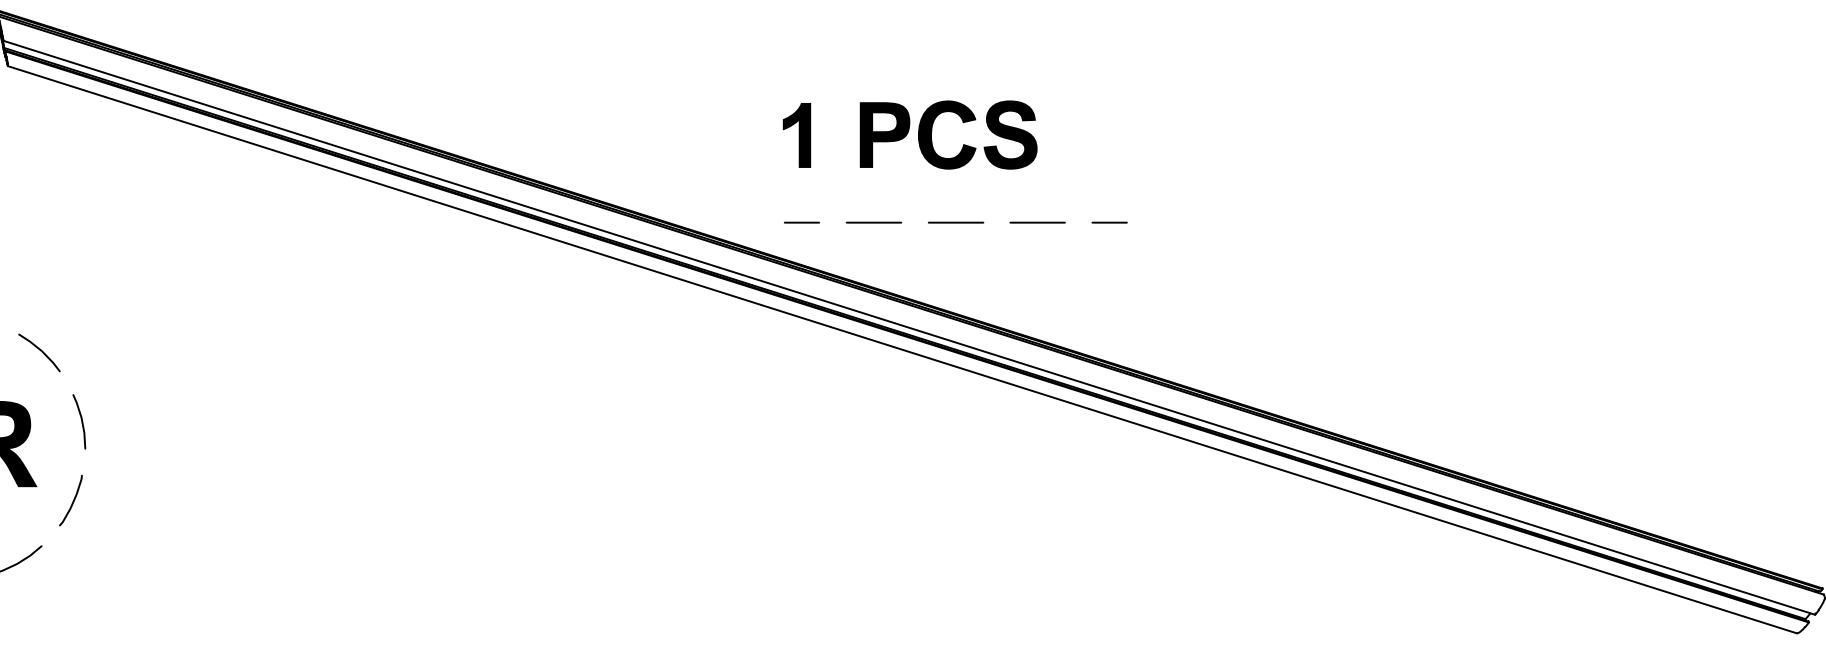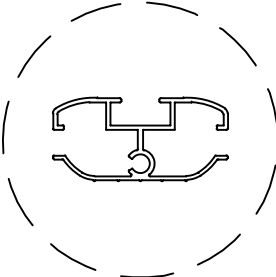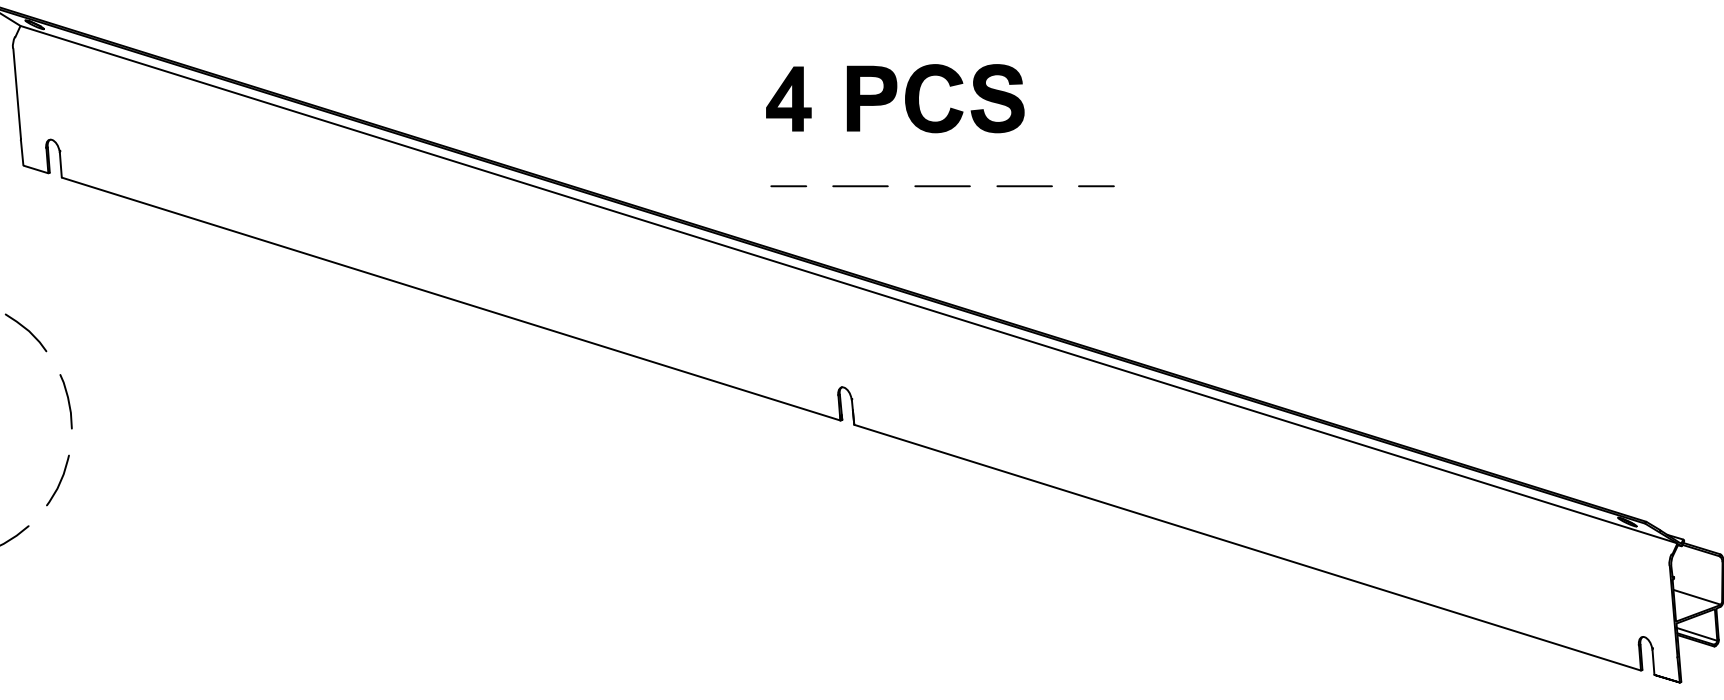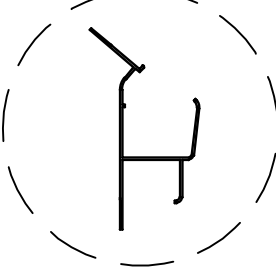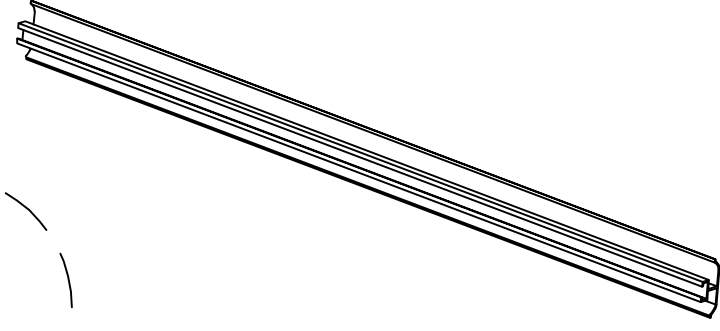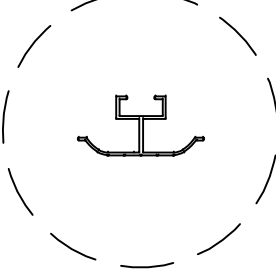Item	Qty		MM
1	7 PCS		 1170
1-1	1 PCS		 1170
2-1	2 PCS		 1190
3	12 PCS		 1170
4L	1 PCS		 1700
4R	1 PCS		 1700
5	4 PCS		 1190
6	5 PCS		 565

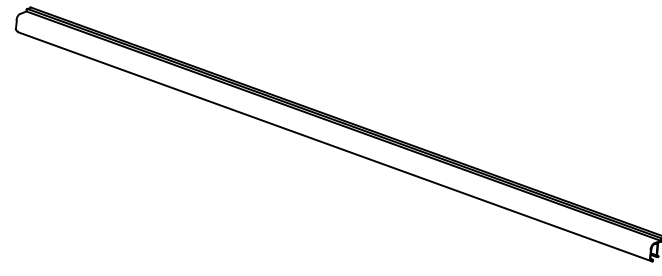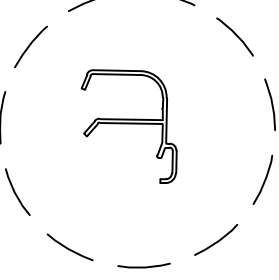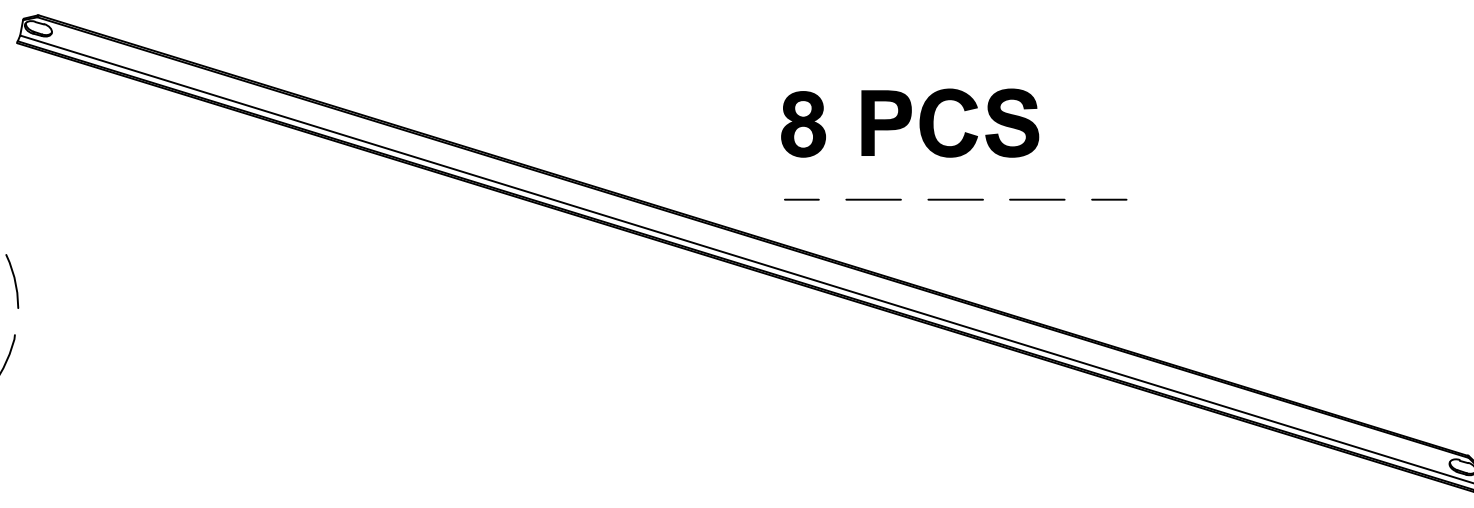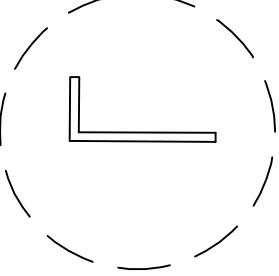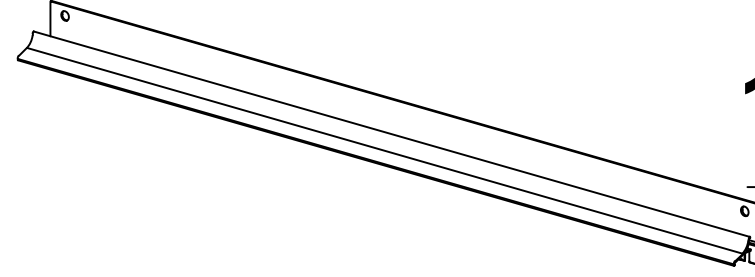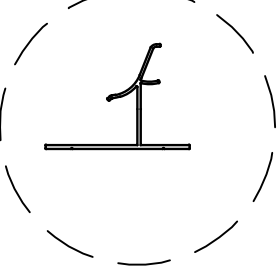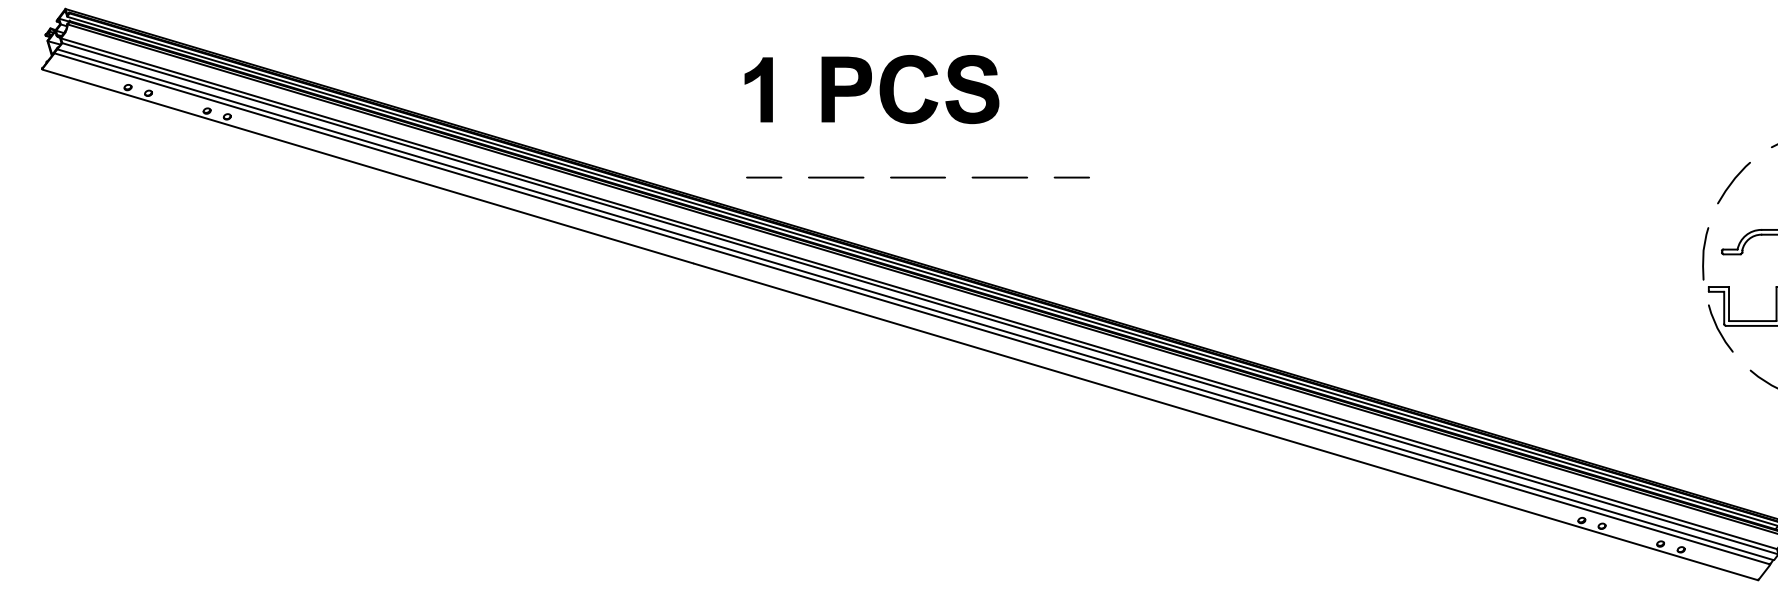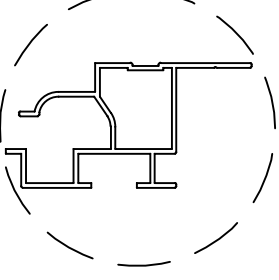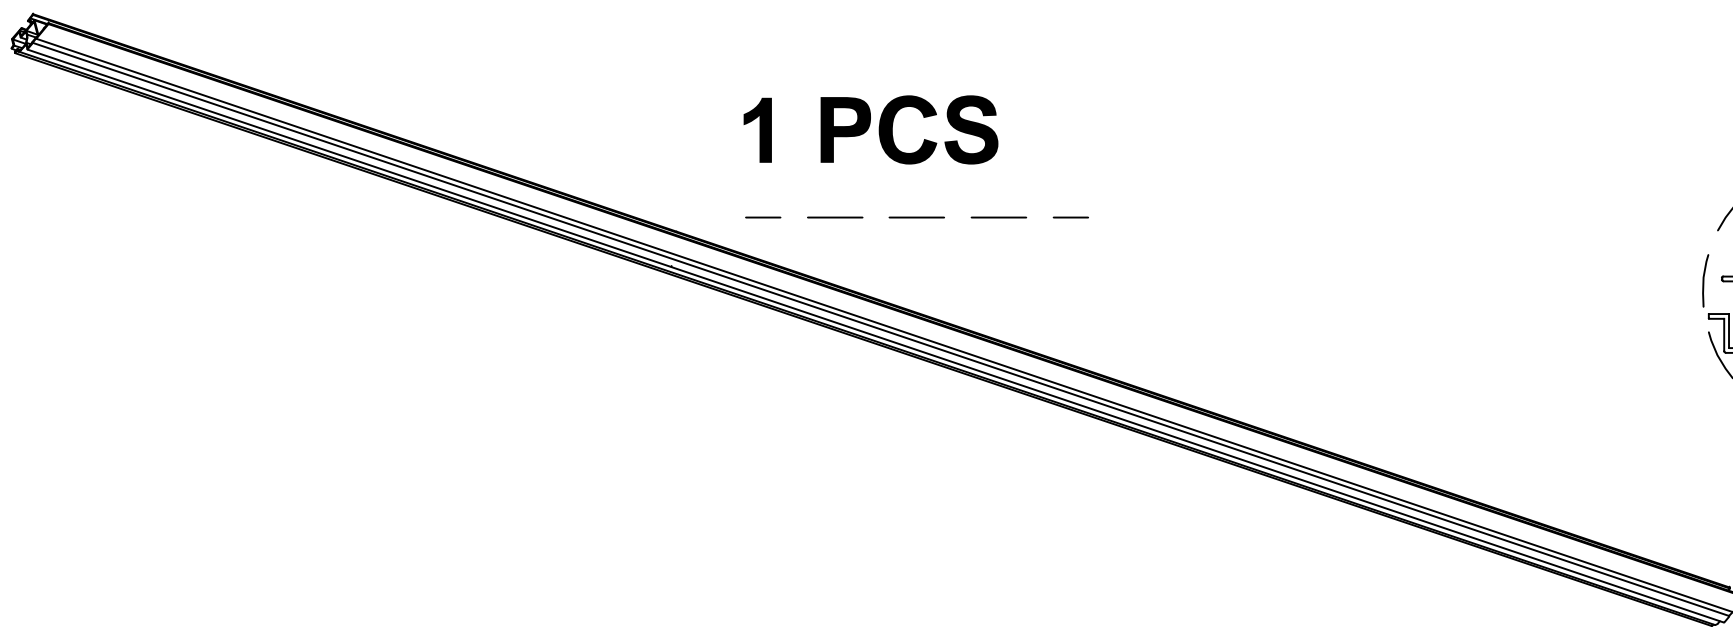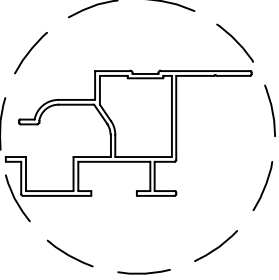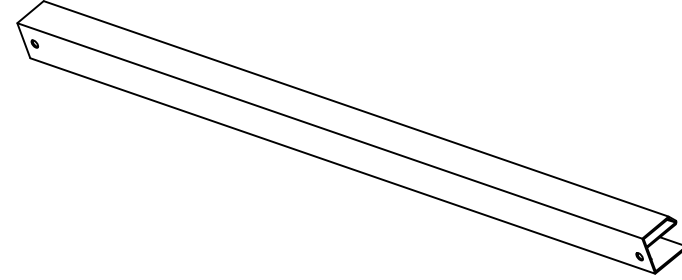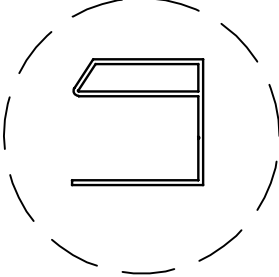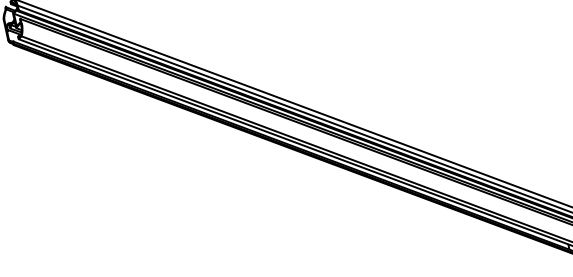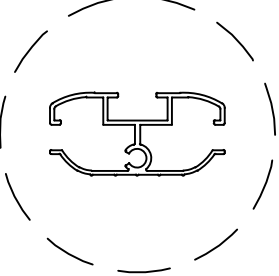
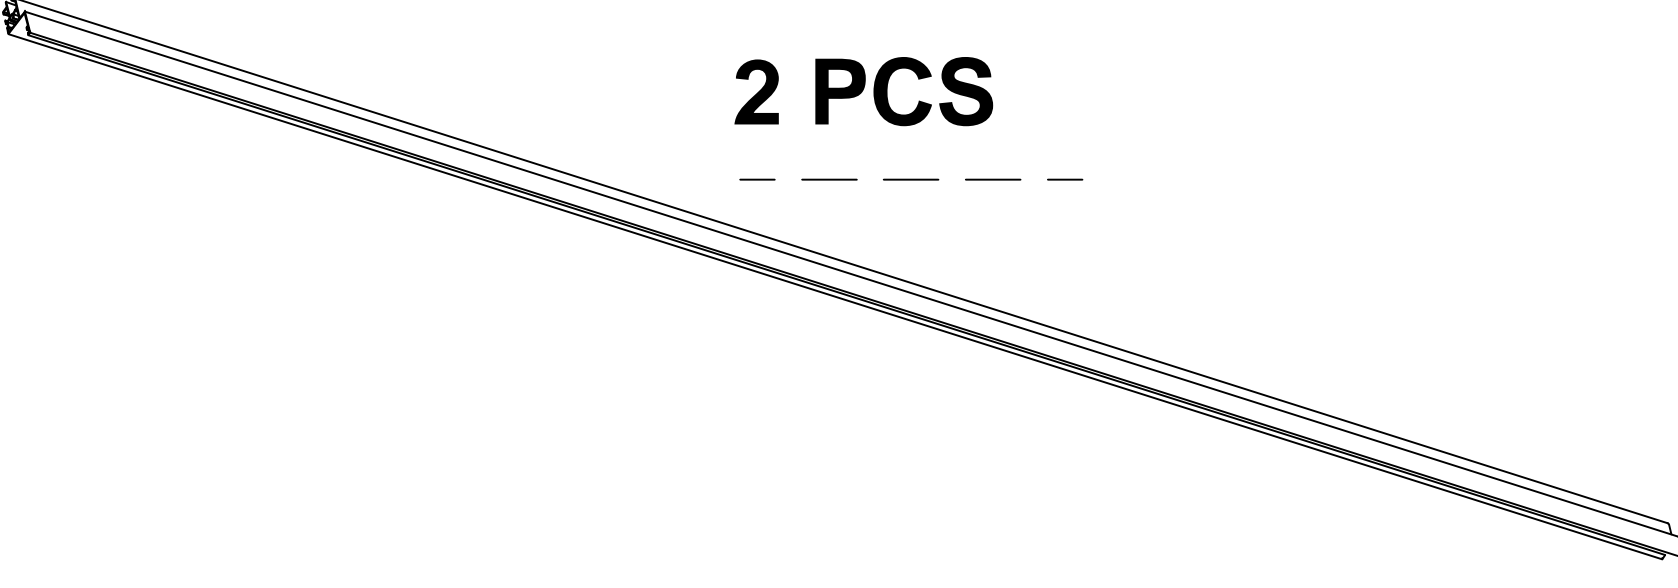
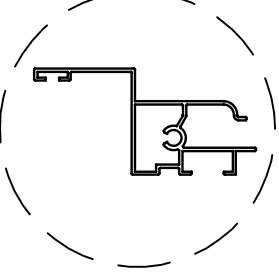
Item	Qty		MM
7	8 PCS		 564
8	8 PCS		 1300
9	1 PCS		 628
10L	1 PCS		 1665
10R	1 PCS		 1665
11	2 PCS		 547
12	1 PCS		 475
13	2 PCS		 1641

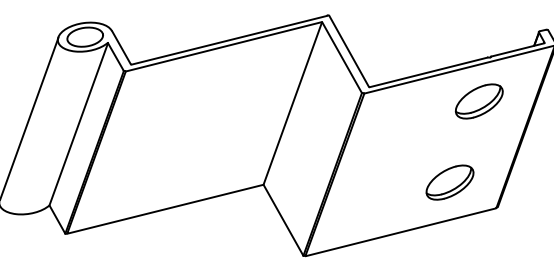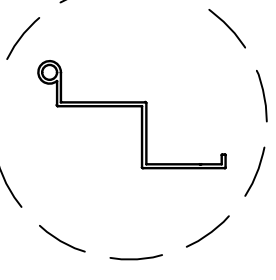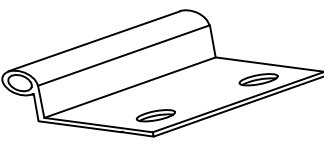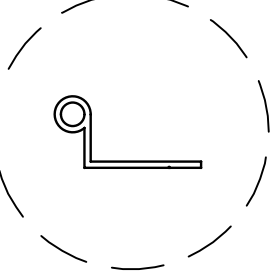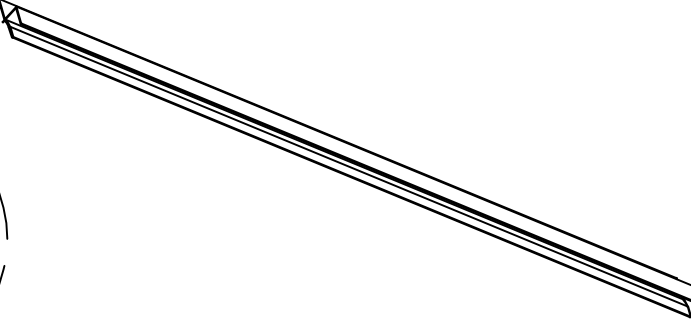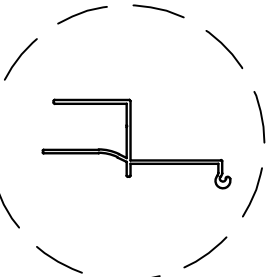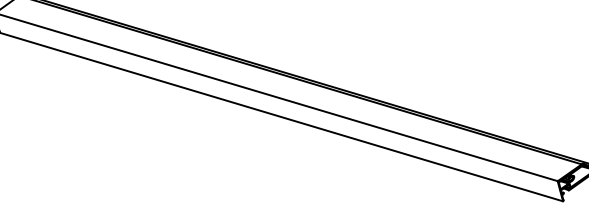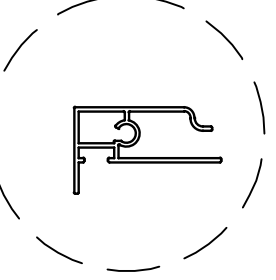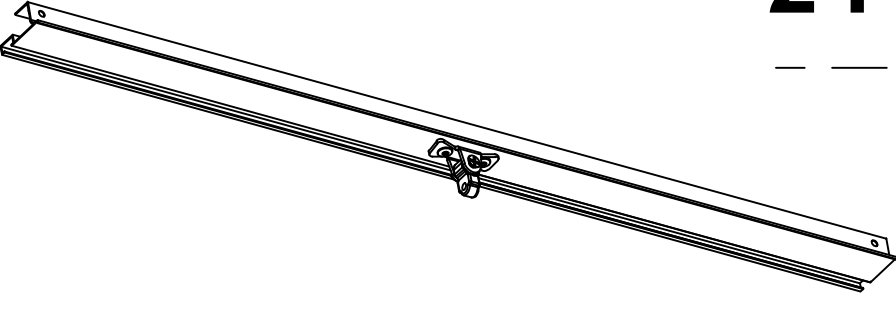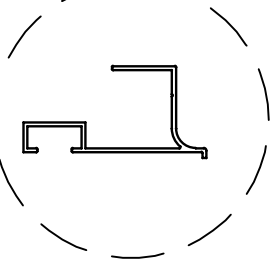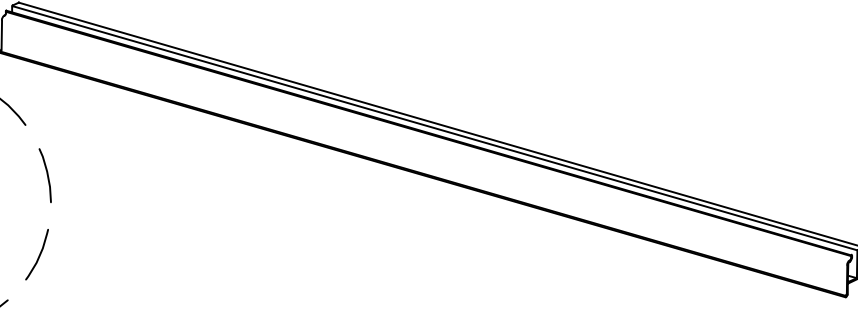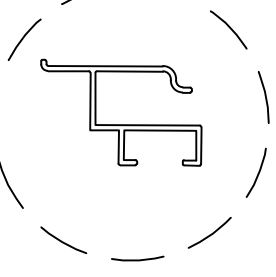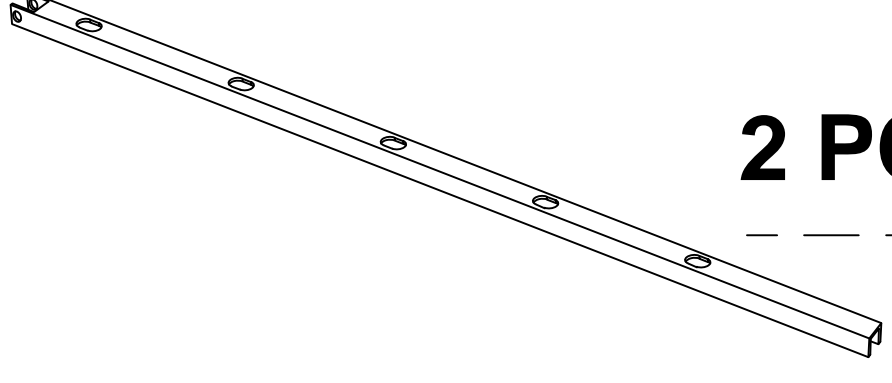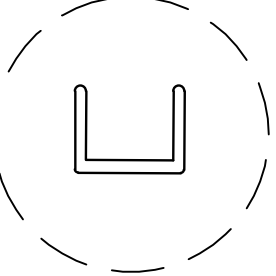
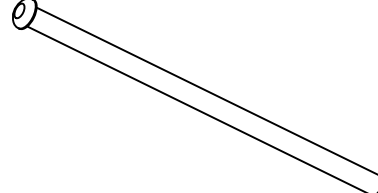







Item	Qty		MM
14	2 PCS		 90
15	4 PCS		 25
16	2 PCS		 613
17	4 PCS		 576
18	2 PCS		 613
19	2 PCS		 563
W4	2 PCS		 380












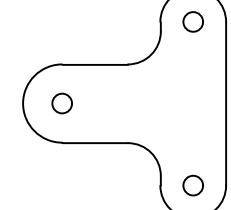
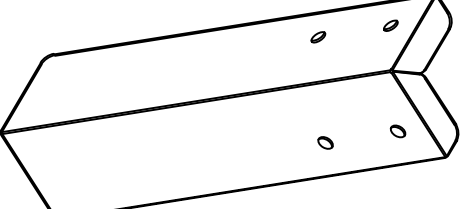
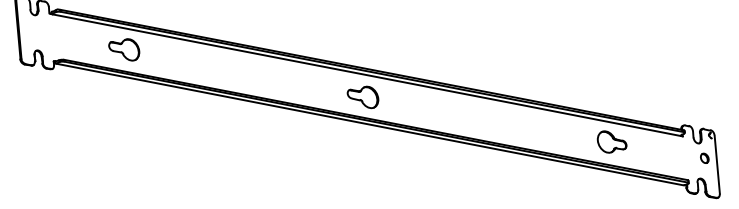
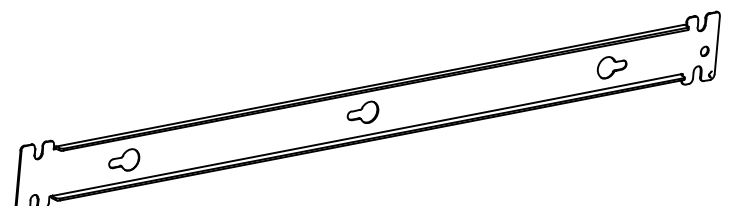
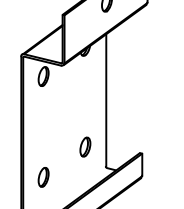
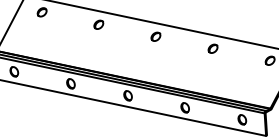
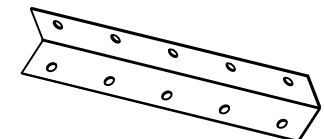
Contents

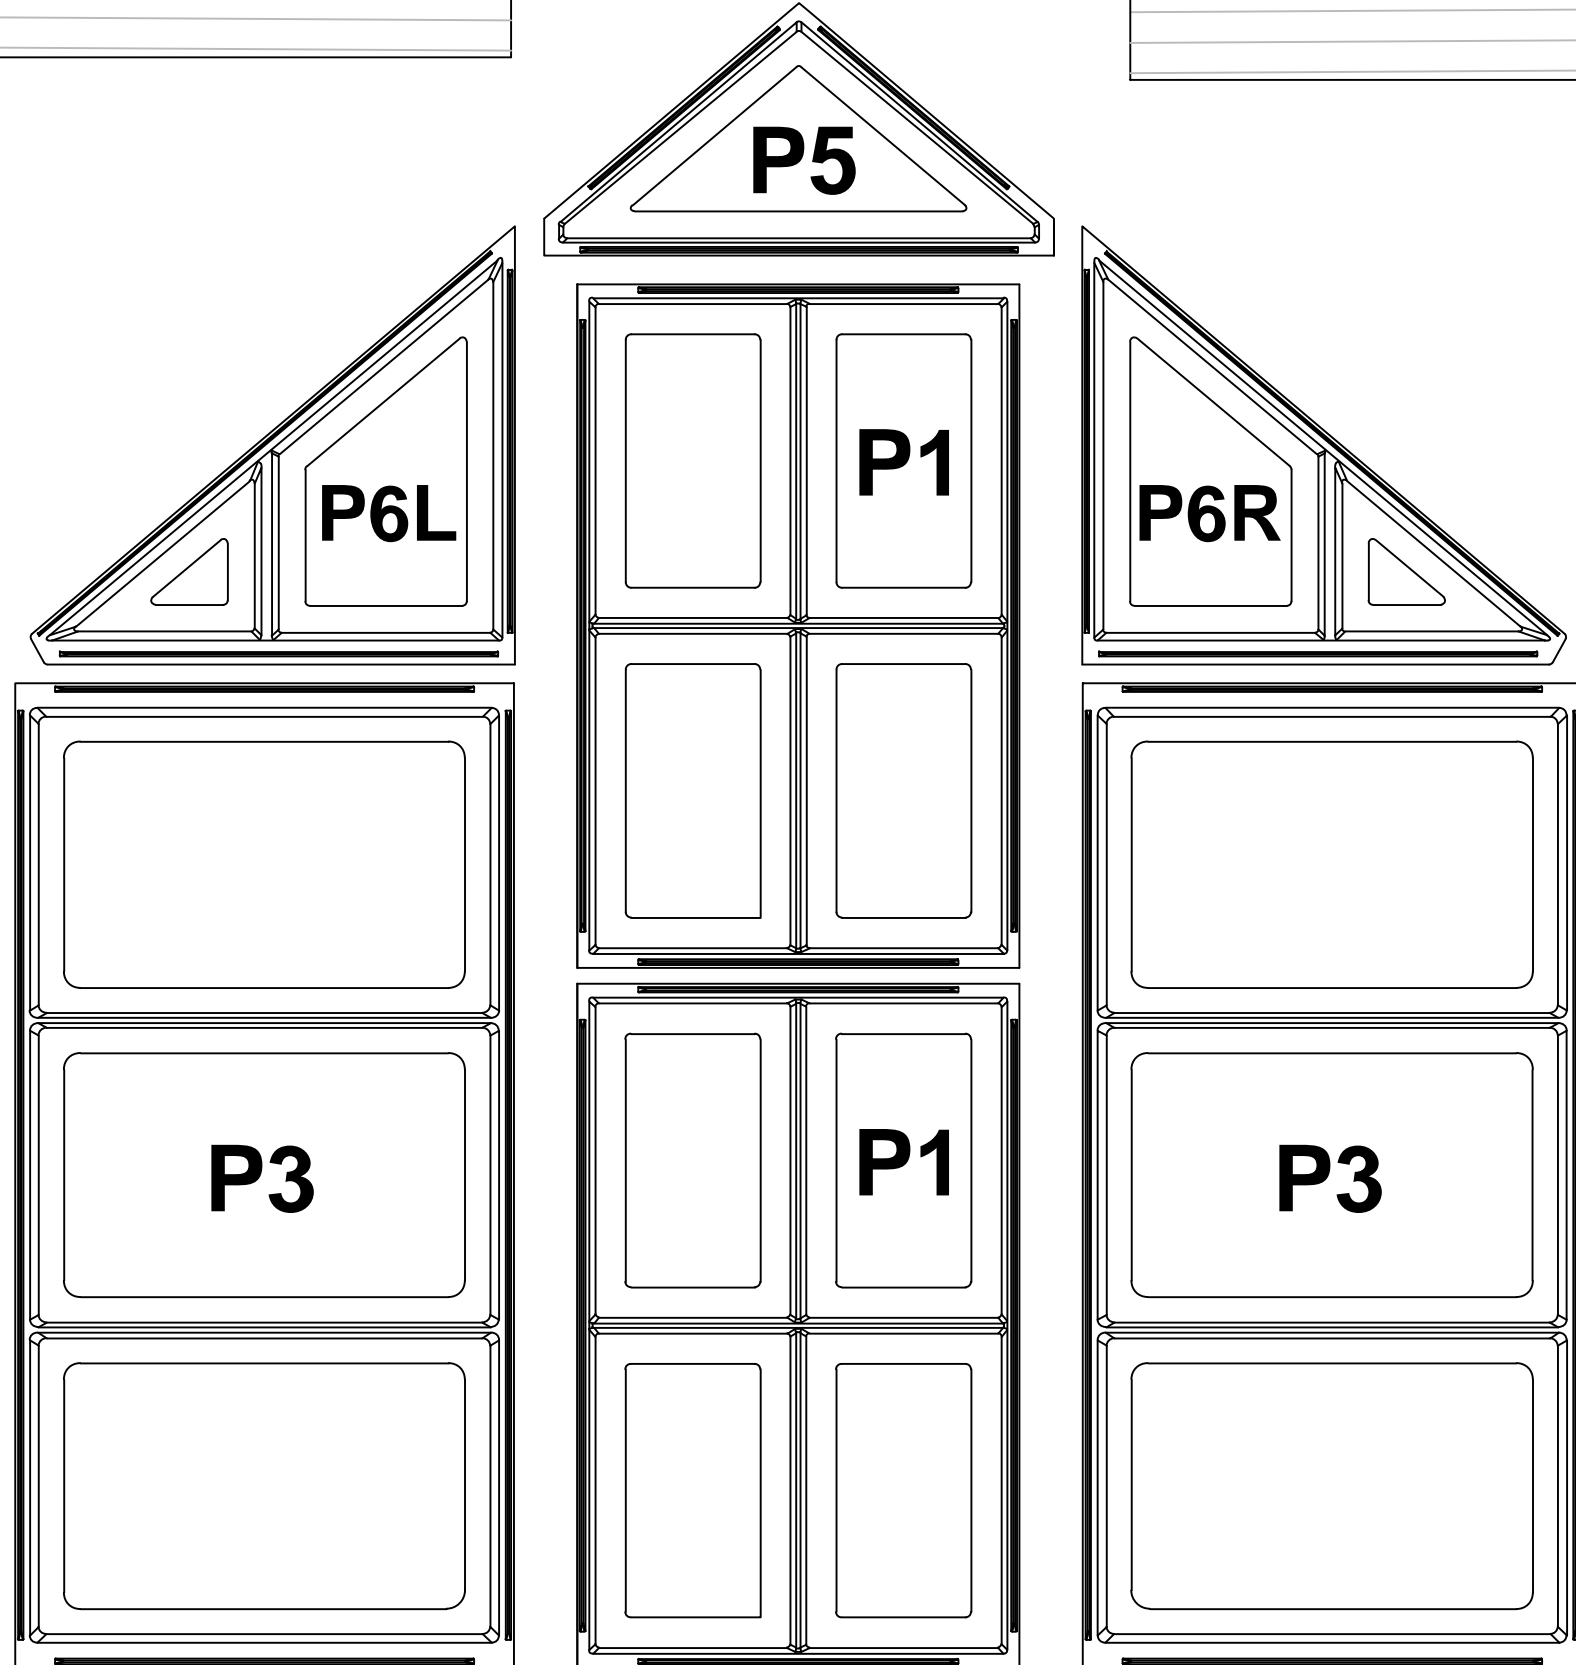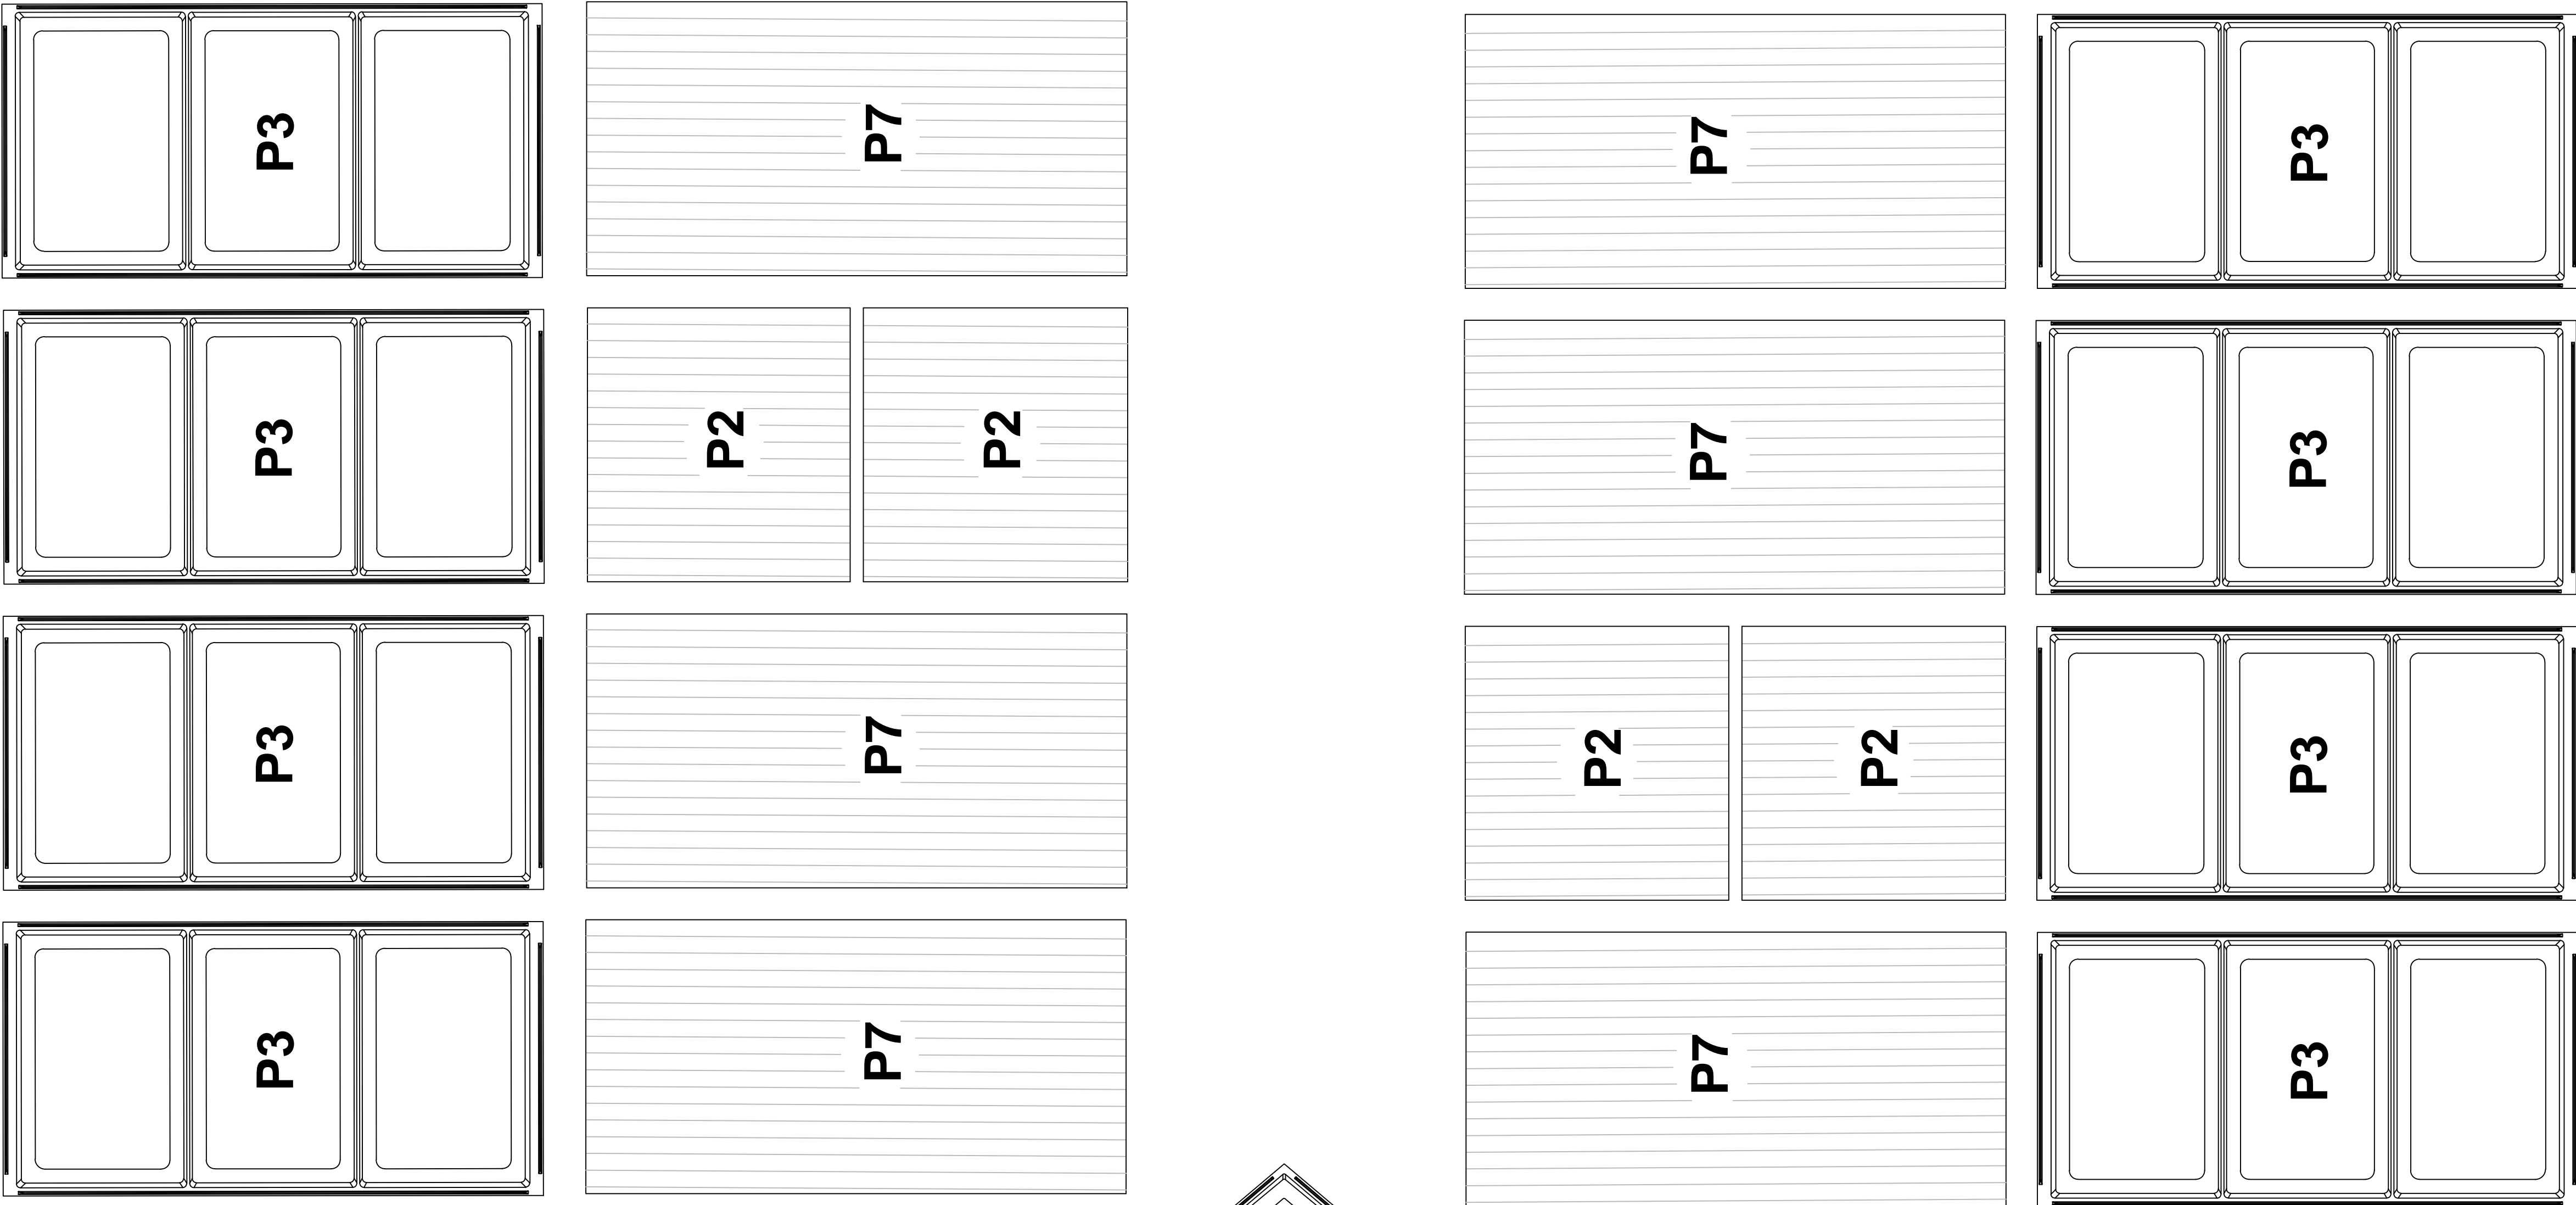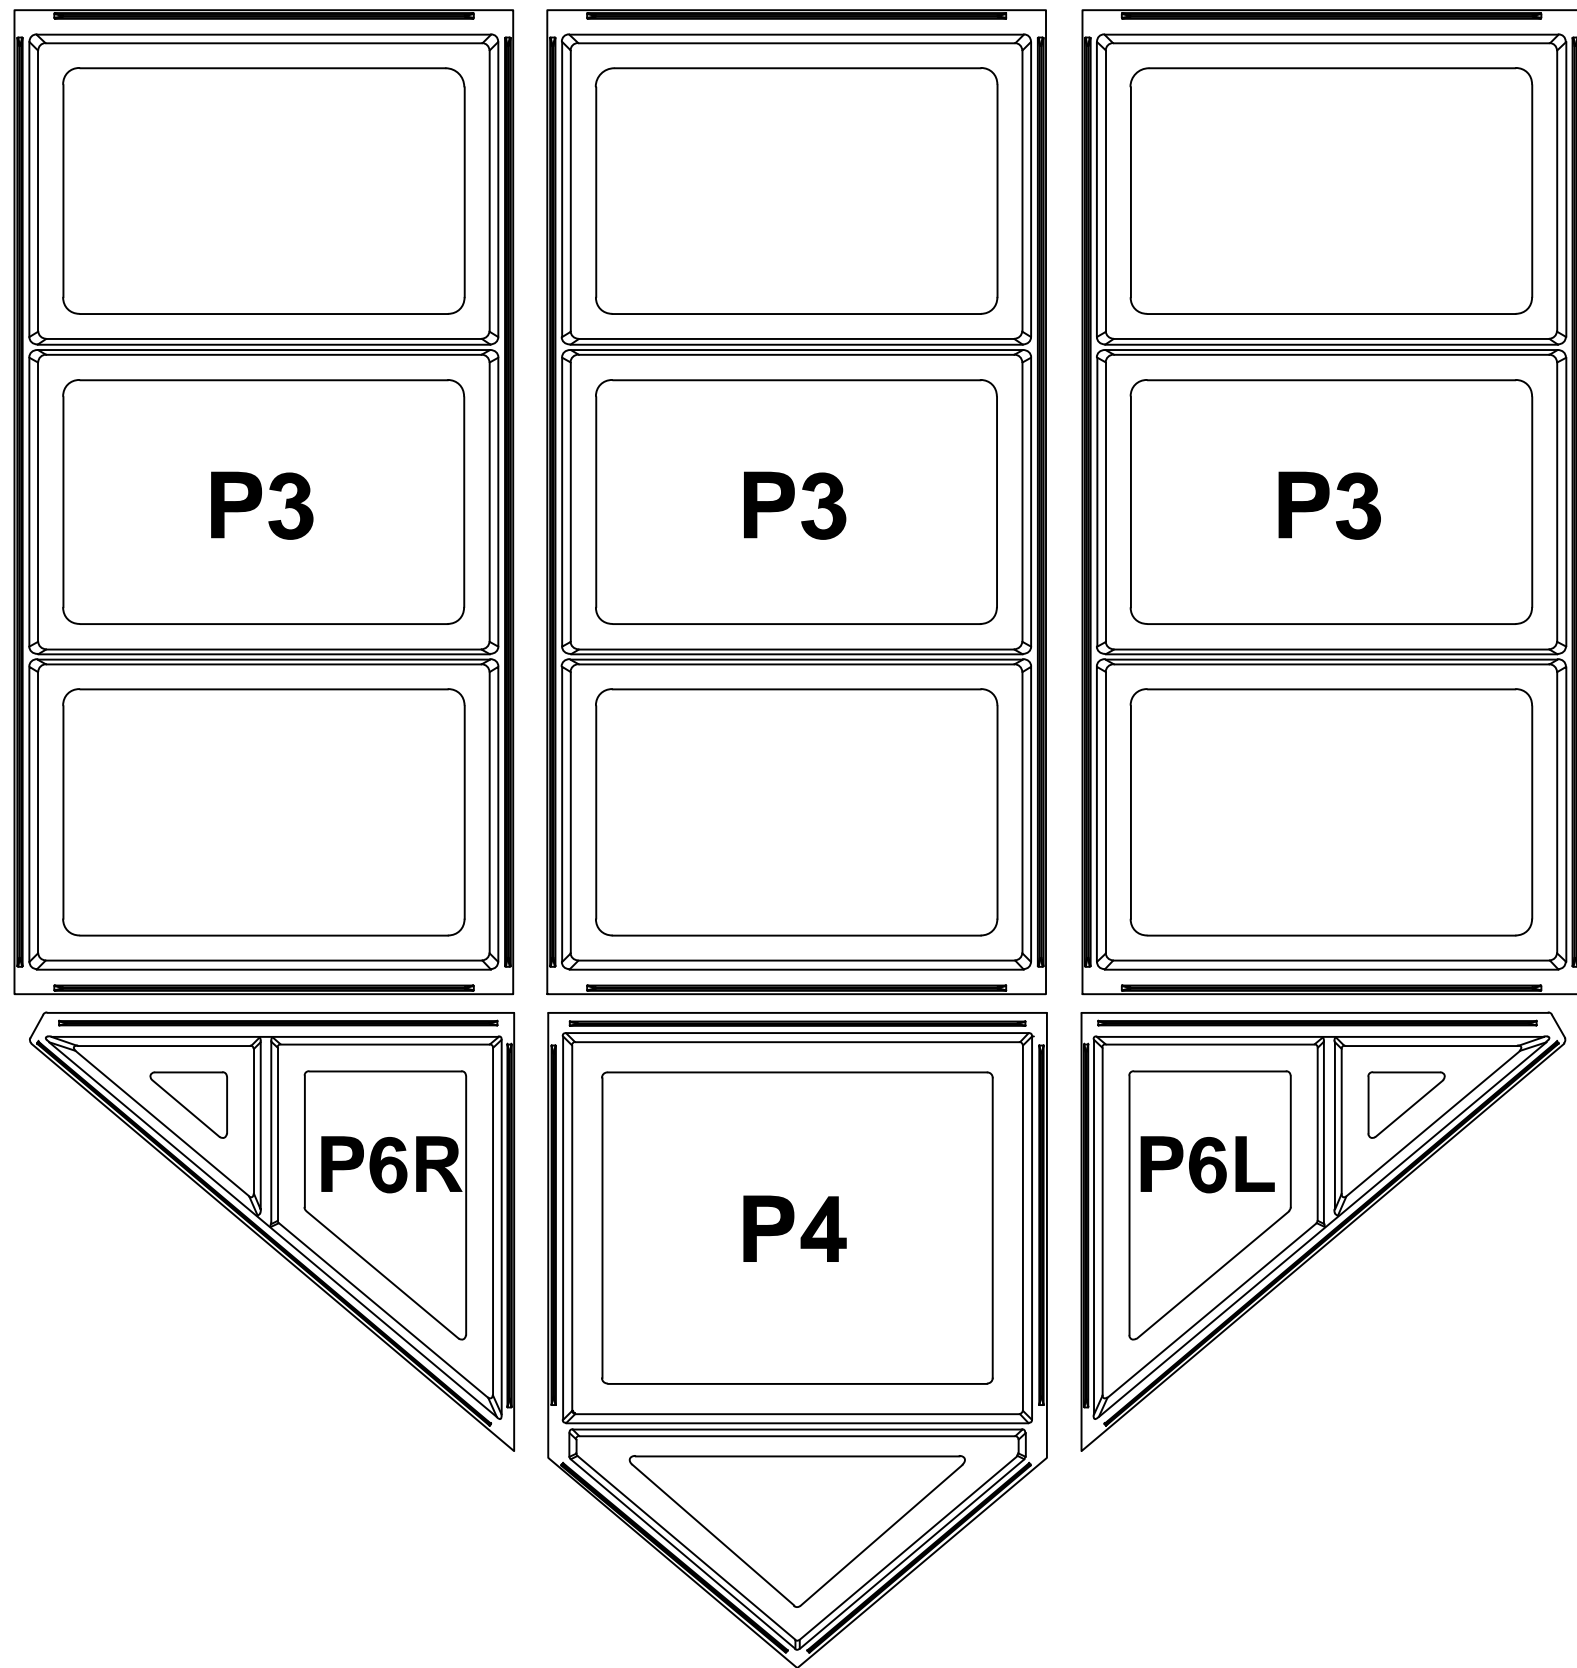4



Item	Qty	Item	Qty
 F2	8 PCS	 F7	2 PCS
 F3	1 PCS	 F8	4 PCS
 F4	2 PCS	 F10	4 PCS
 F5	156 PCS	 F11	4 PCS
 F6	22 PCS		

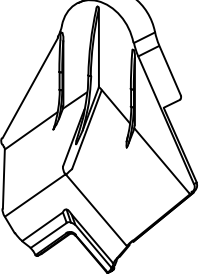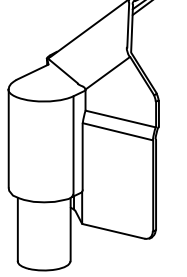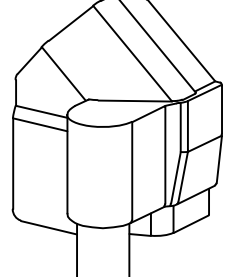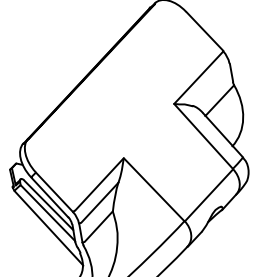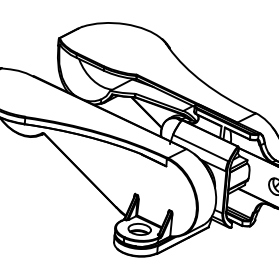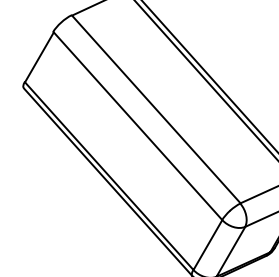
S1	S2L	S2R	S3	S4	S8
					
2 PCS	2 PCS	2 PCS	6 PCS	1 PCS	2 PCS

24	21	22	B4	2 PCS
				5 PCS
				4 PCS
				1 PCS
				1 PCS
				2 PCS
				2 PCS
				1 PCS
1 PCS	2 PCS	4 PCS	B8	2 PCS




5


F6 11 F6

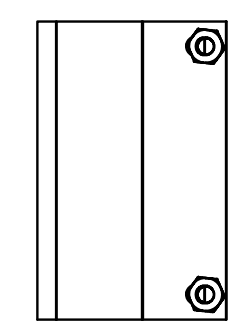


14

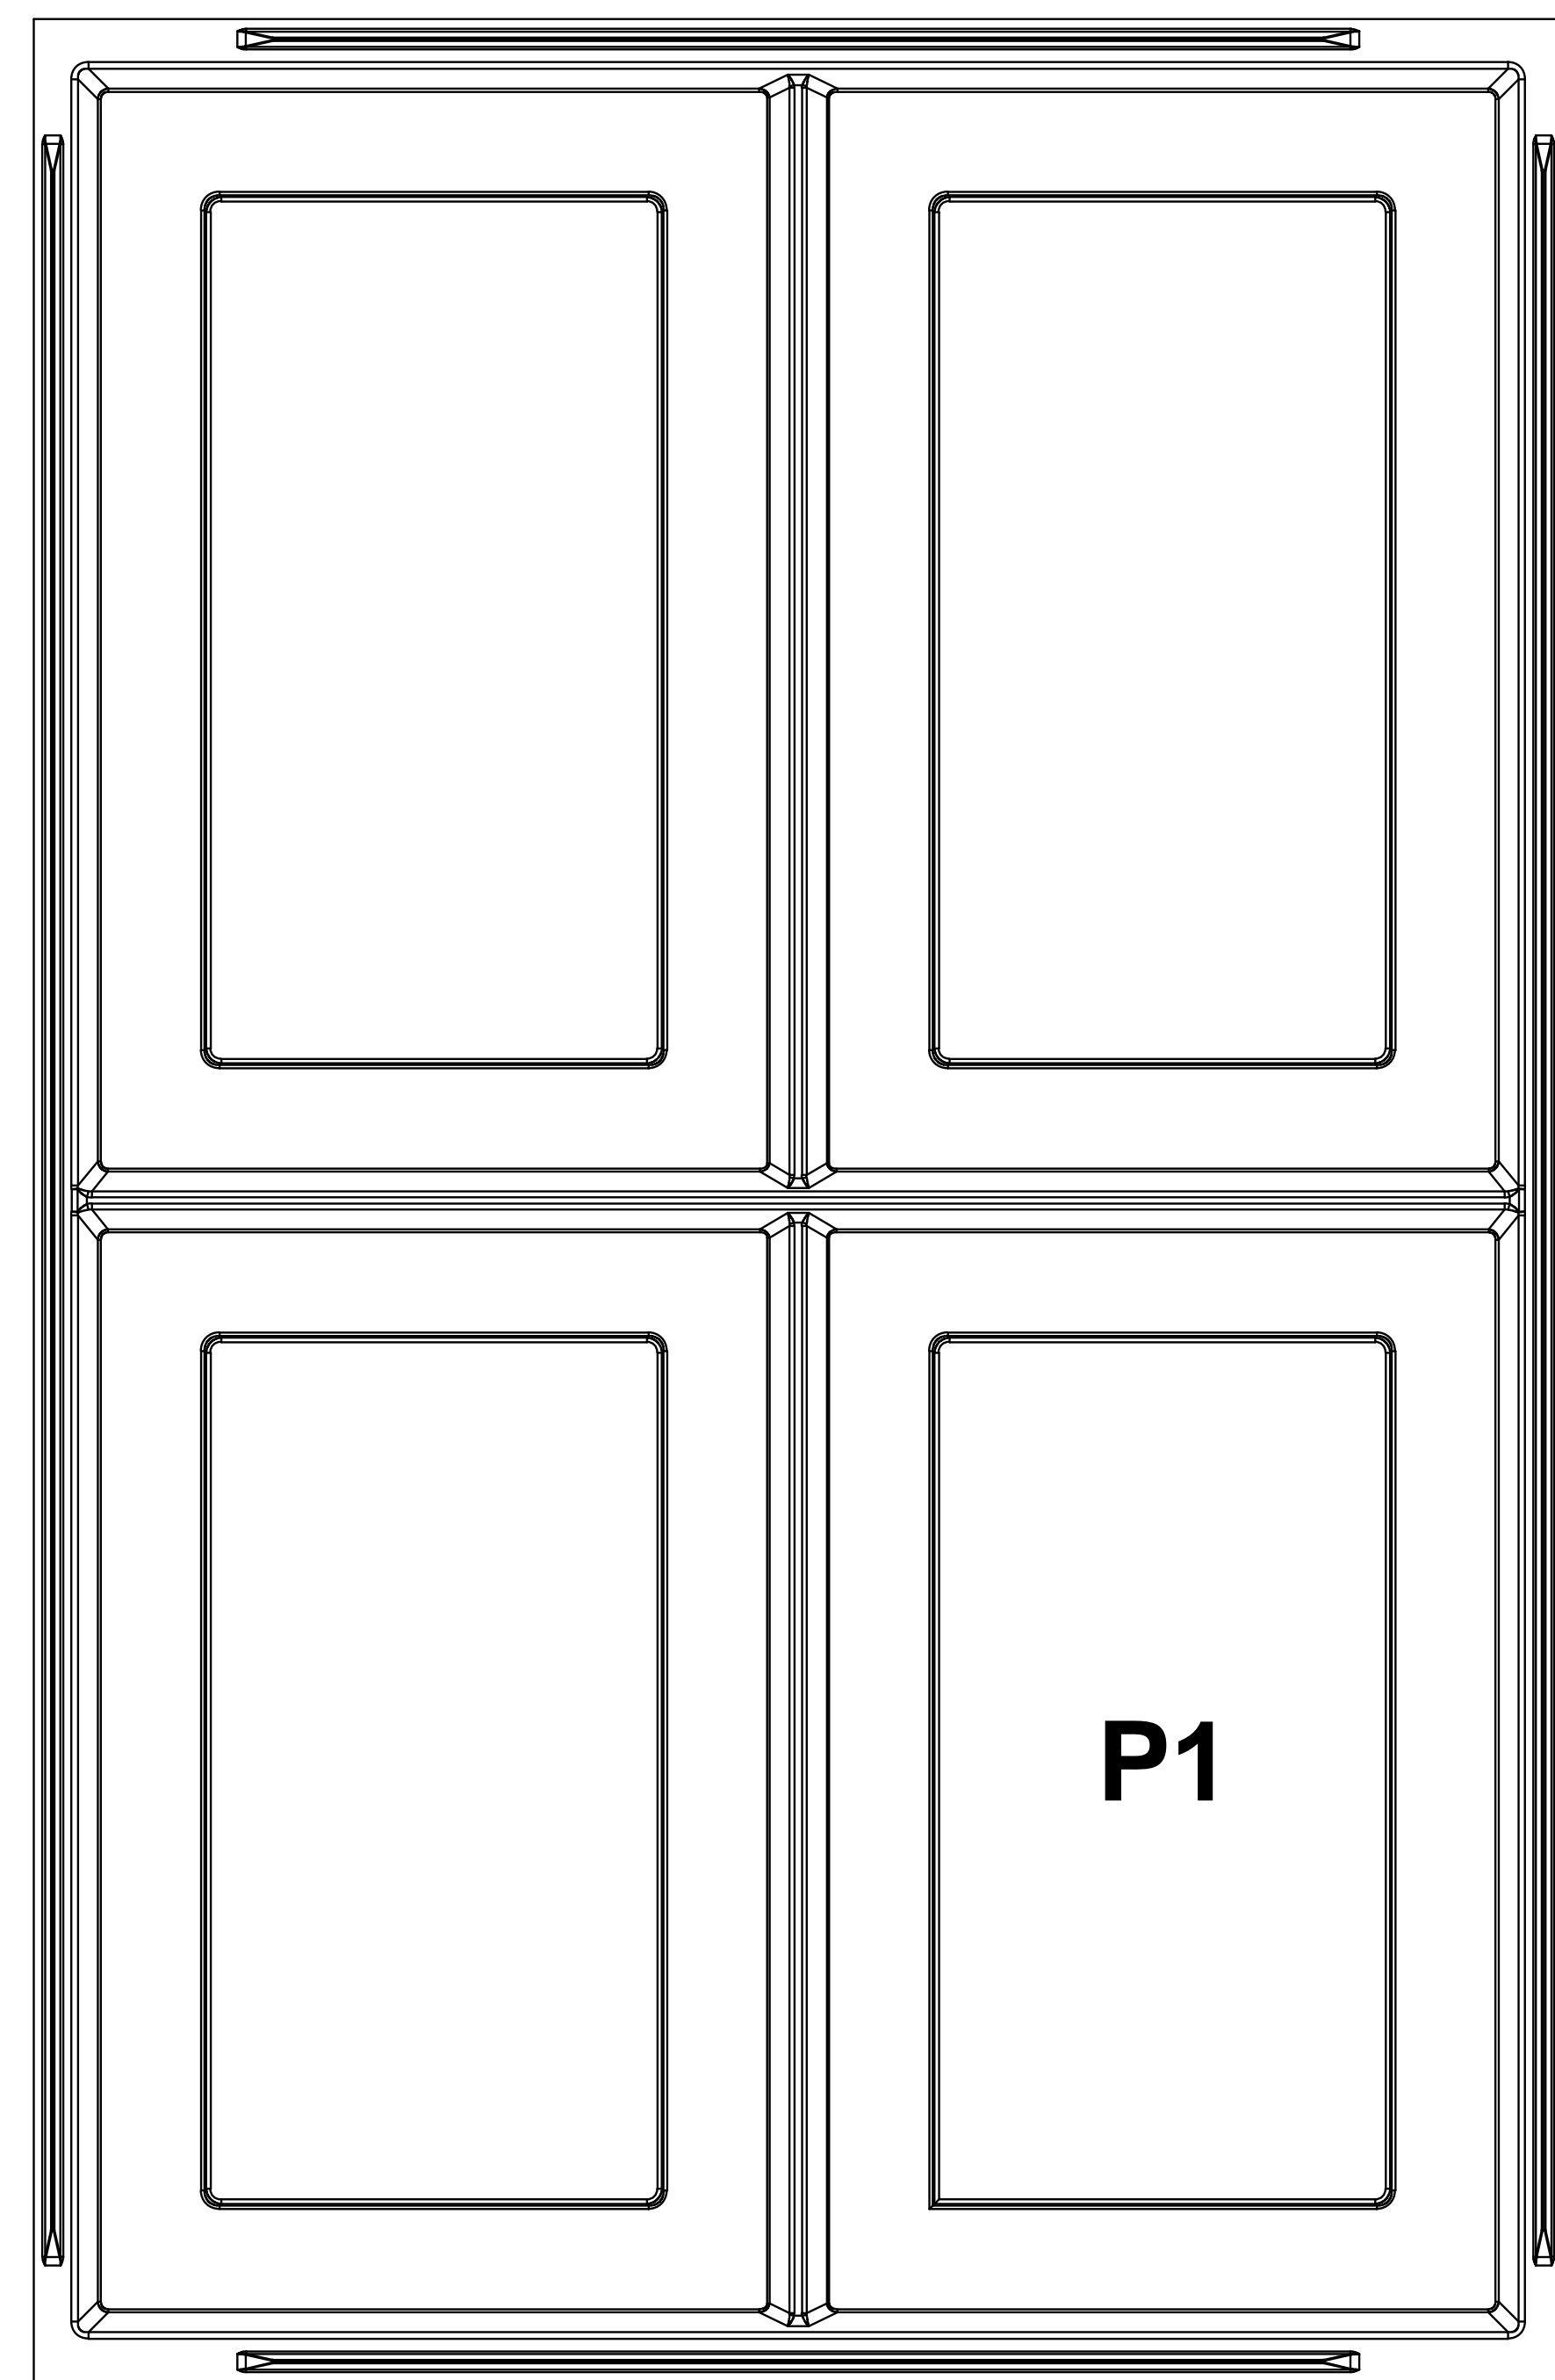


13

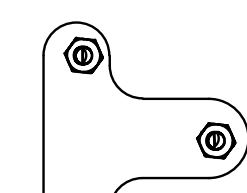



B5



12

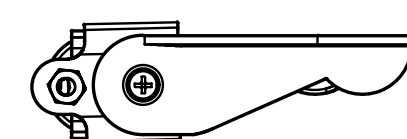


S4

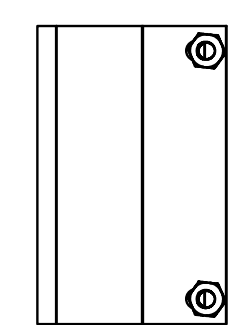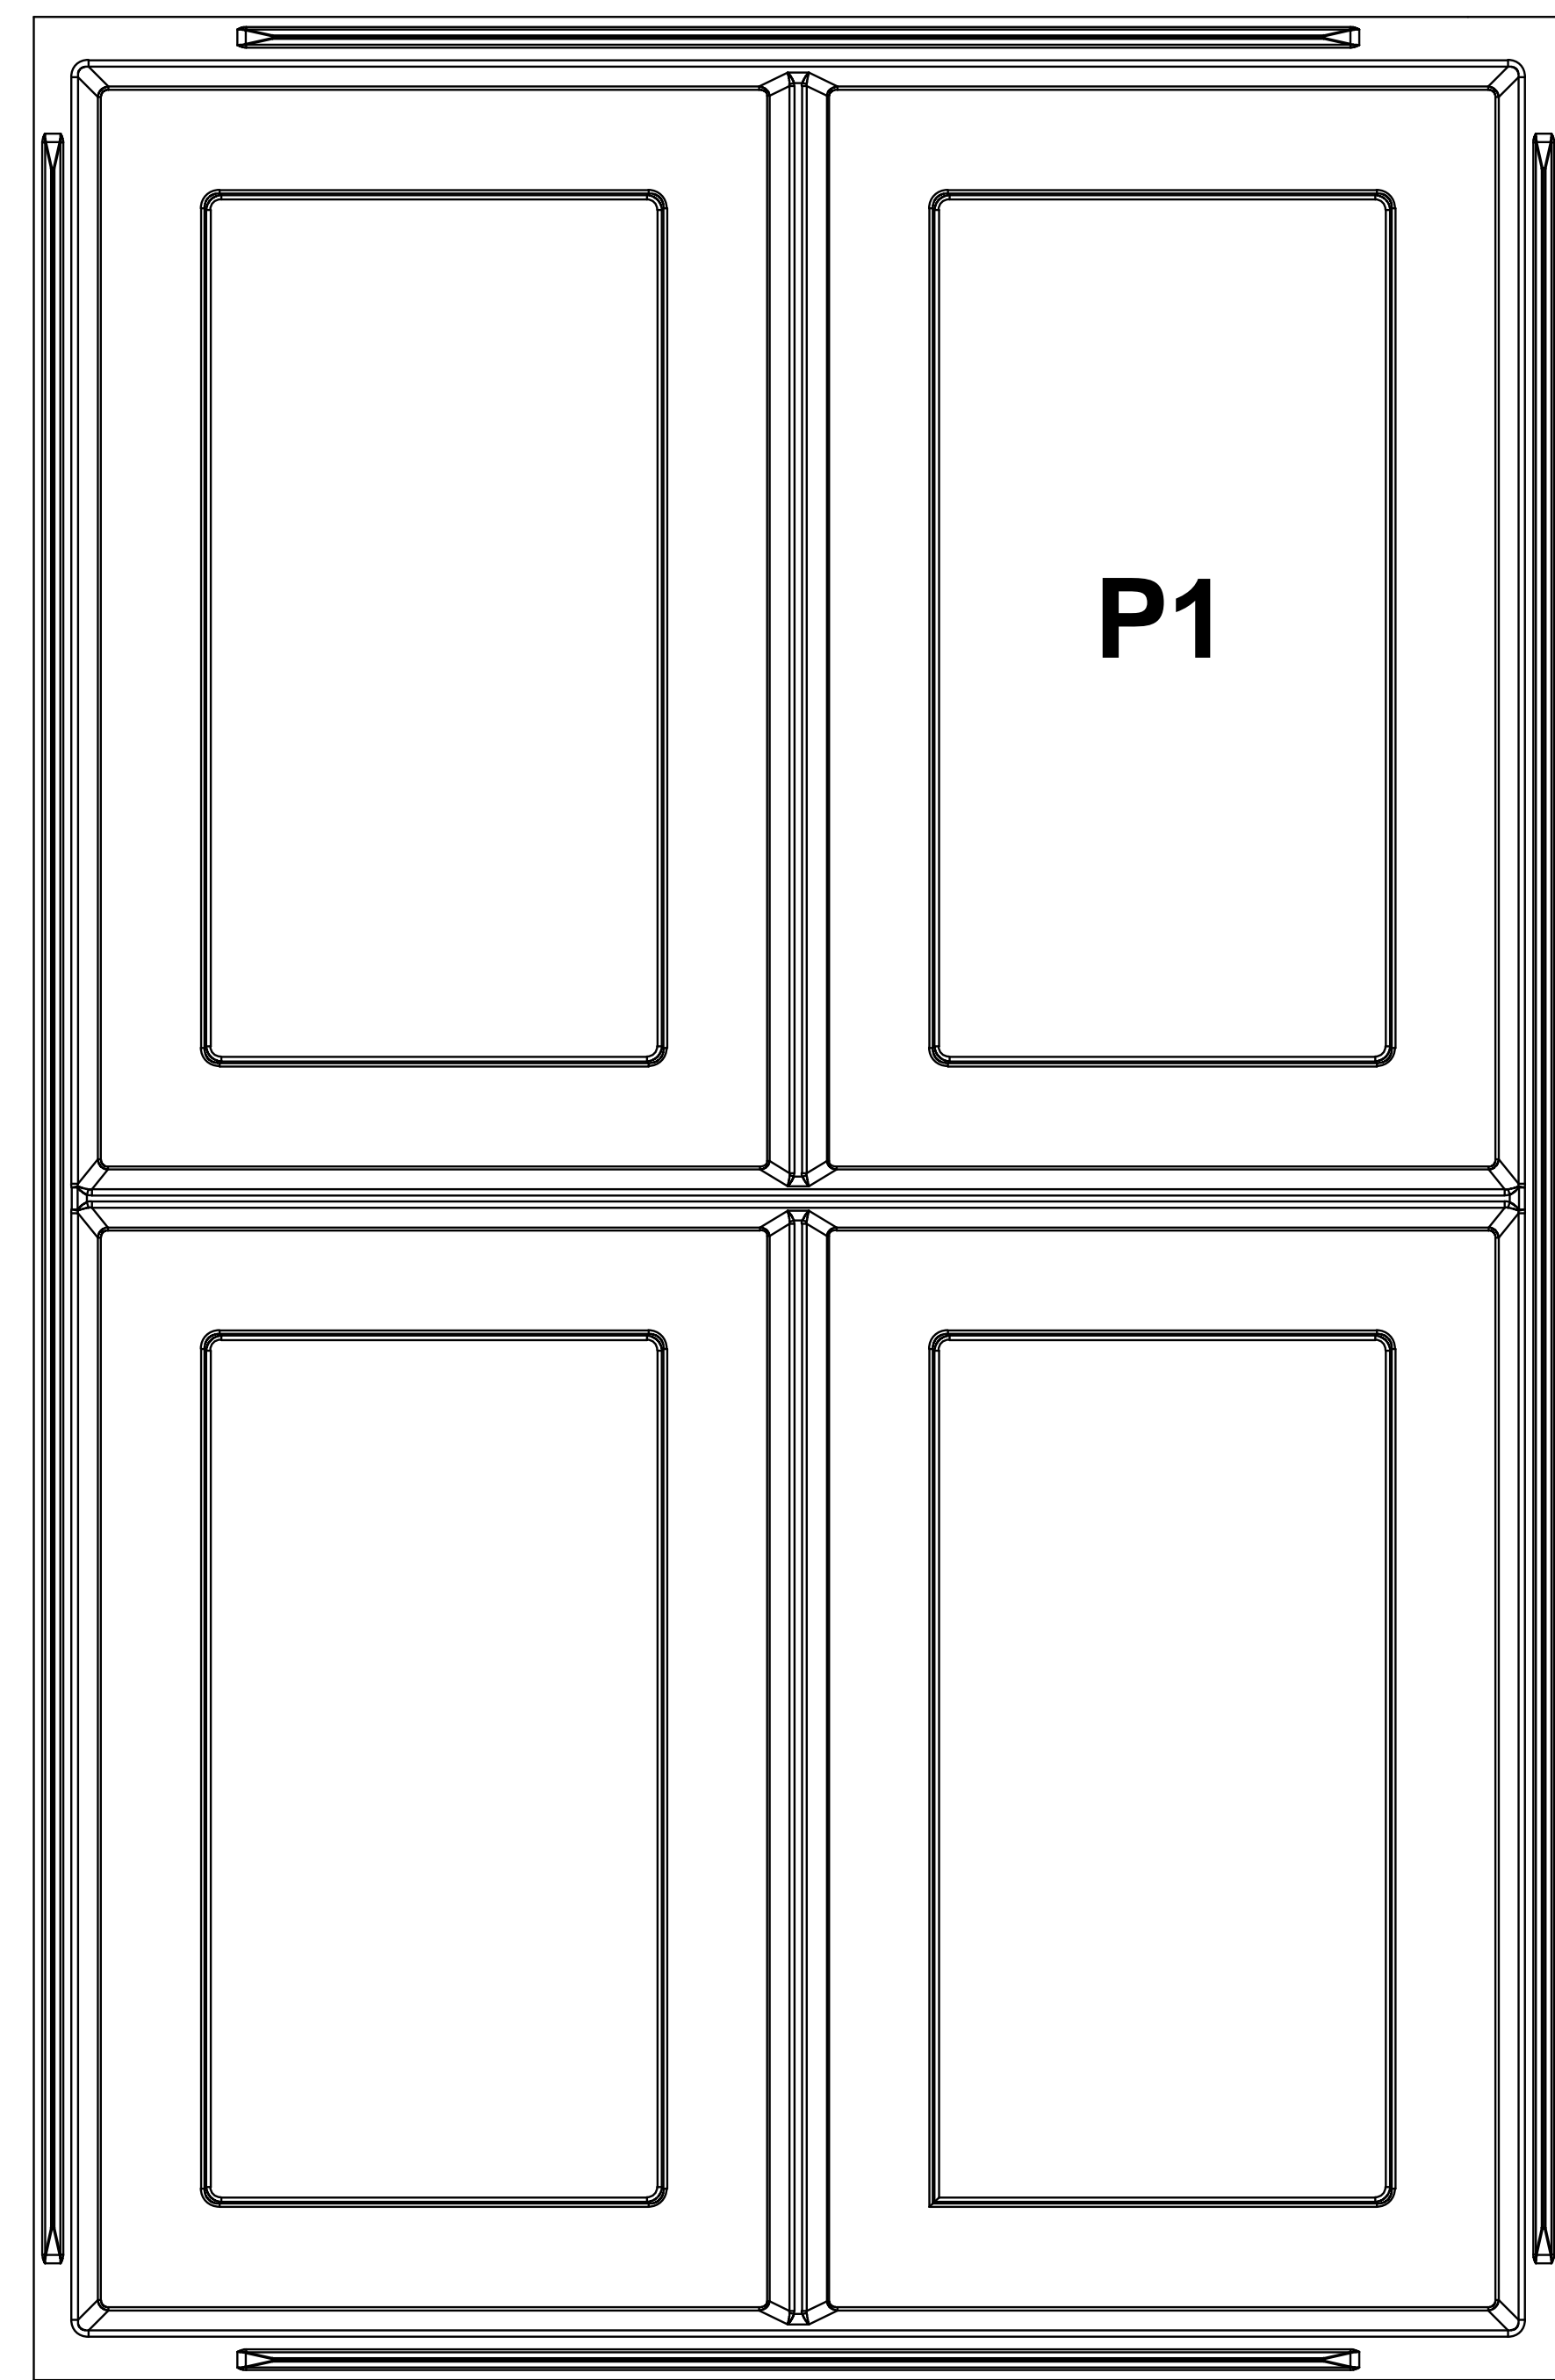

14


F6 11 F6

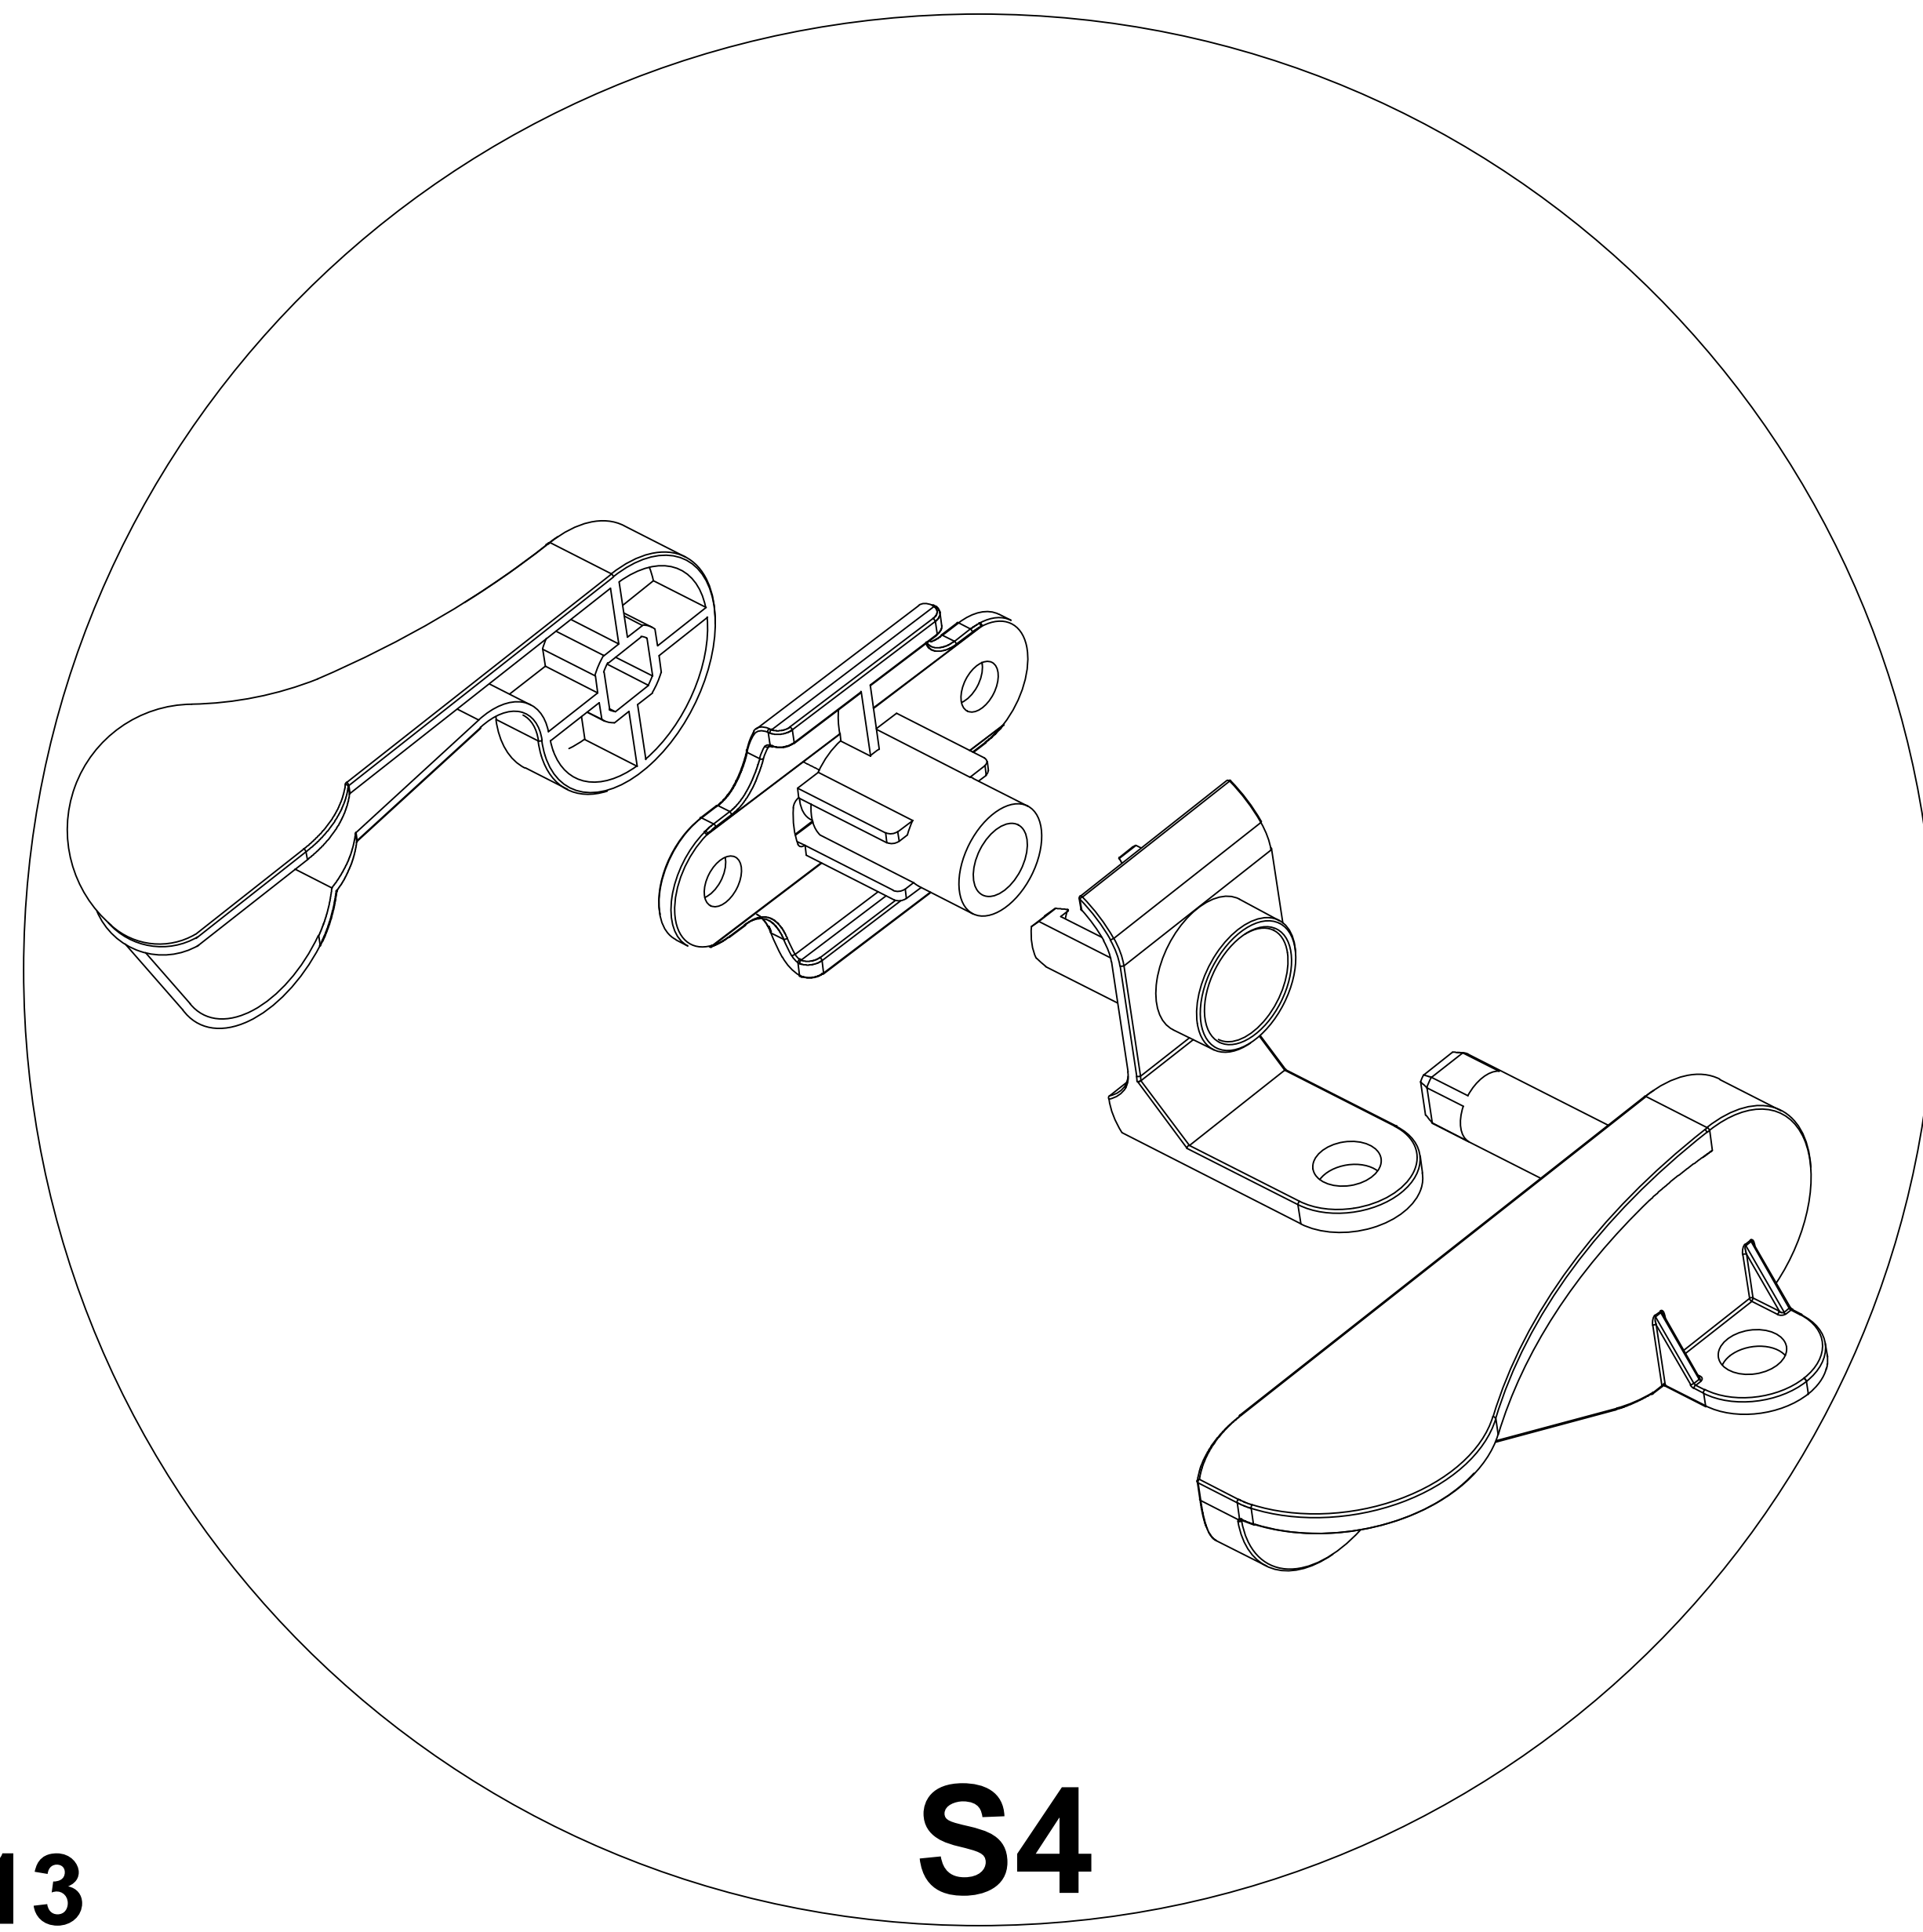


S4

MM

11

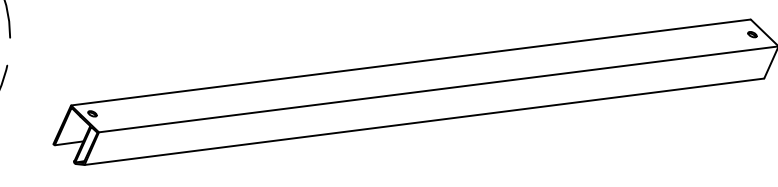


2 PCS

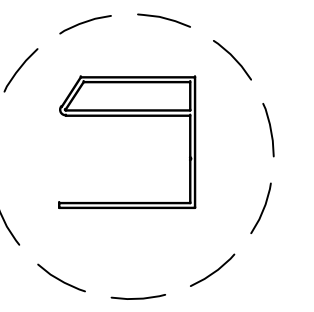


548

12

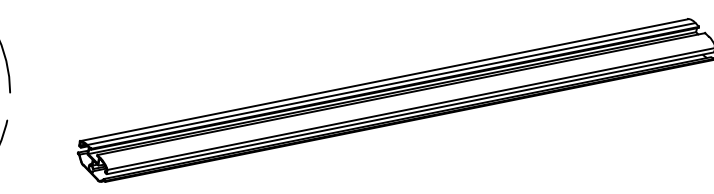


1 PCS

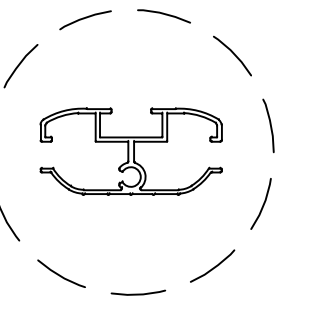


475

13

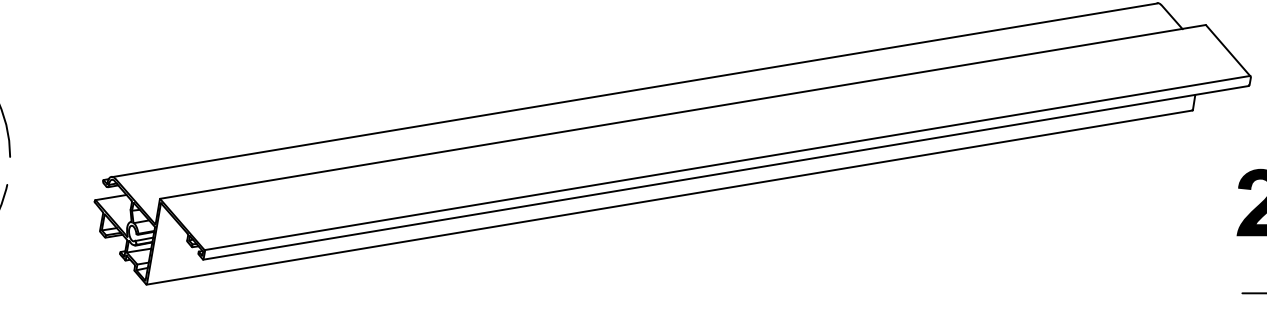


2 PCS

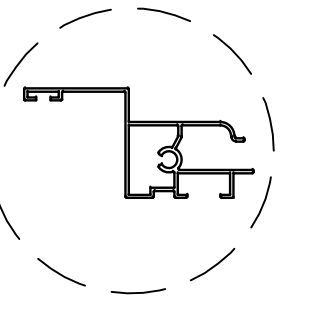


1641


14

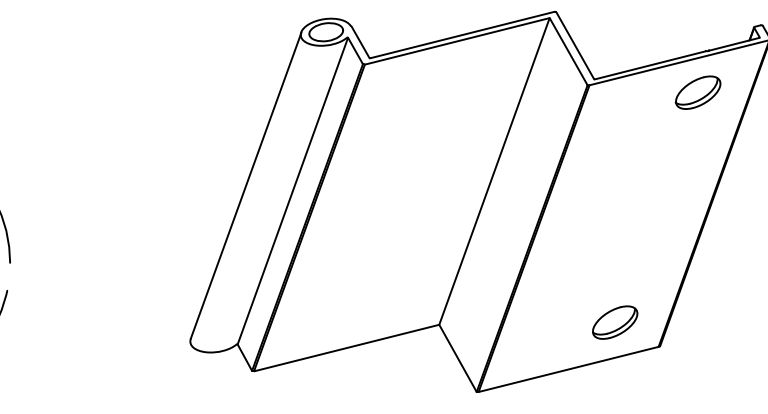

2 PCS

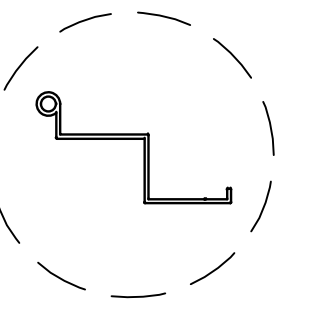


90

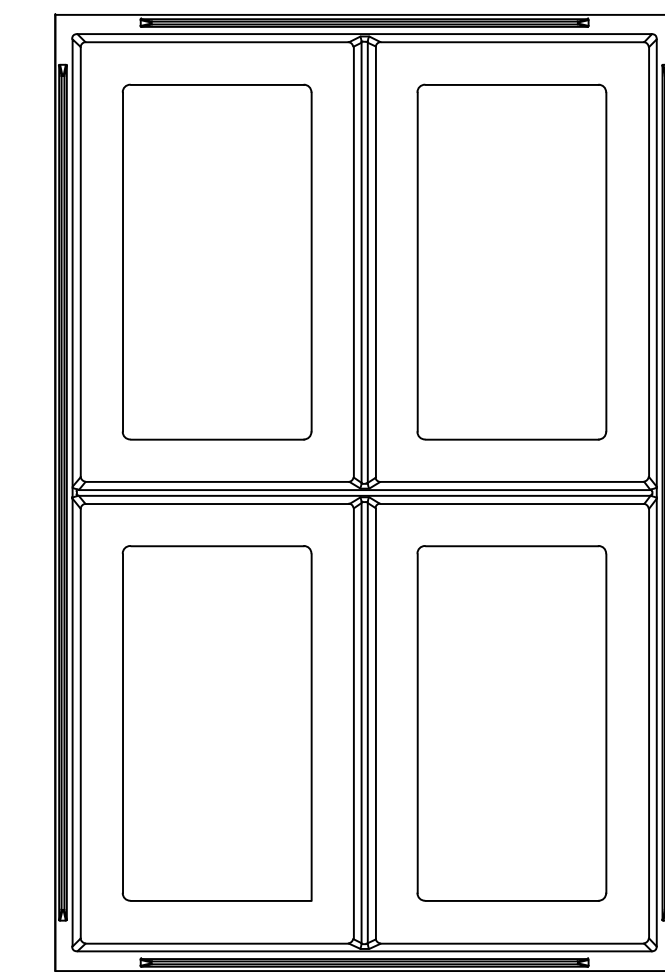


P1x2

B5

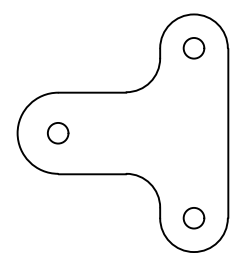


1 PCS

S4

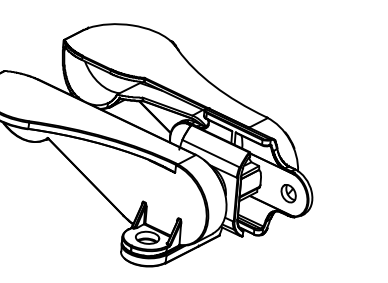

1 PCS


F3

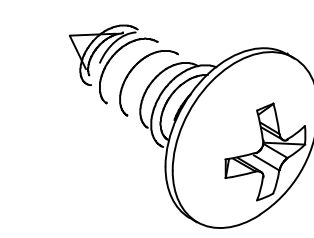

ST4.2X16

1 PCS


F5

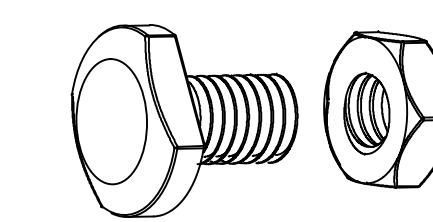

M6X10

9 PCS



F6

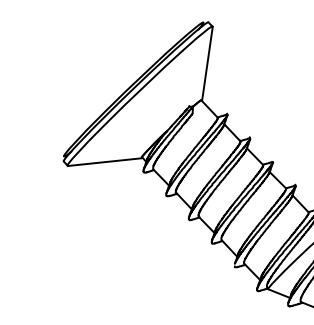





ST4.2X16

4 PCS




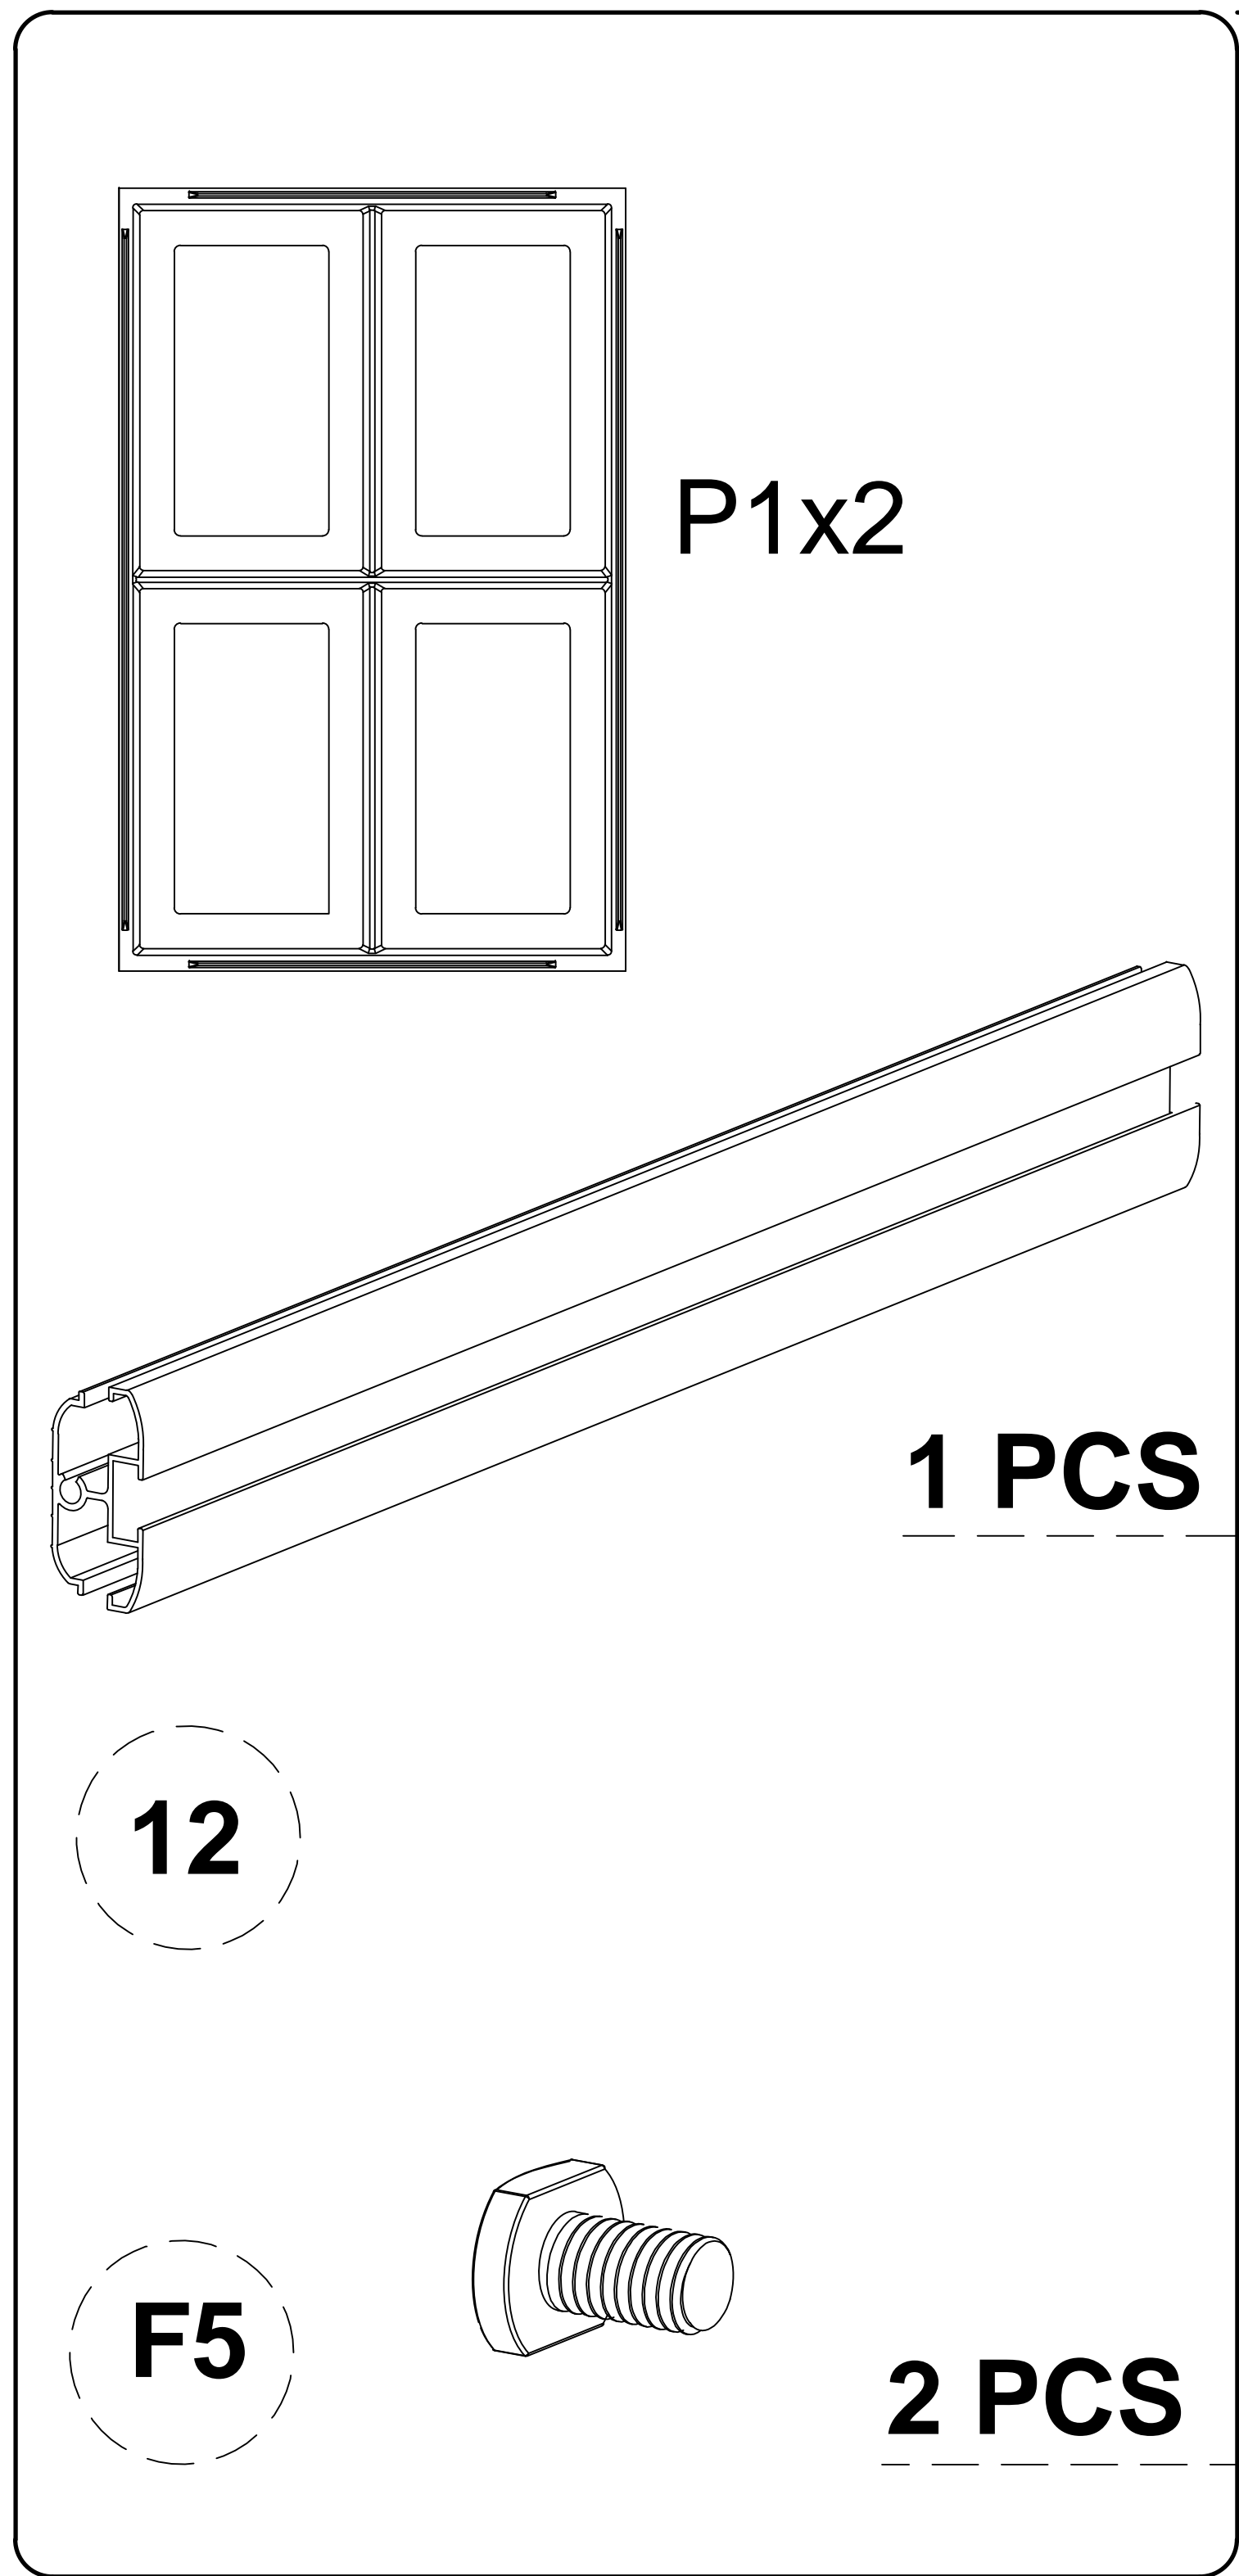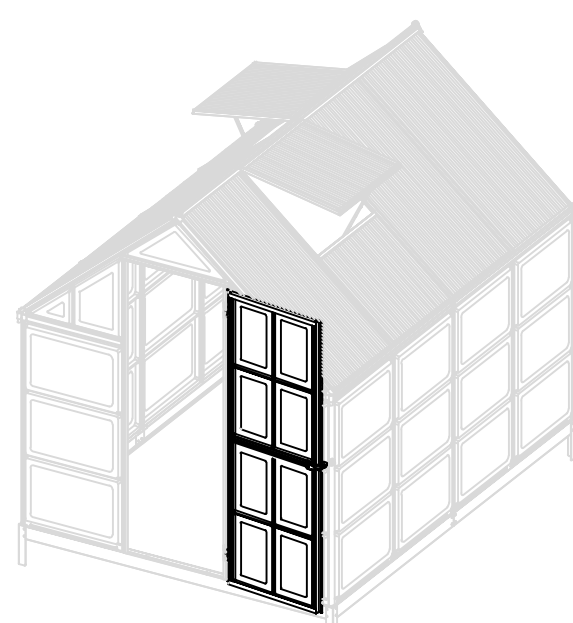



F5x2

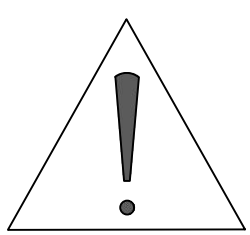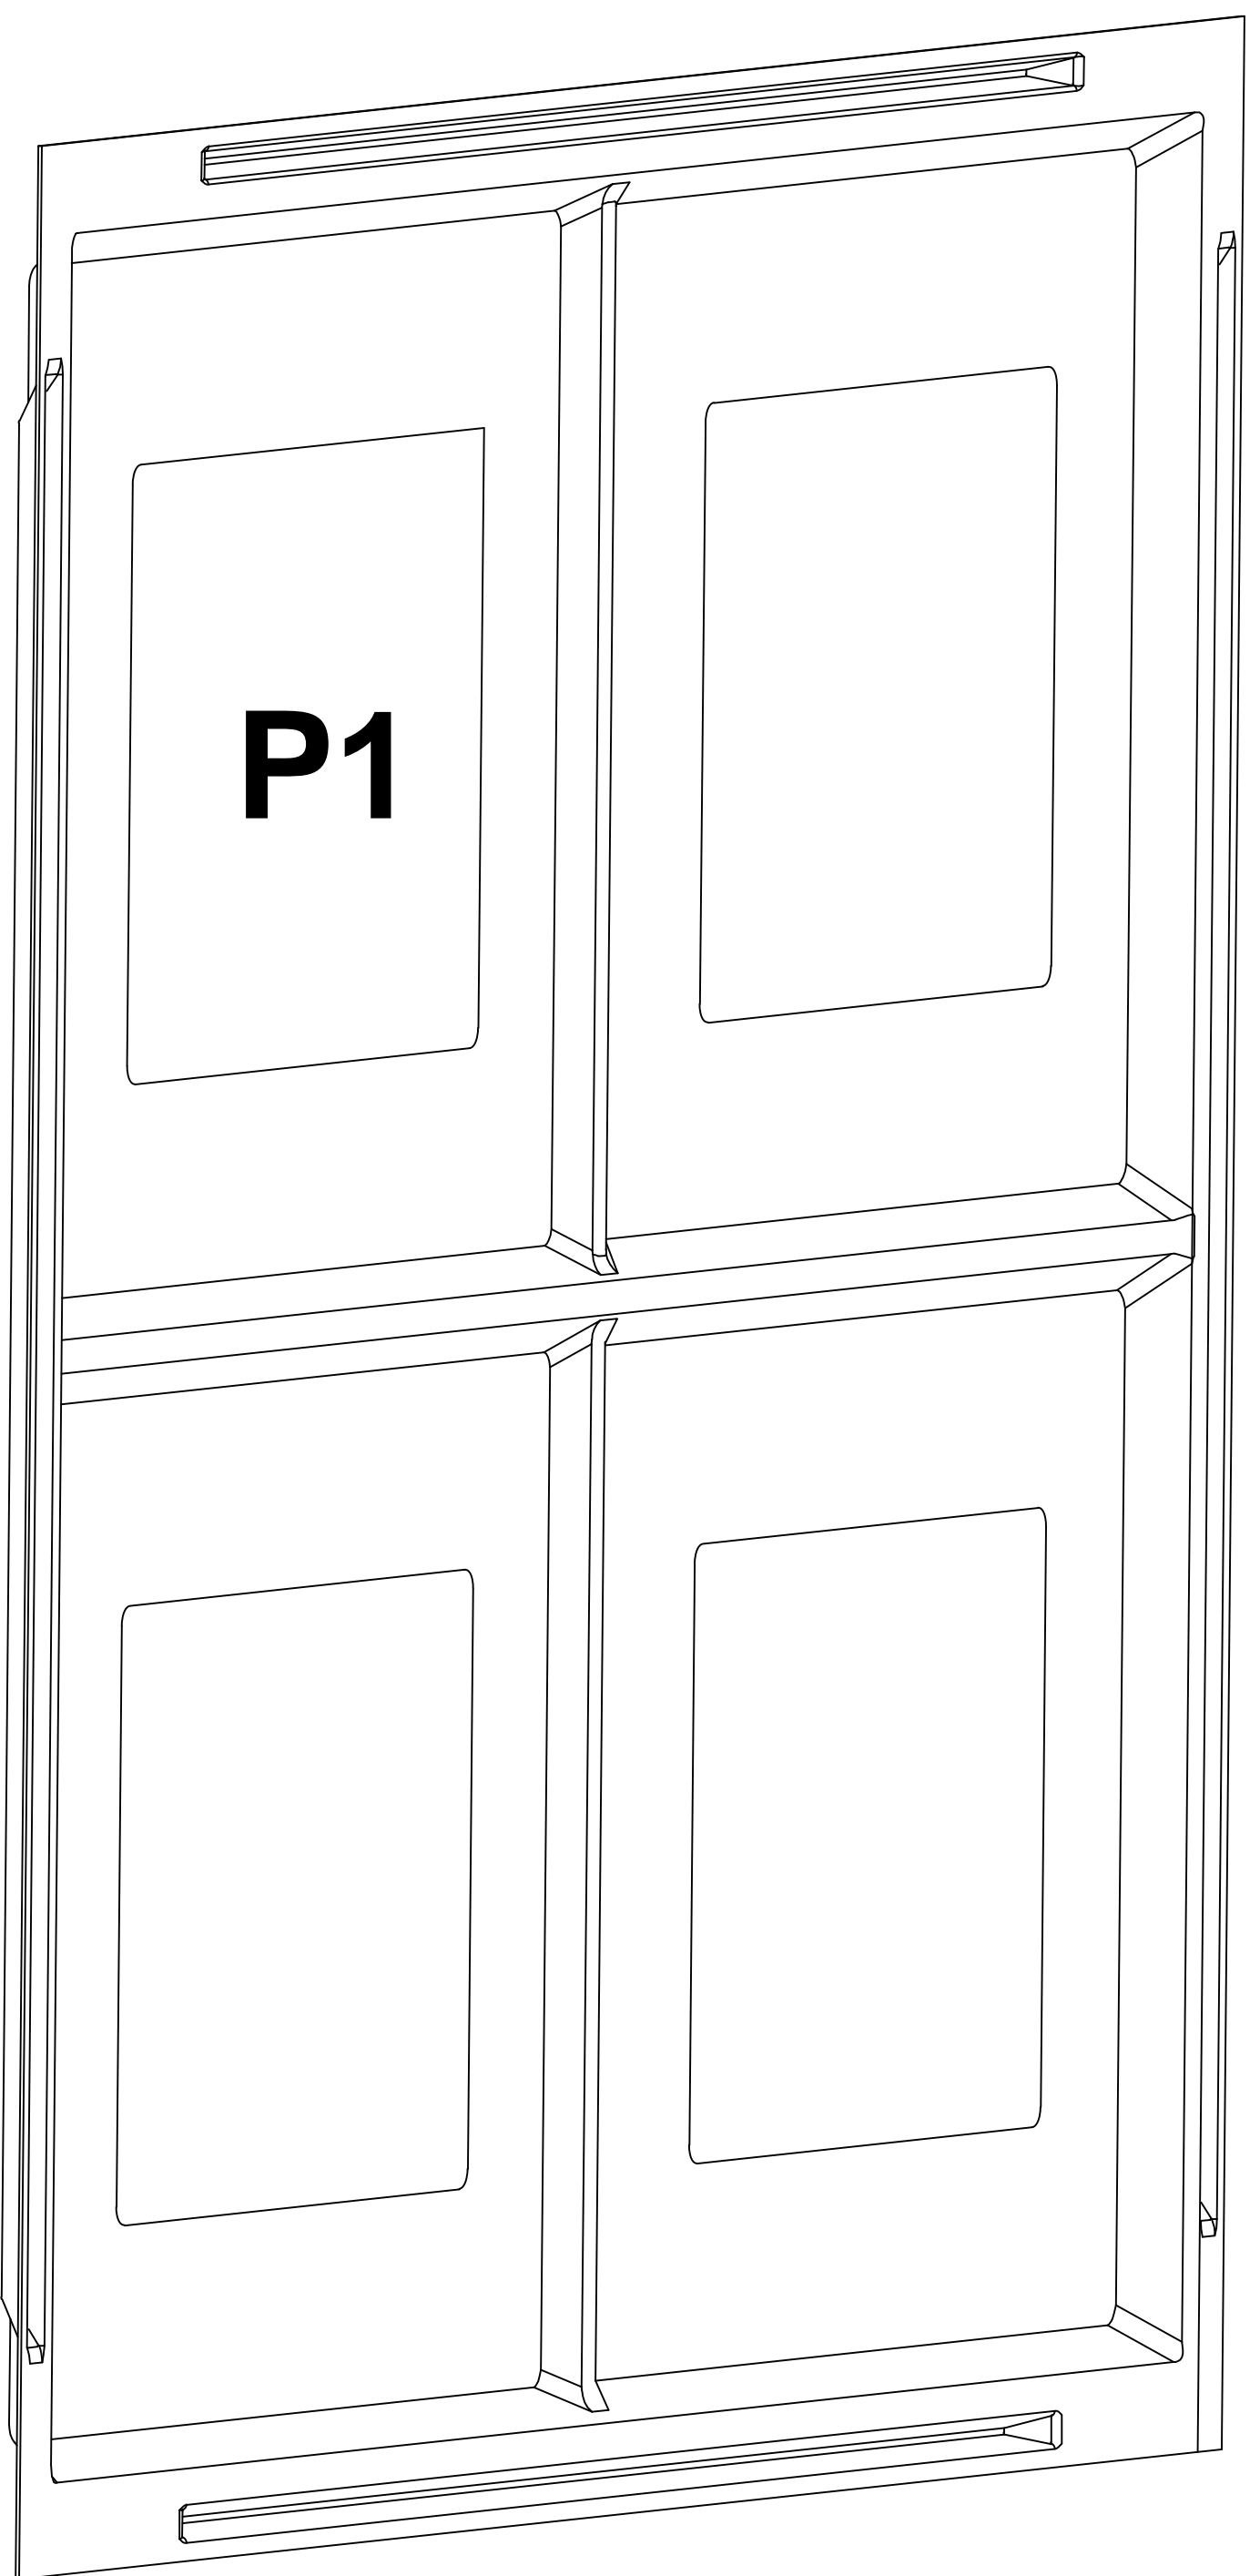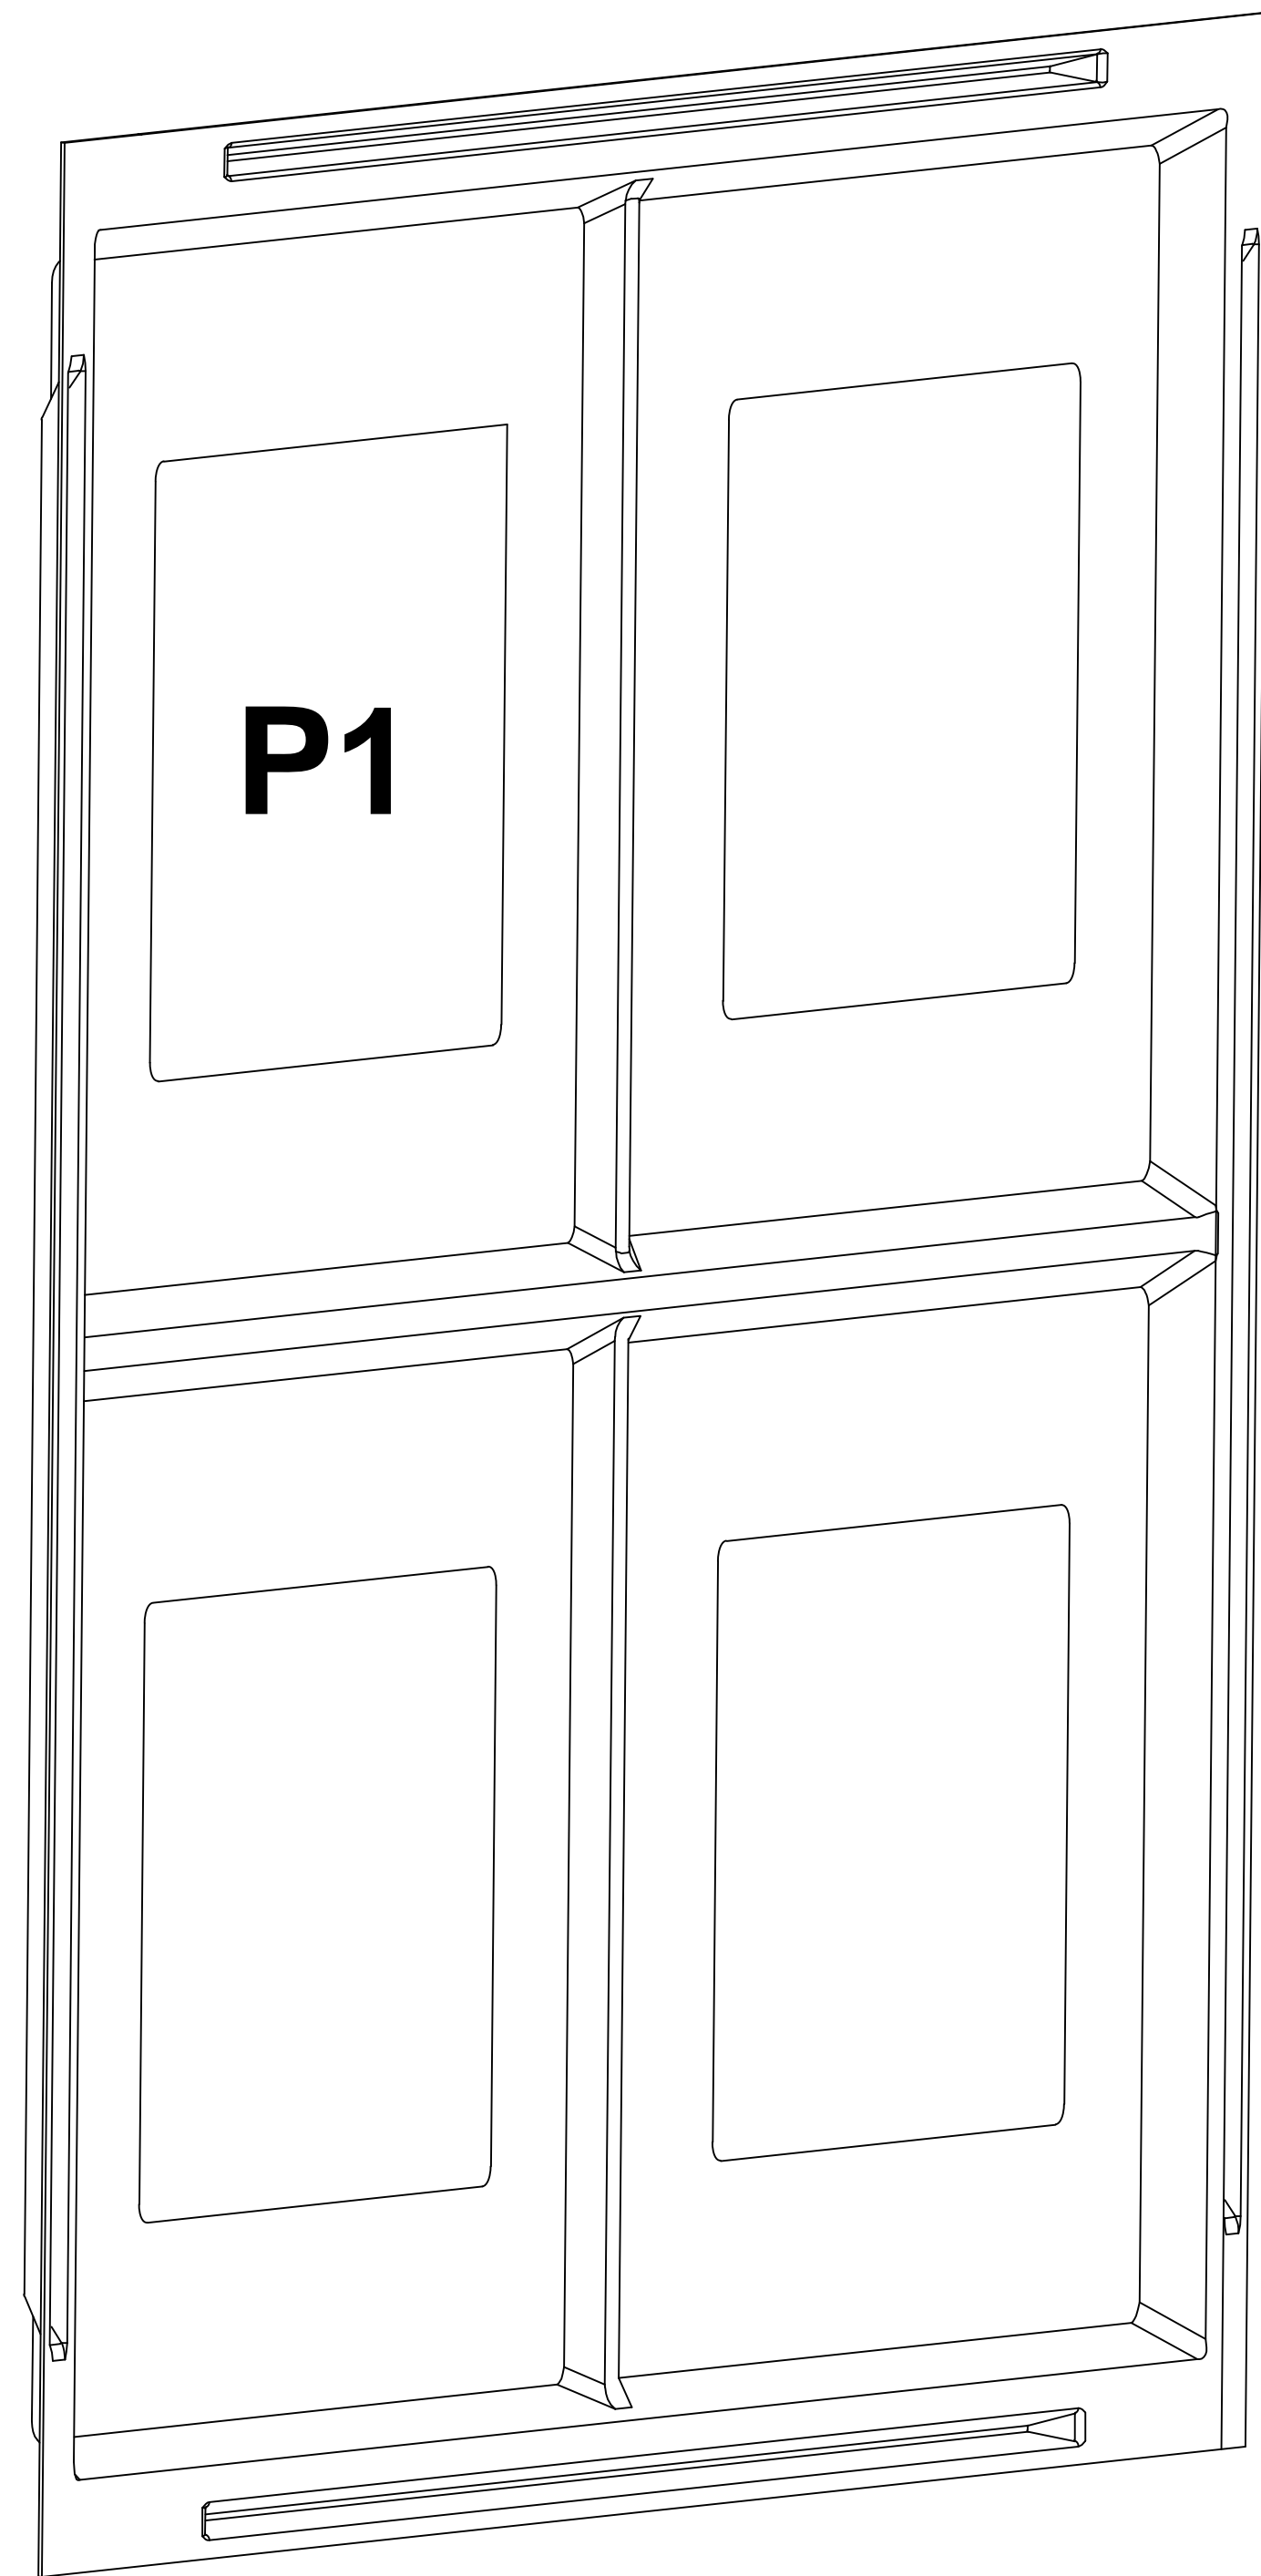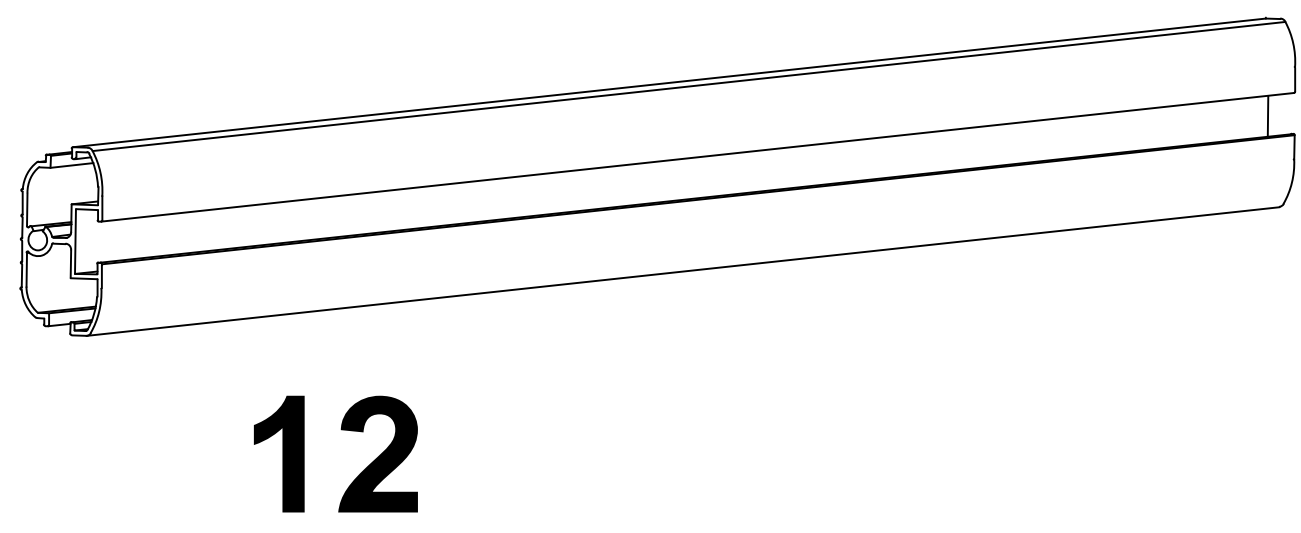






**Tear off the film before inseted into the board and the side of white film needs faced out.**

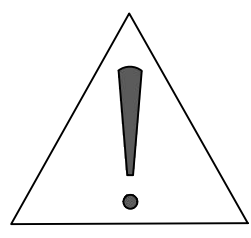


**Internal View**

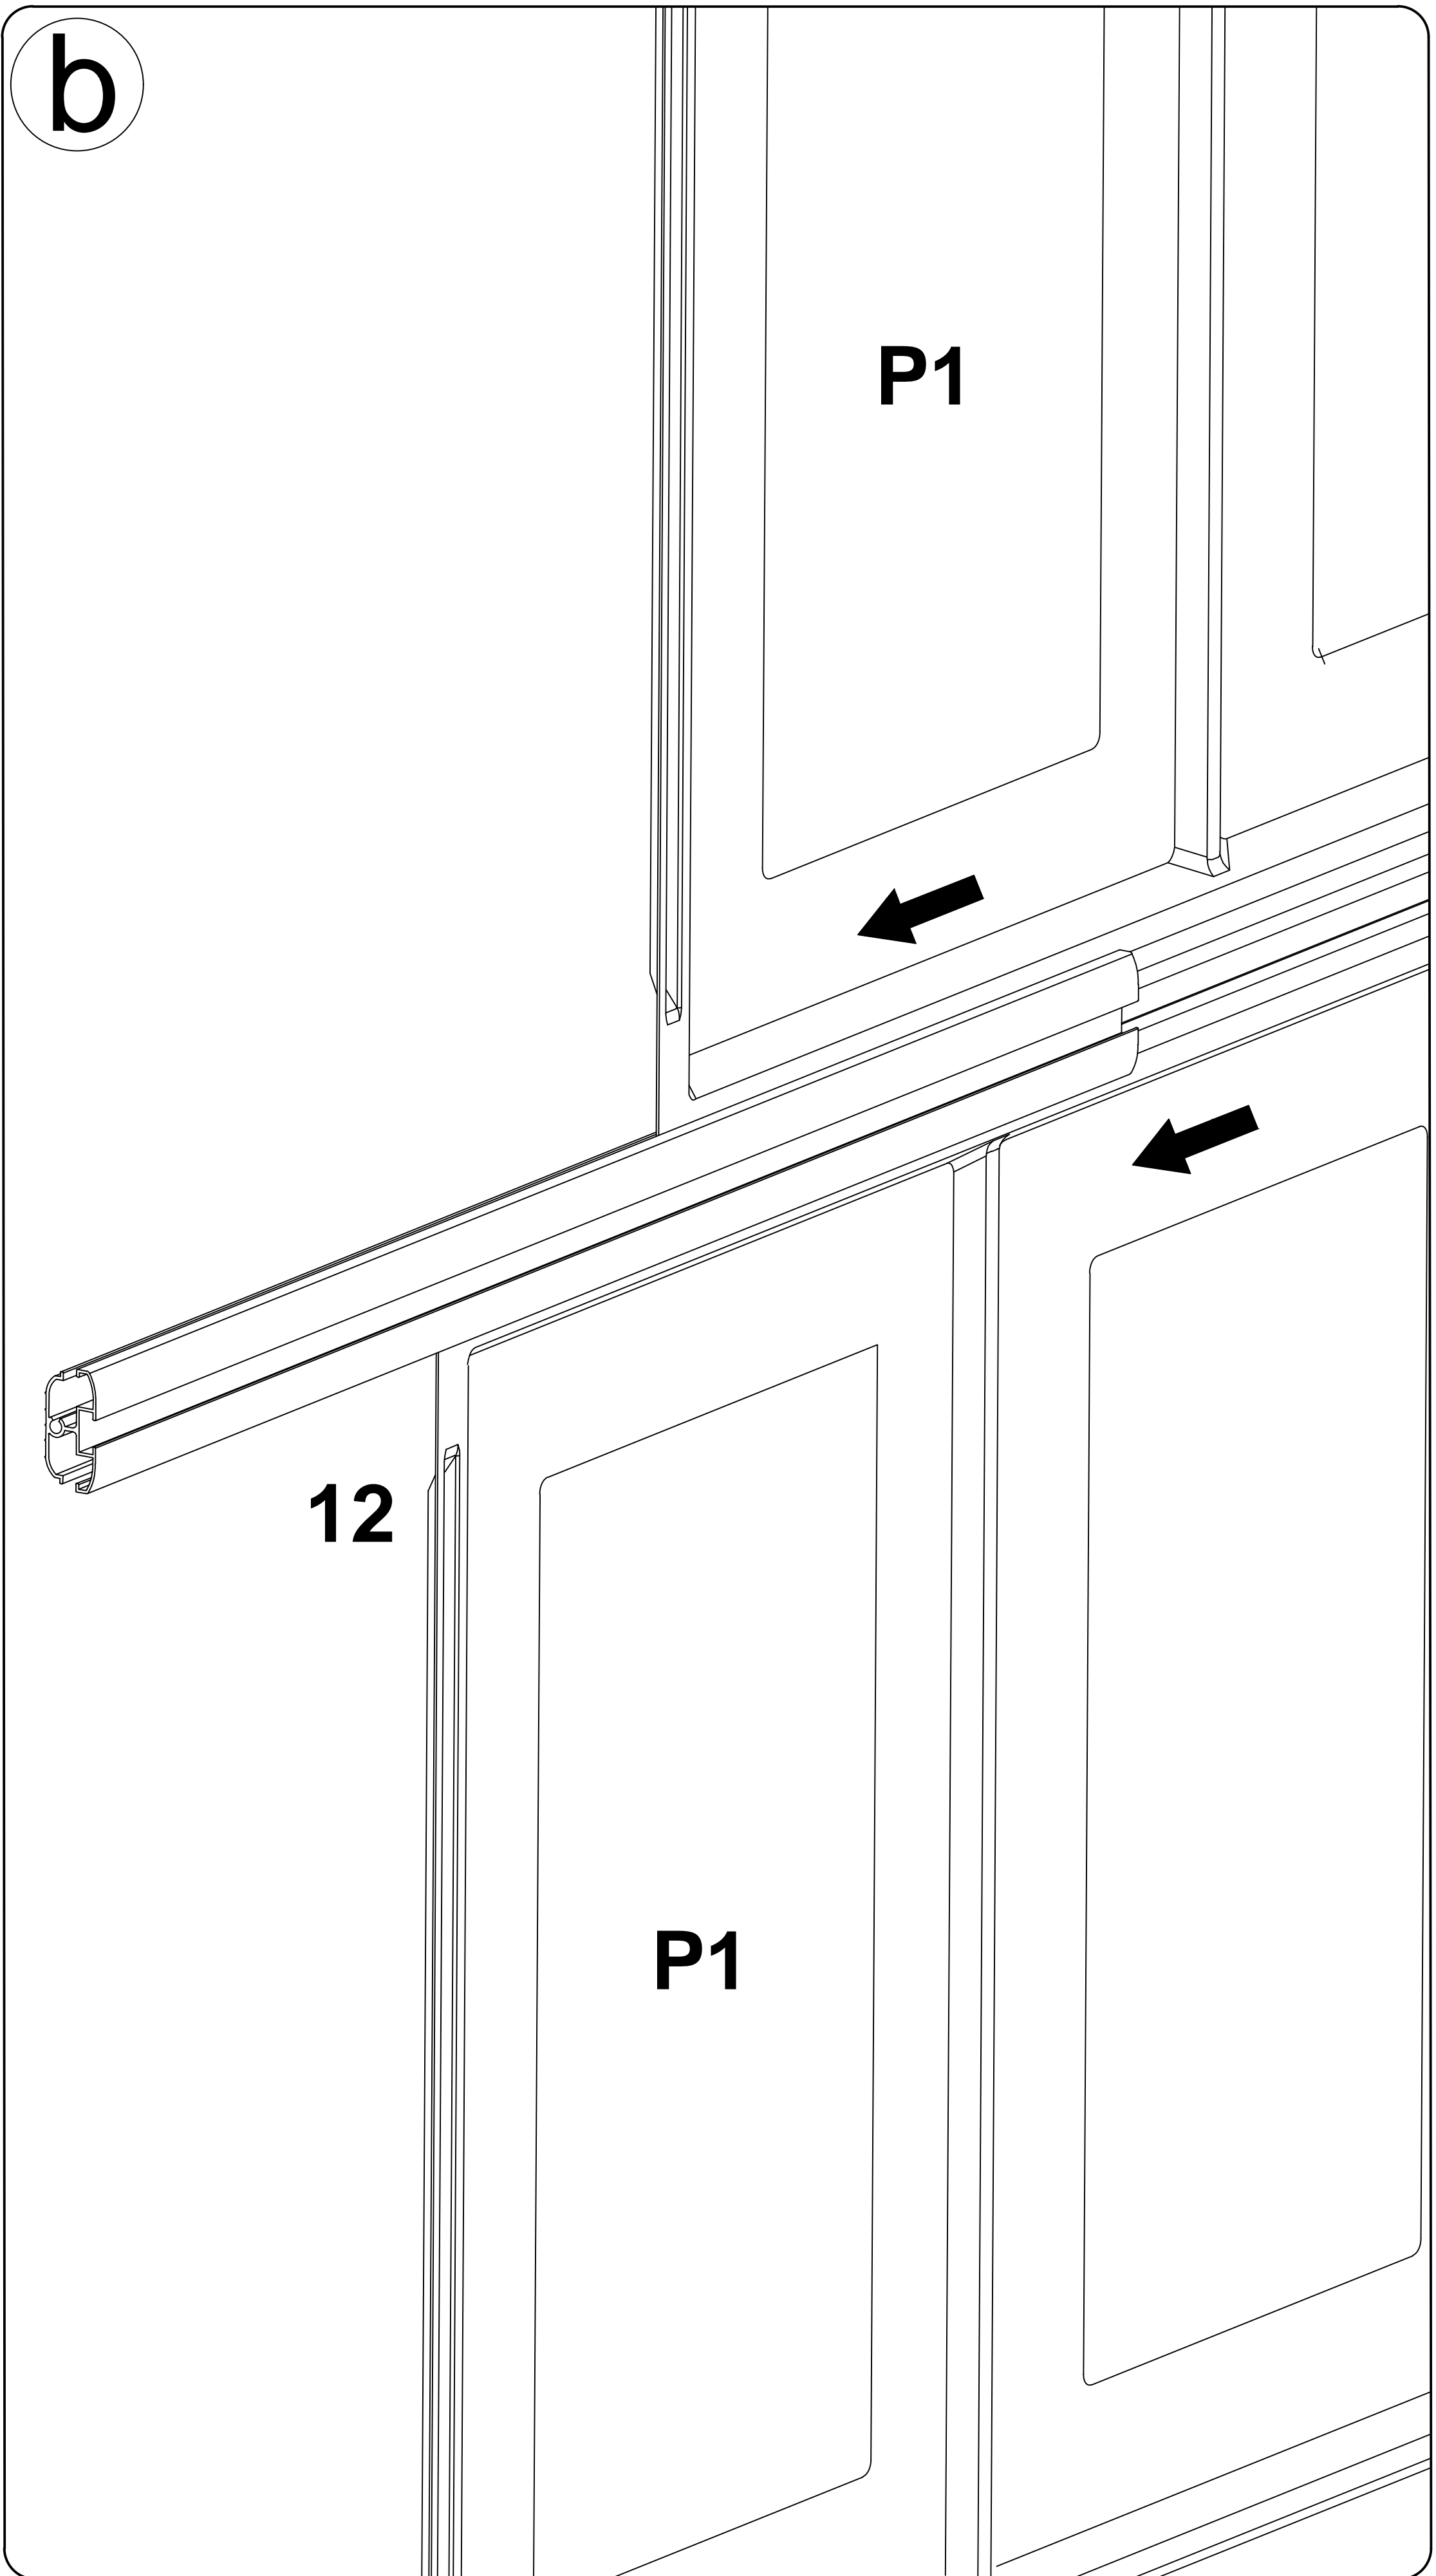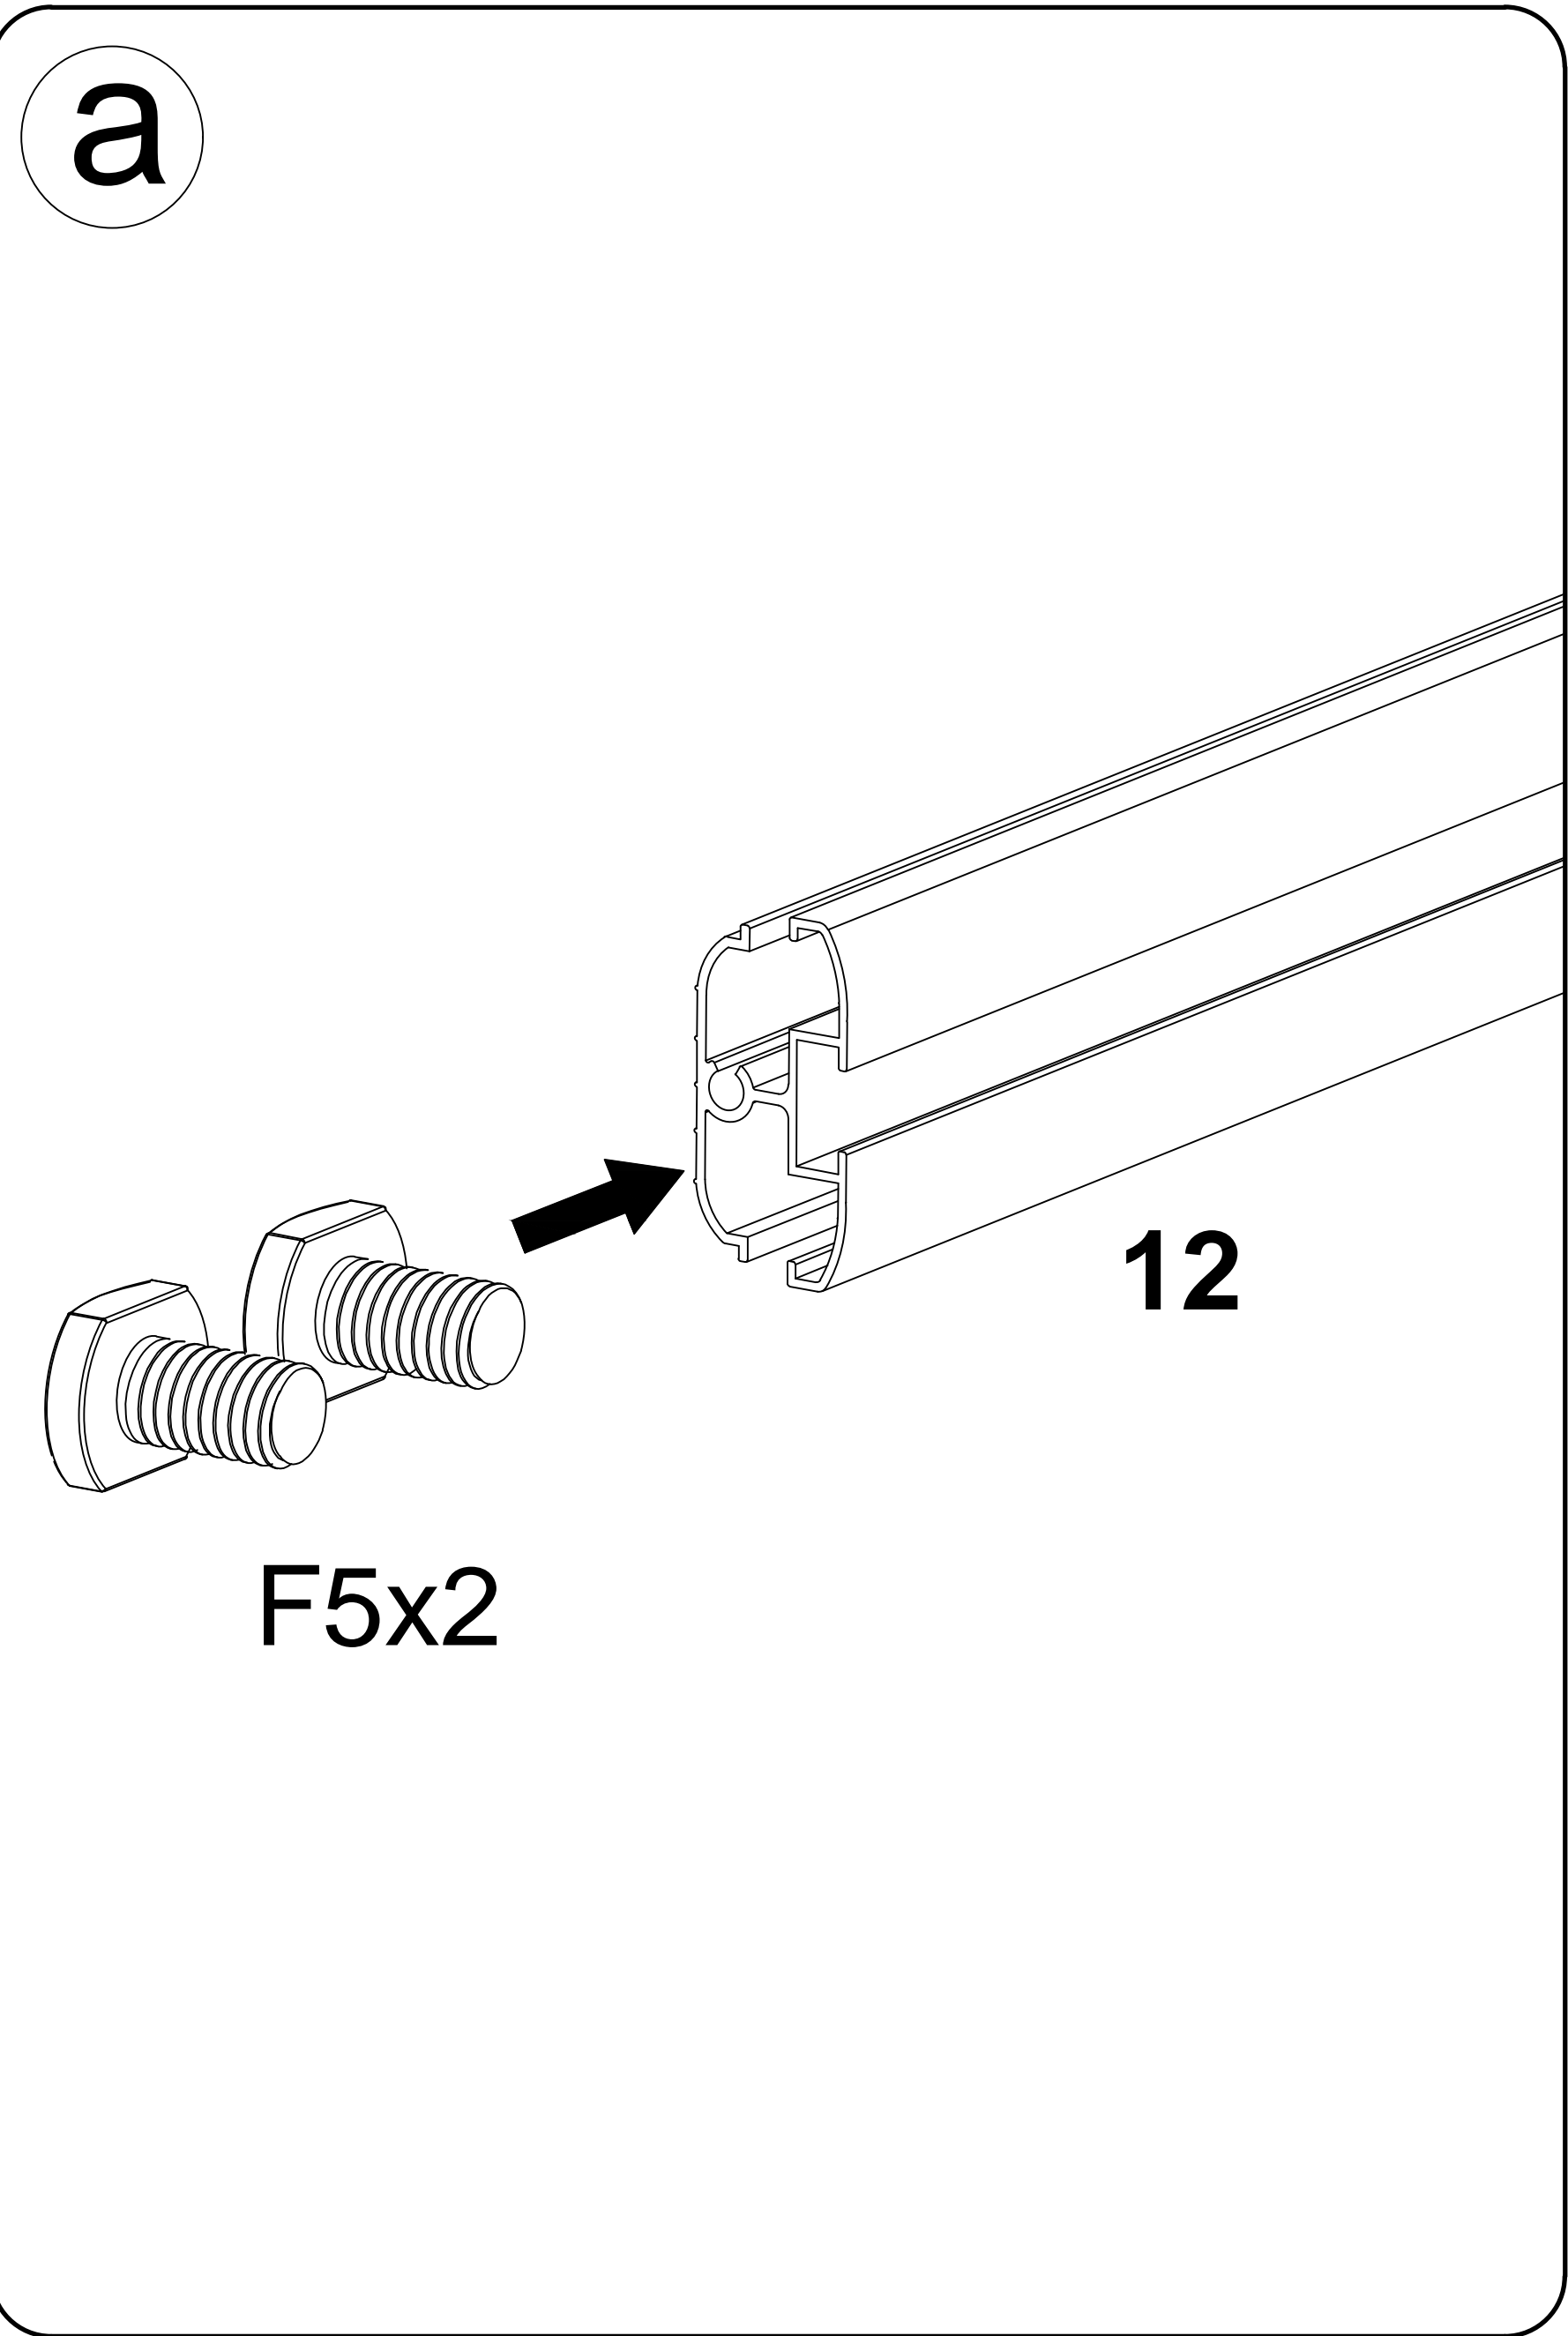




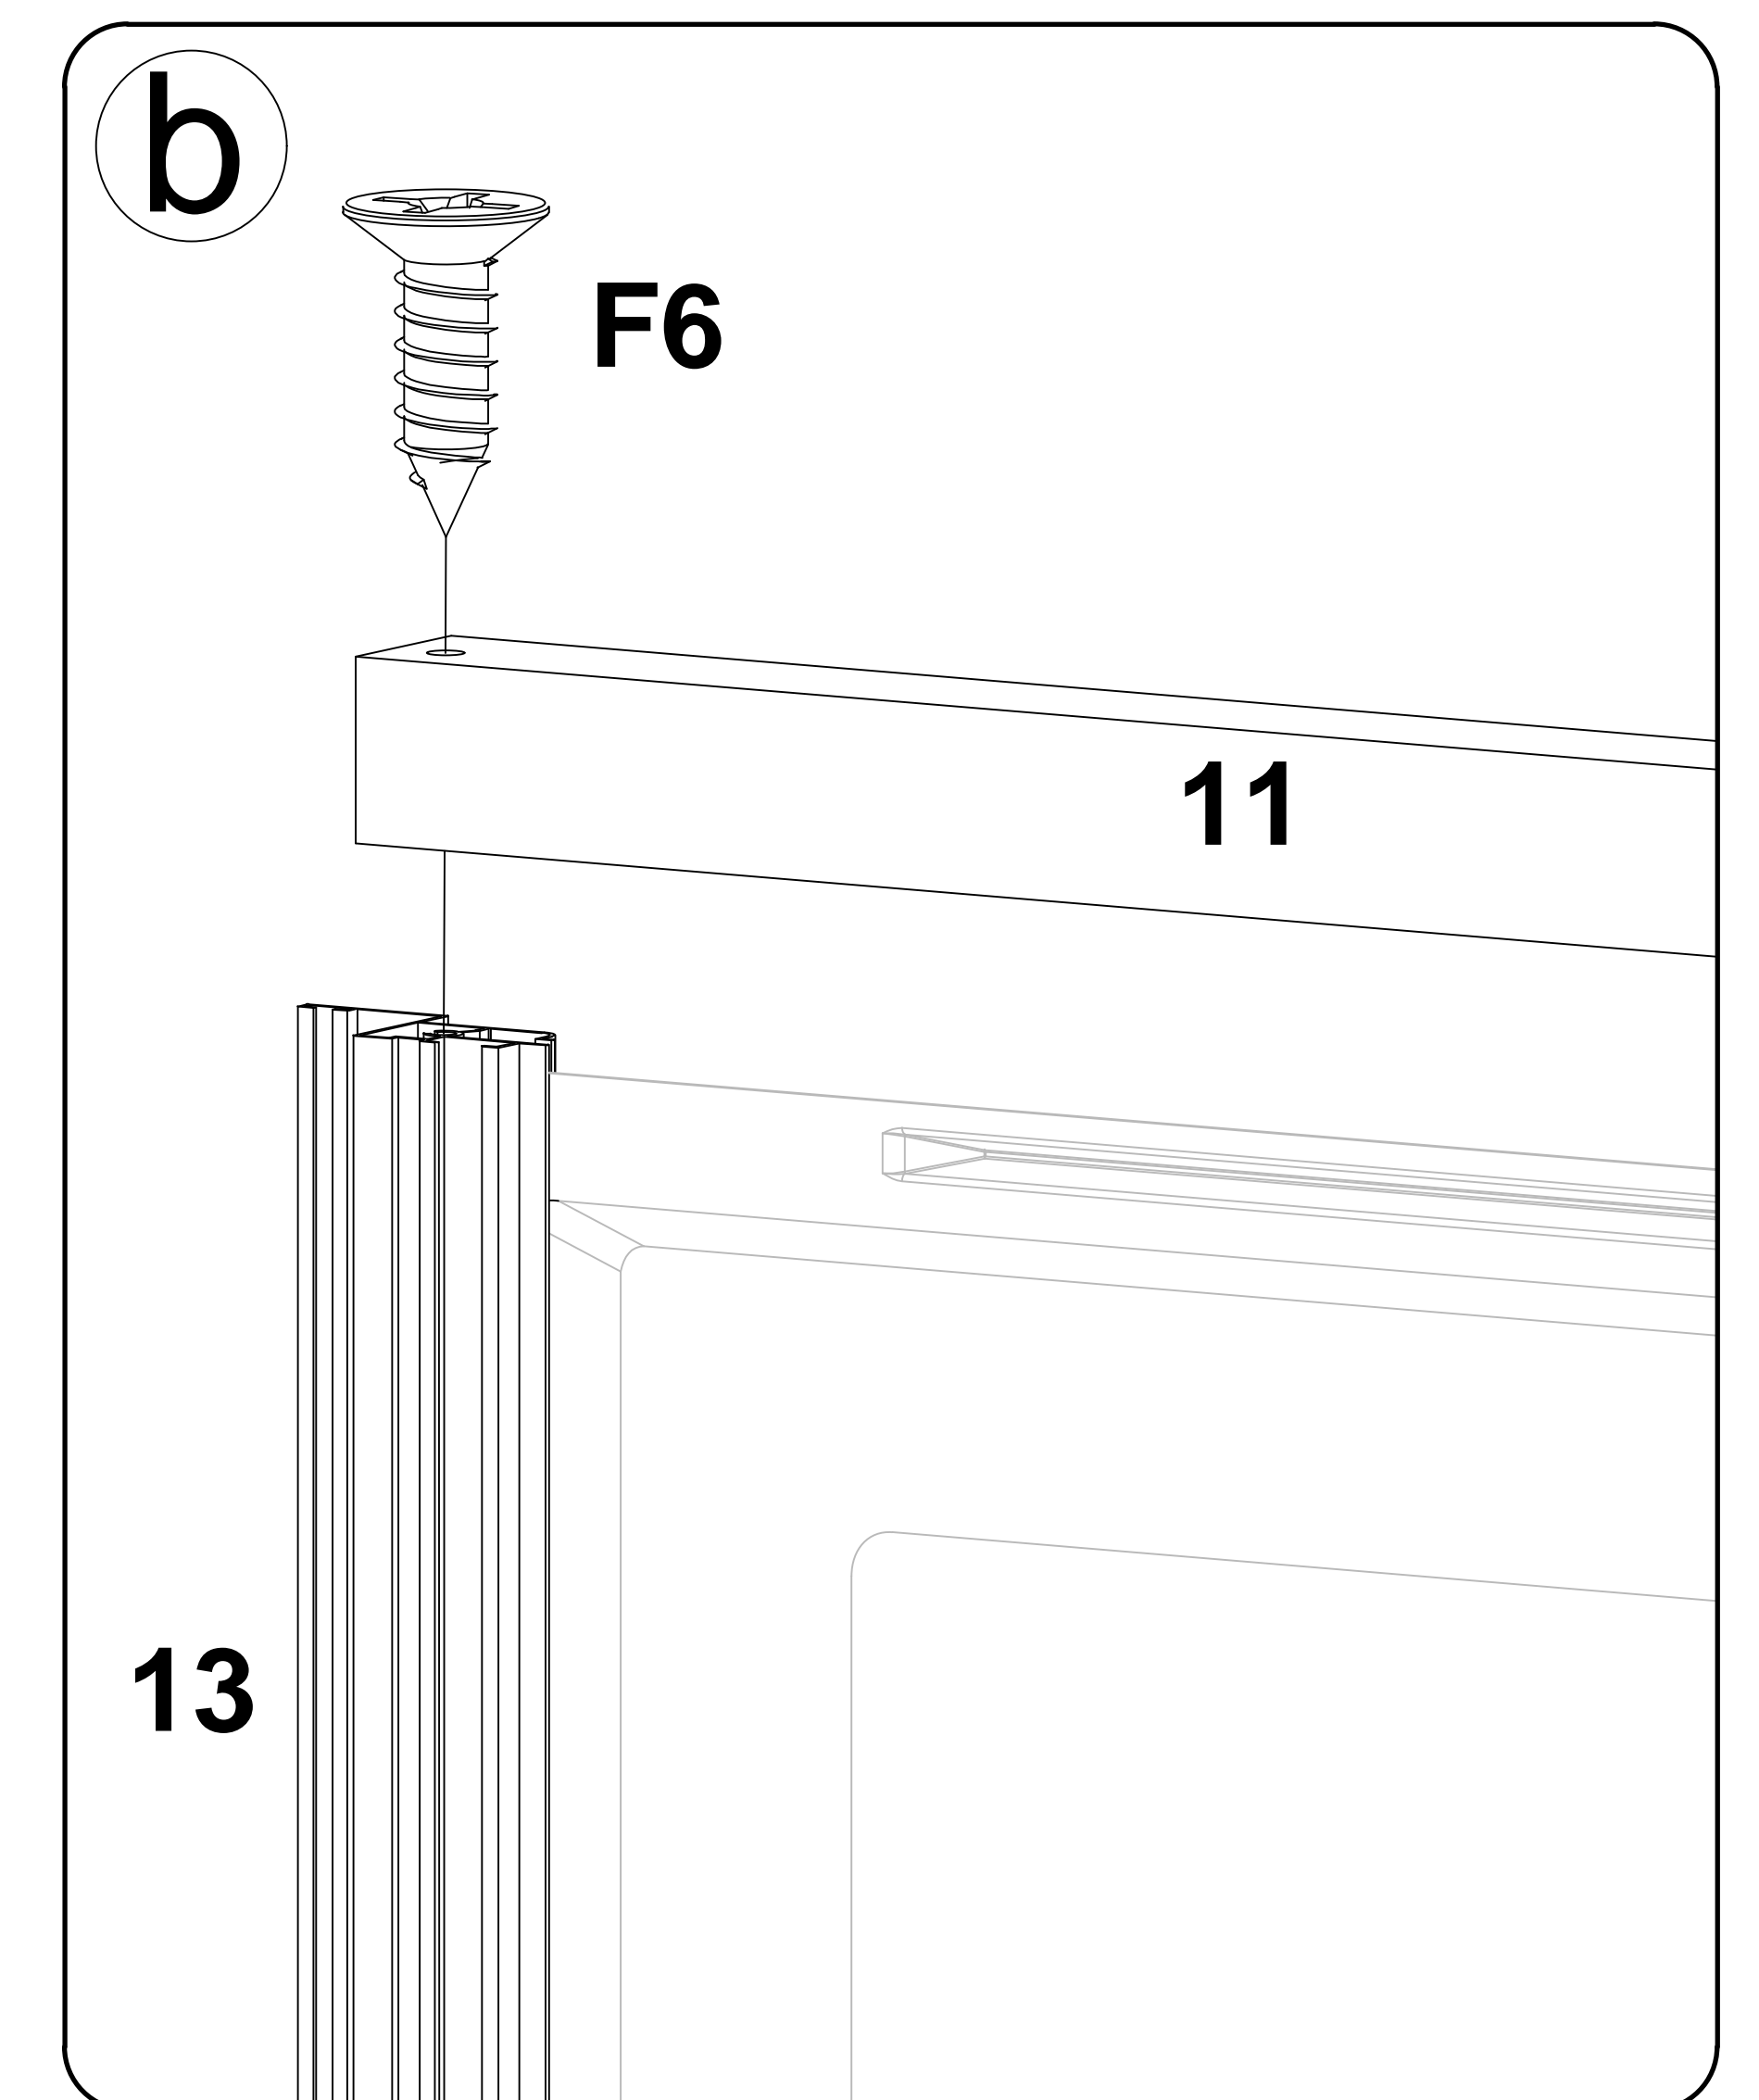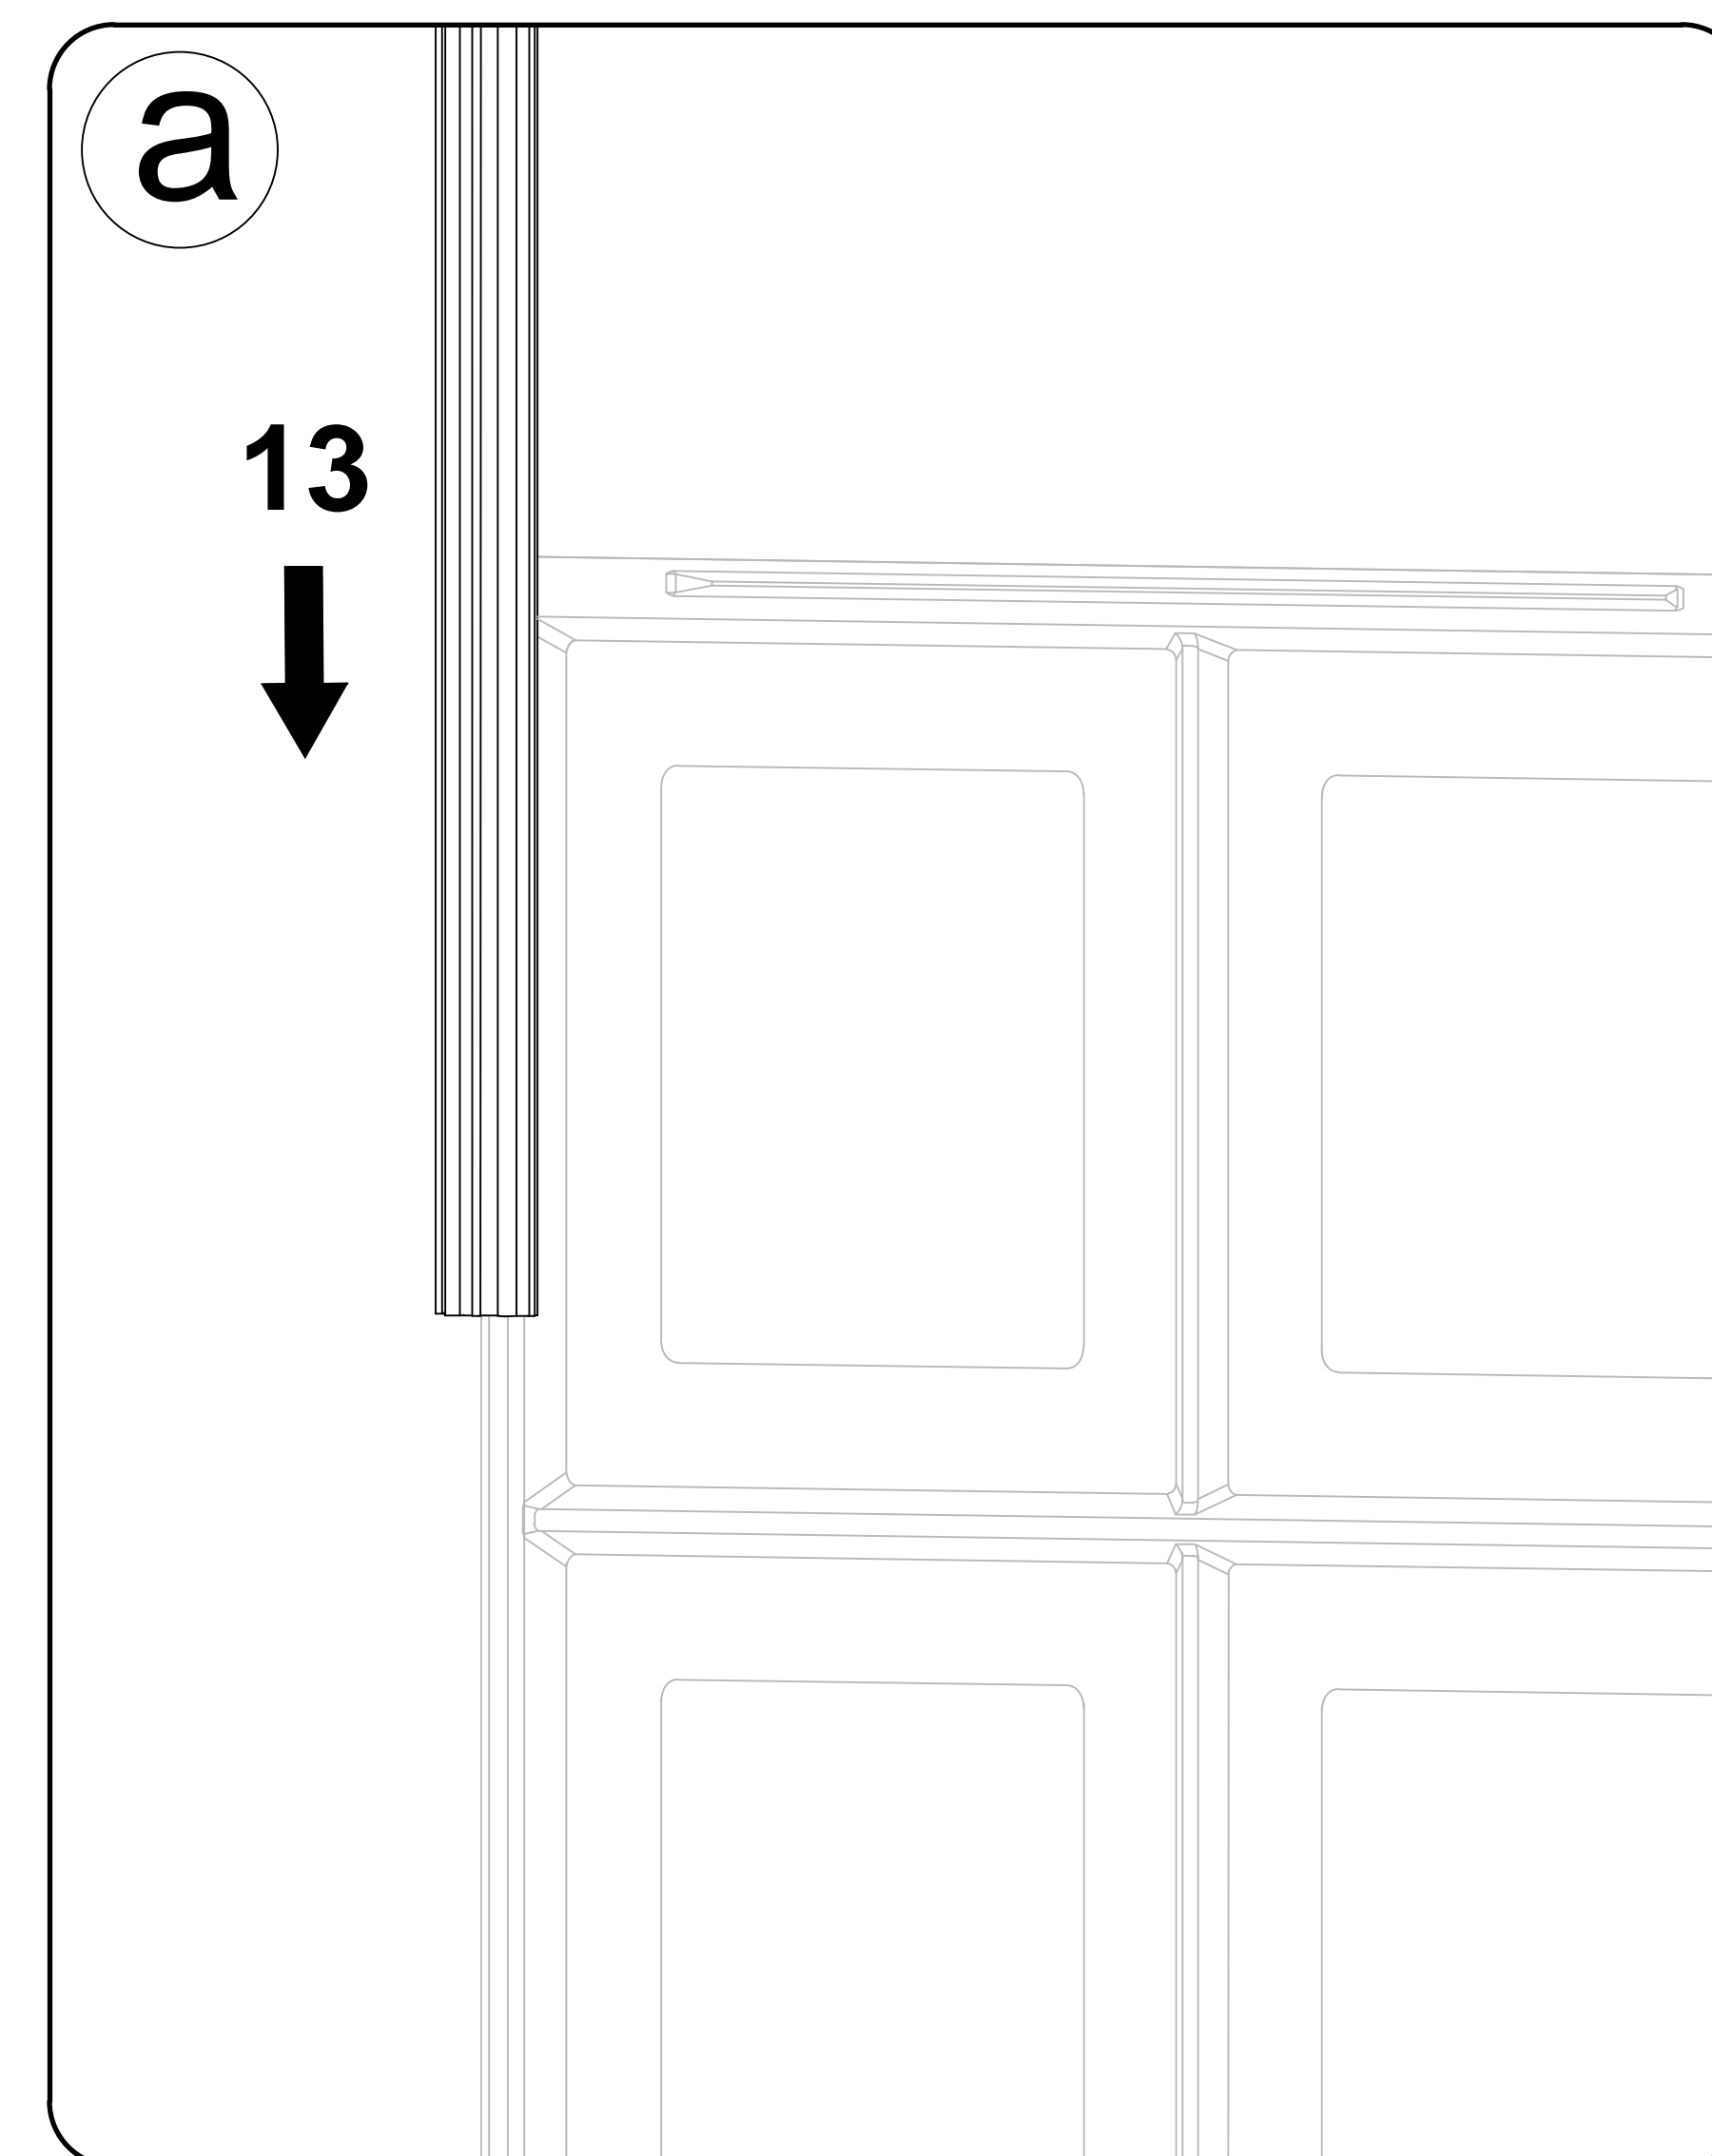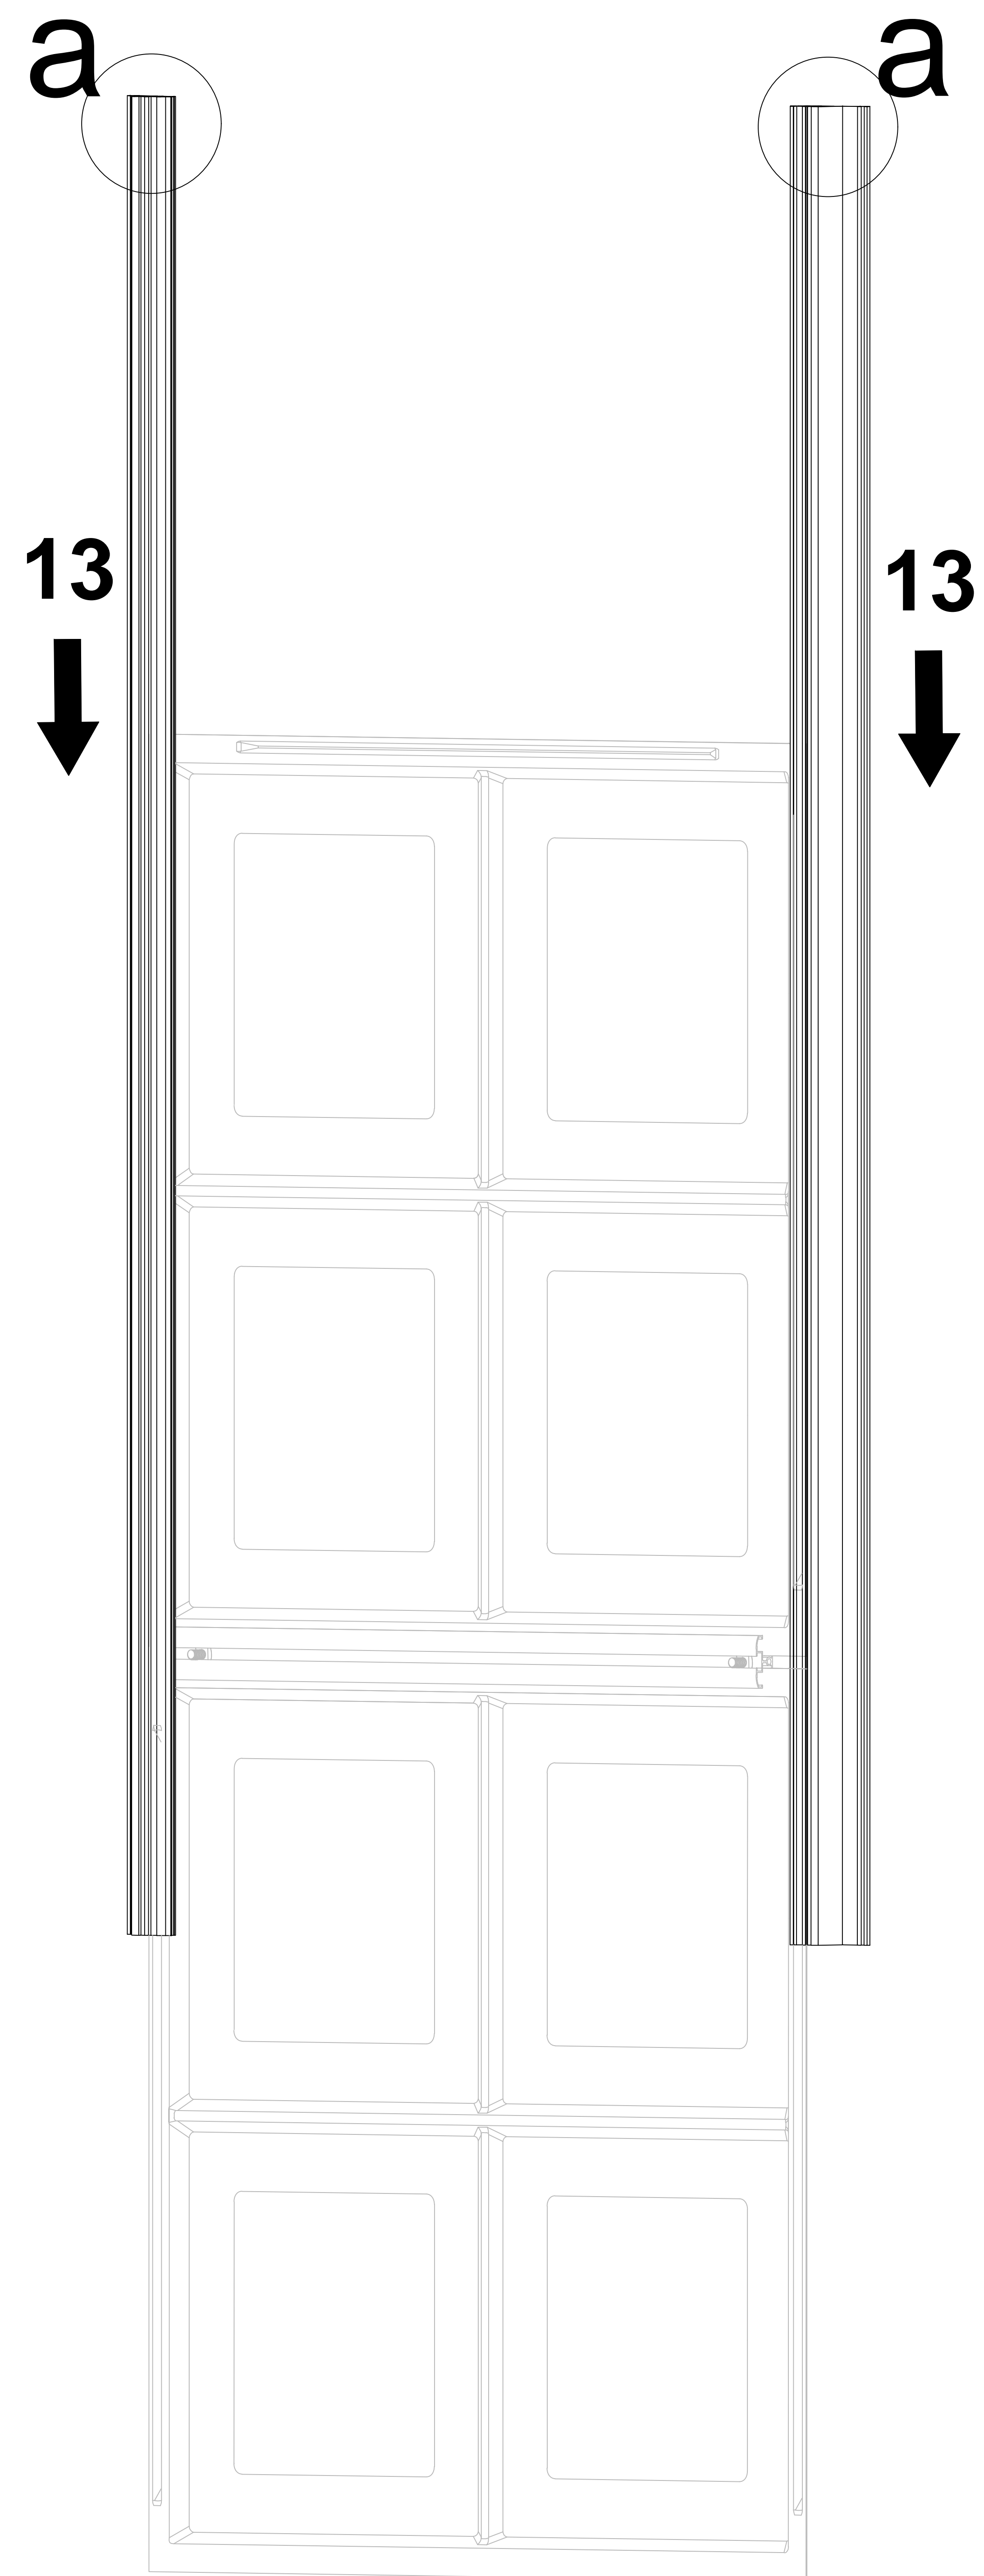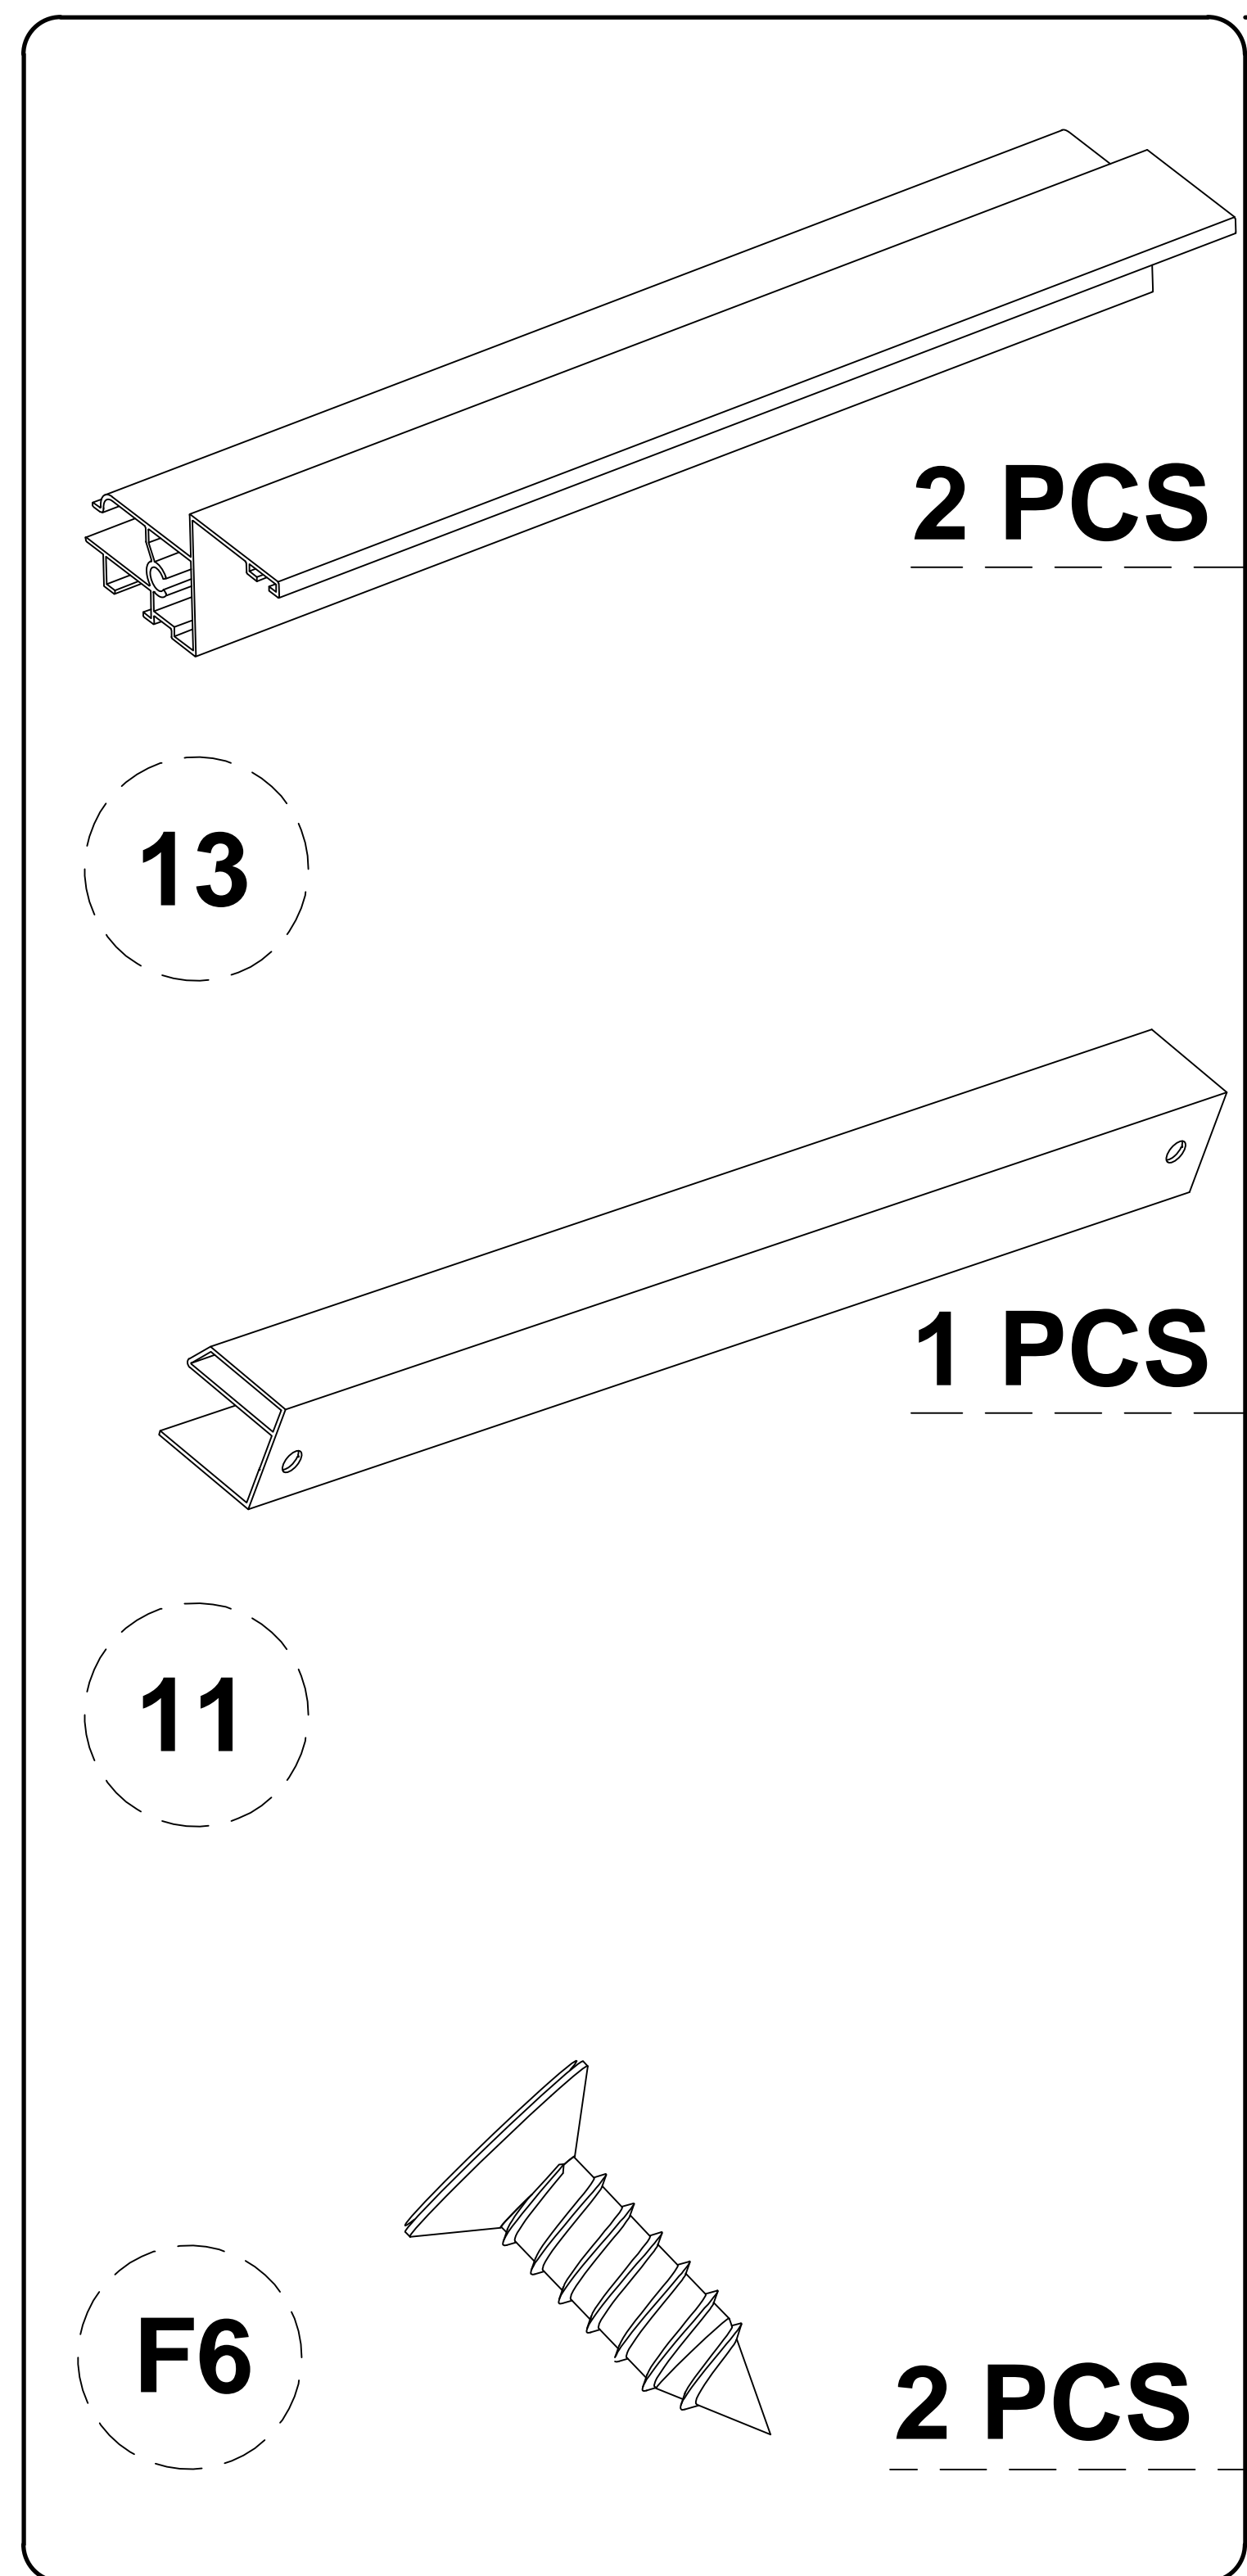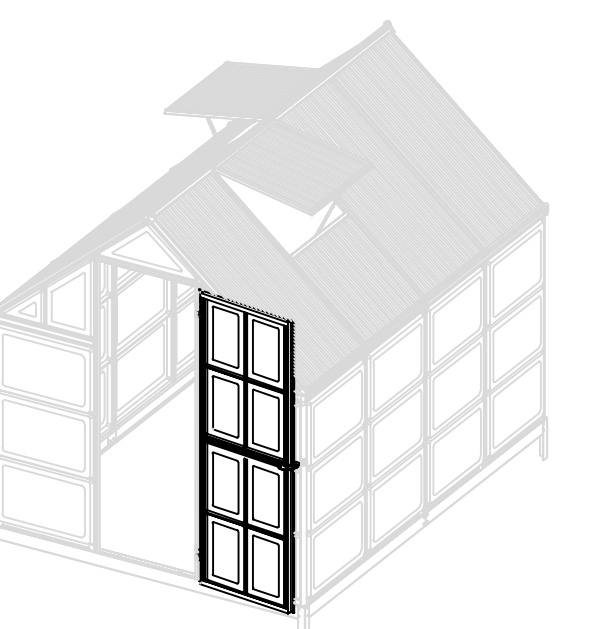


! Internal View

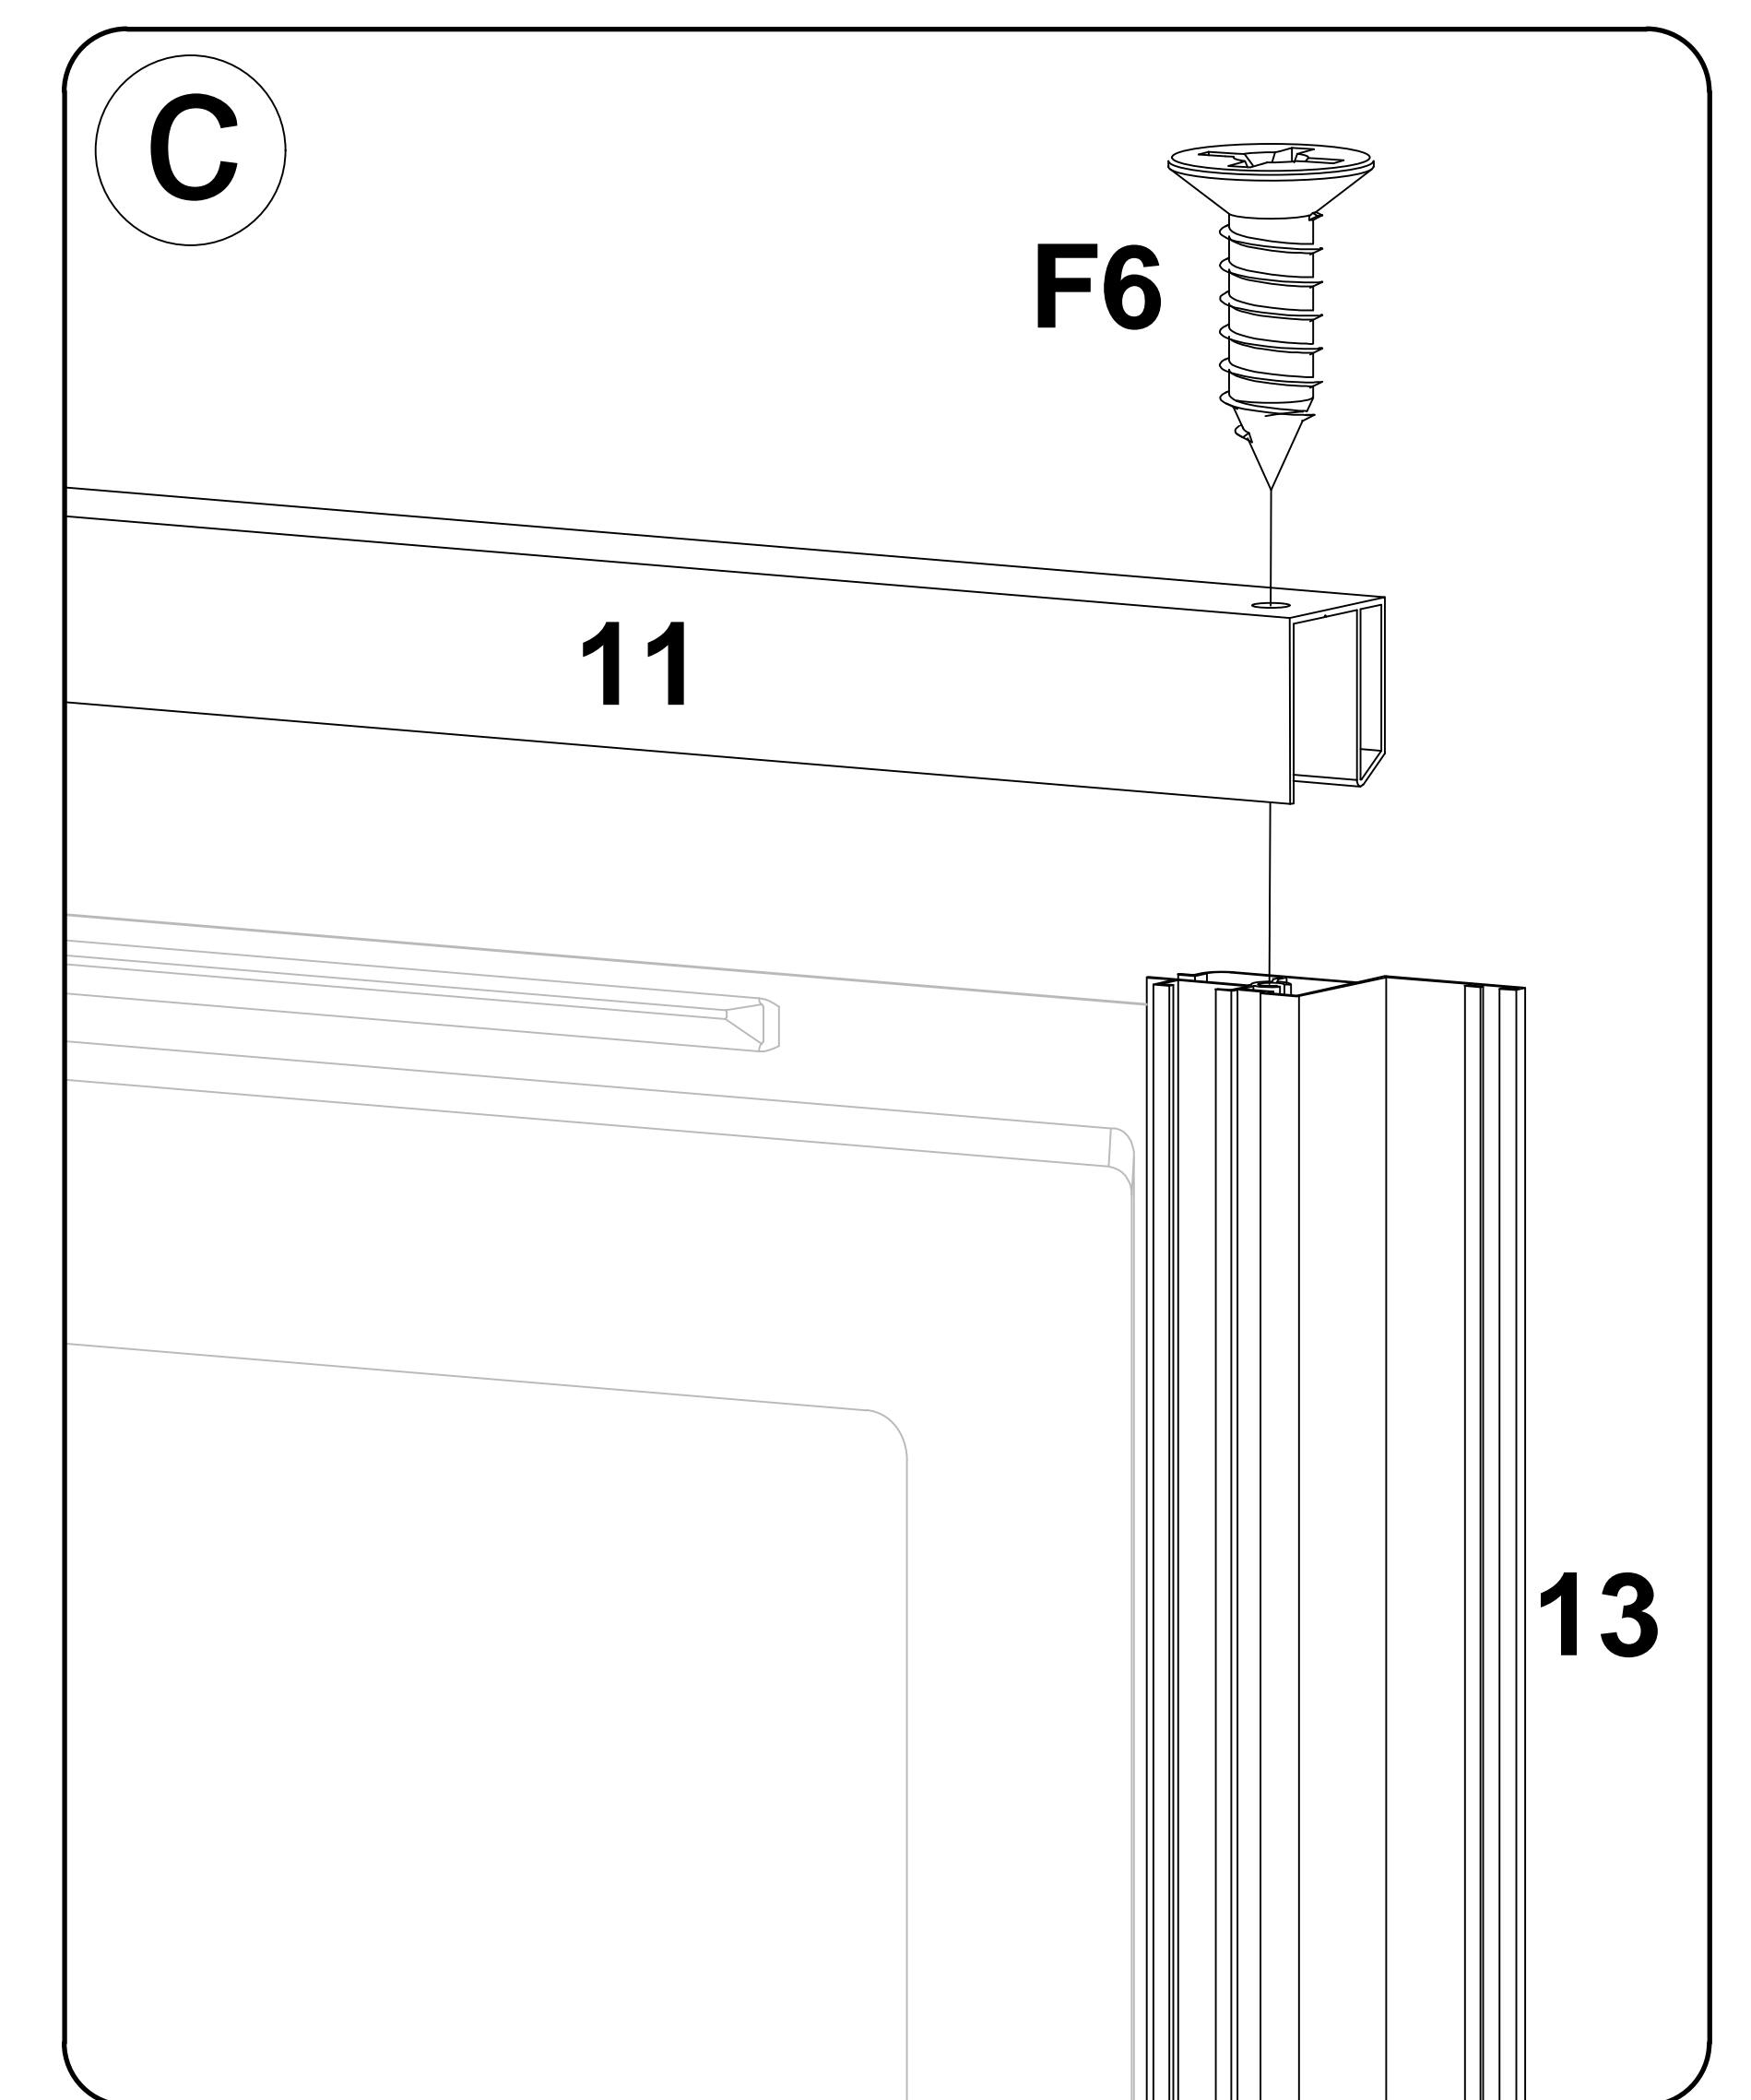

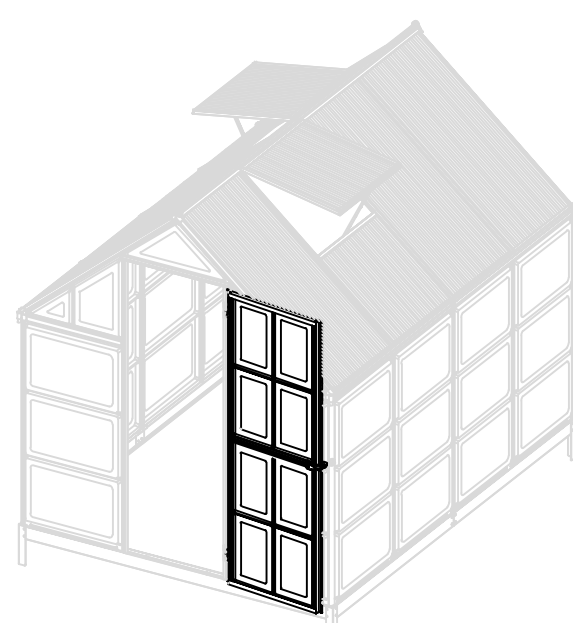


B5

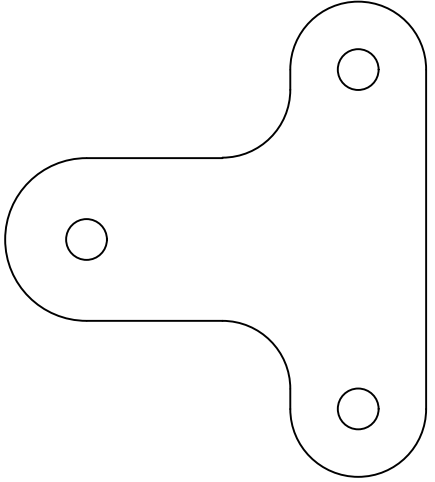


1 PCS

F5

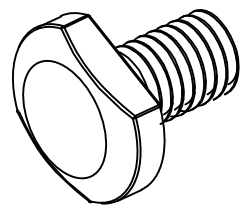


7 PCS





F5

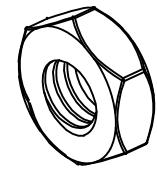


3 PCS

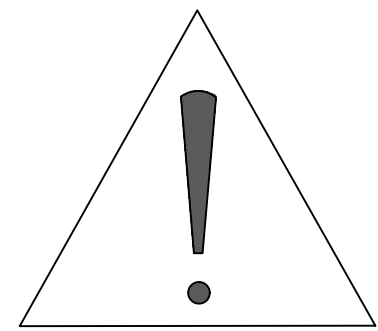


Install the screws in advance according to the instruction.

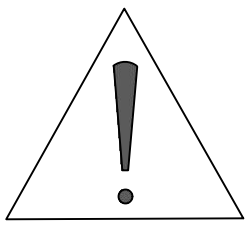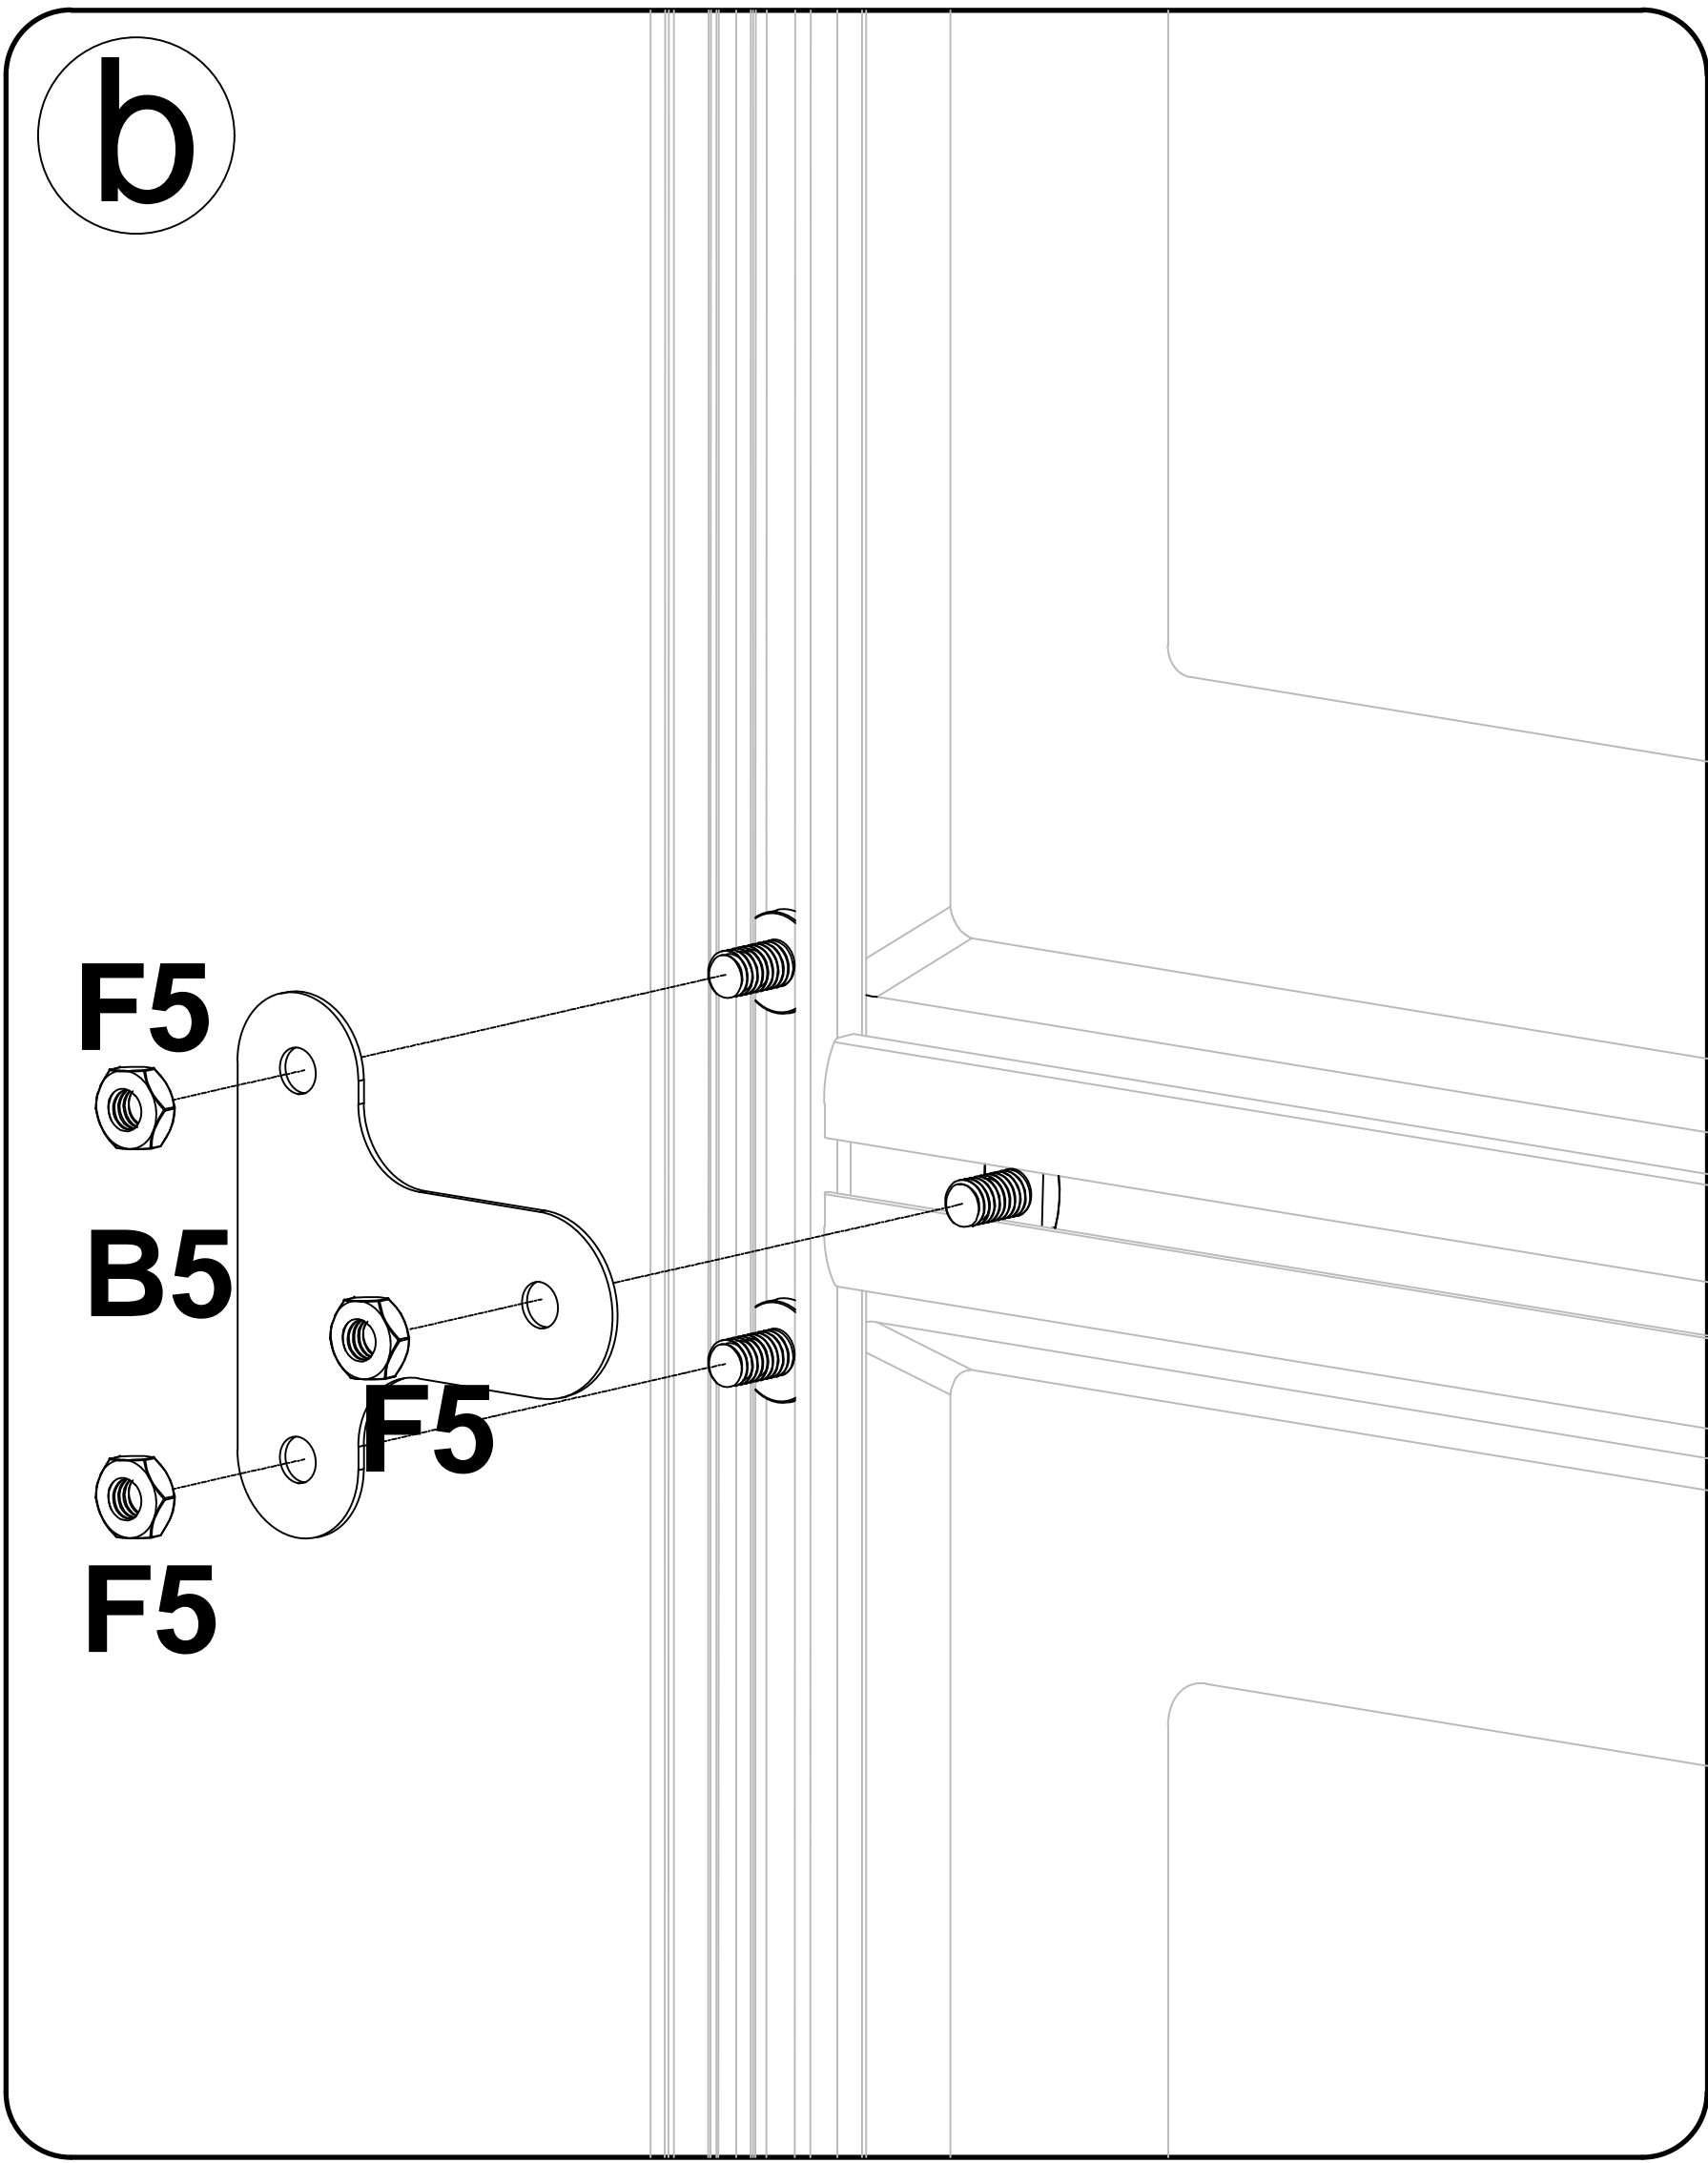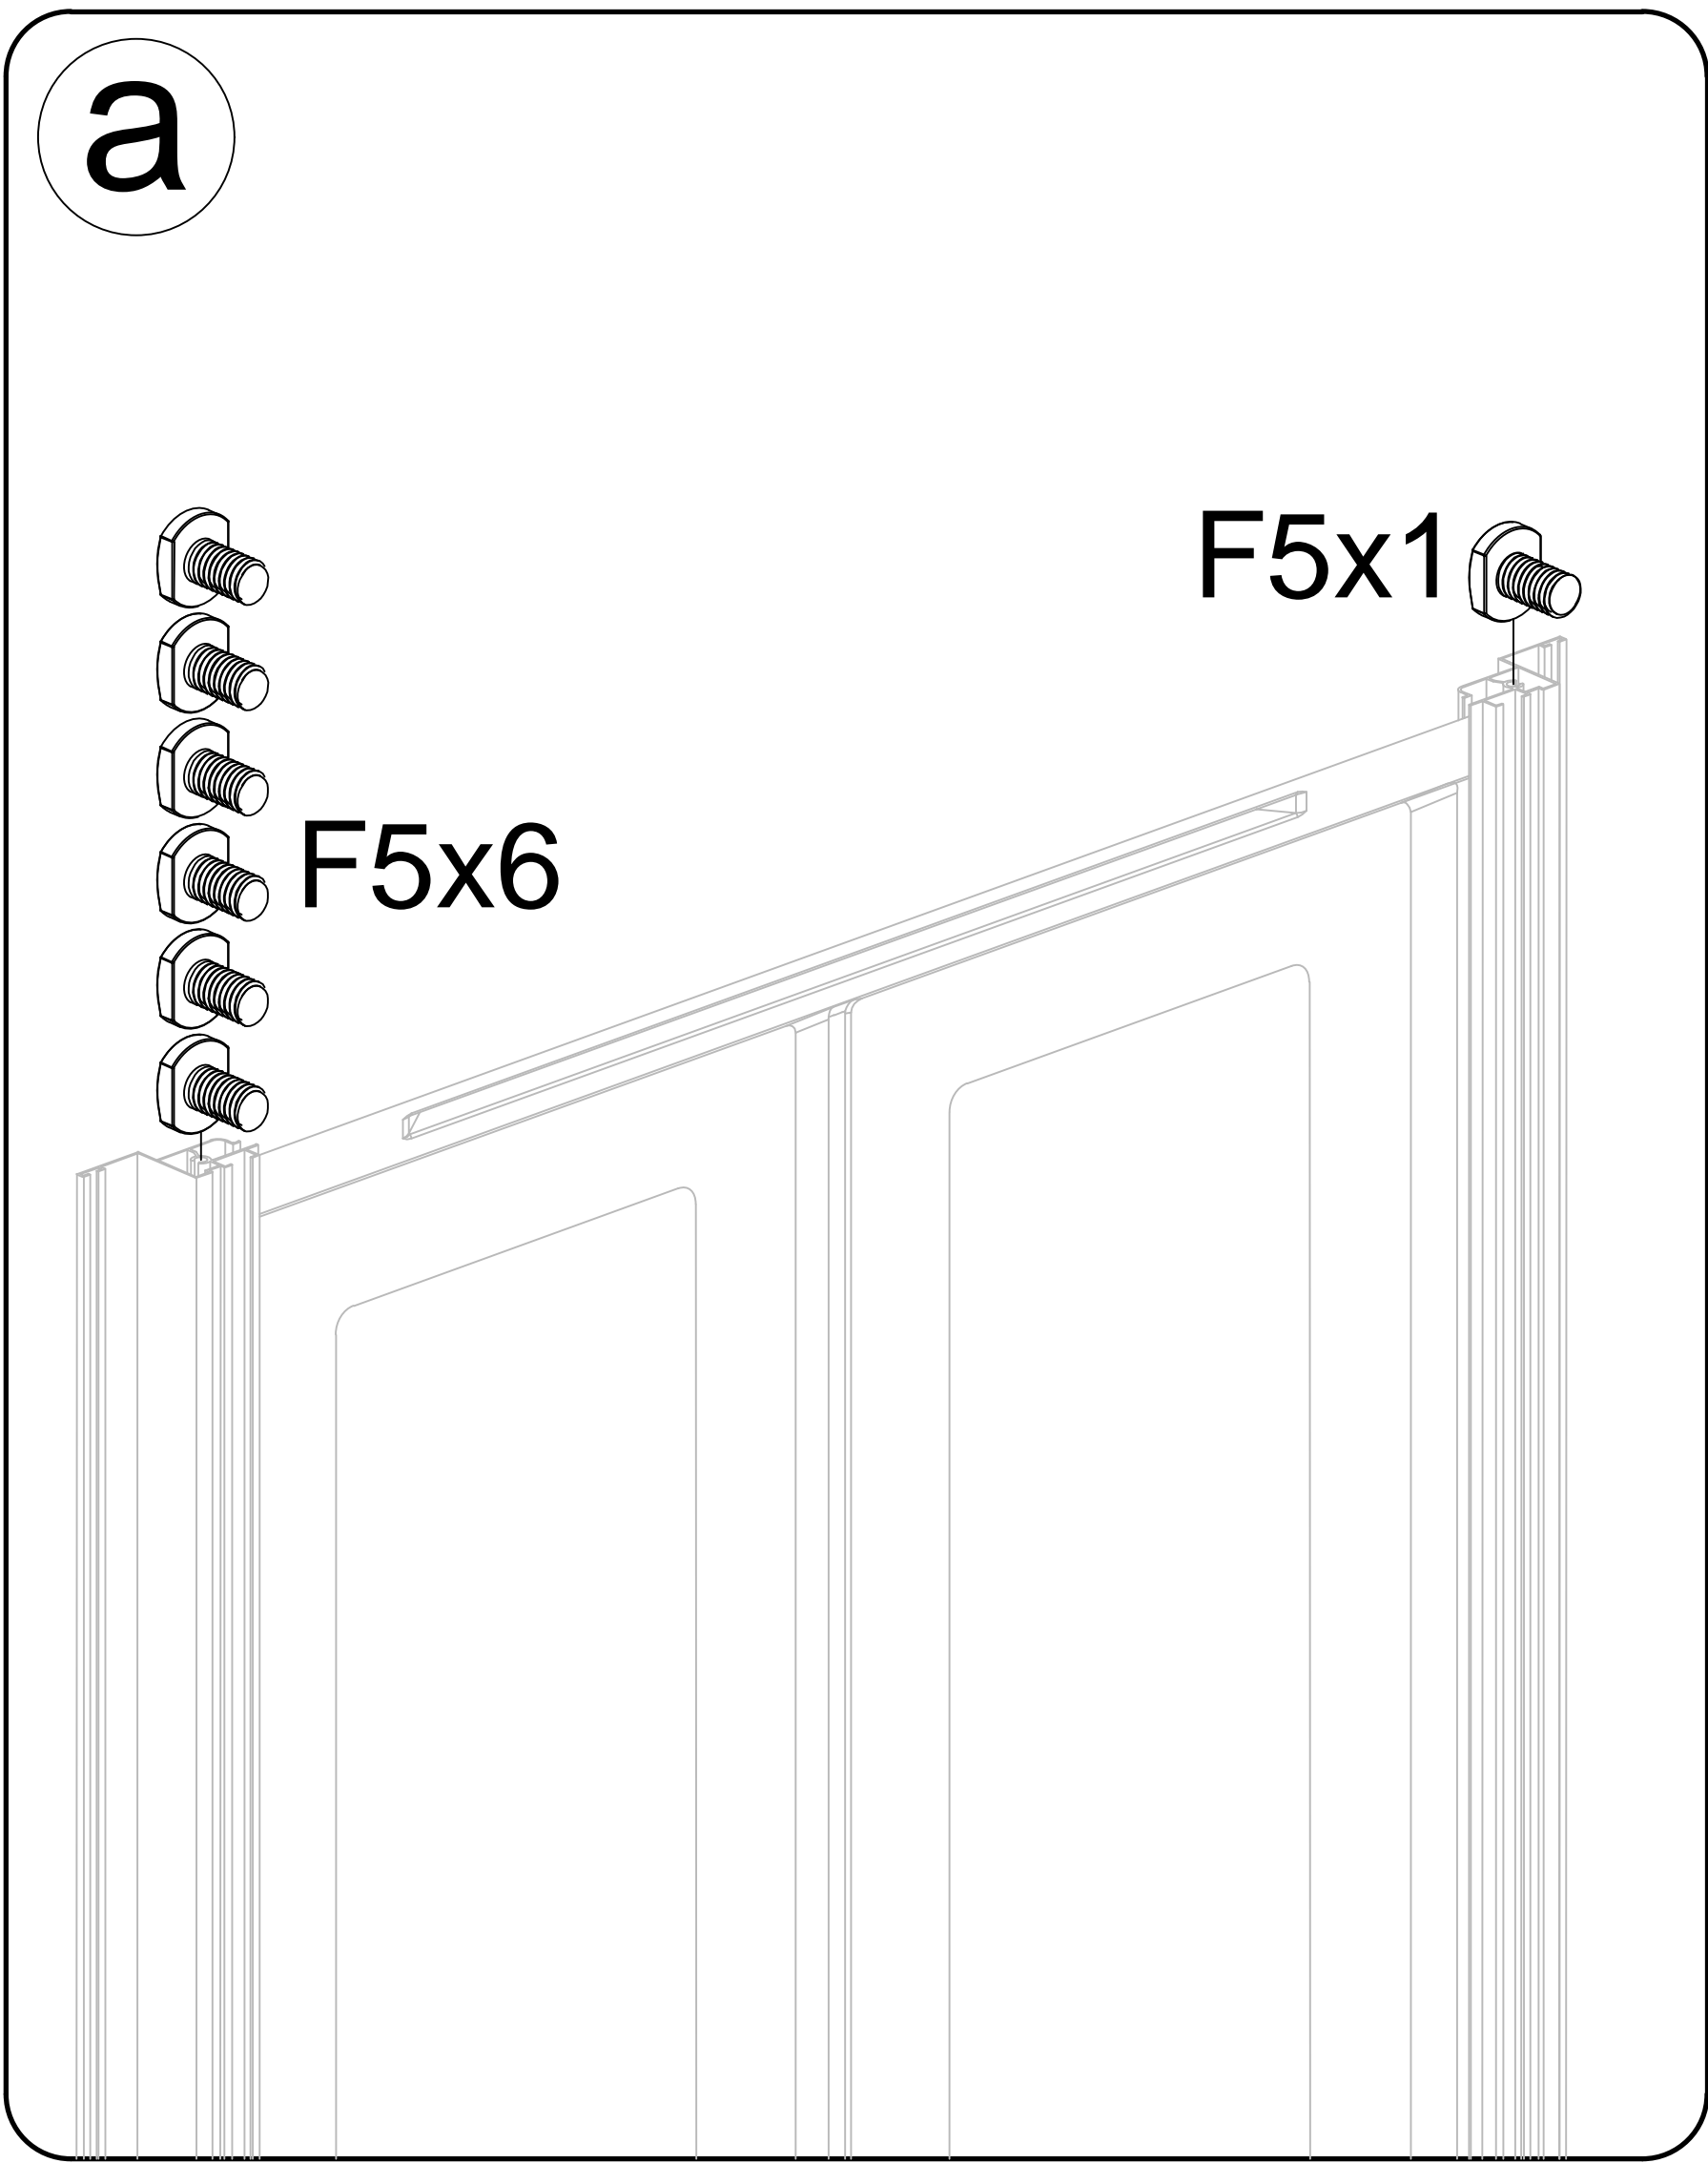
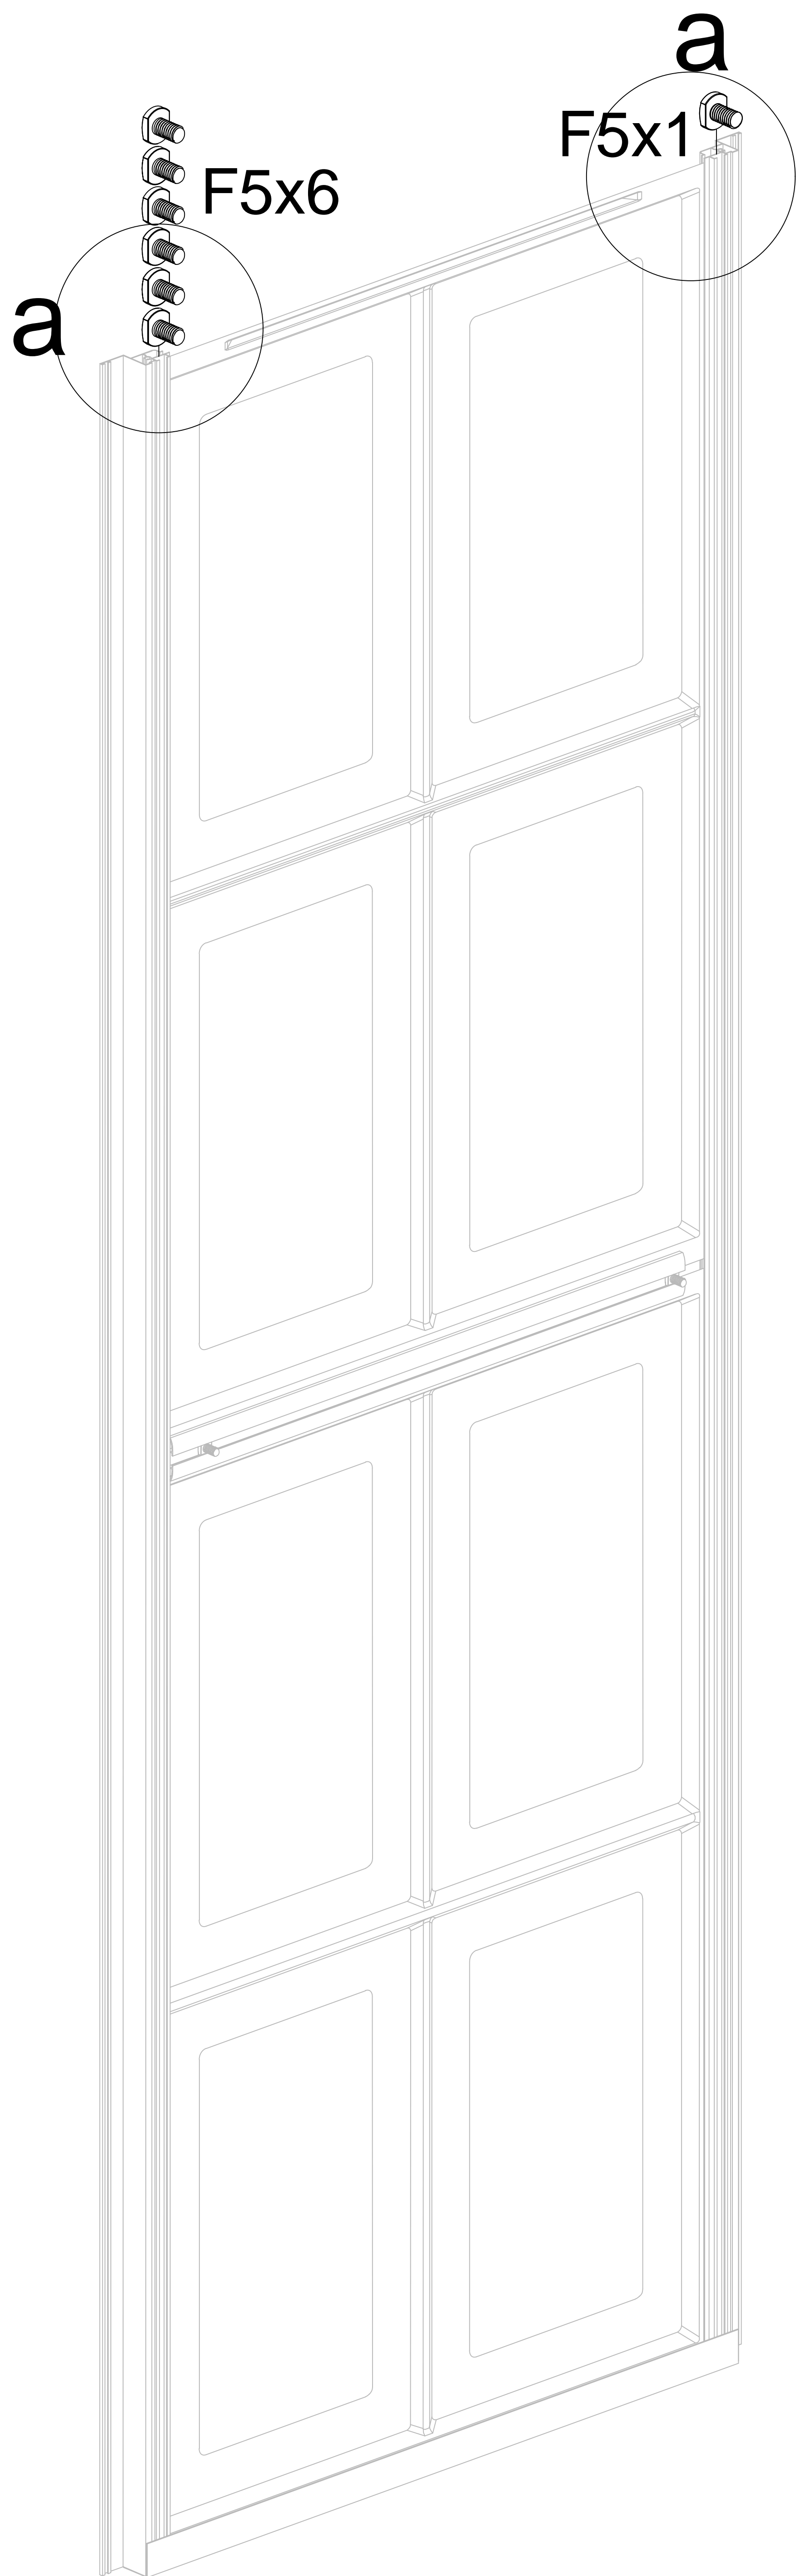




Internal View

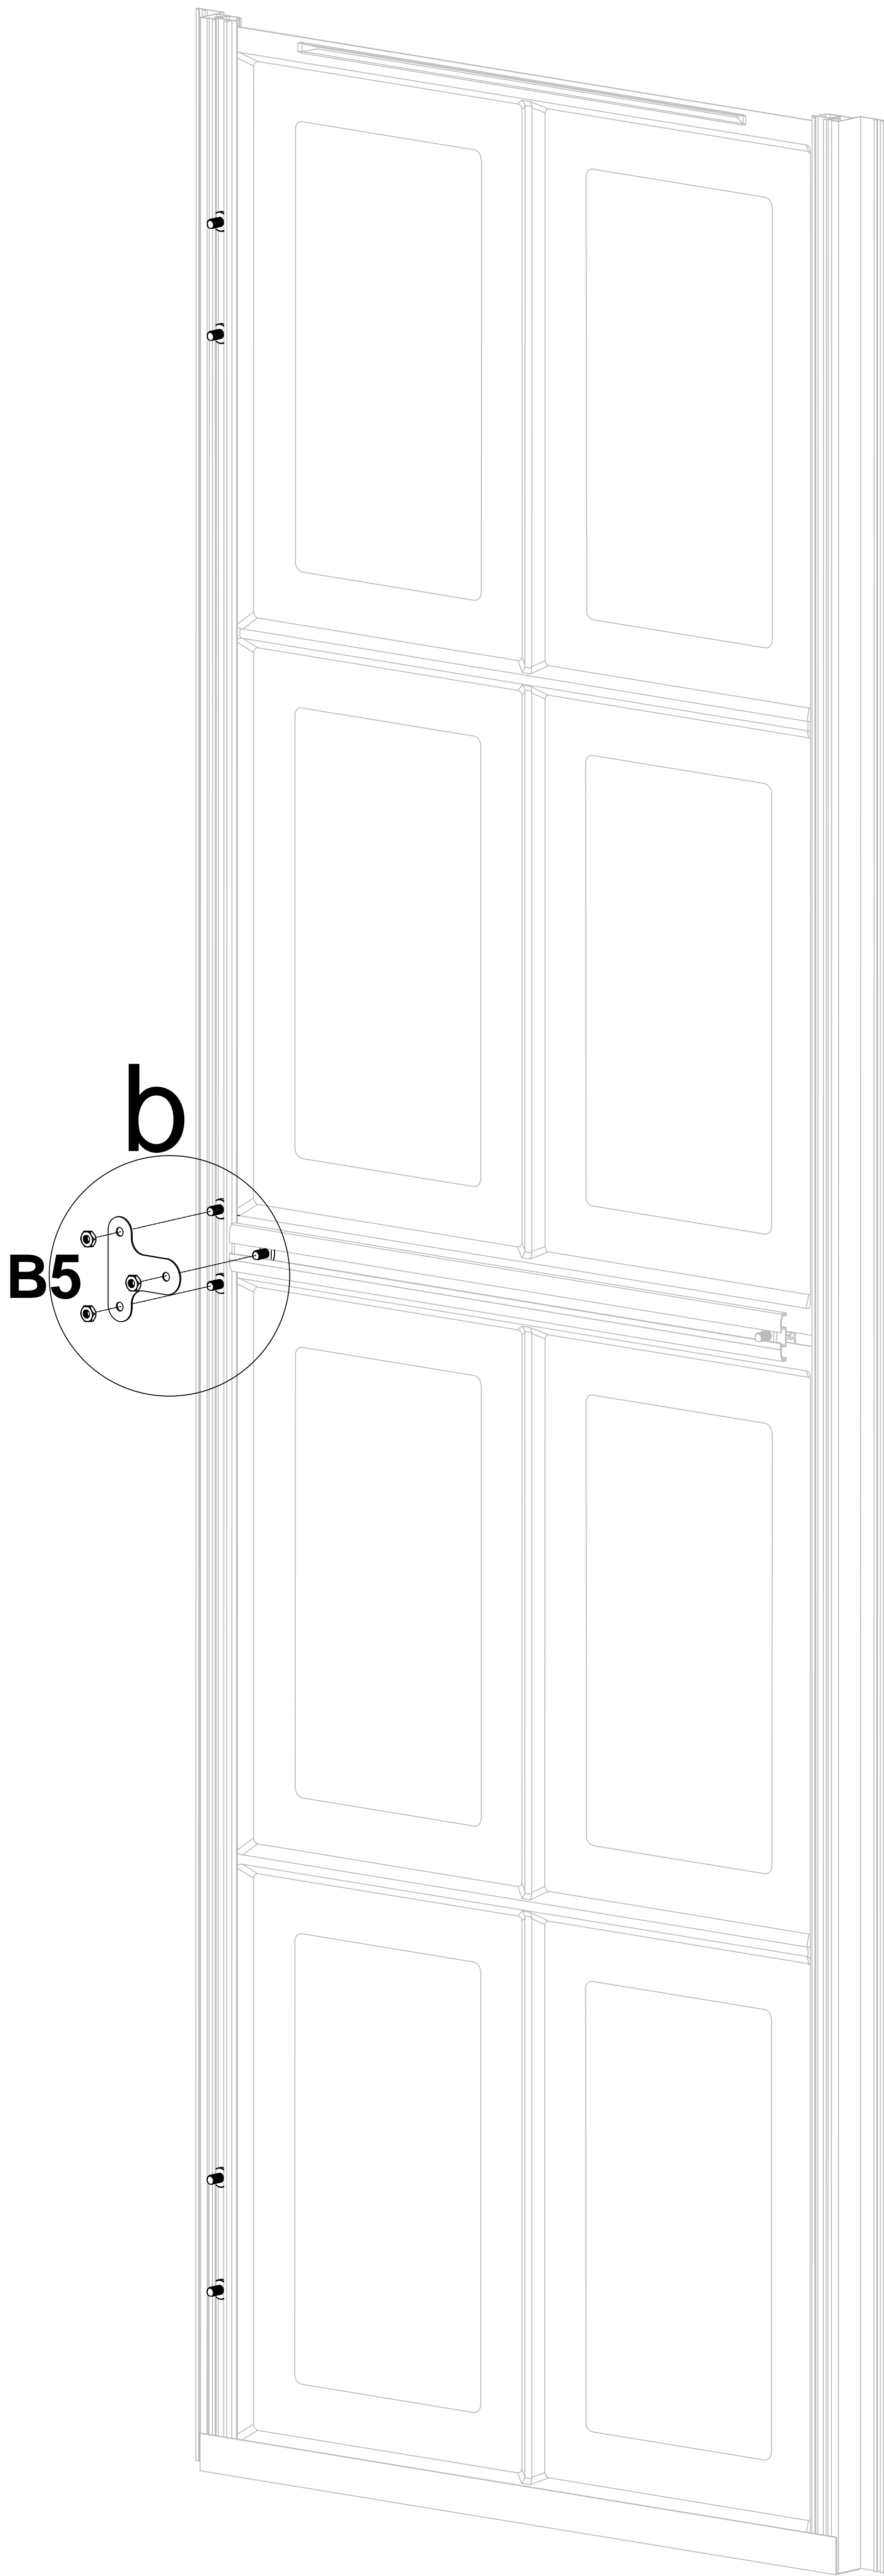







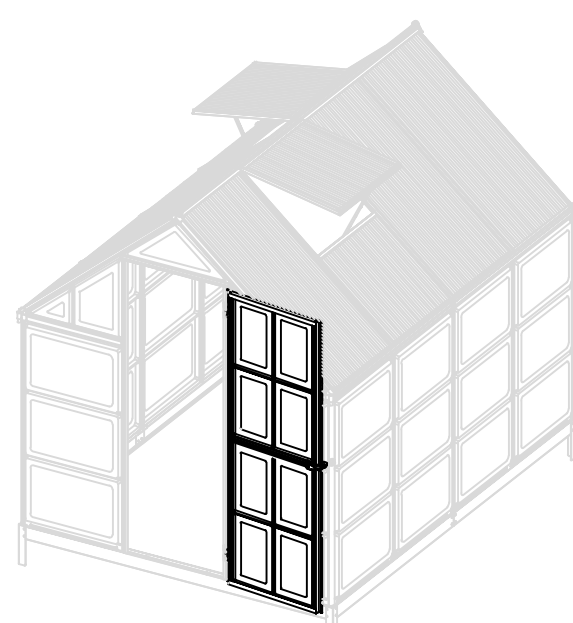

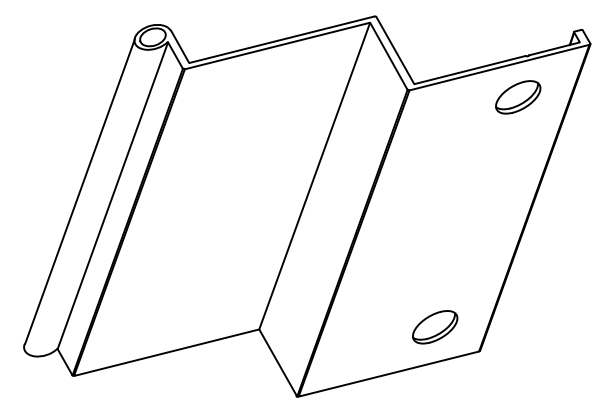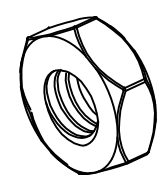- |    |   |       |
|----|---|-------|
| 14 |  | 2 PCS |
| F5 |  | 4 PCS |

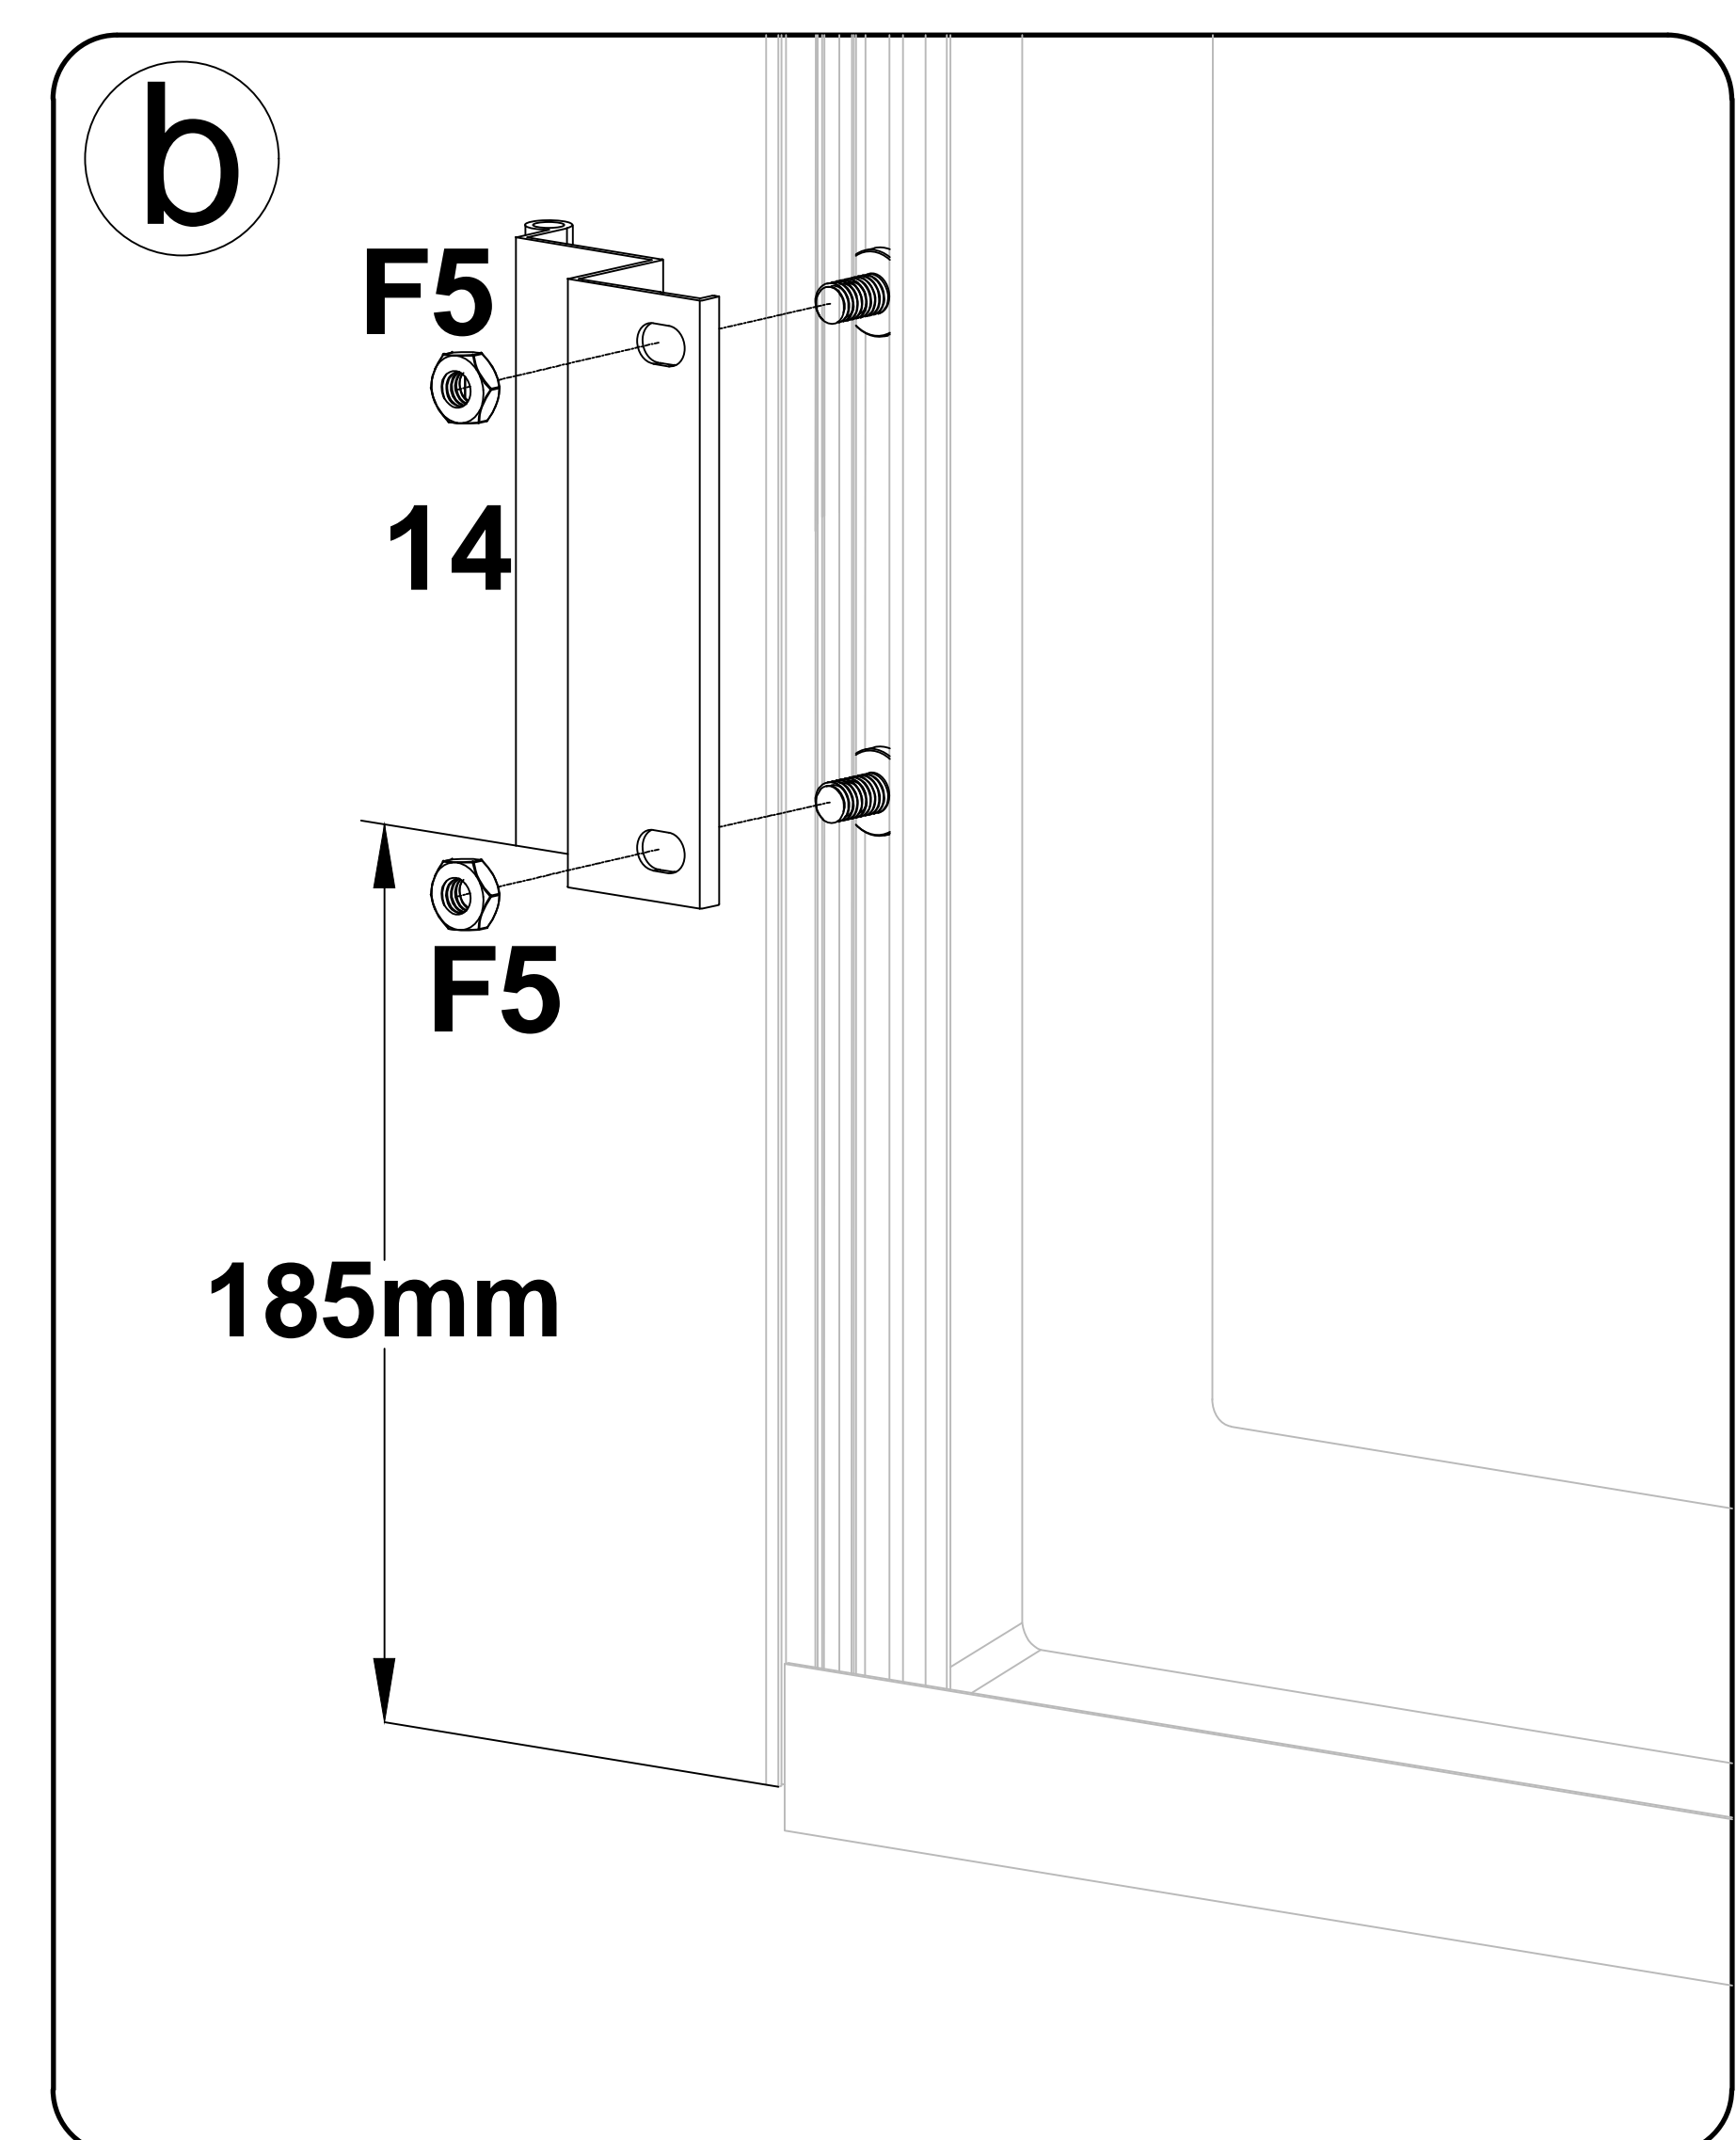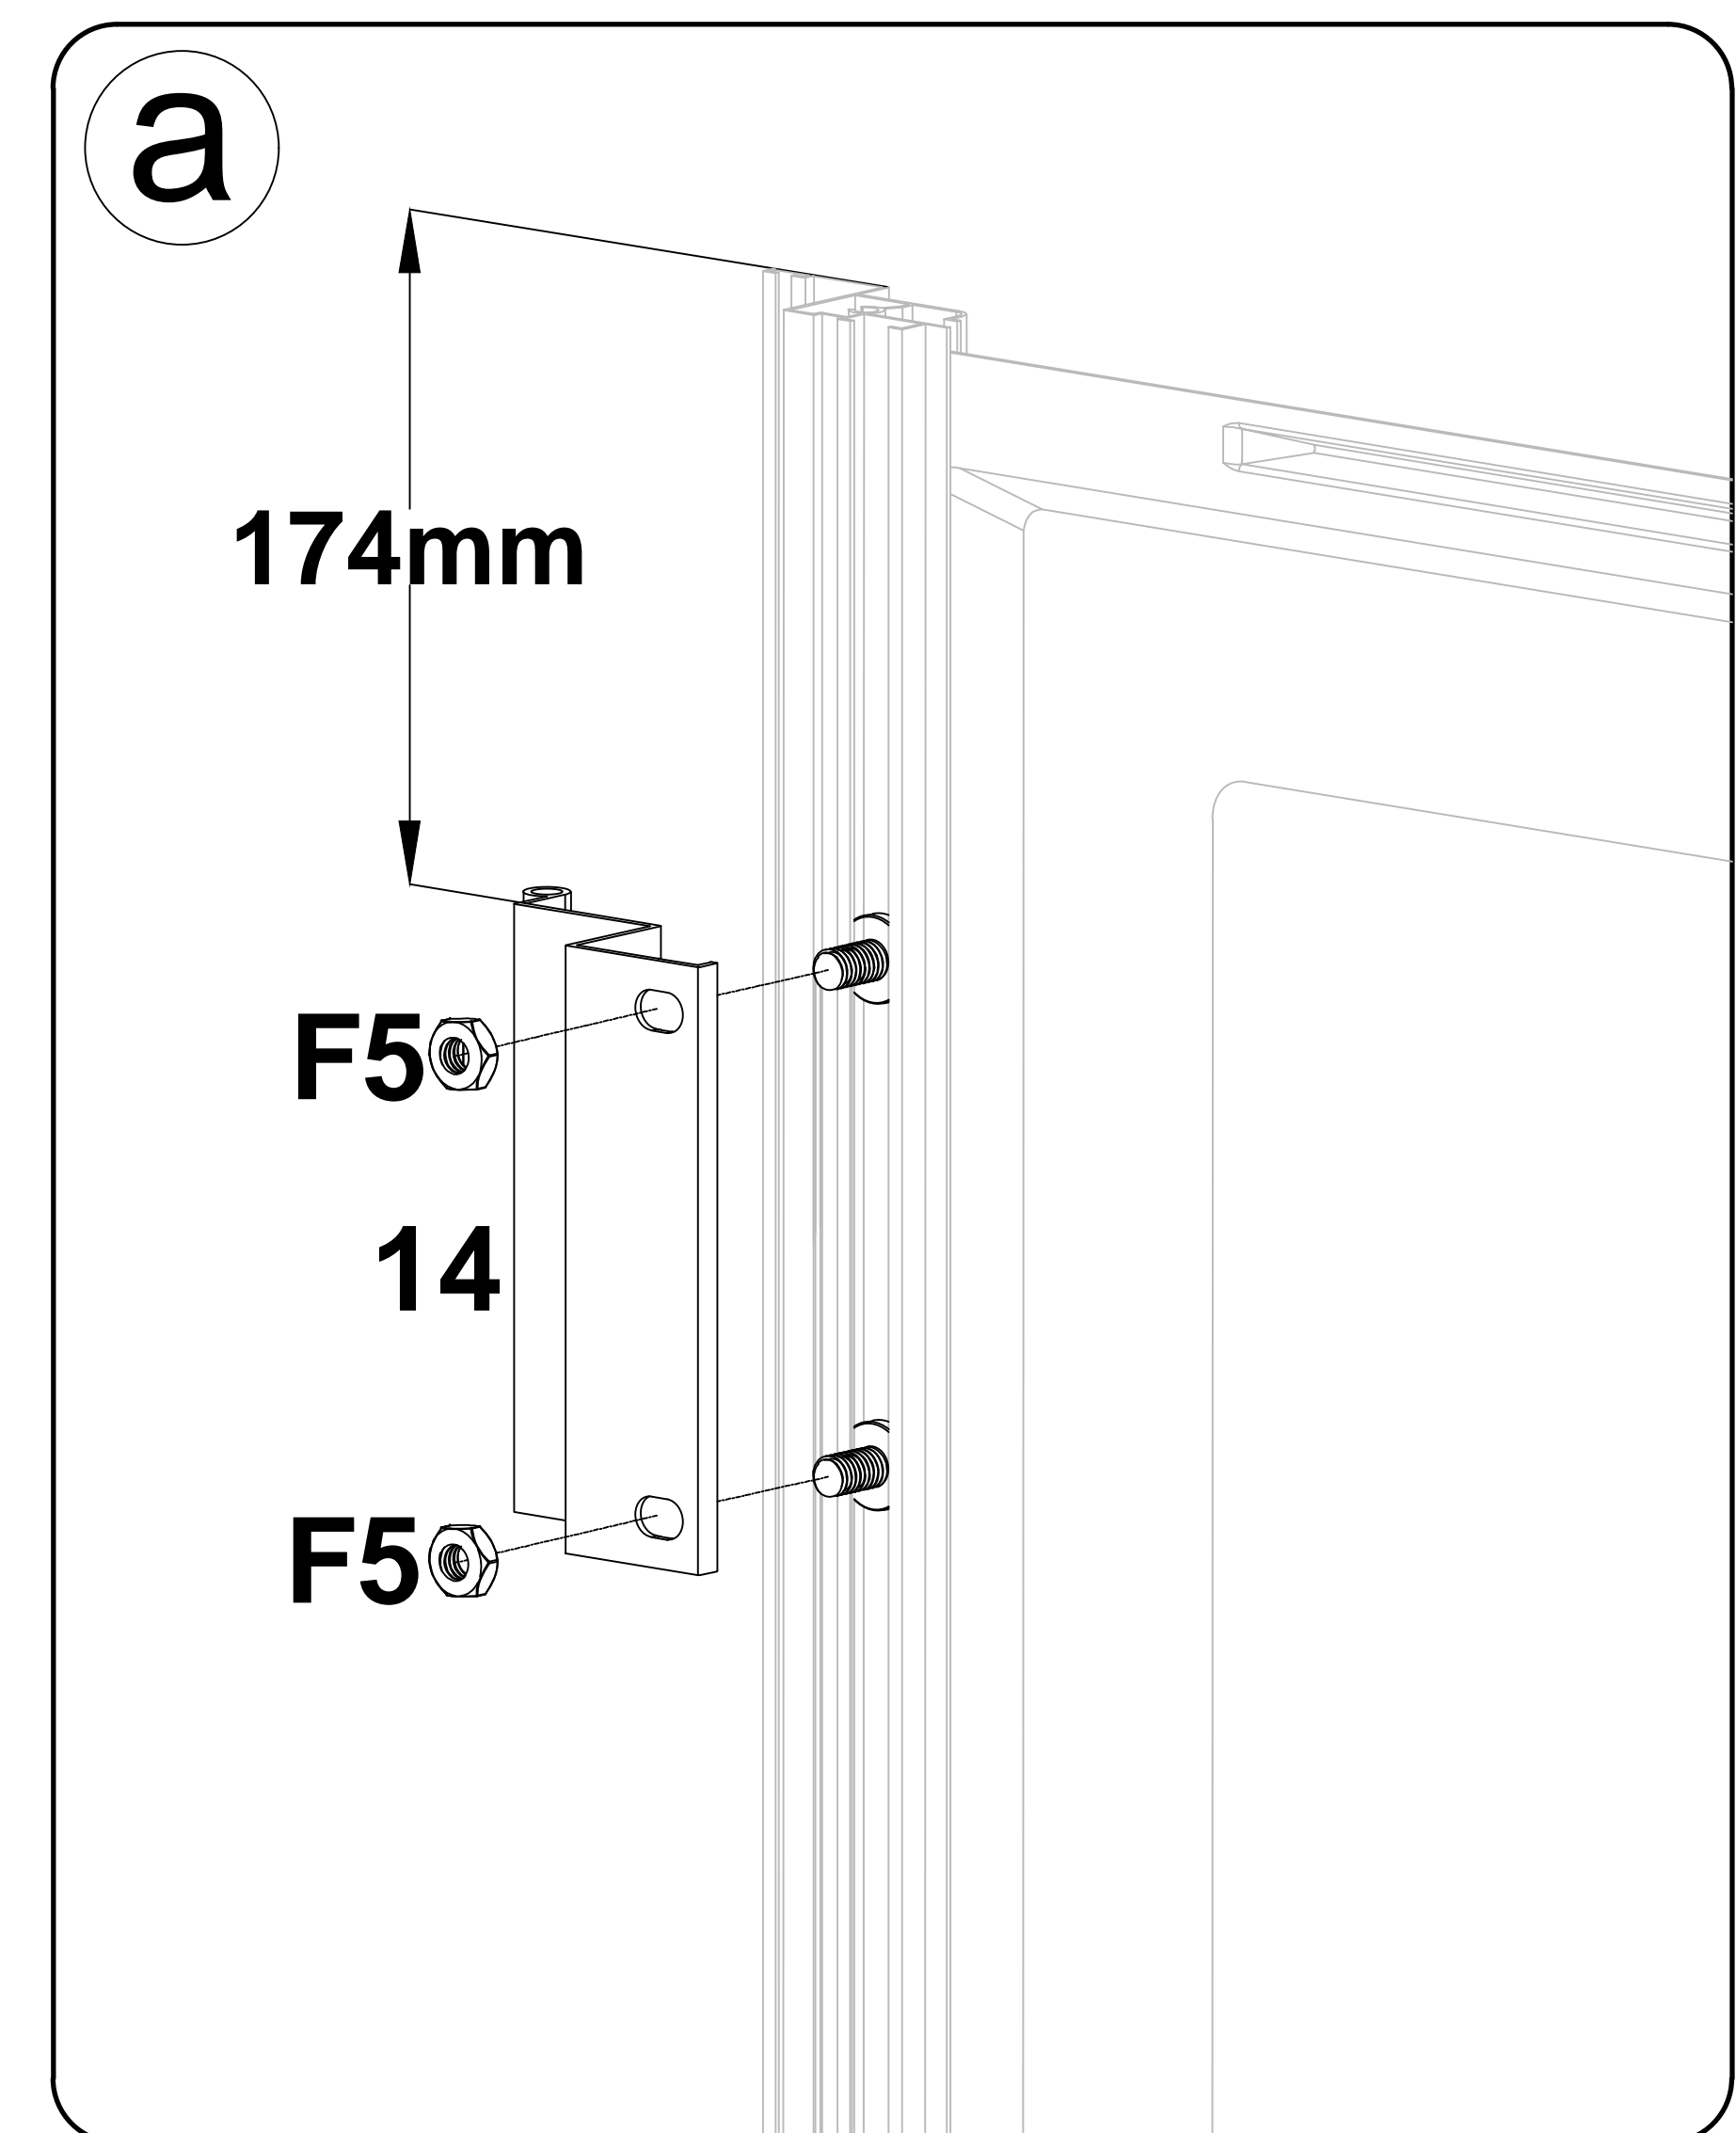


 **Internal View**

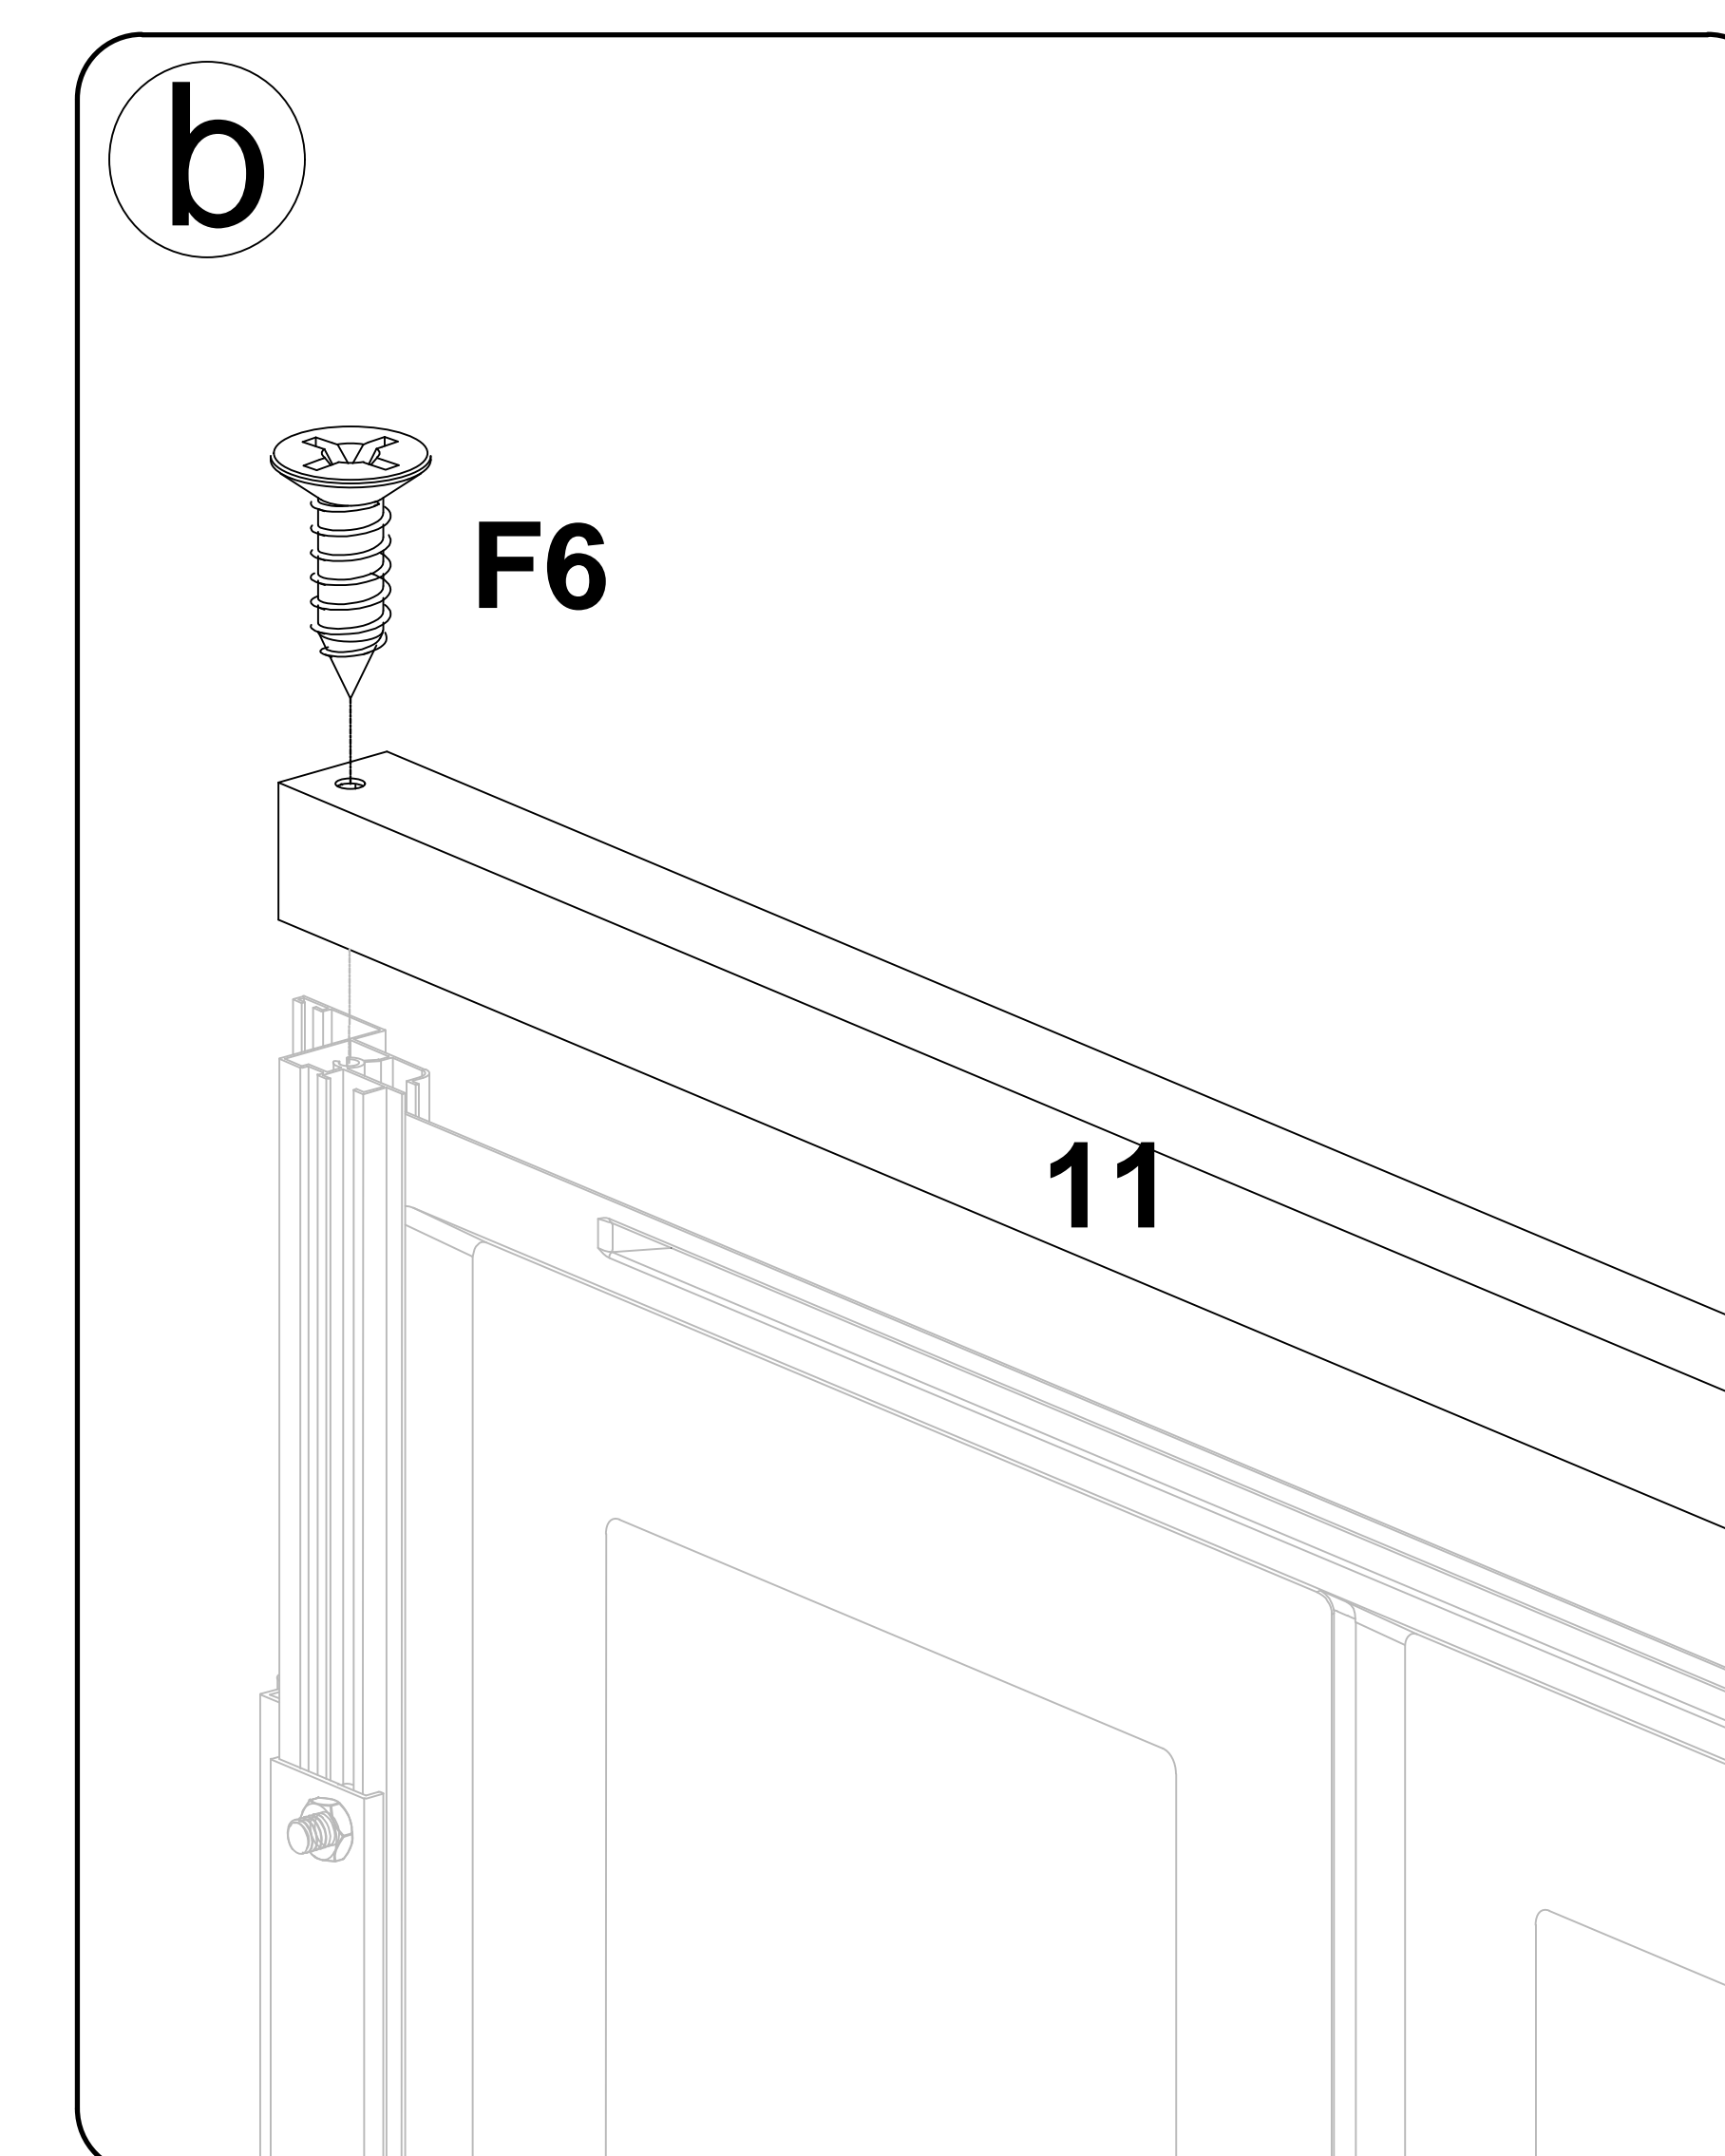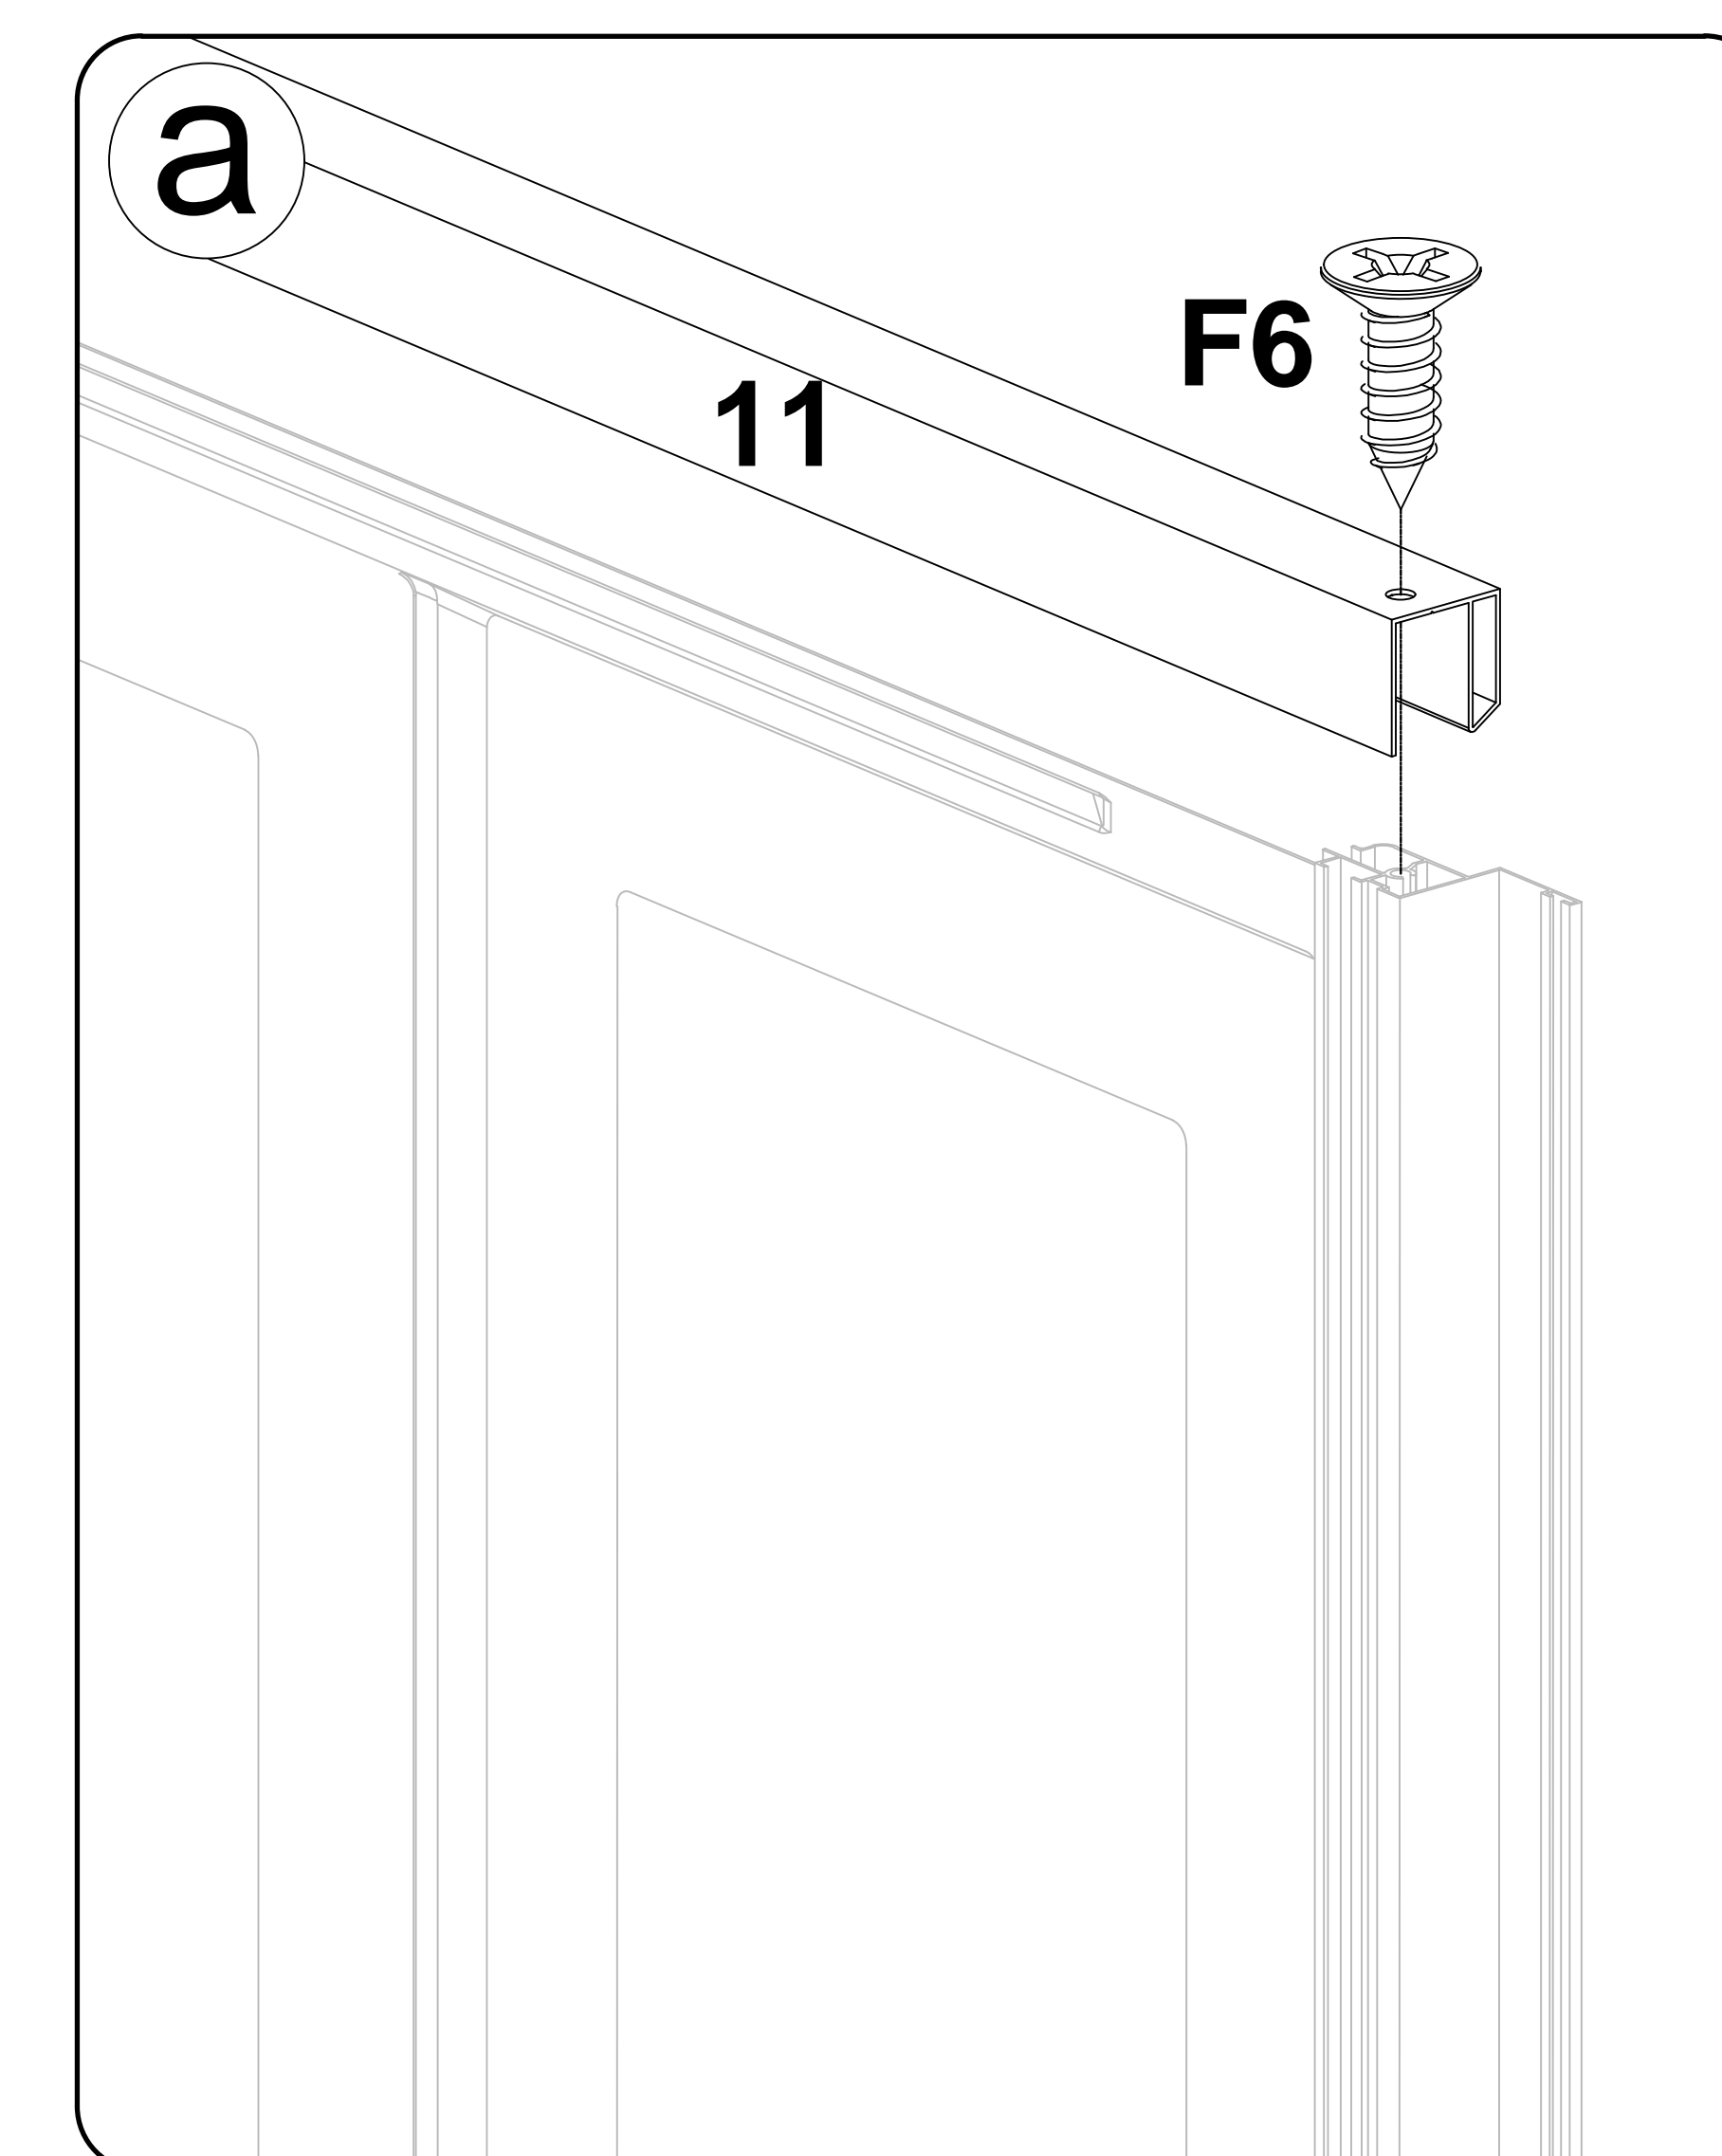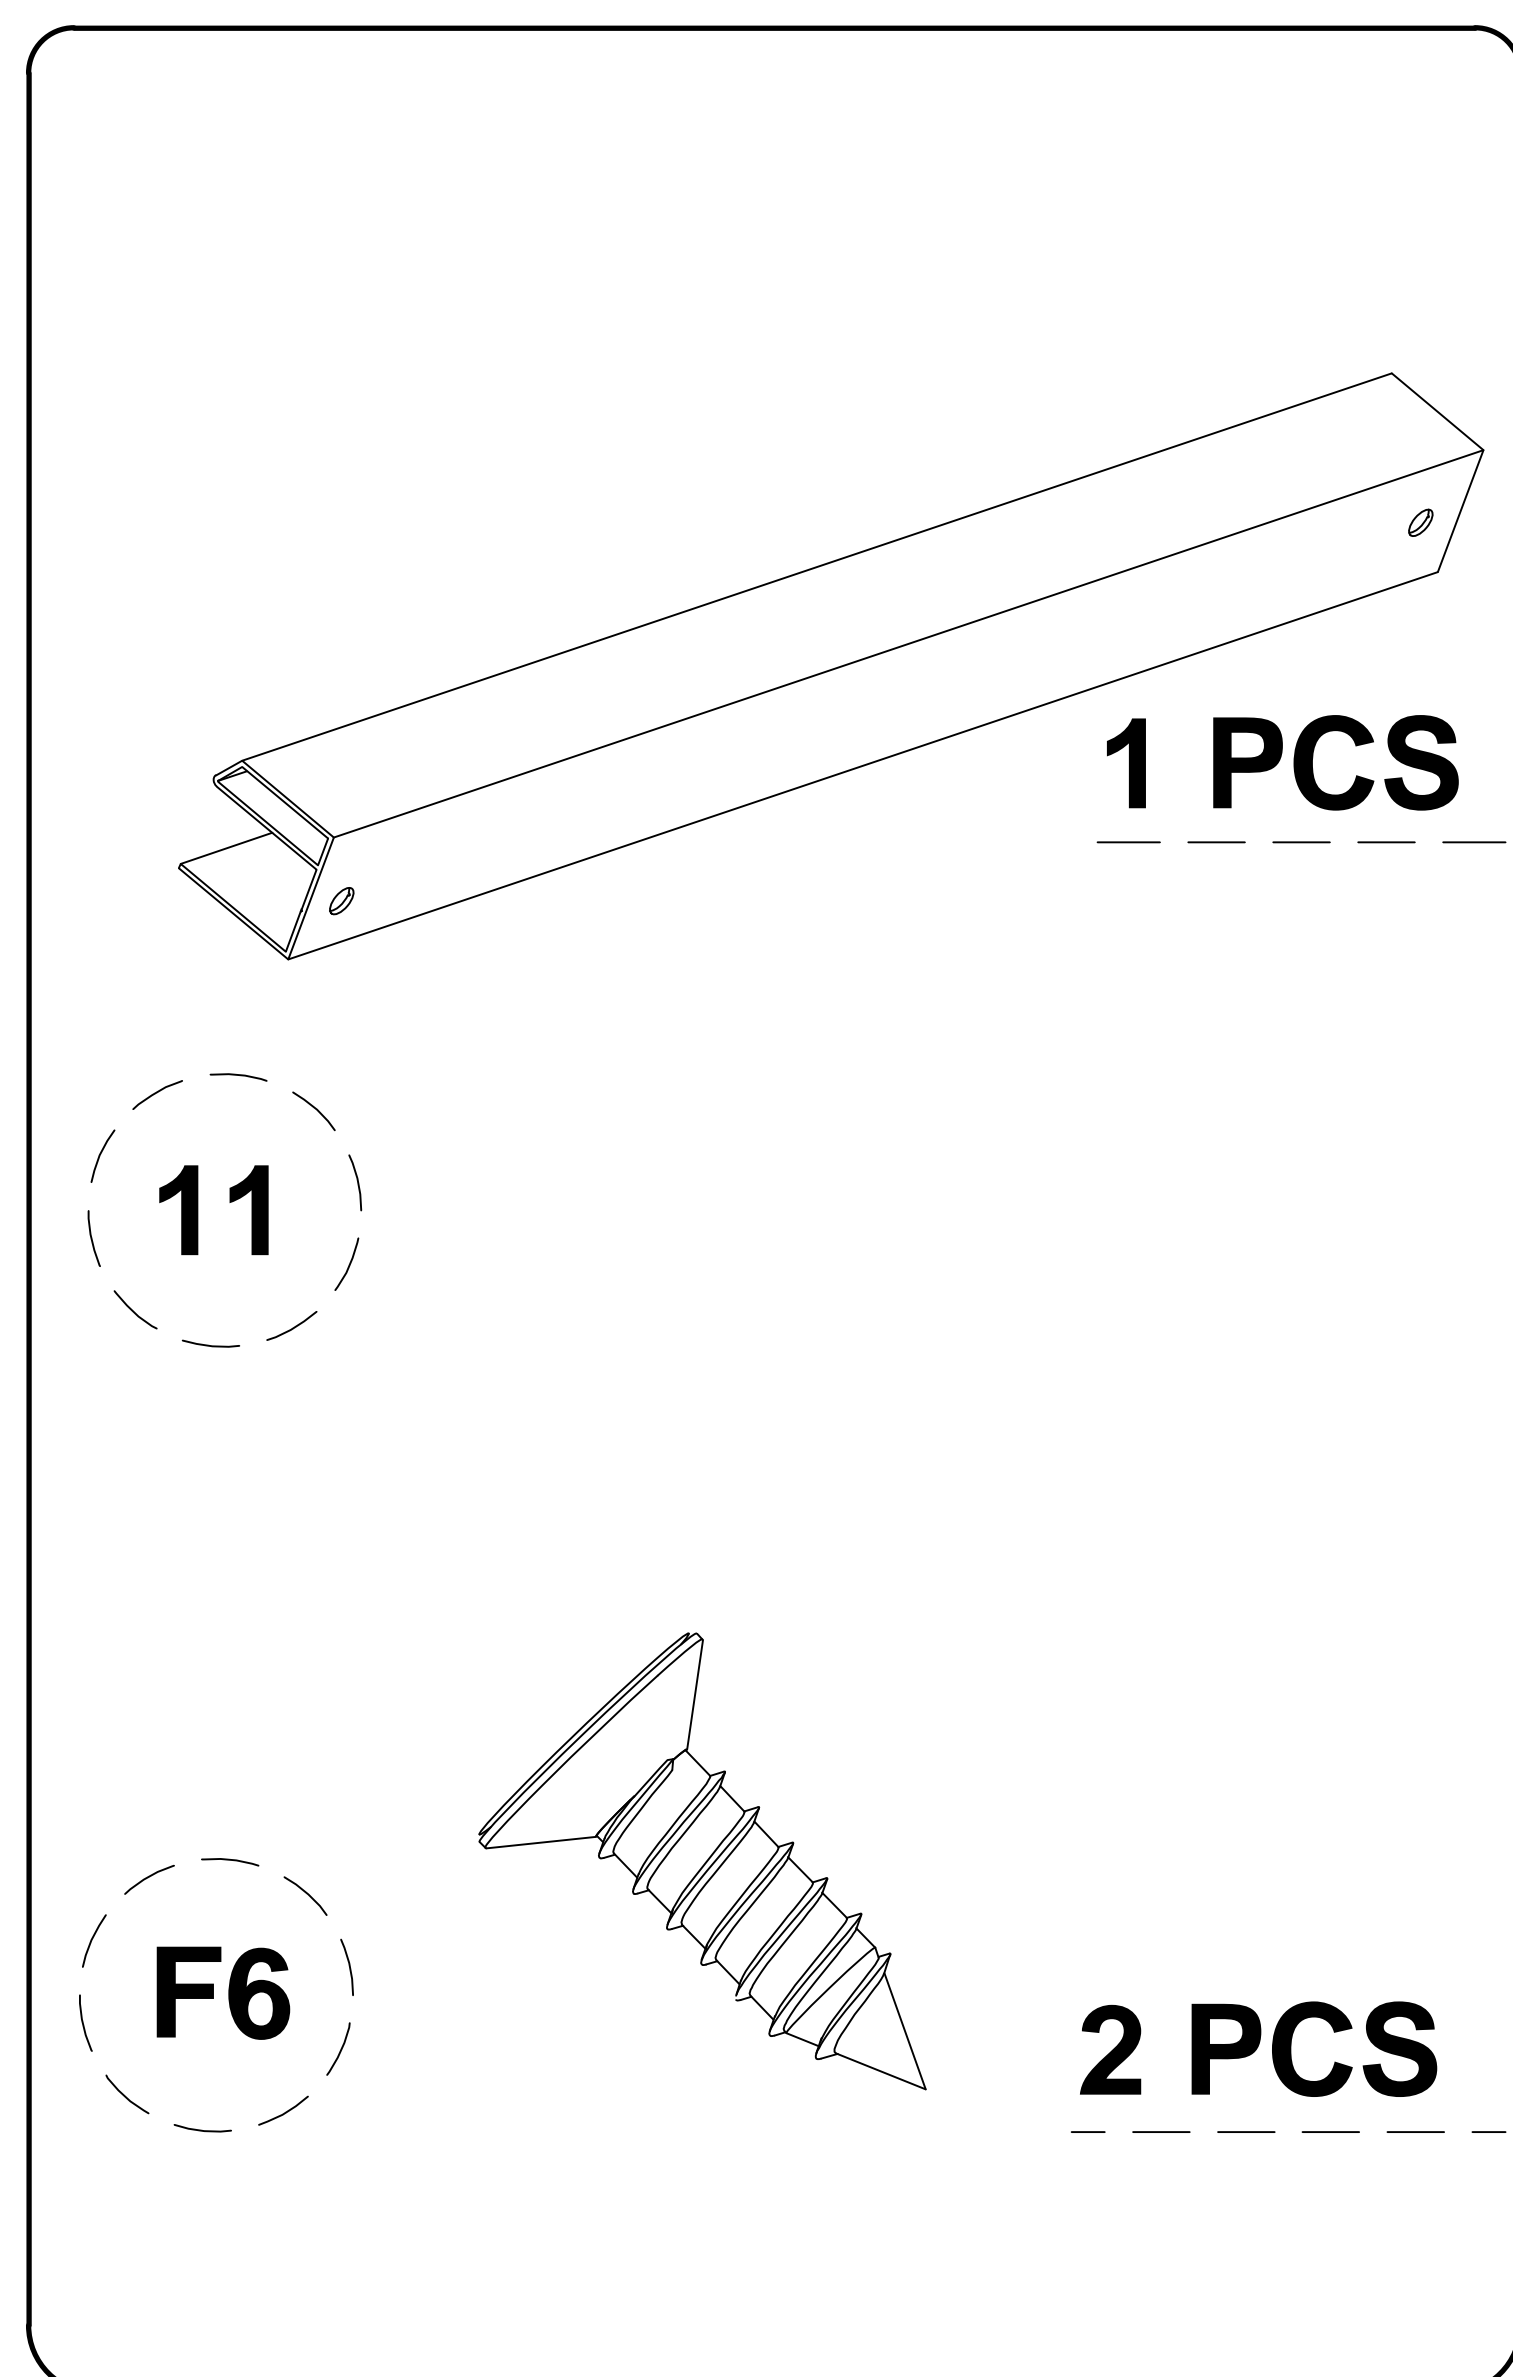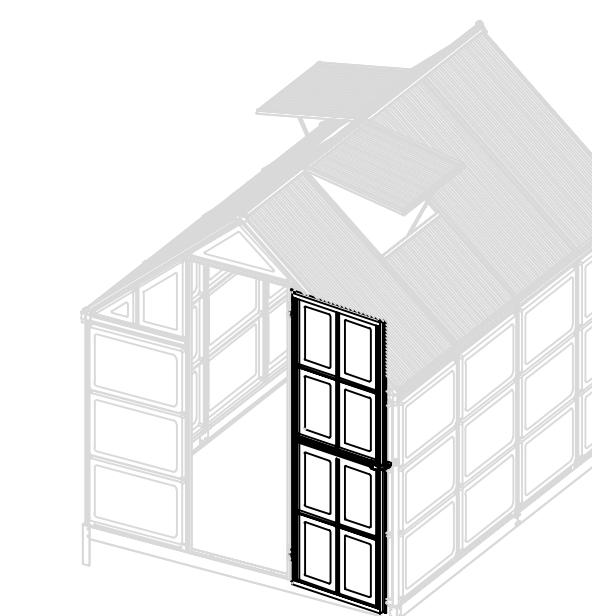


! Internal View



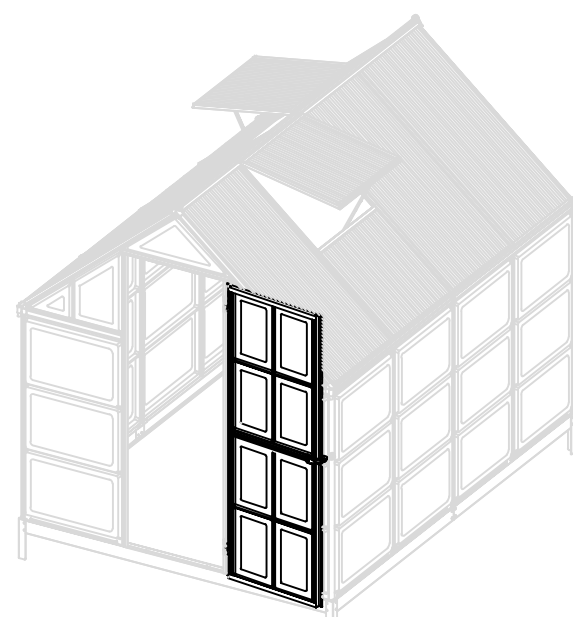


F3

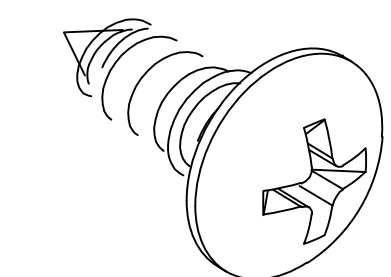

ST4.2X16


1 PCS

F5

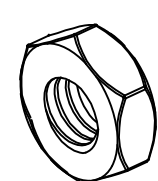



2 PCS

S4

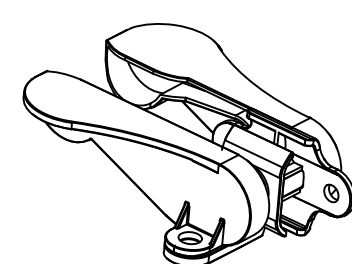








1 PCS

a

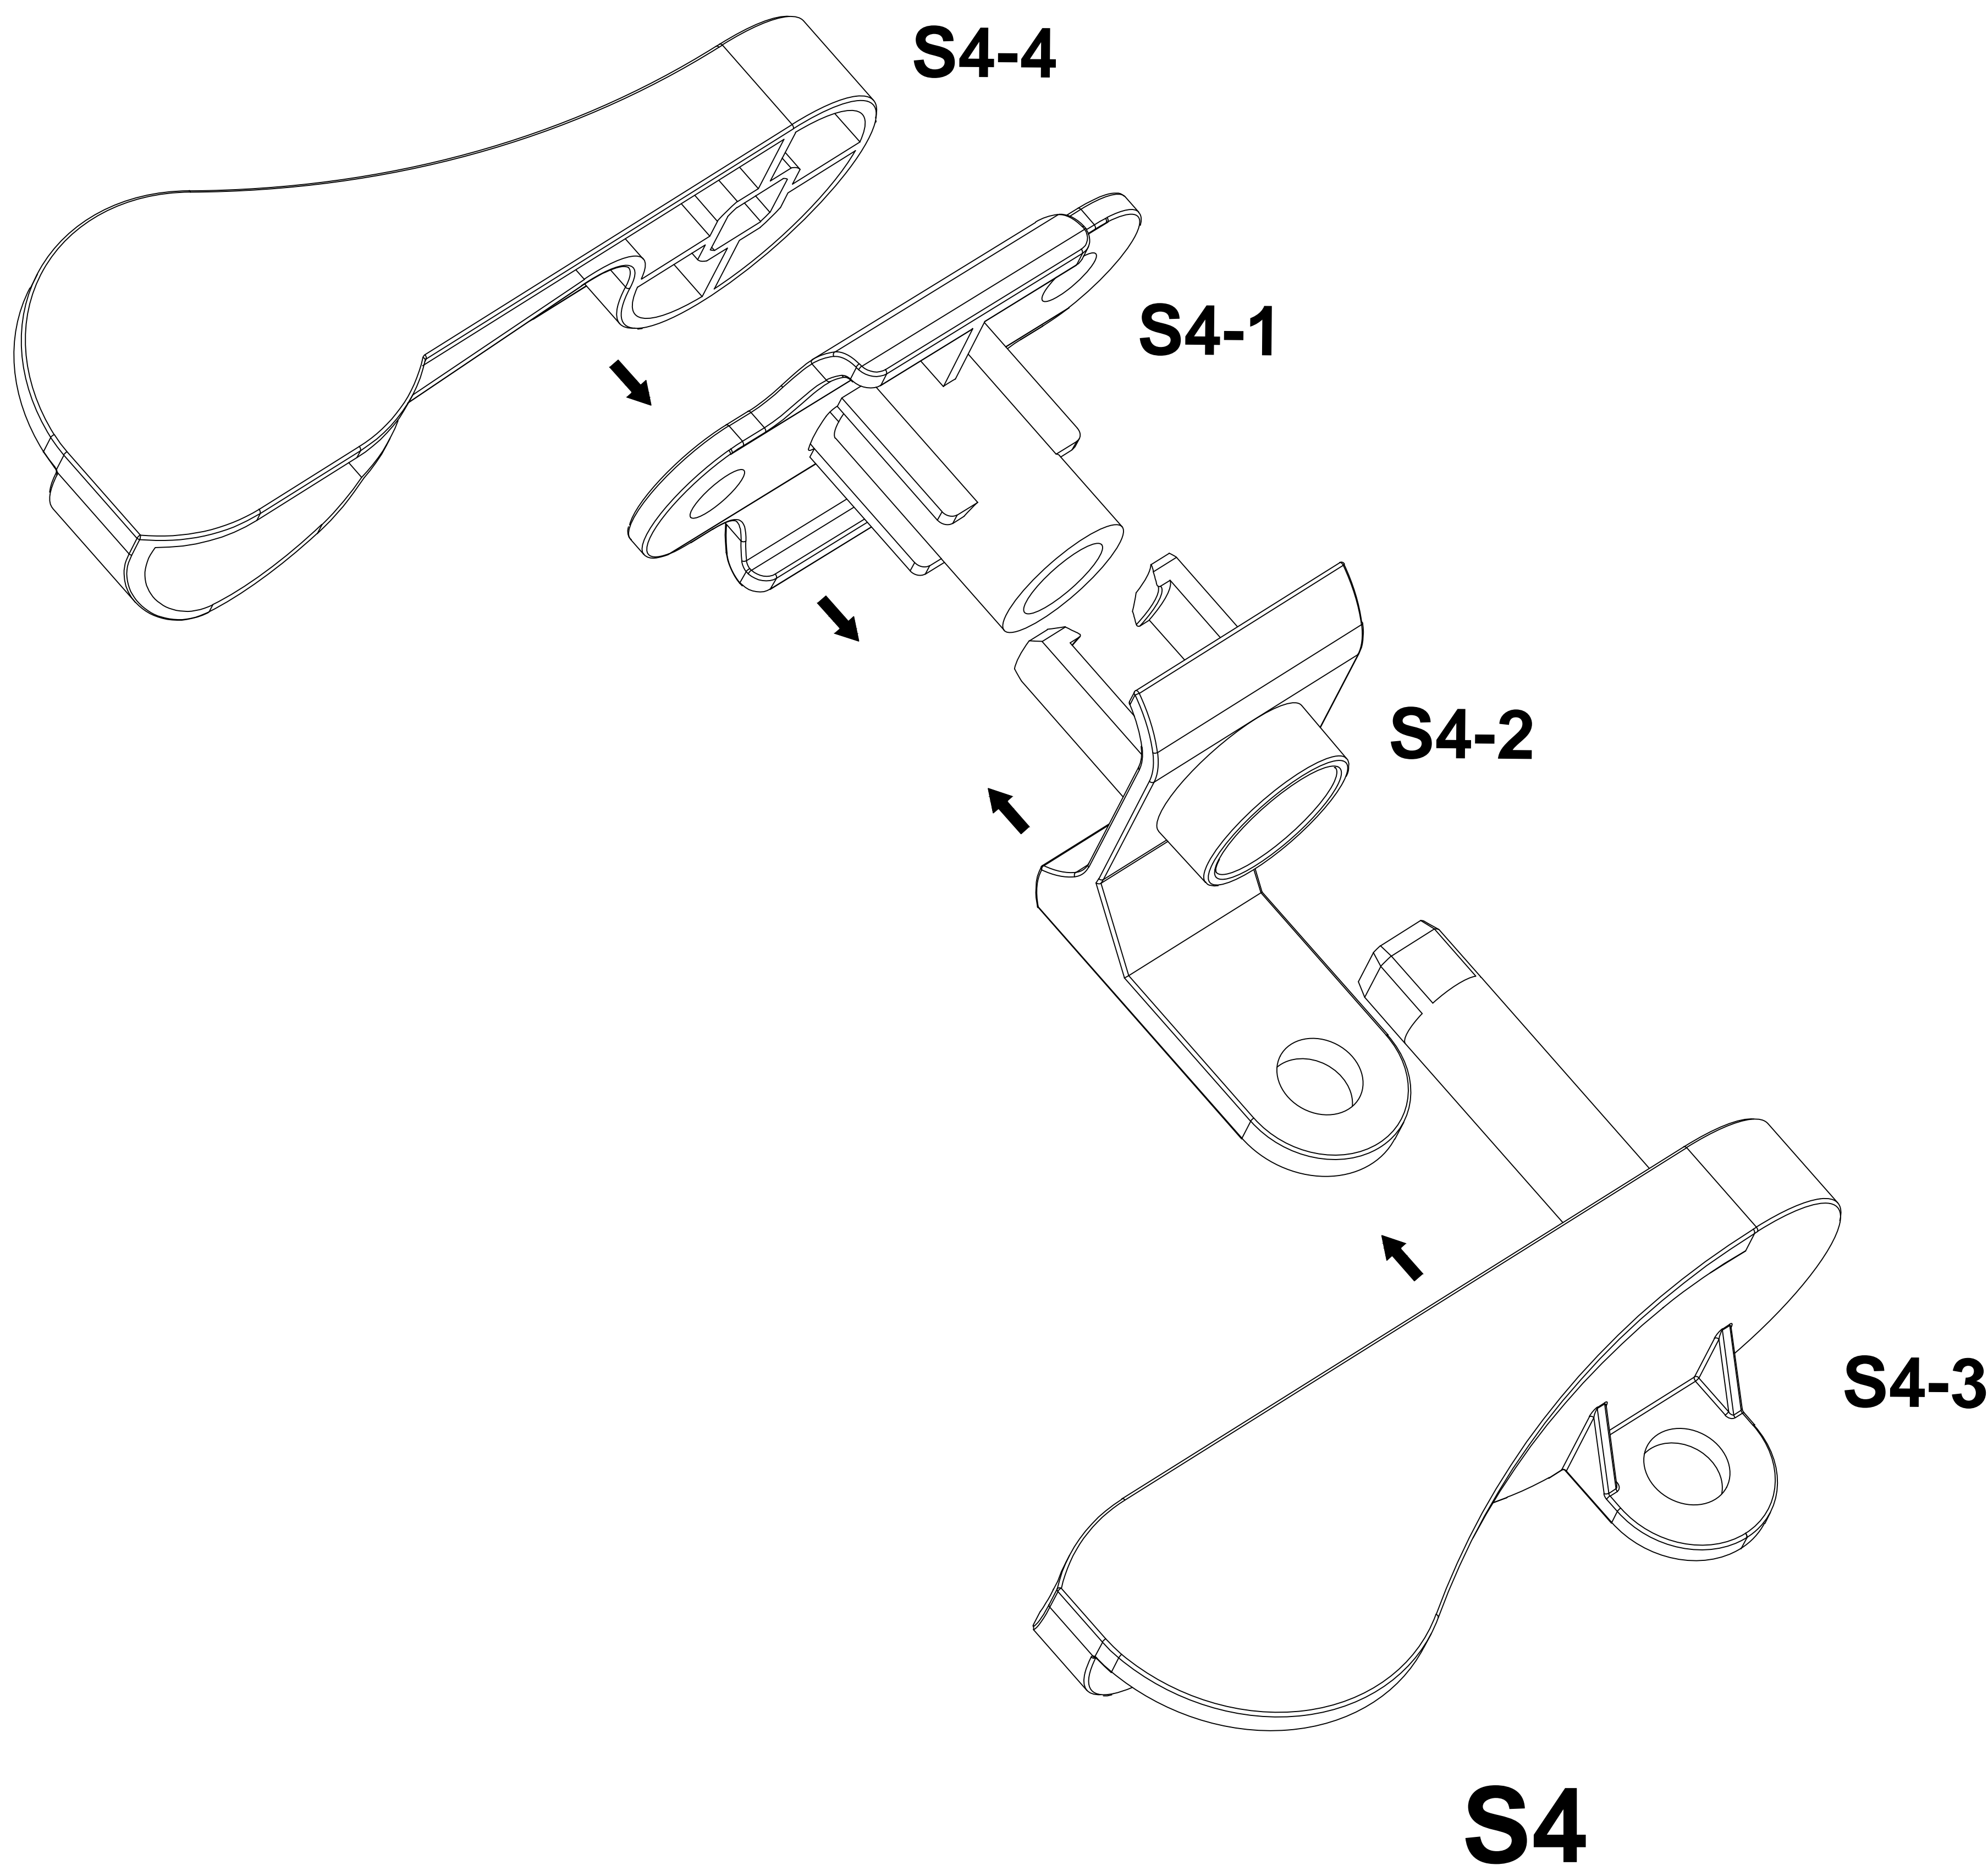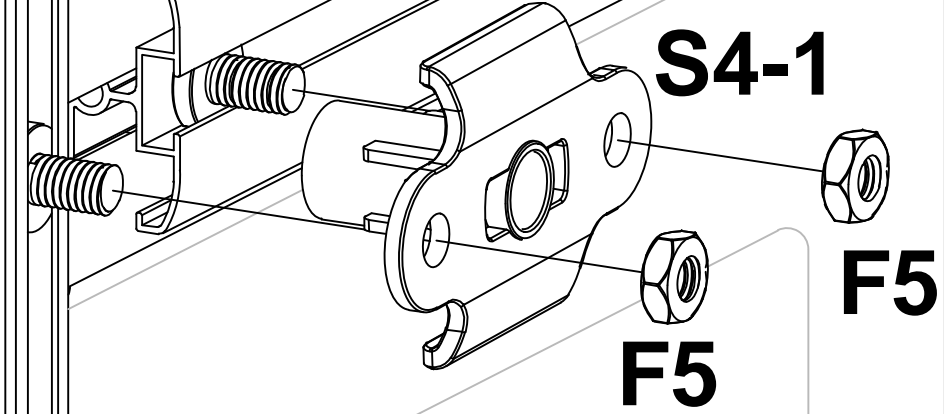


a

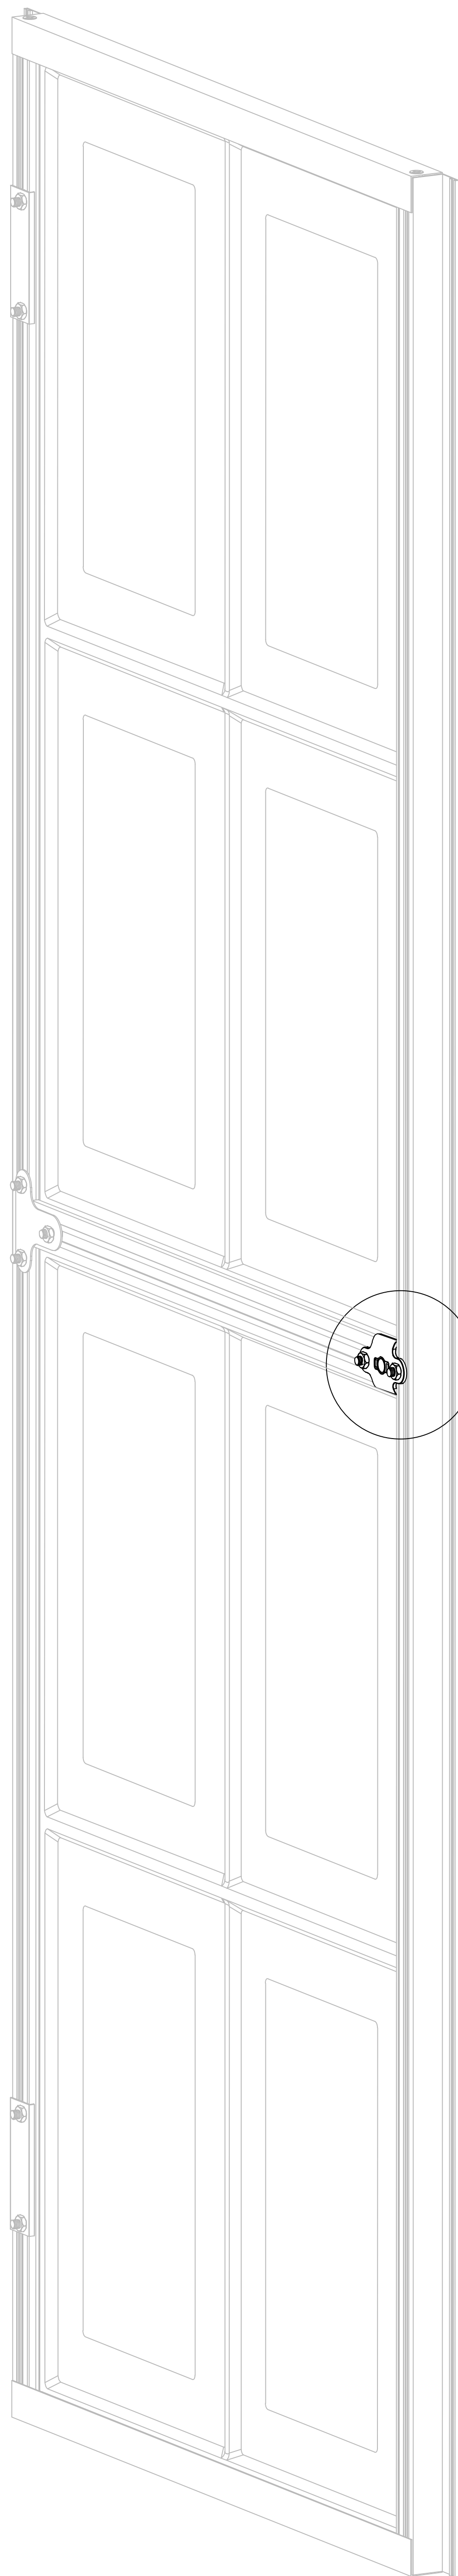


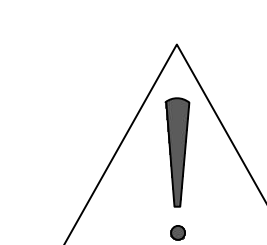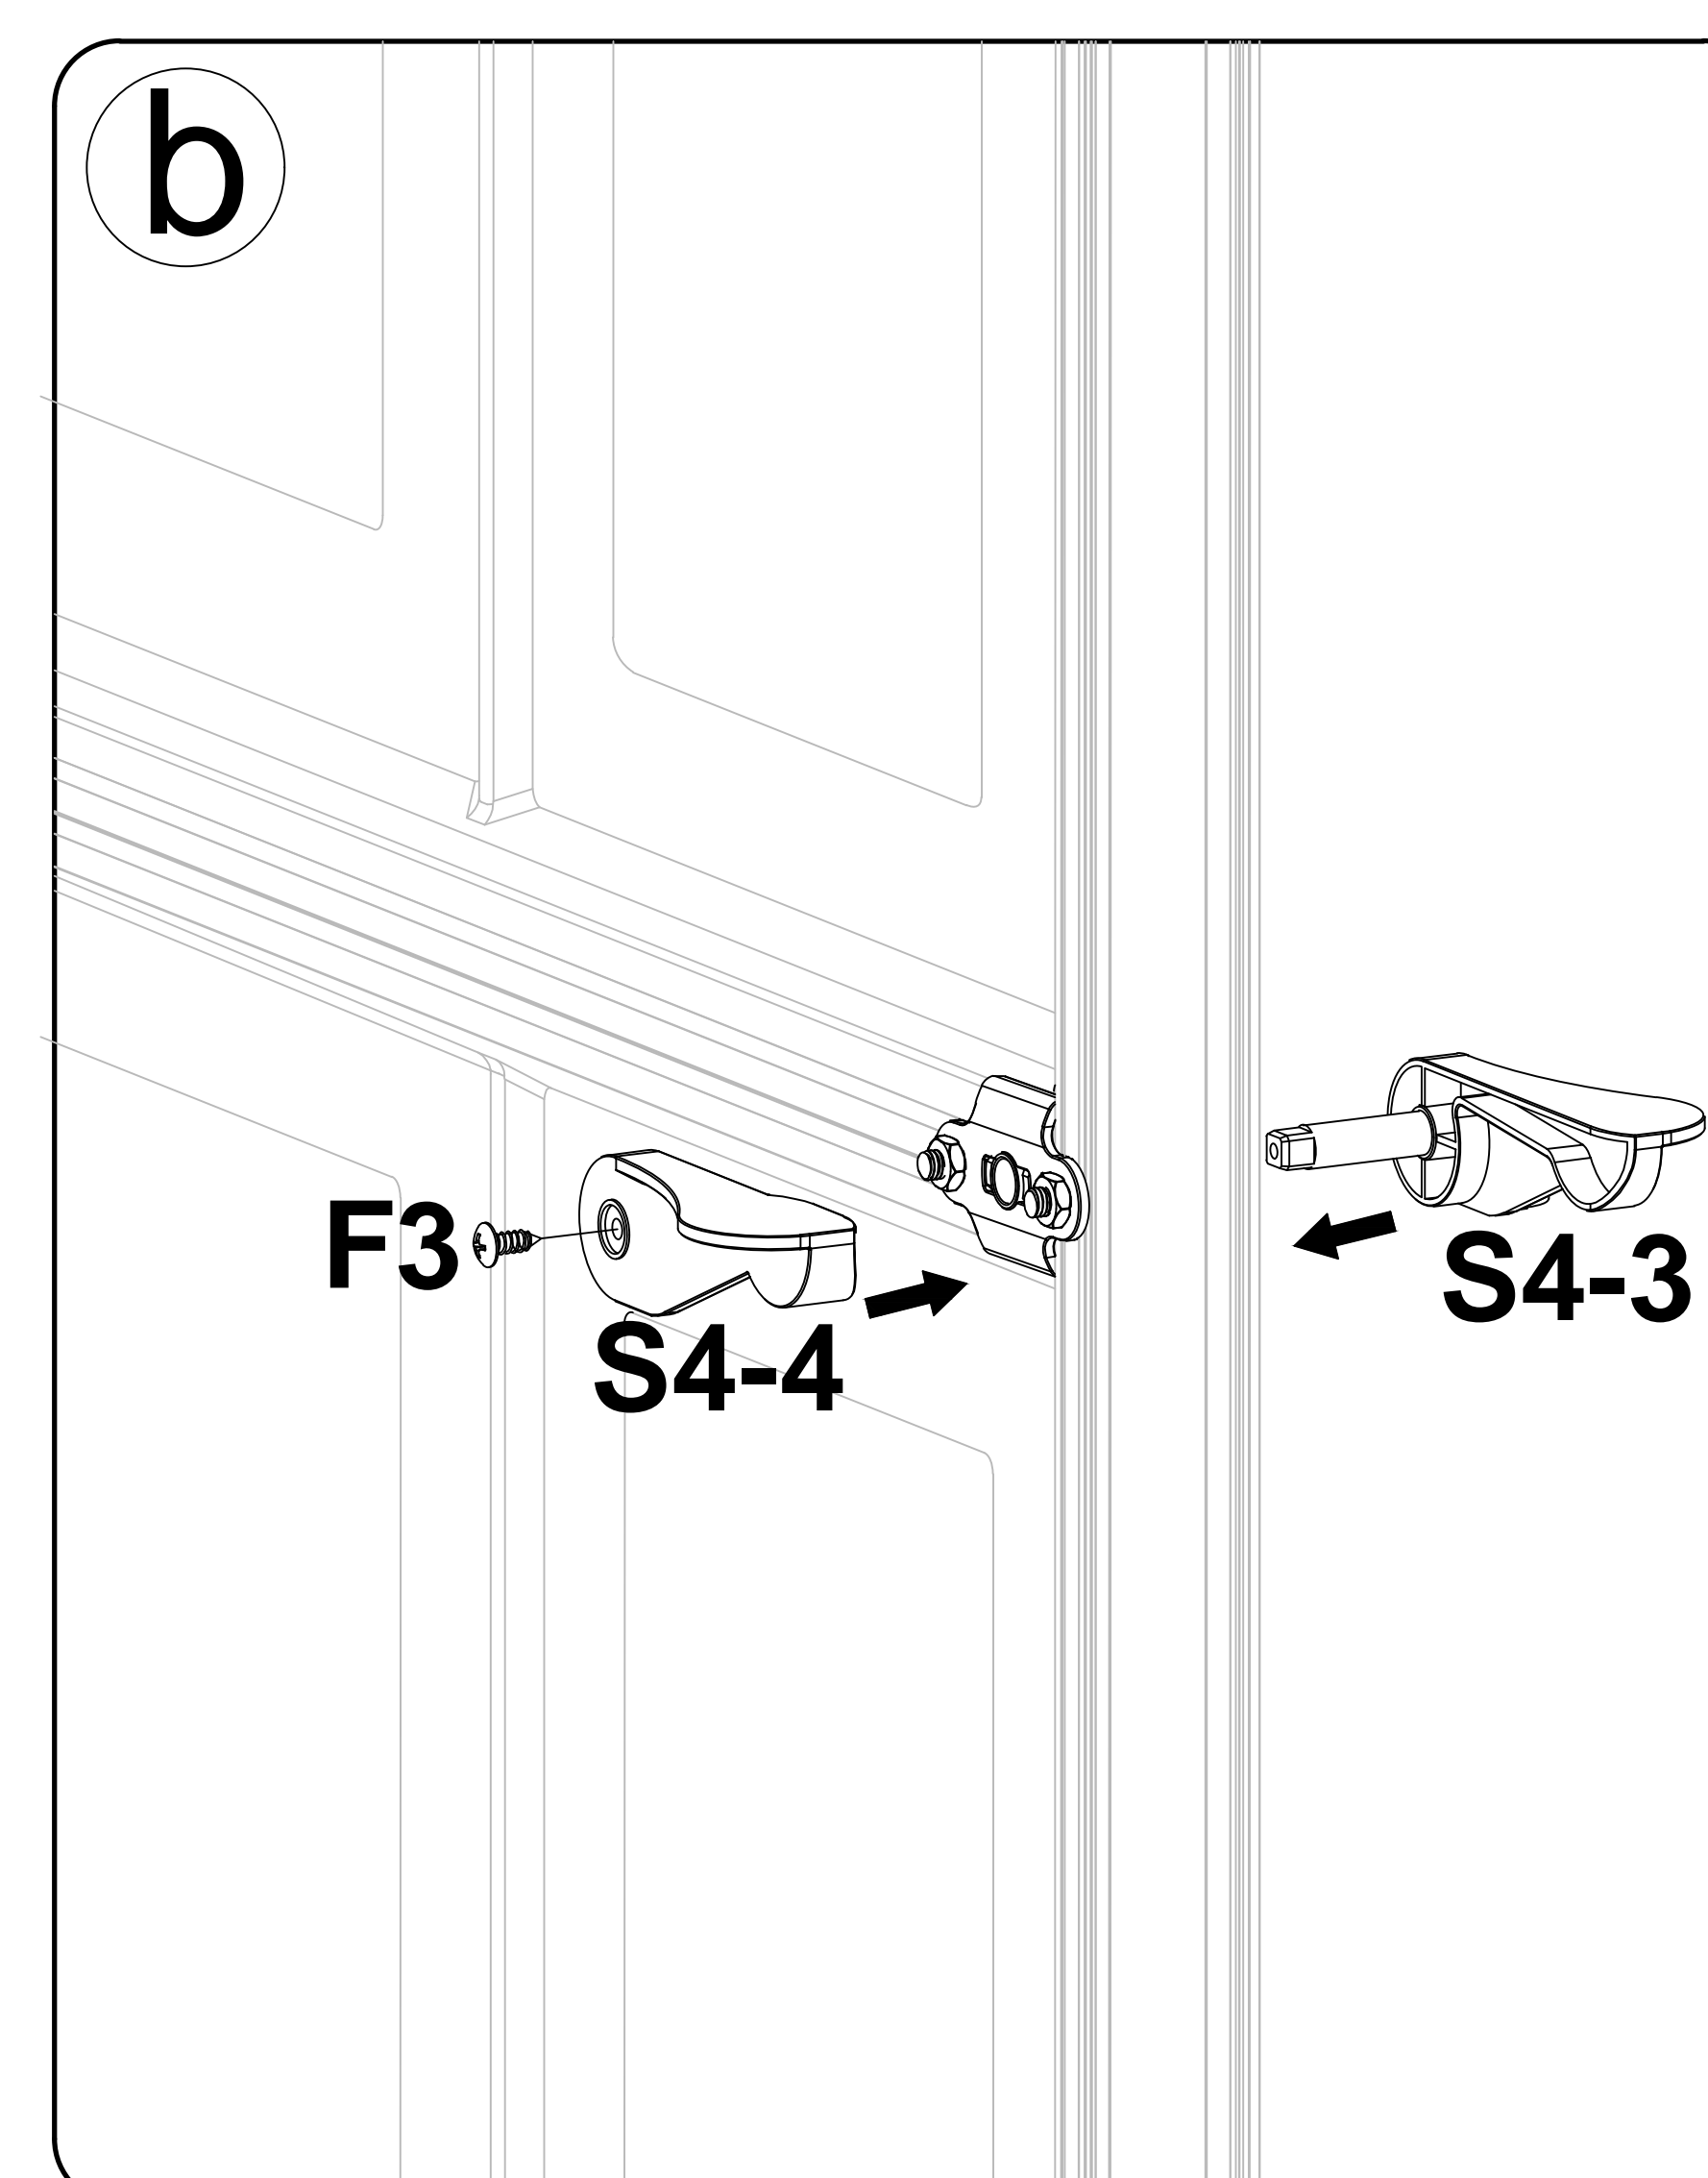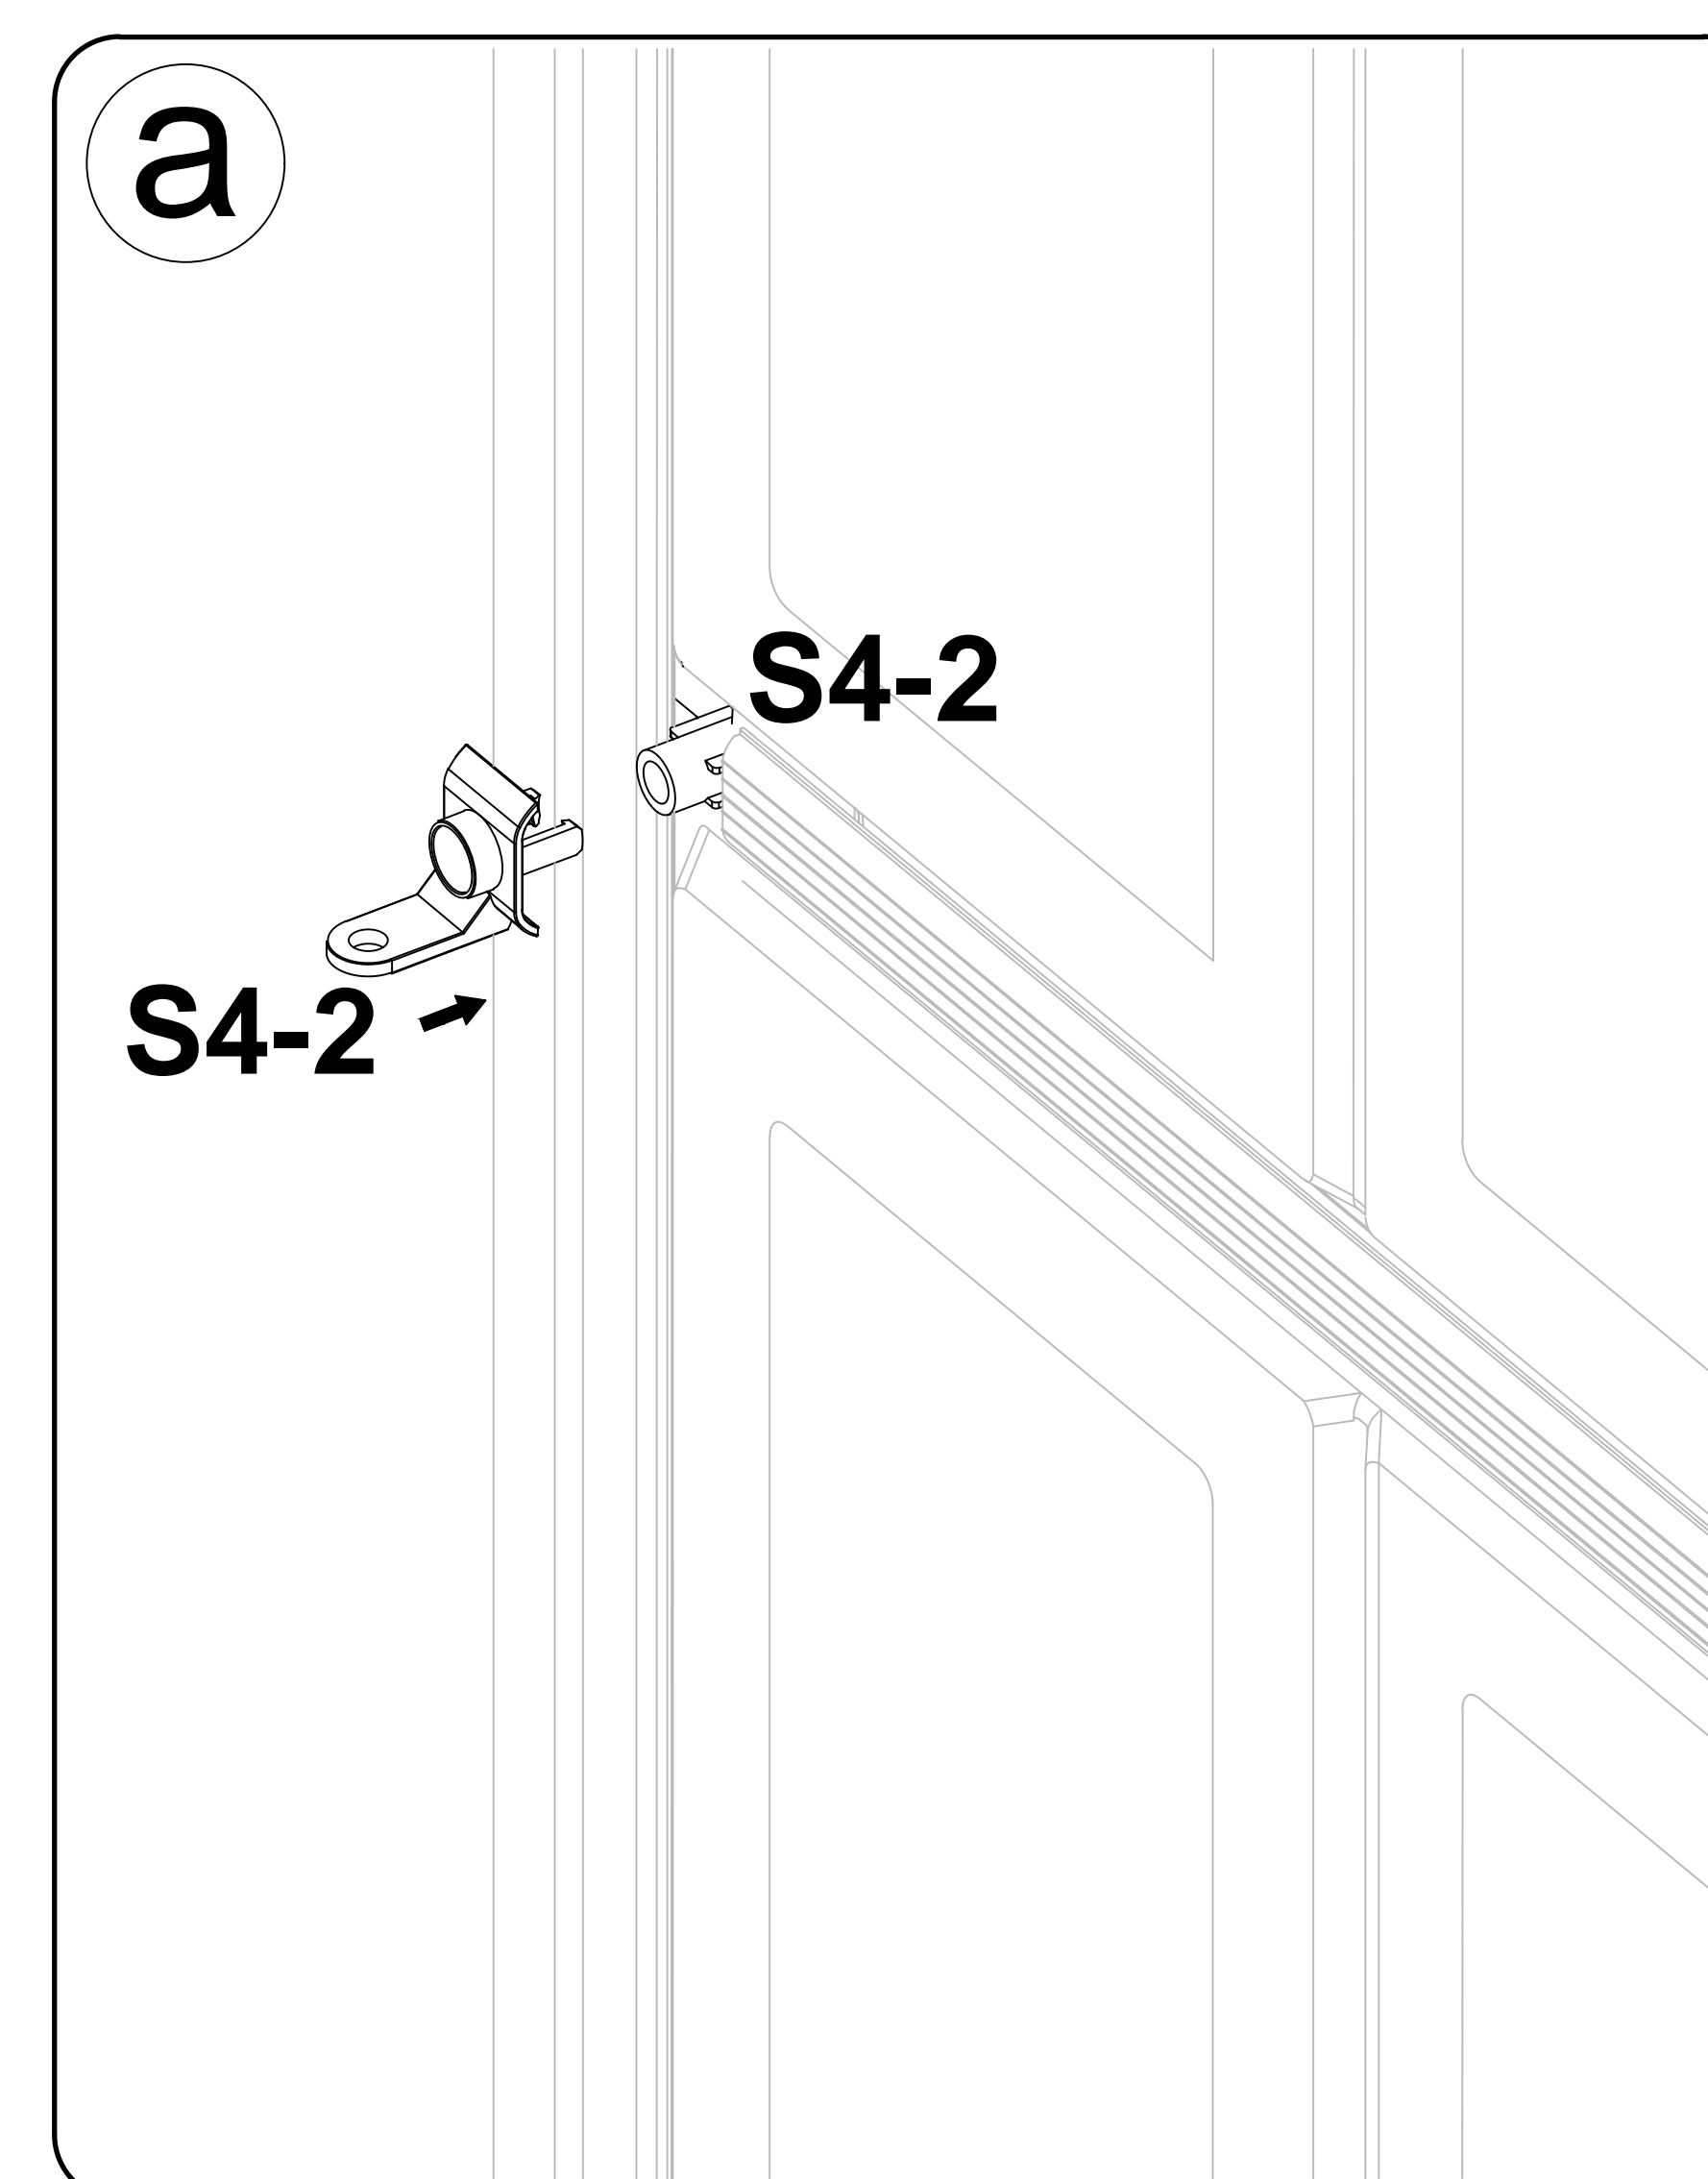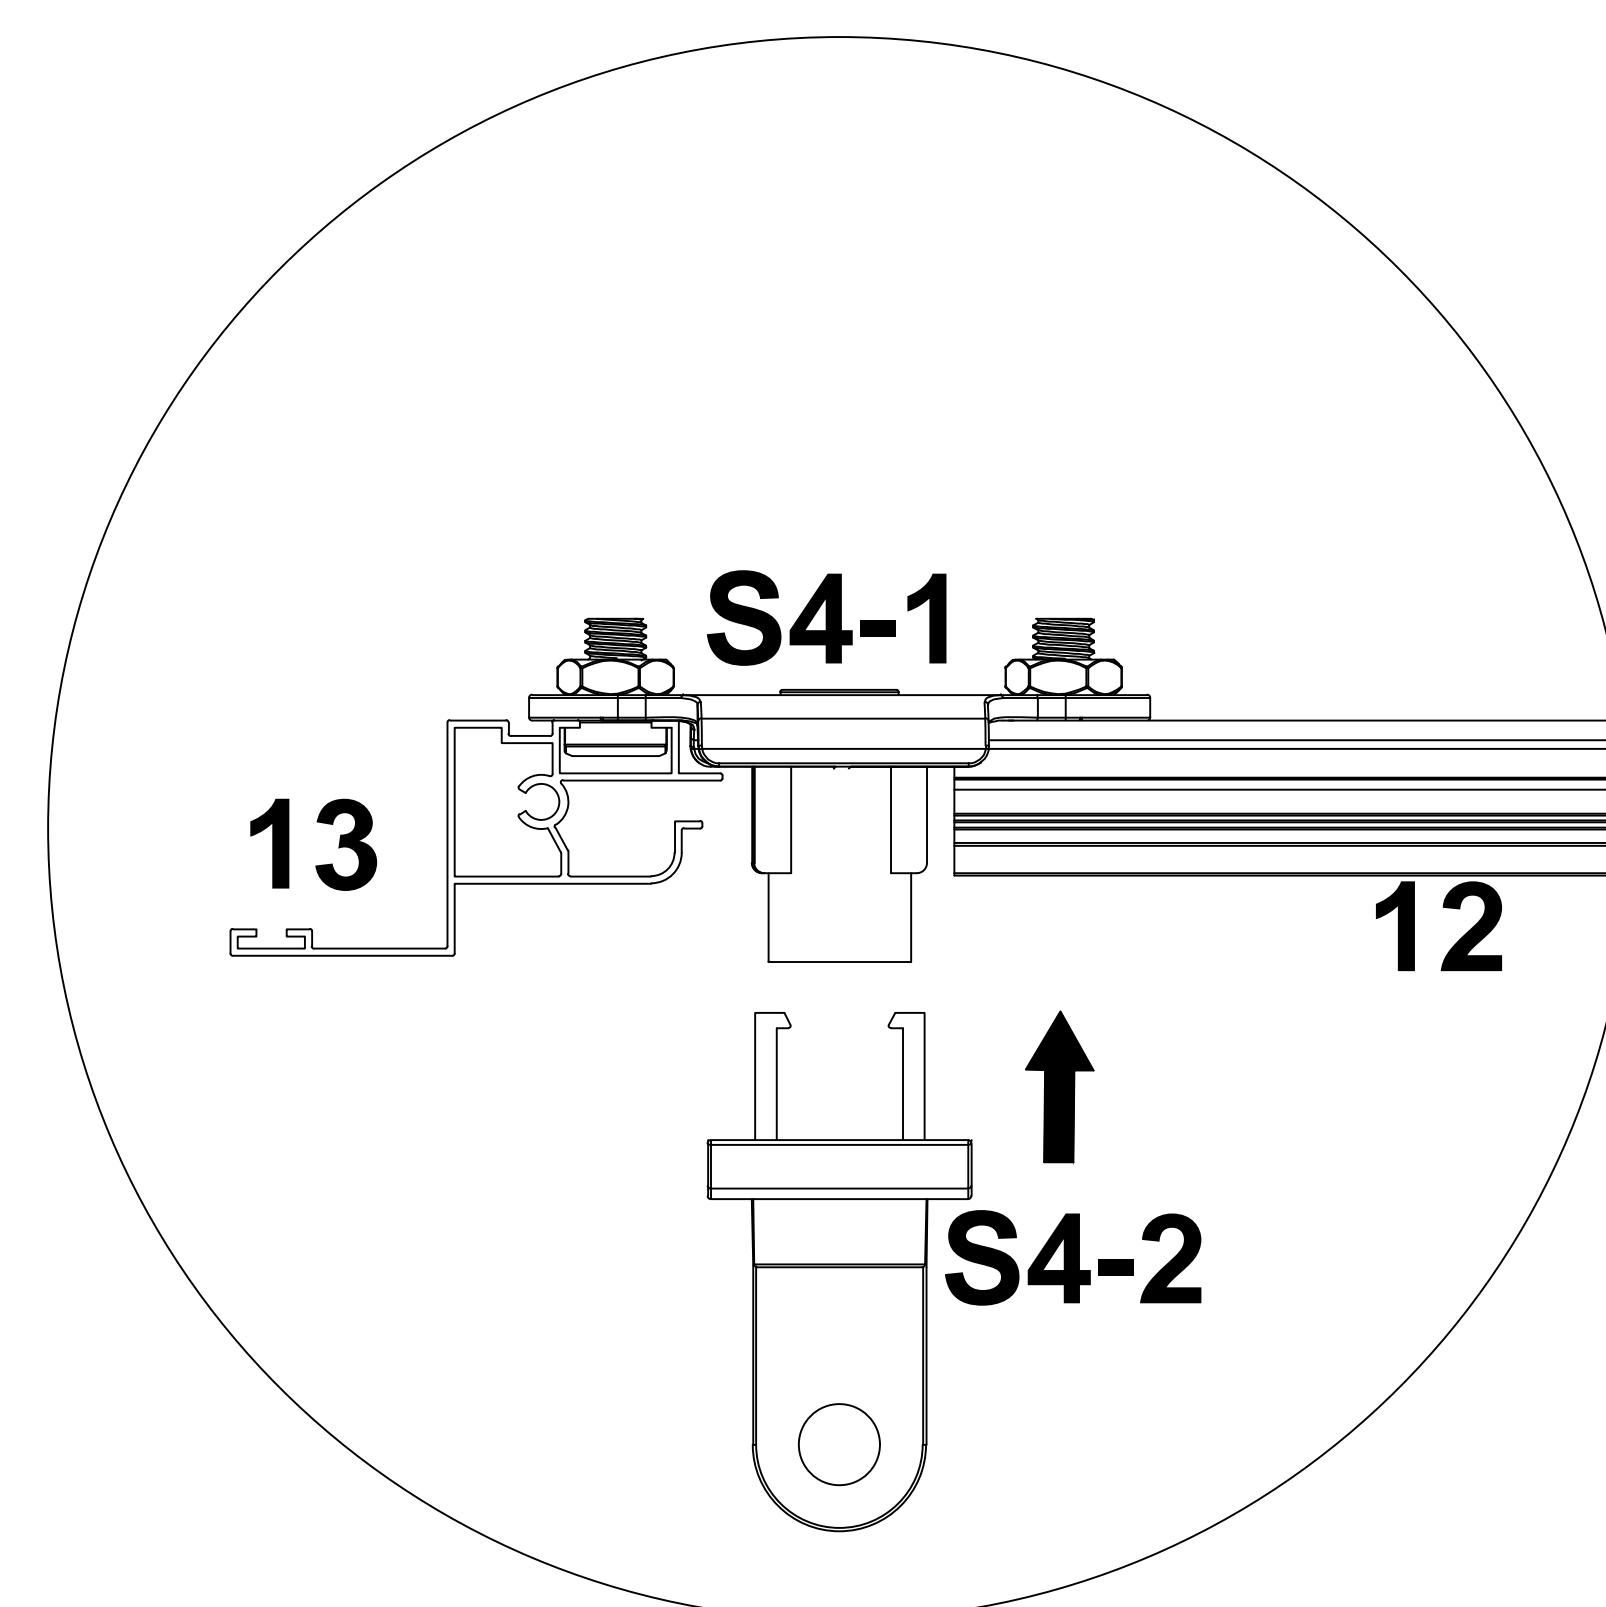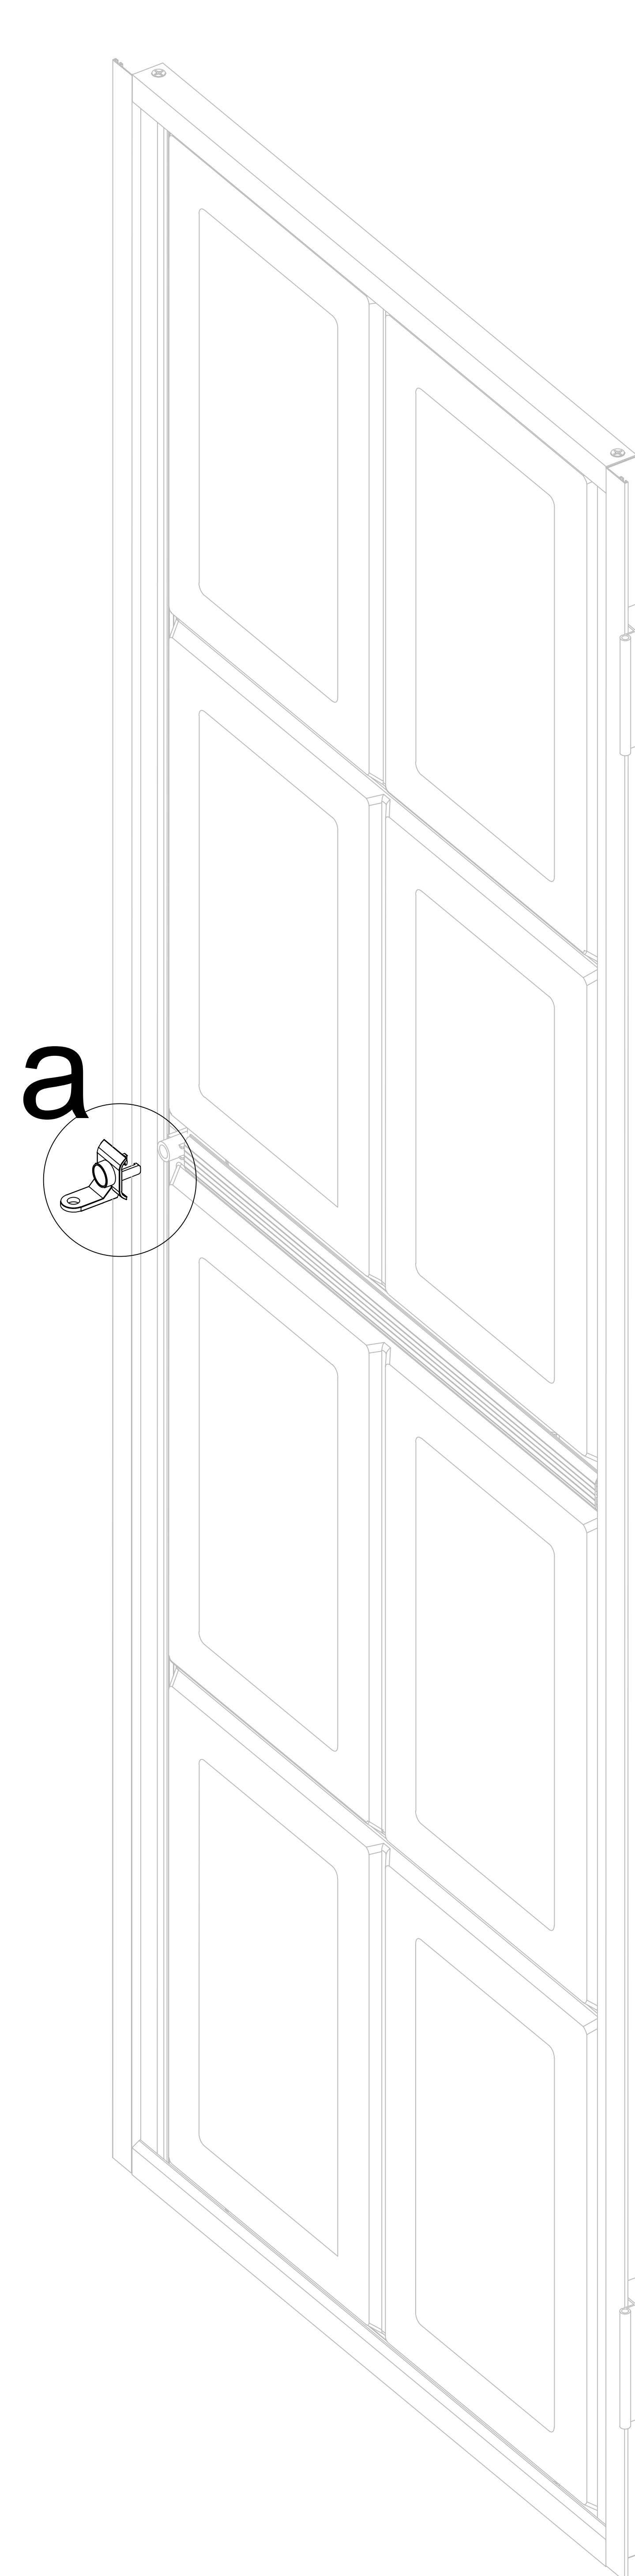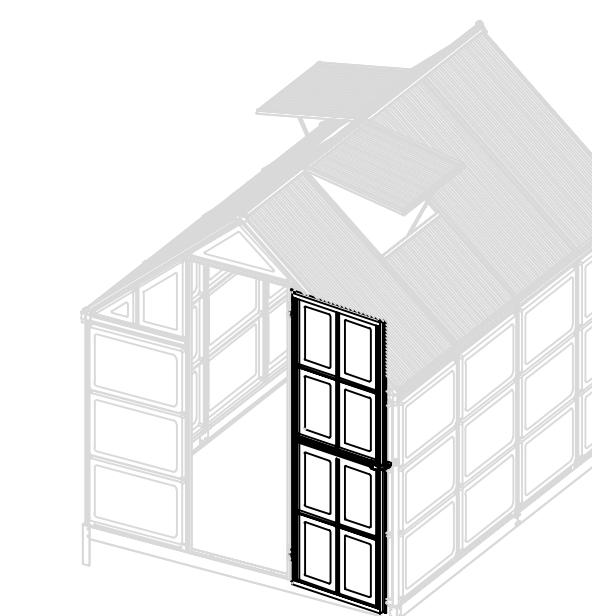


**Internal View**

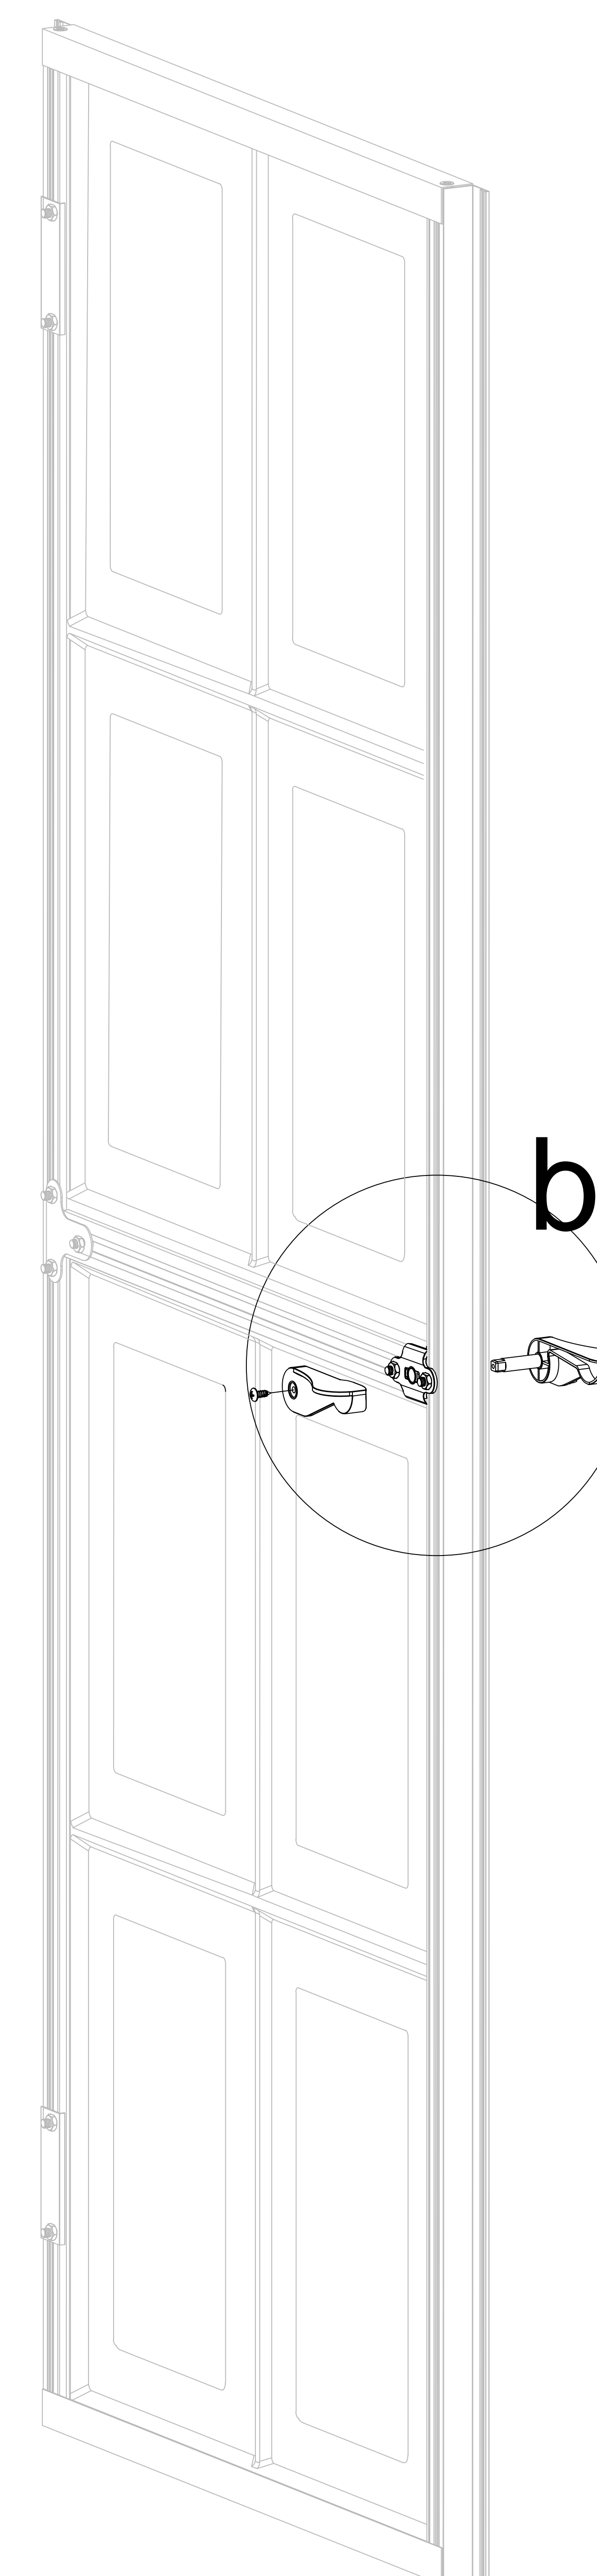








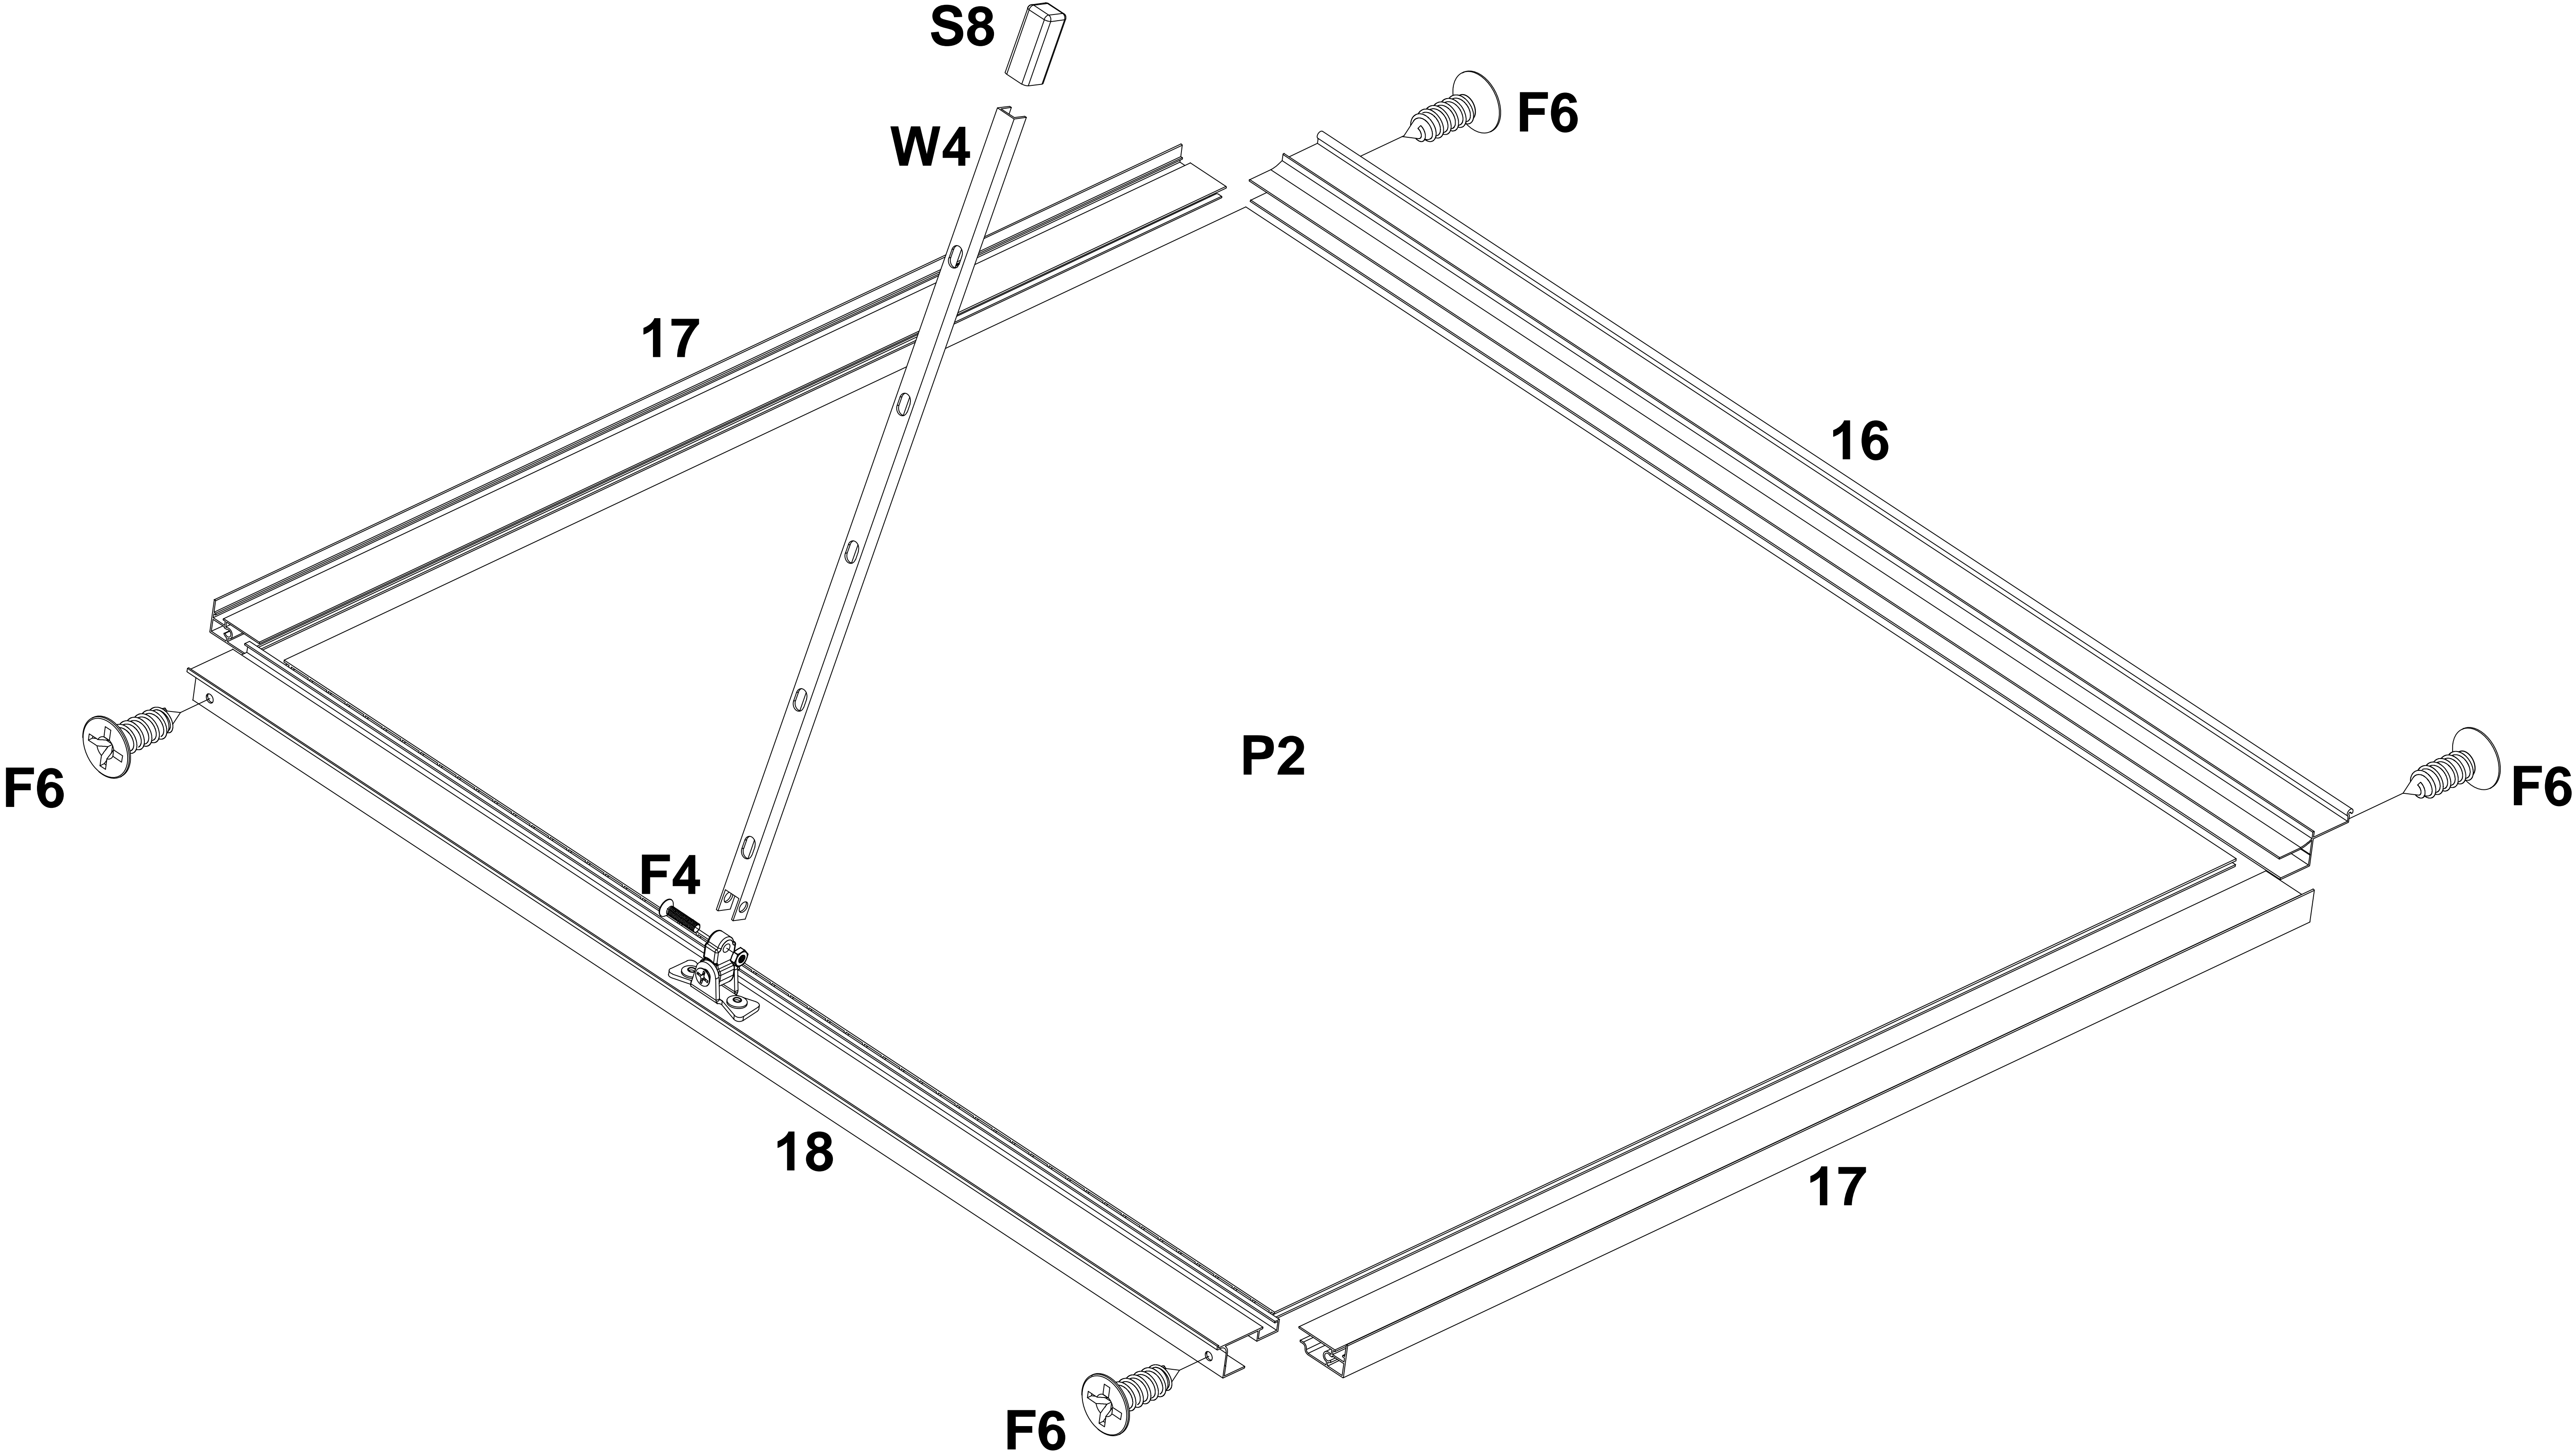

			MM
16		2 PCS	613
17		4 PCS	576
18		2 PCS	613
W4		2 PCS	380





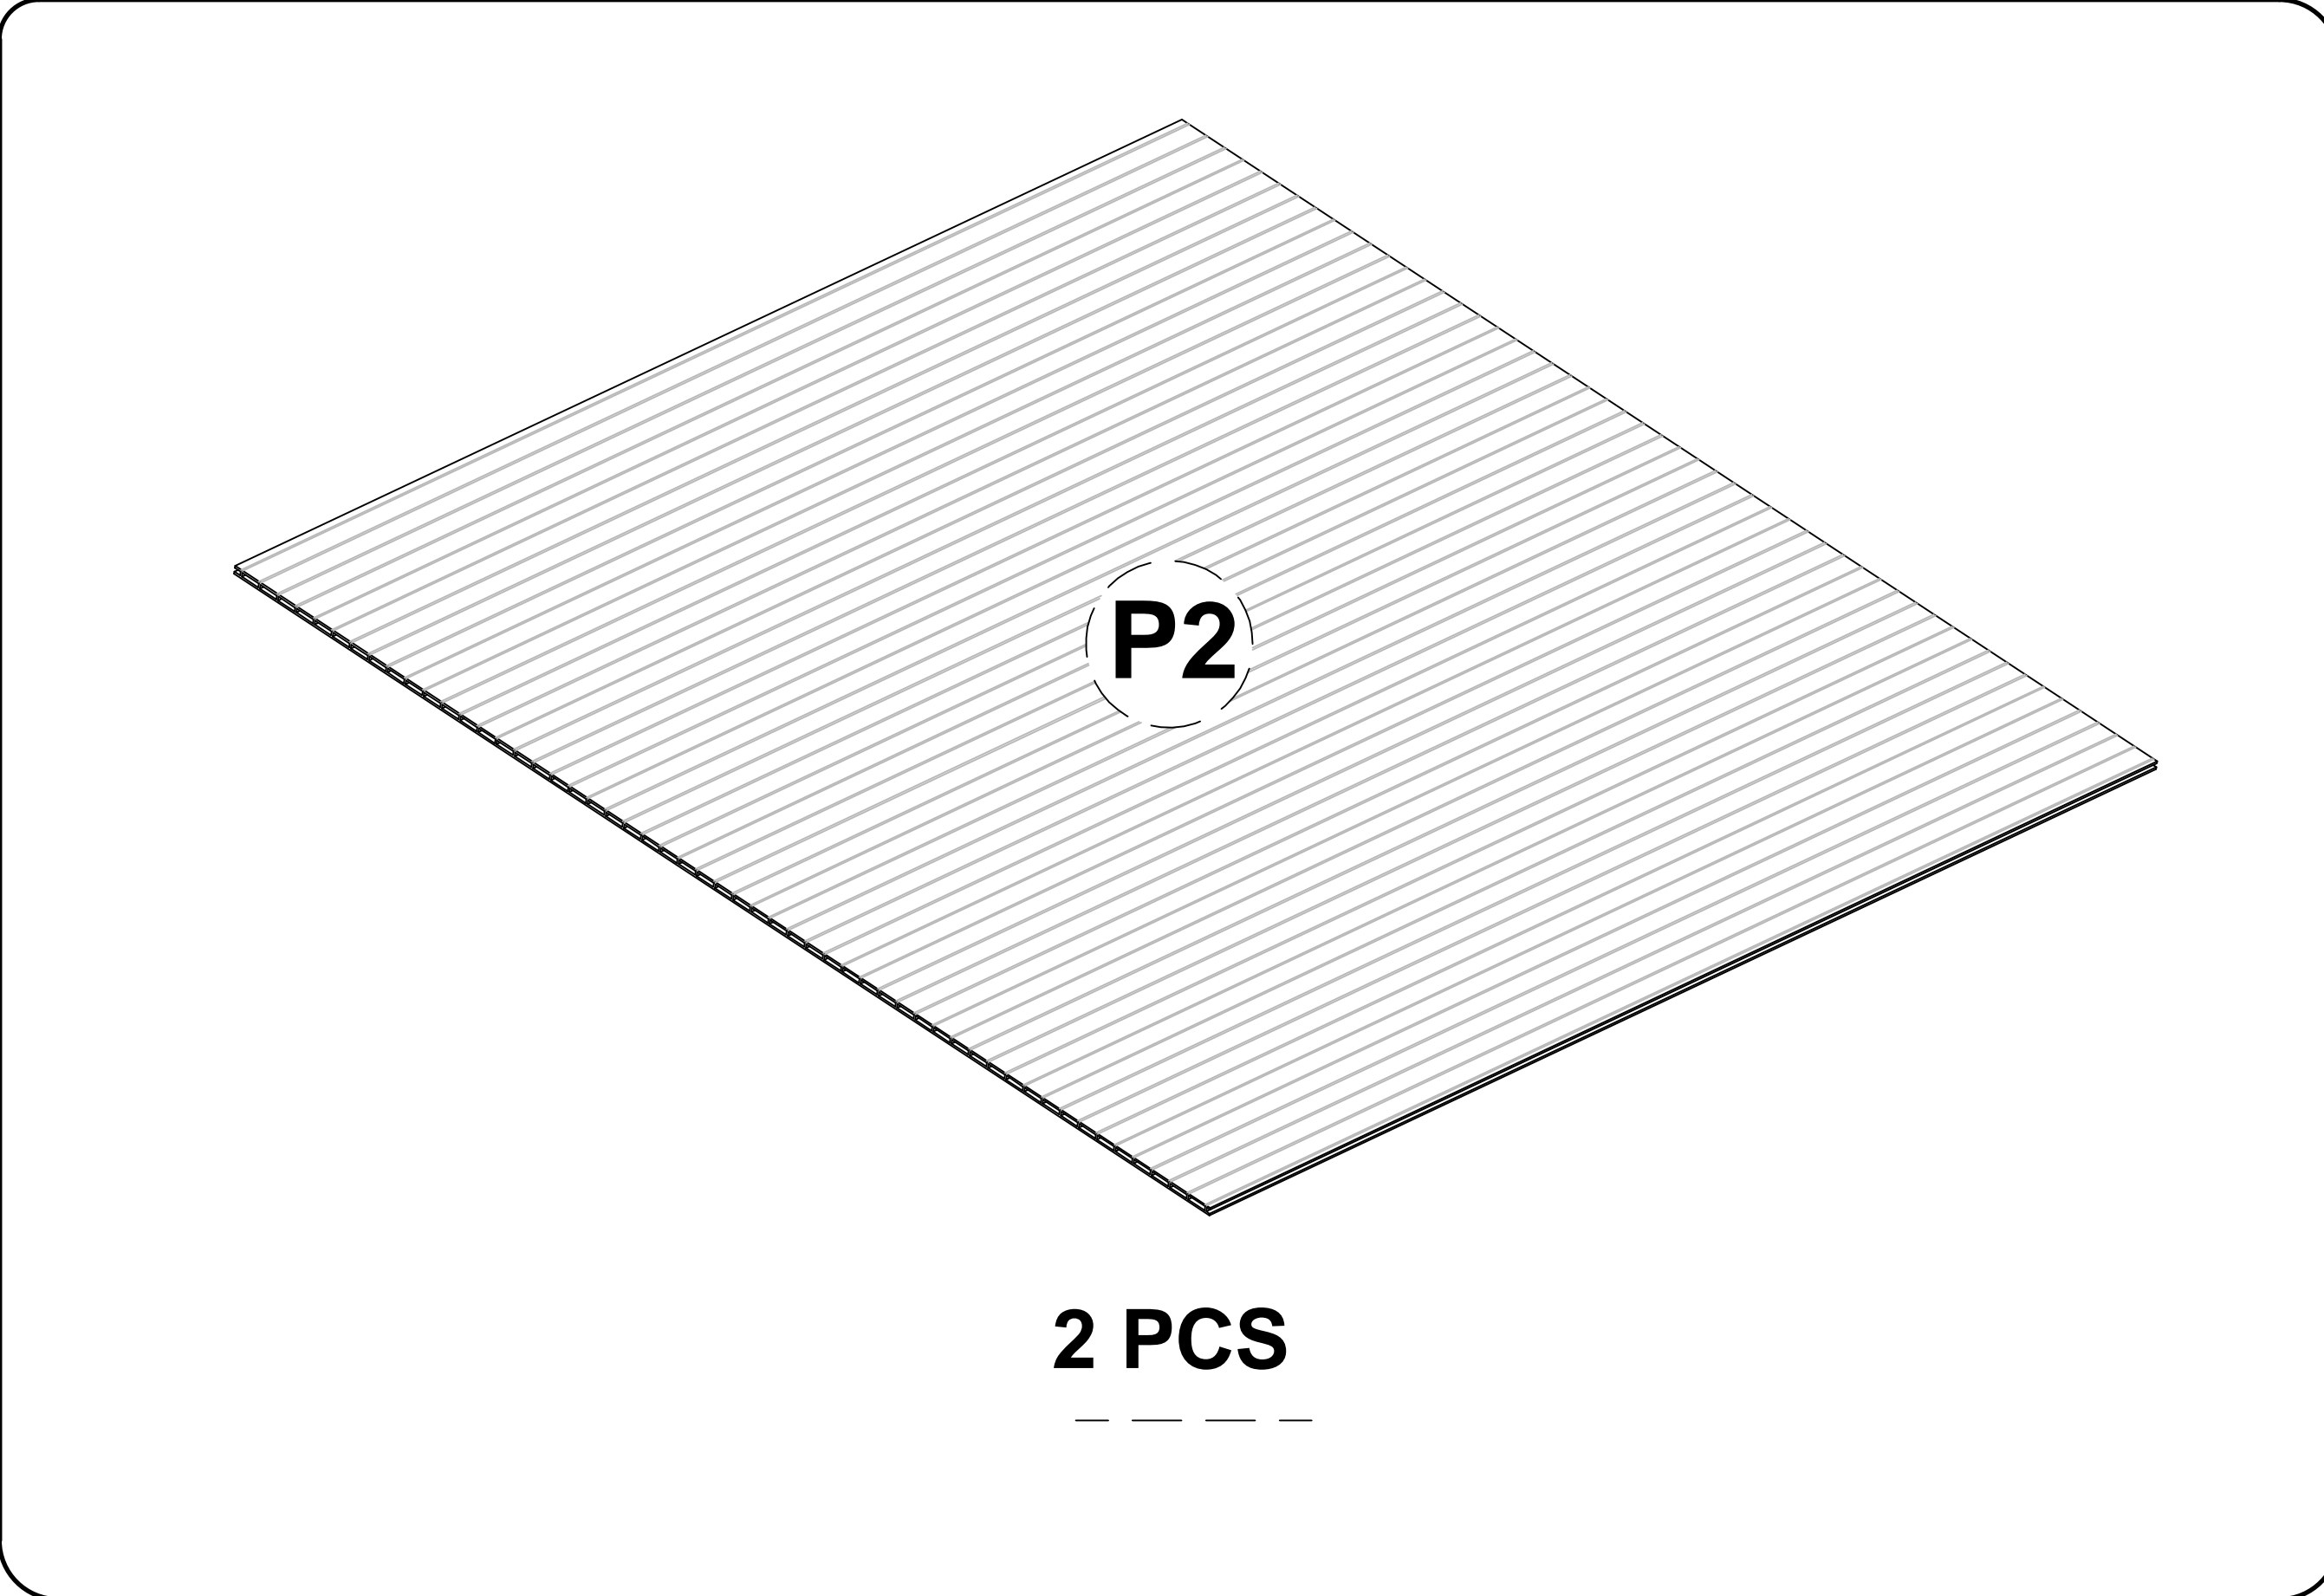



F4		M4X18 2PCS	S8		2 PCS
F6		ST4.2X16 8 PCS			




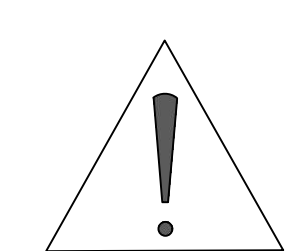
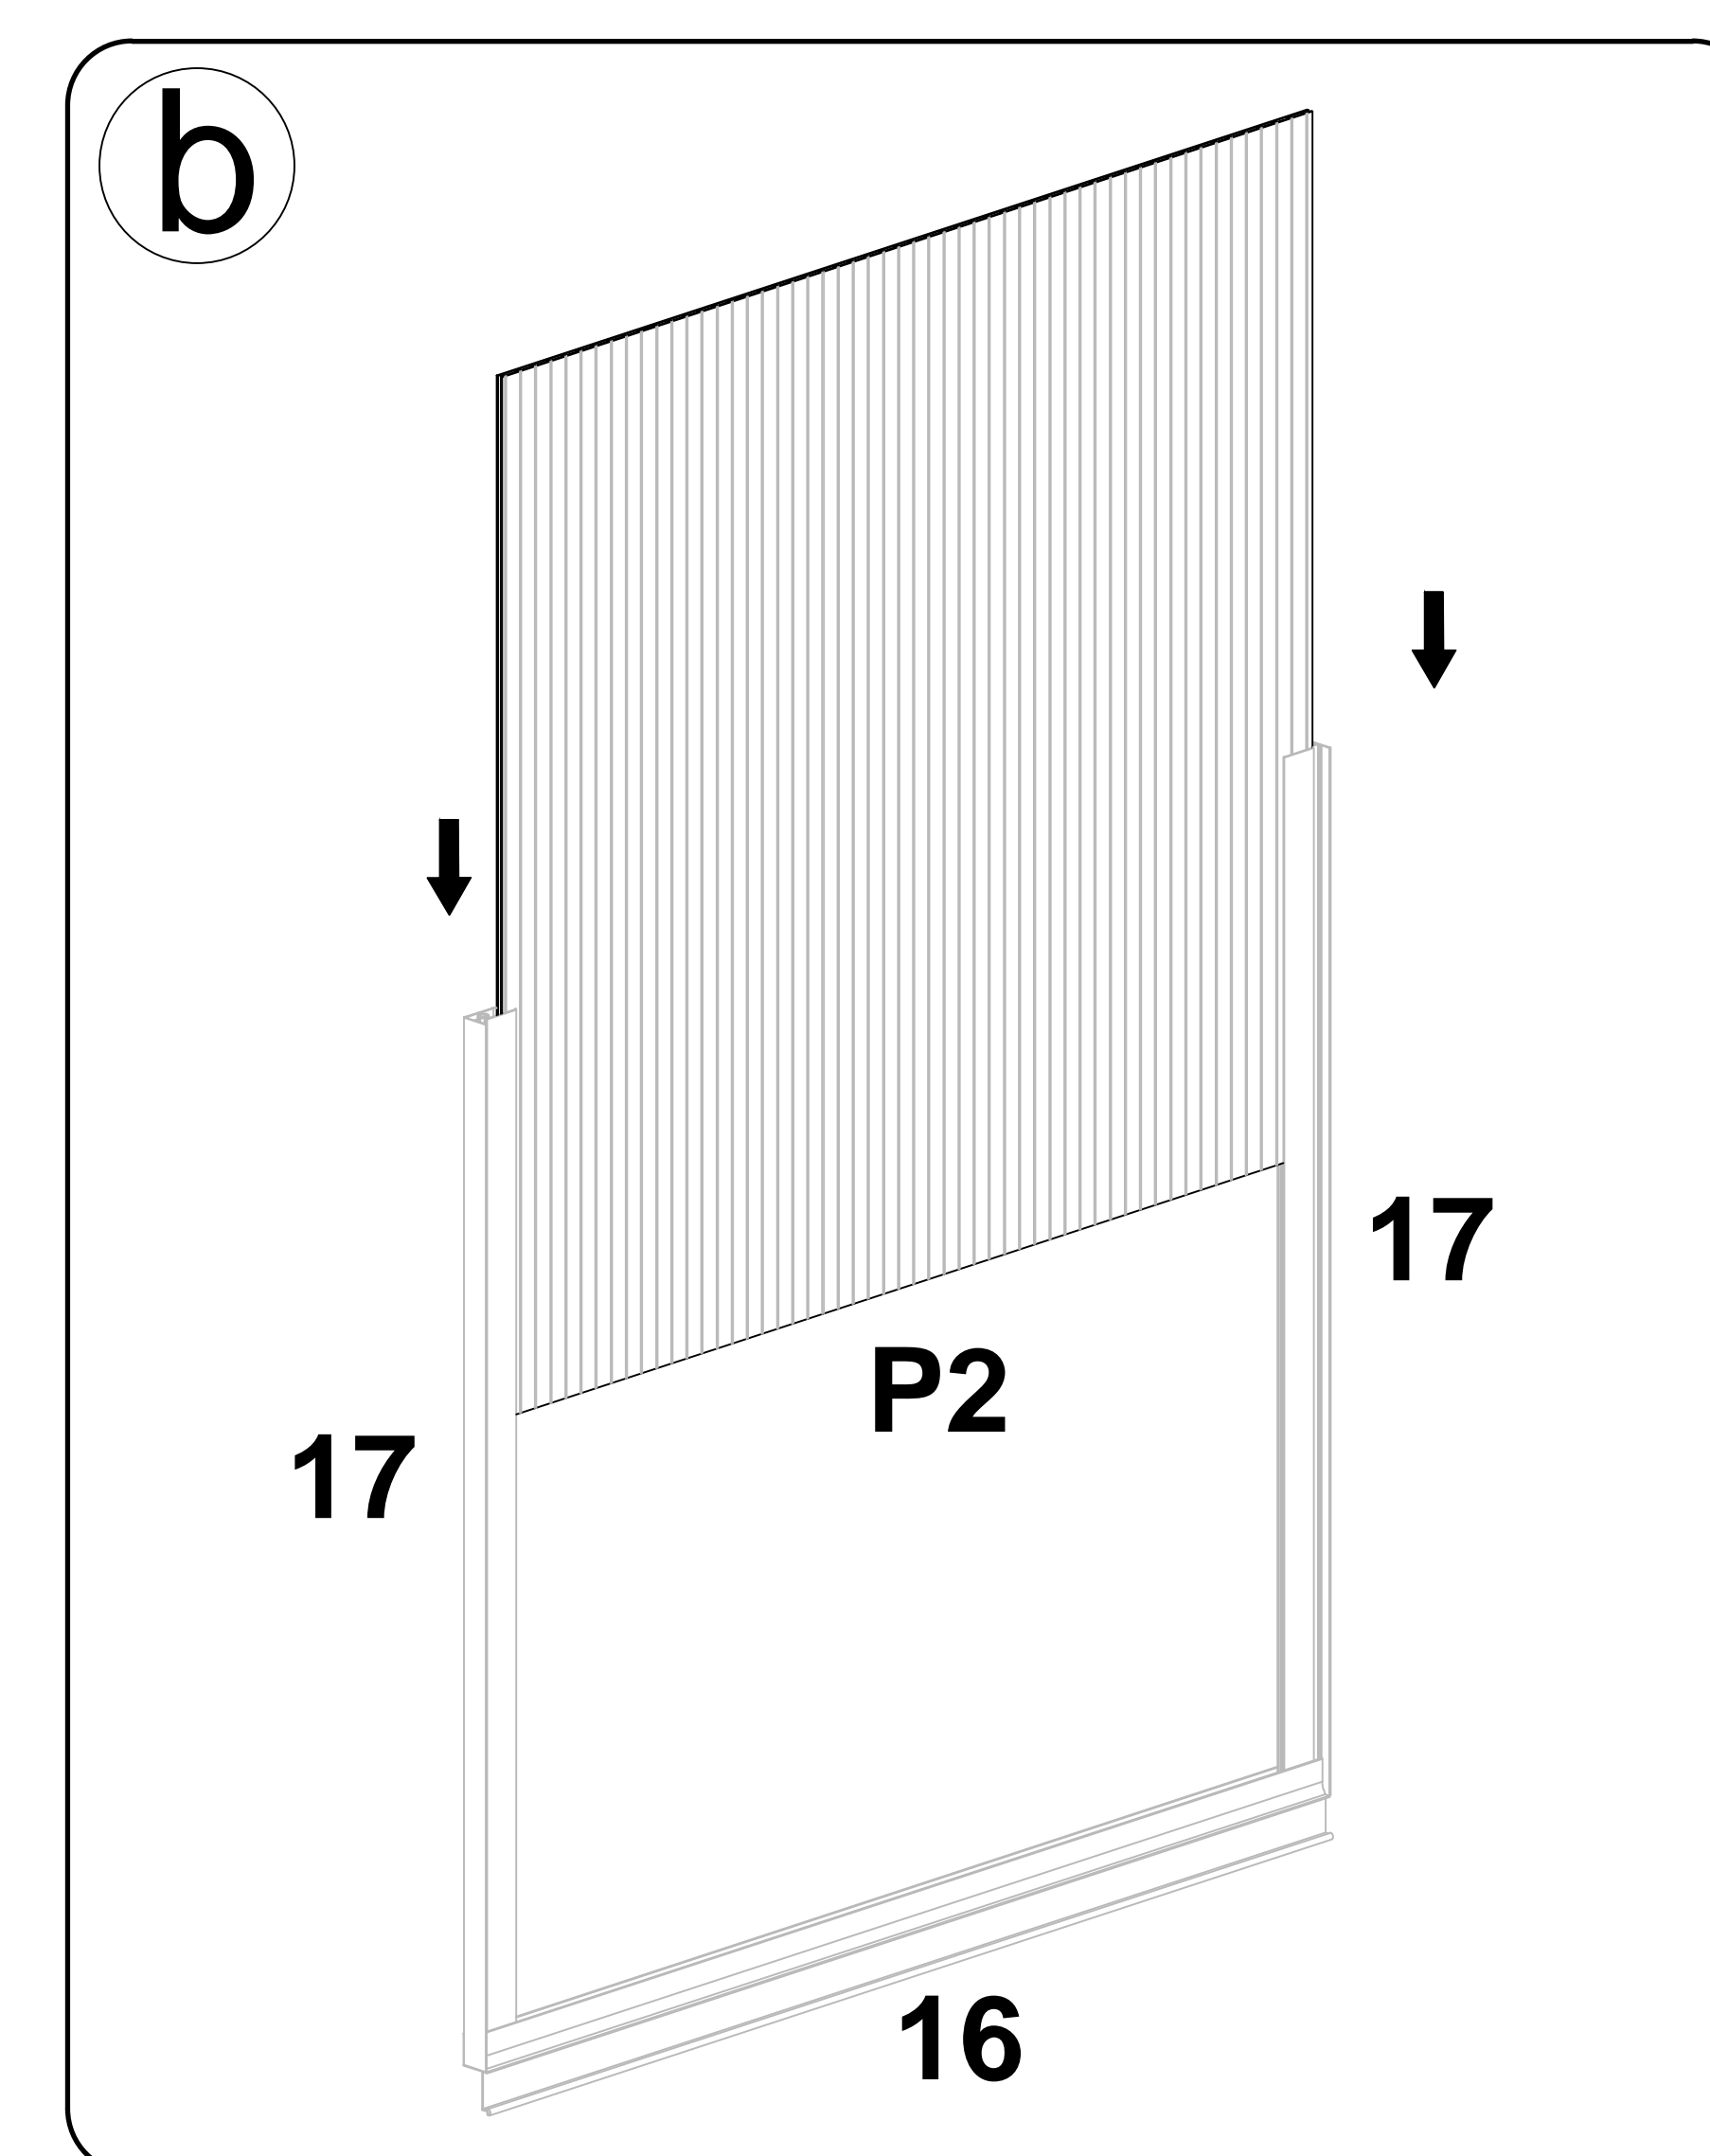
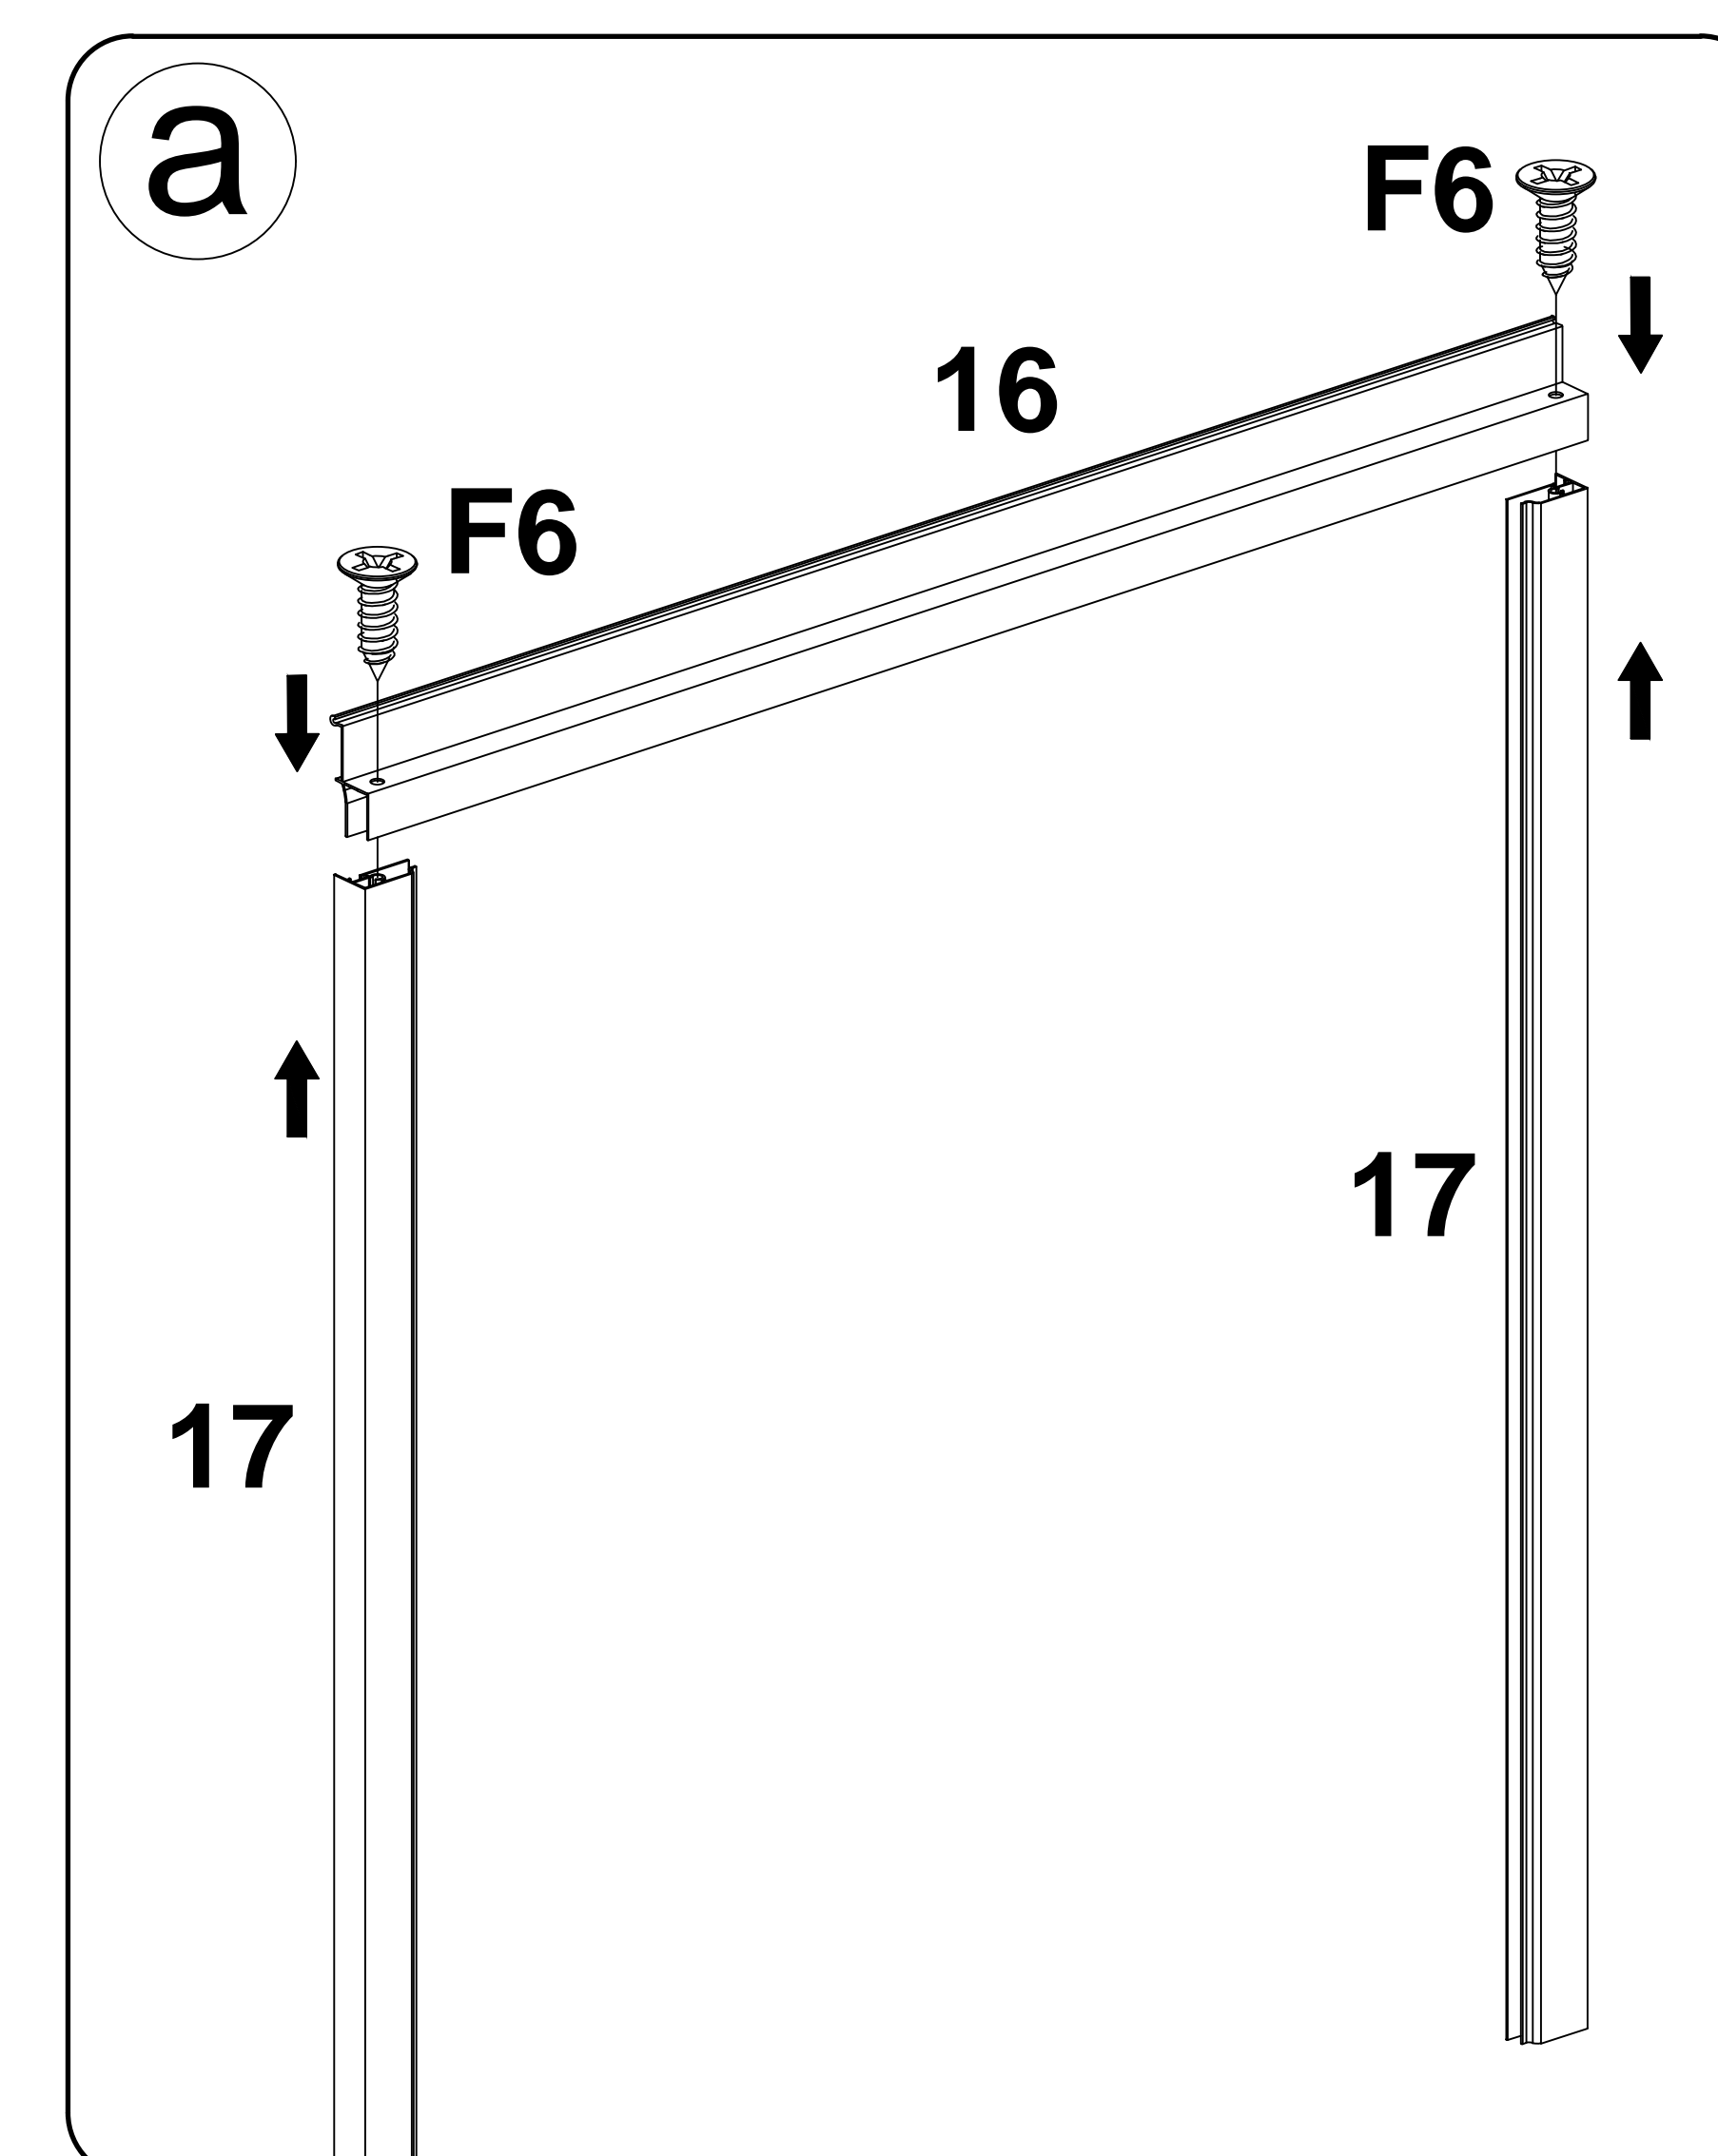
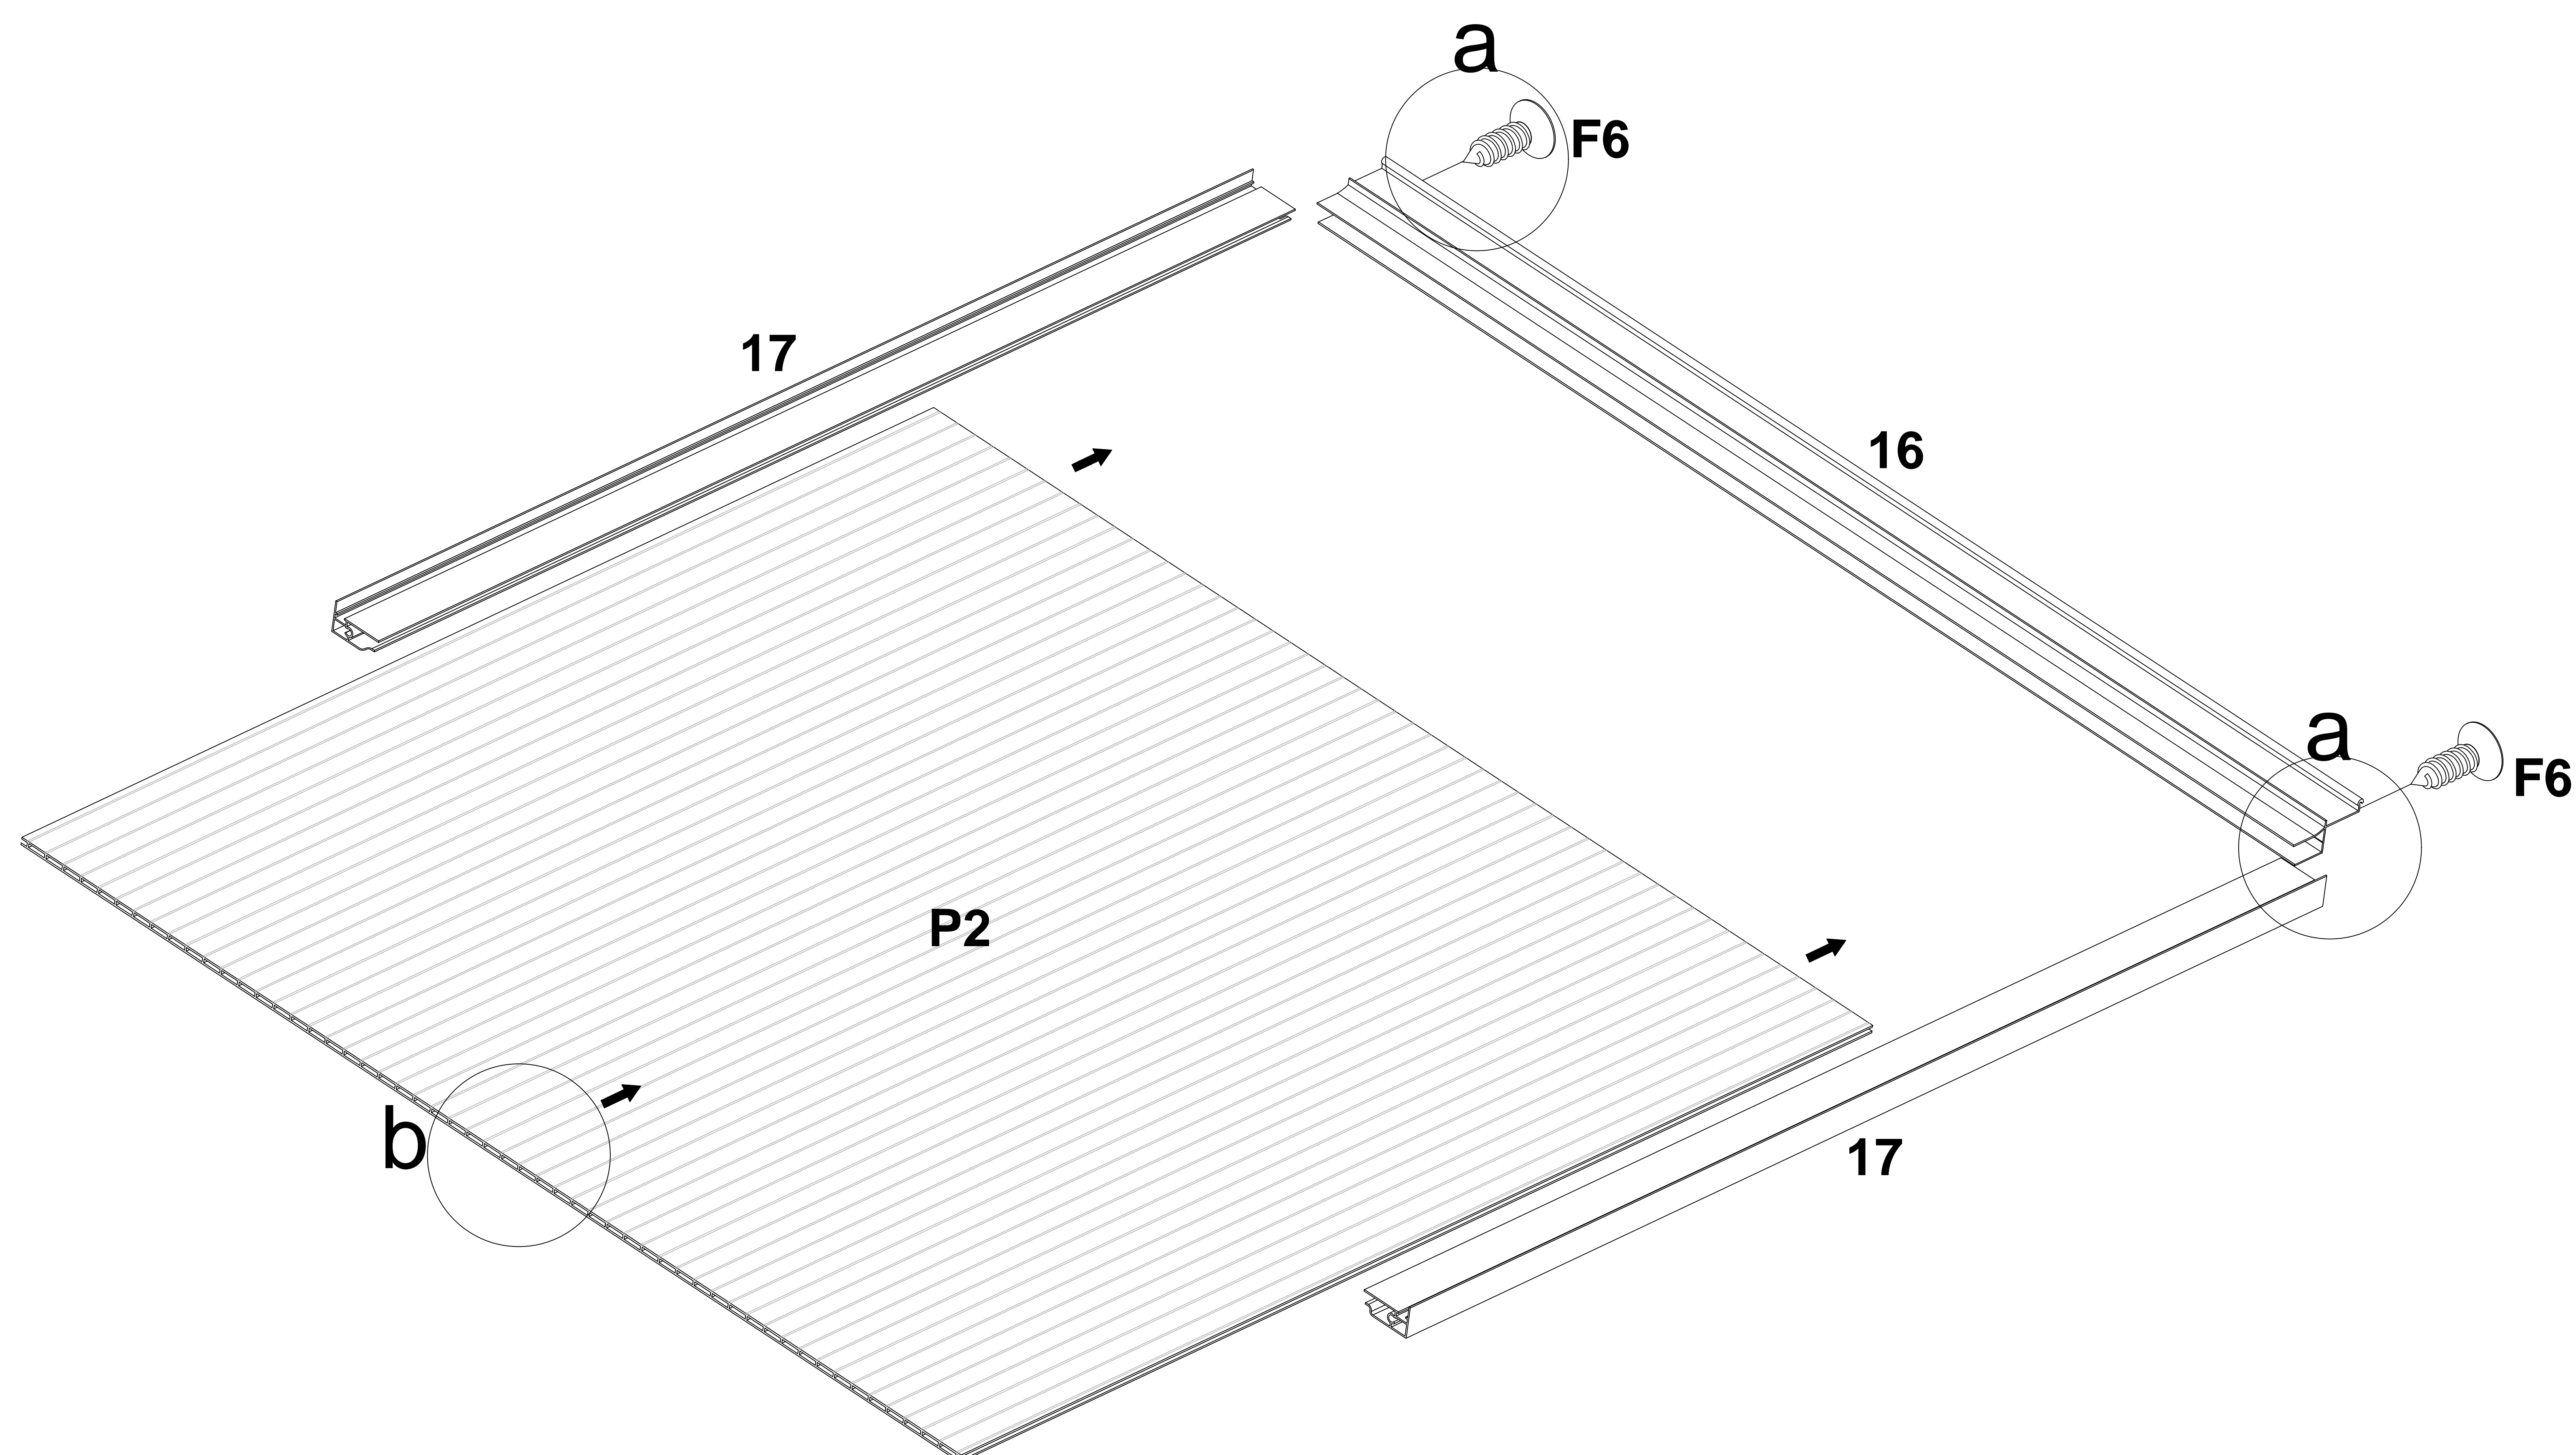
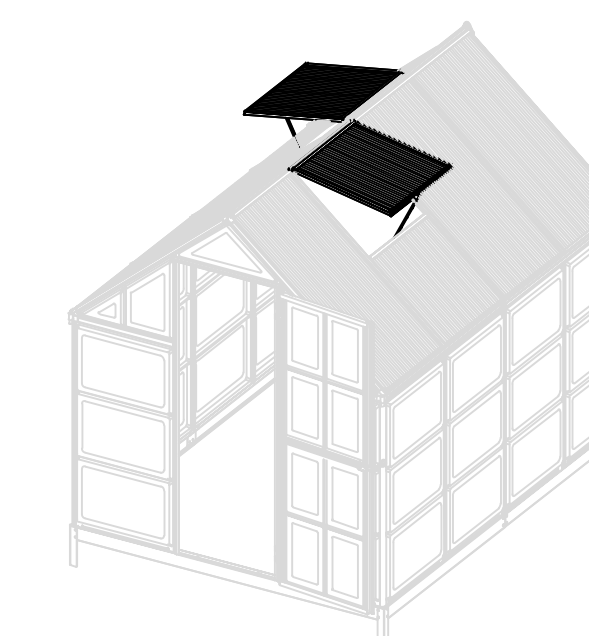


**Tear off the film before inseted into the board and the side of white film needs faced out.**






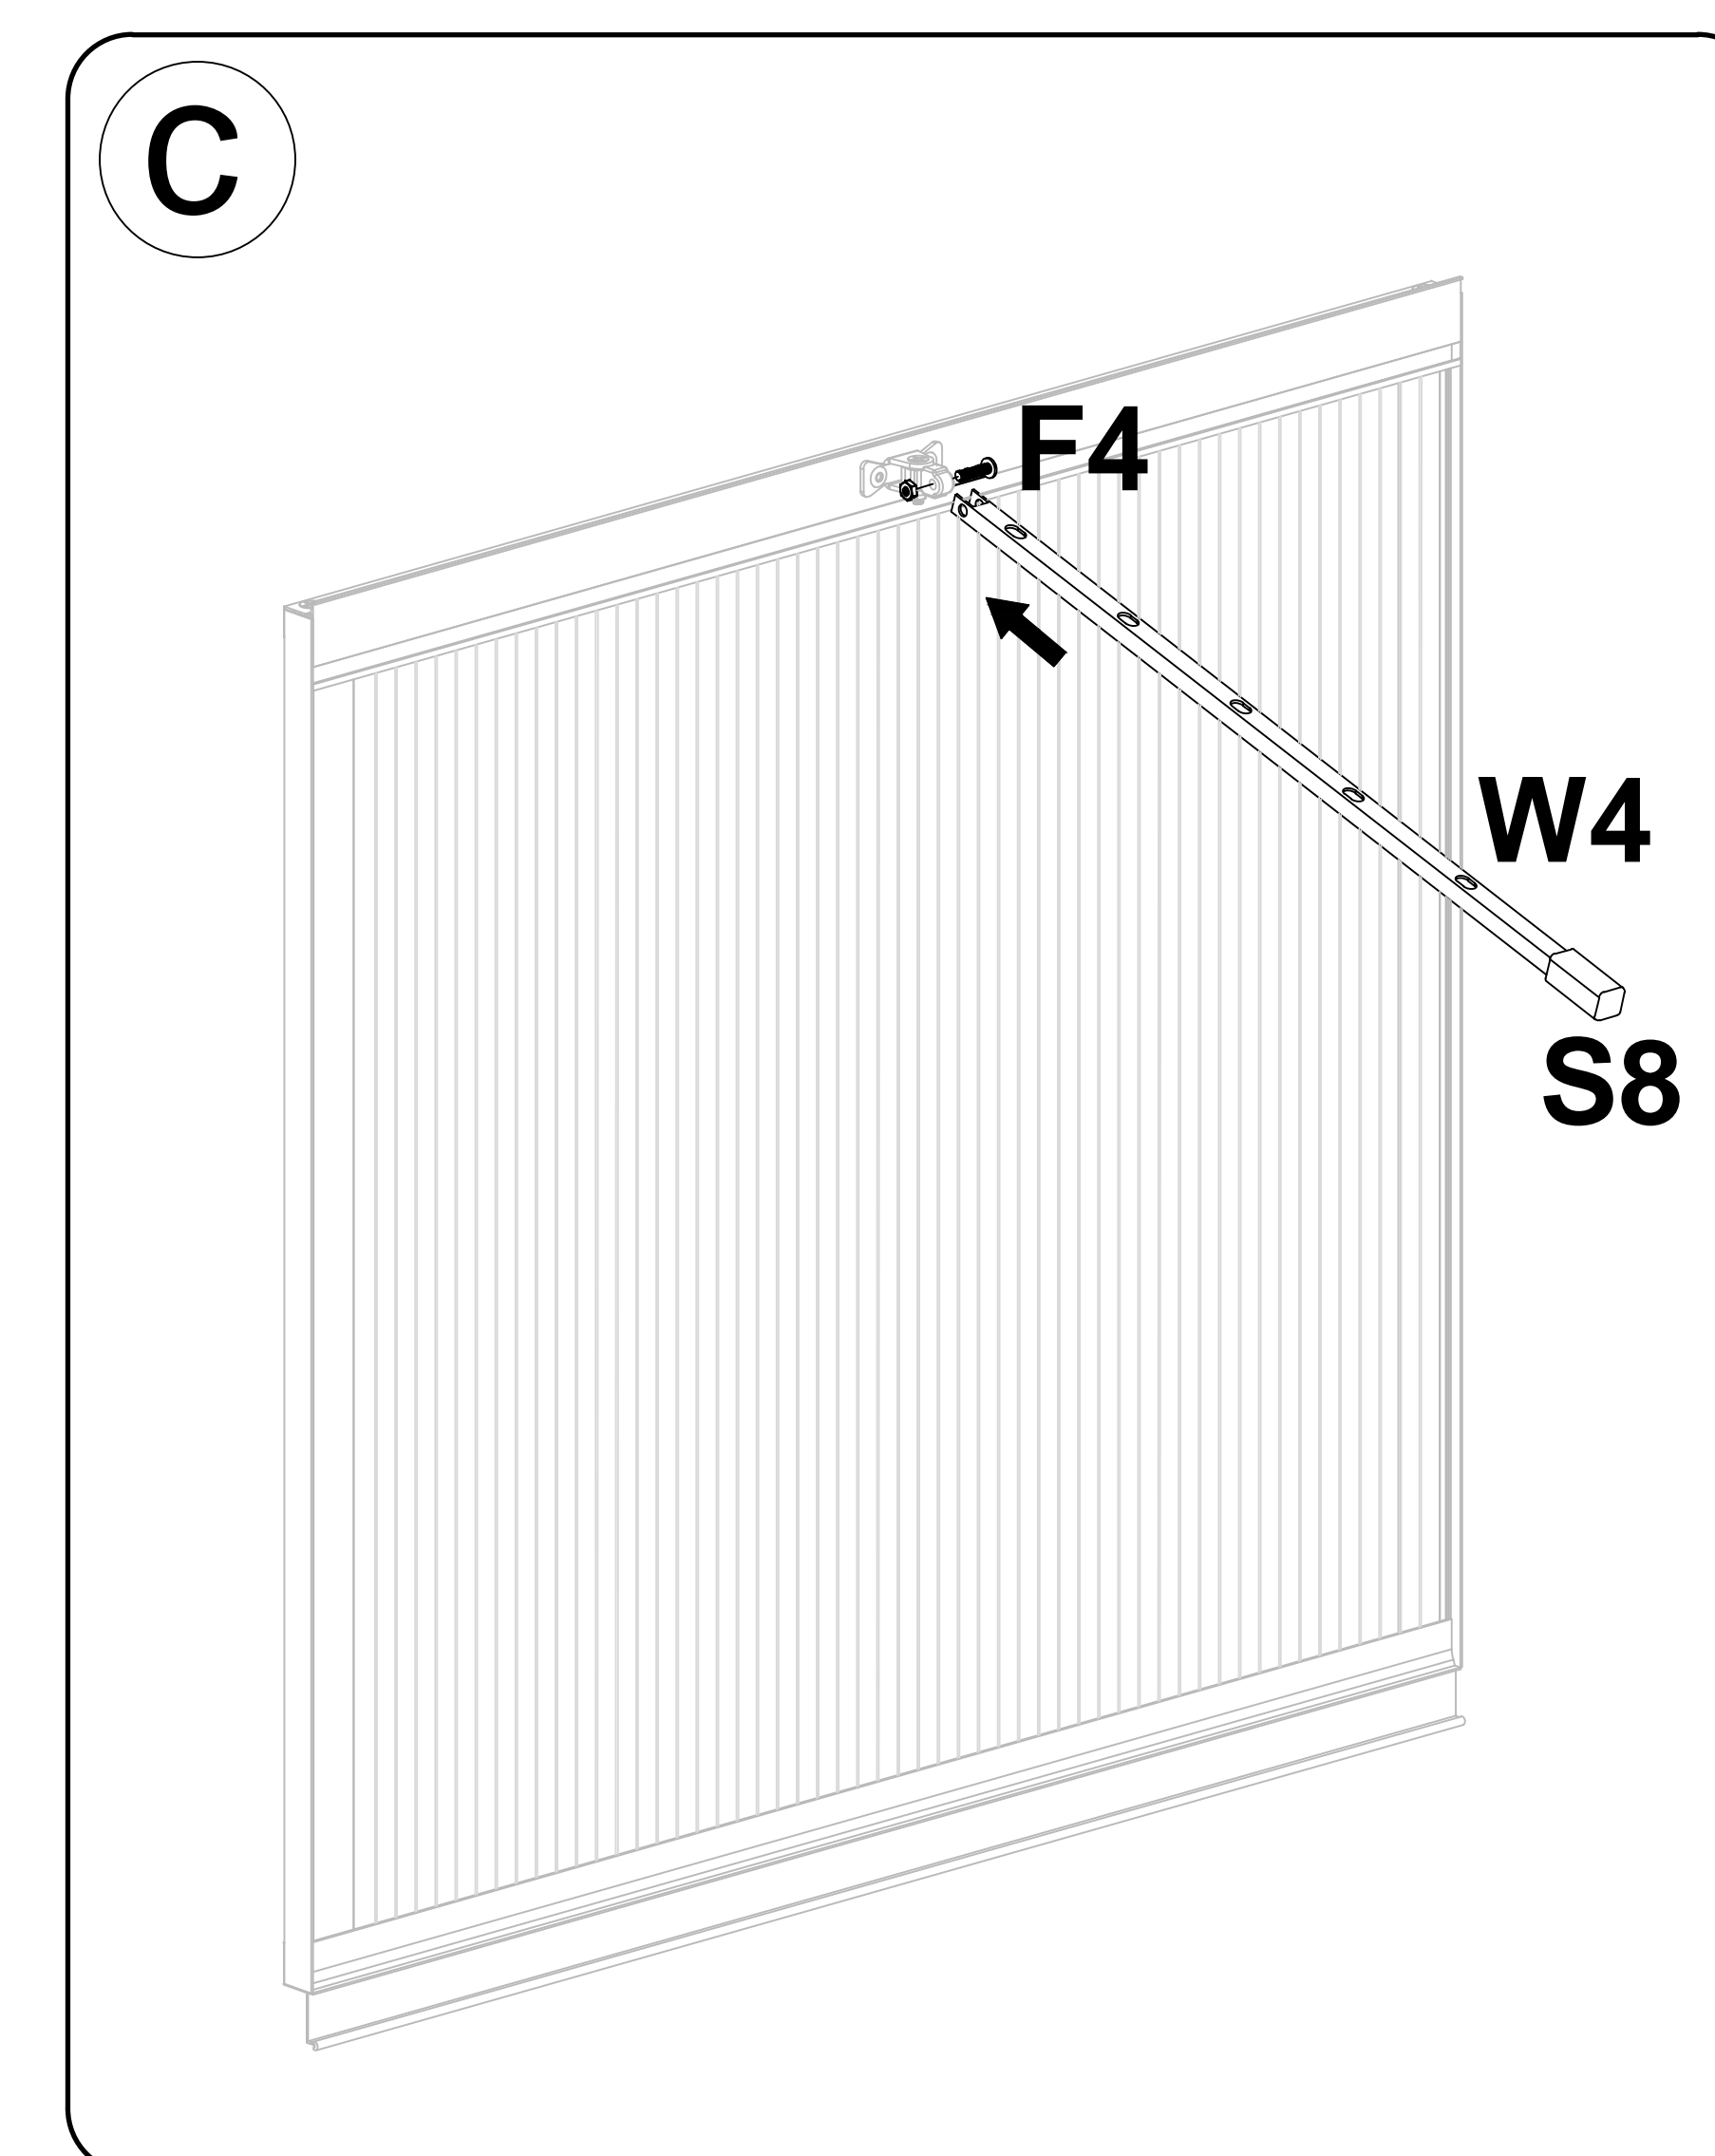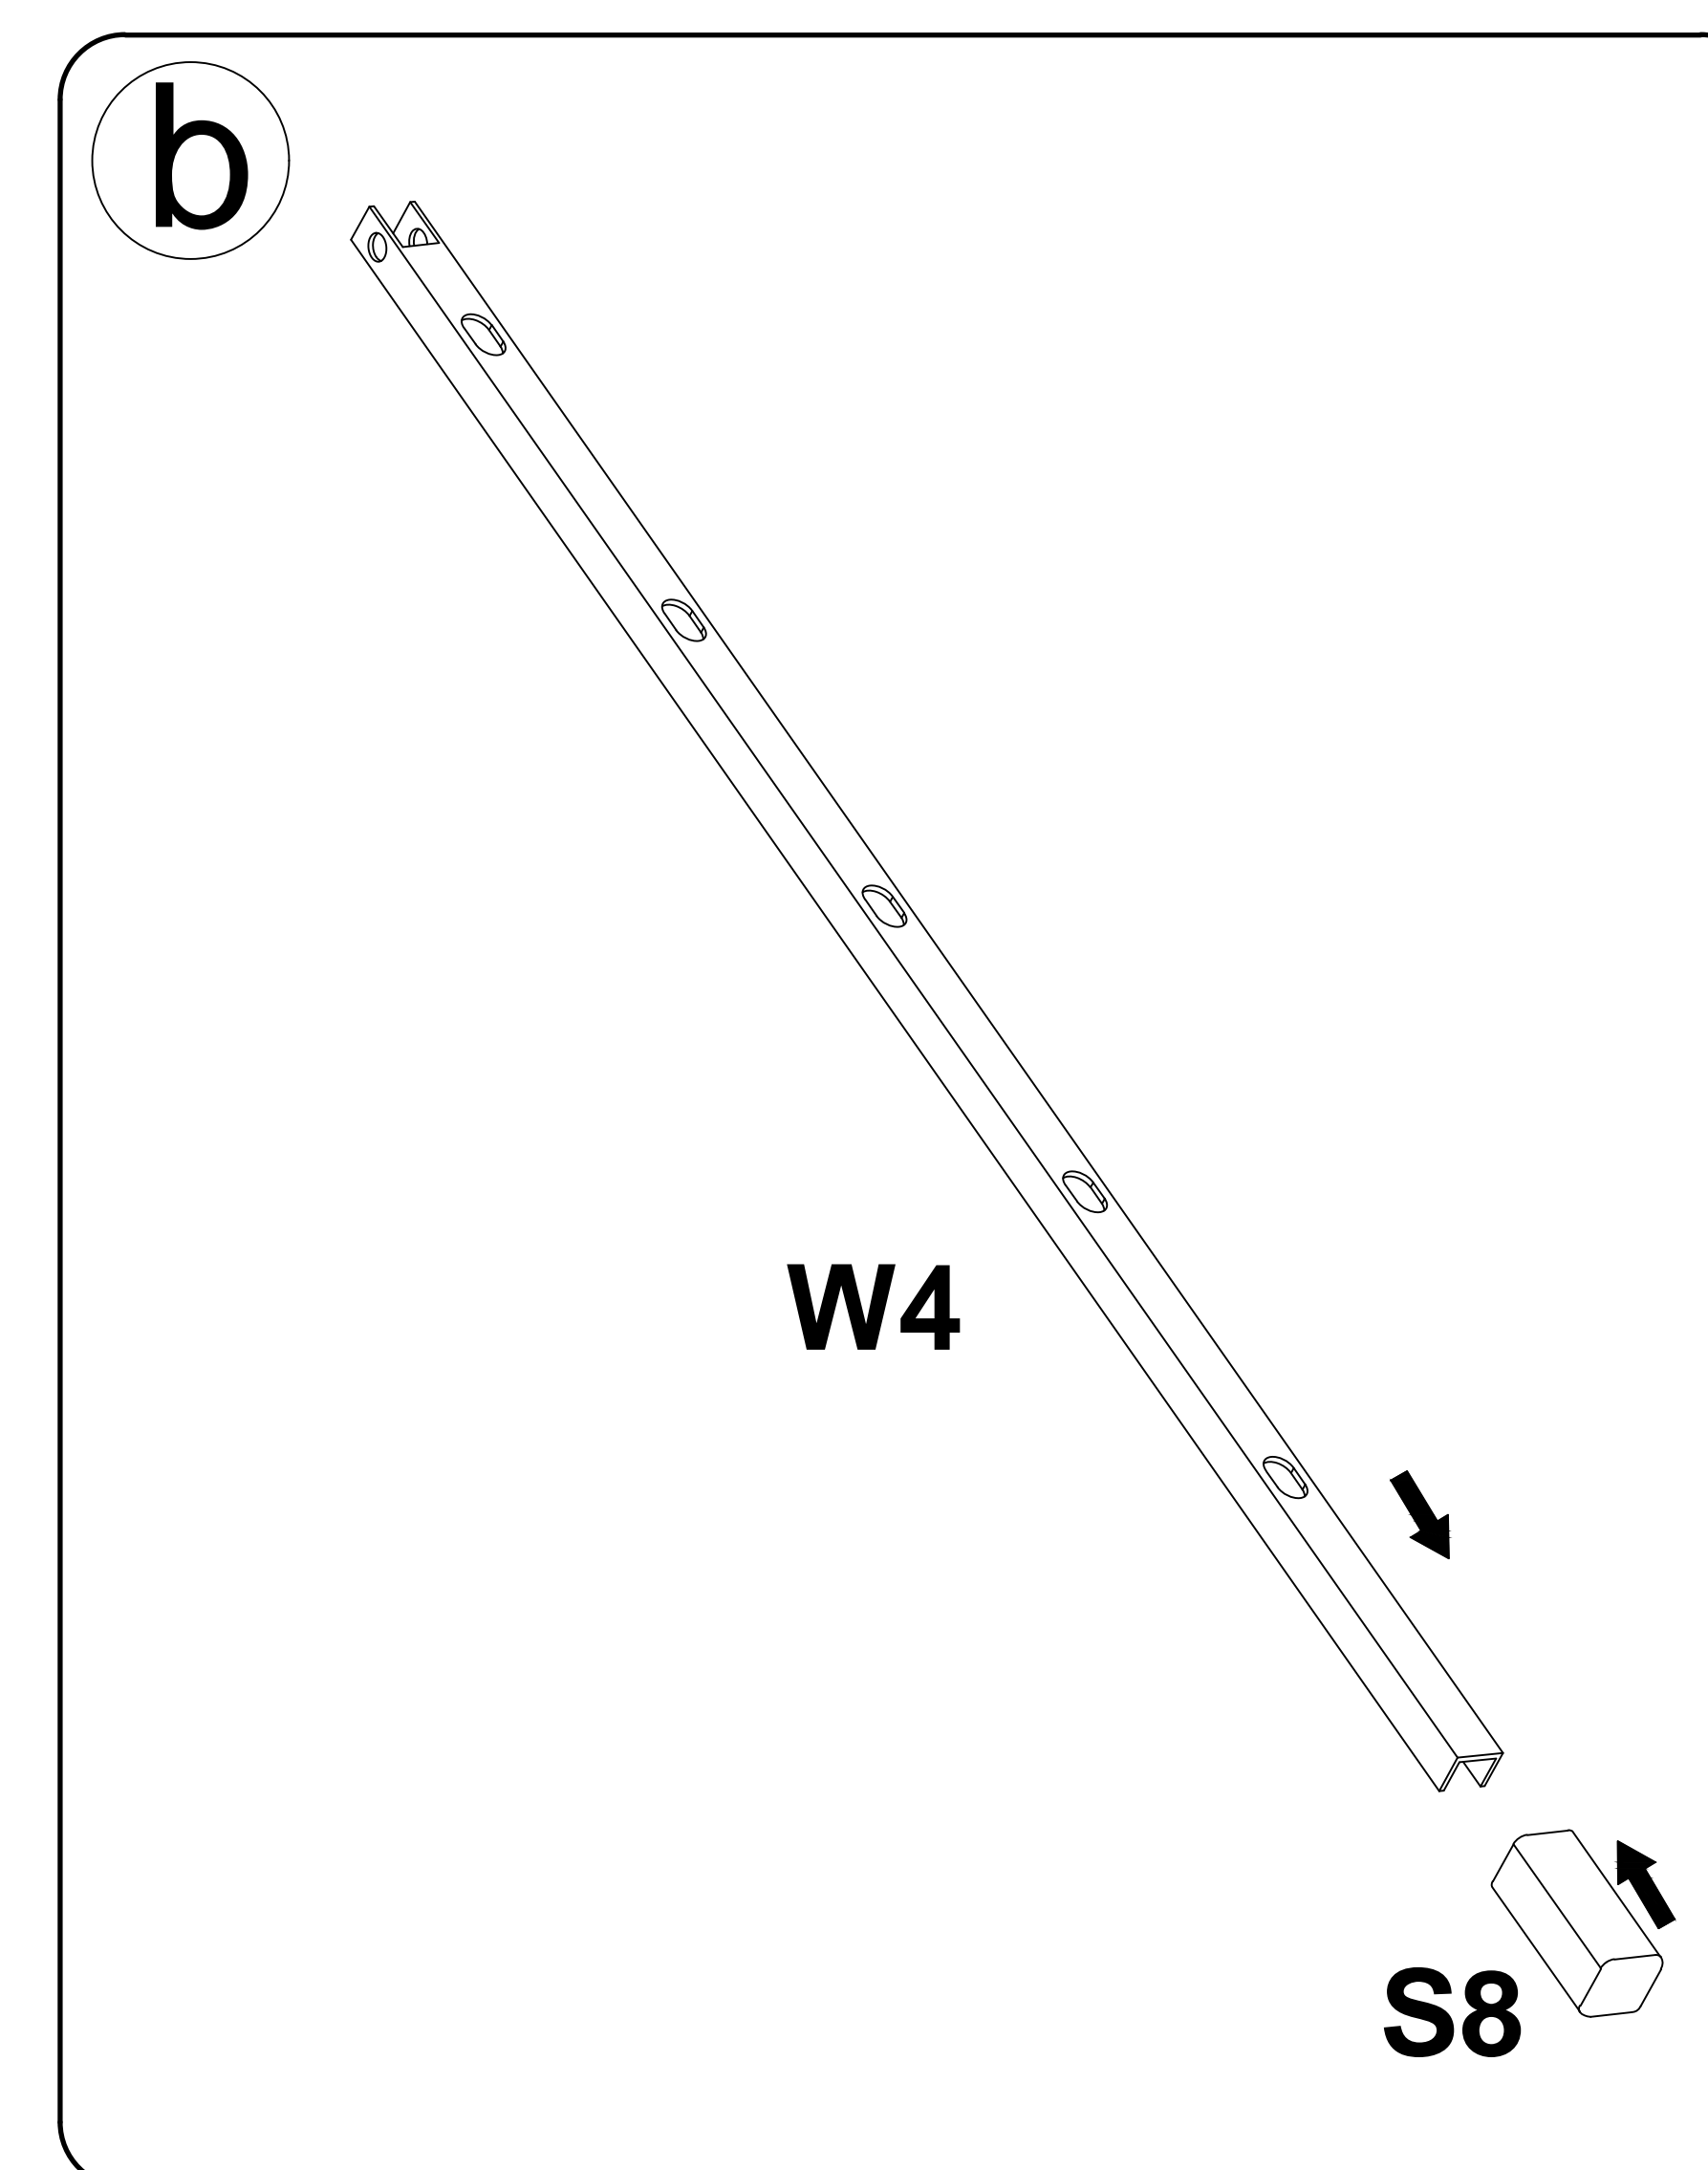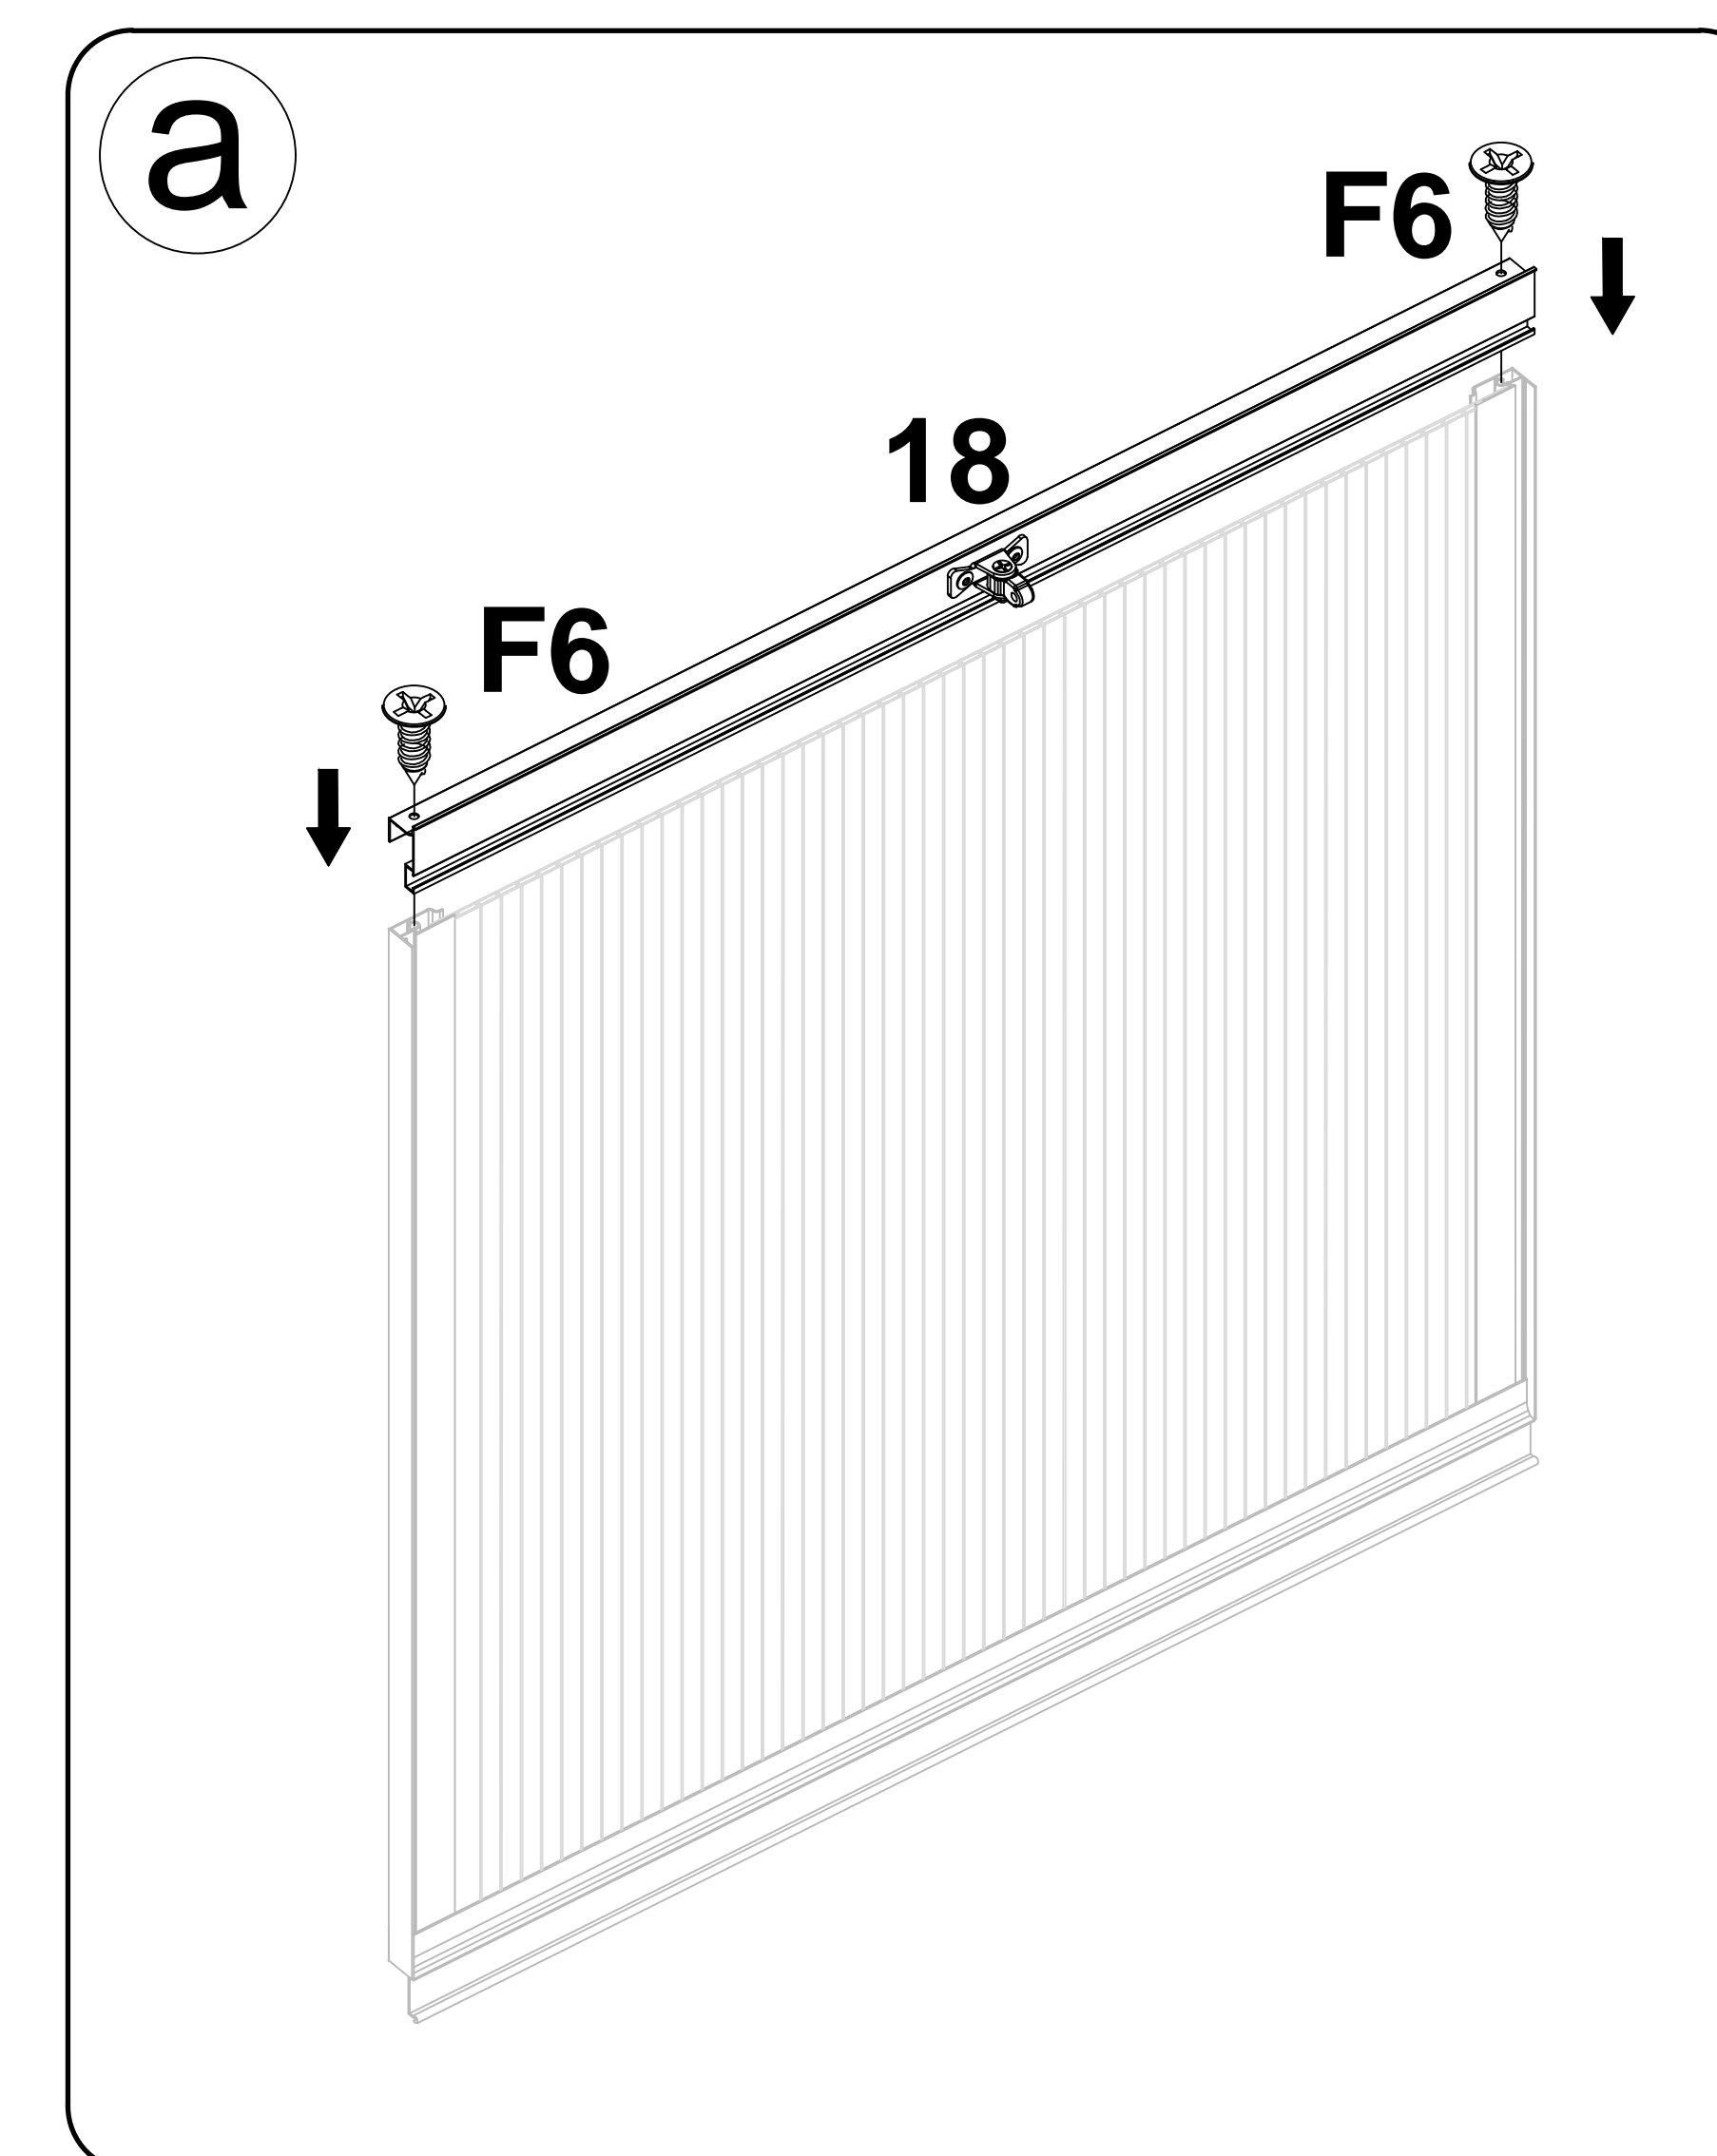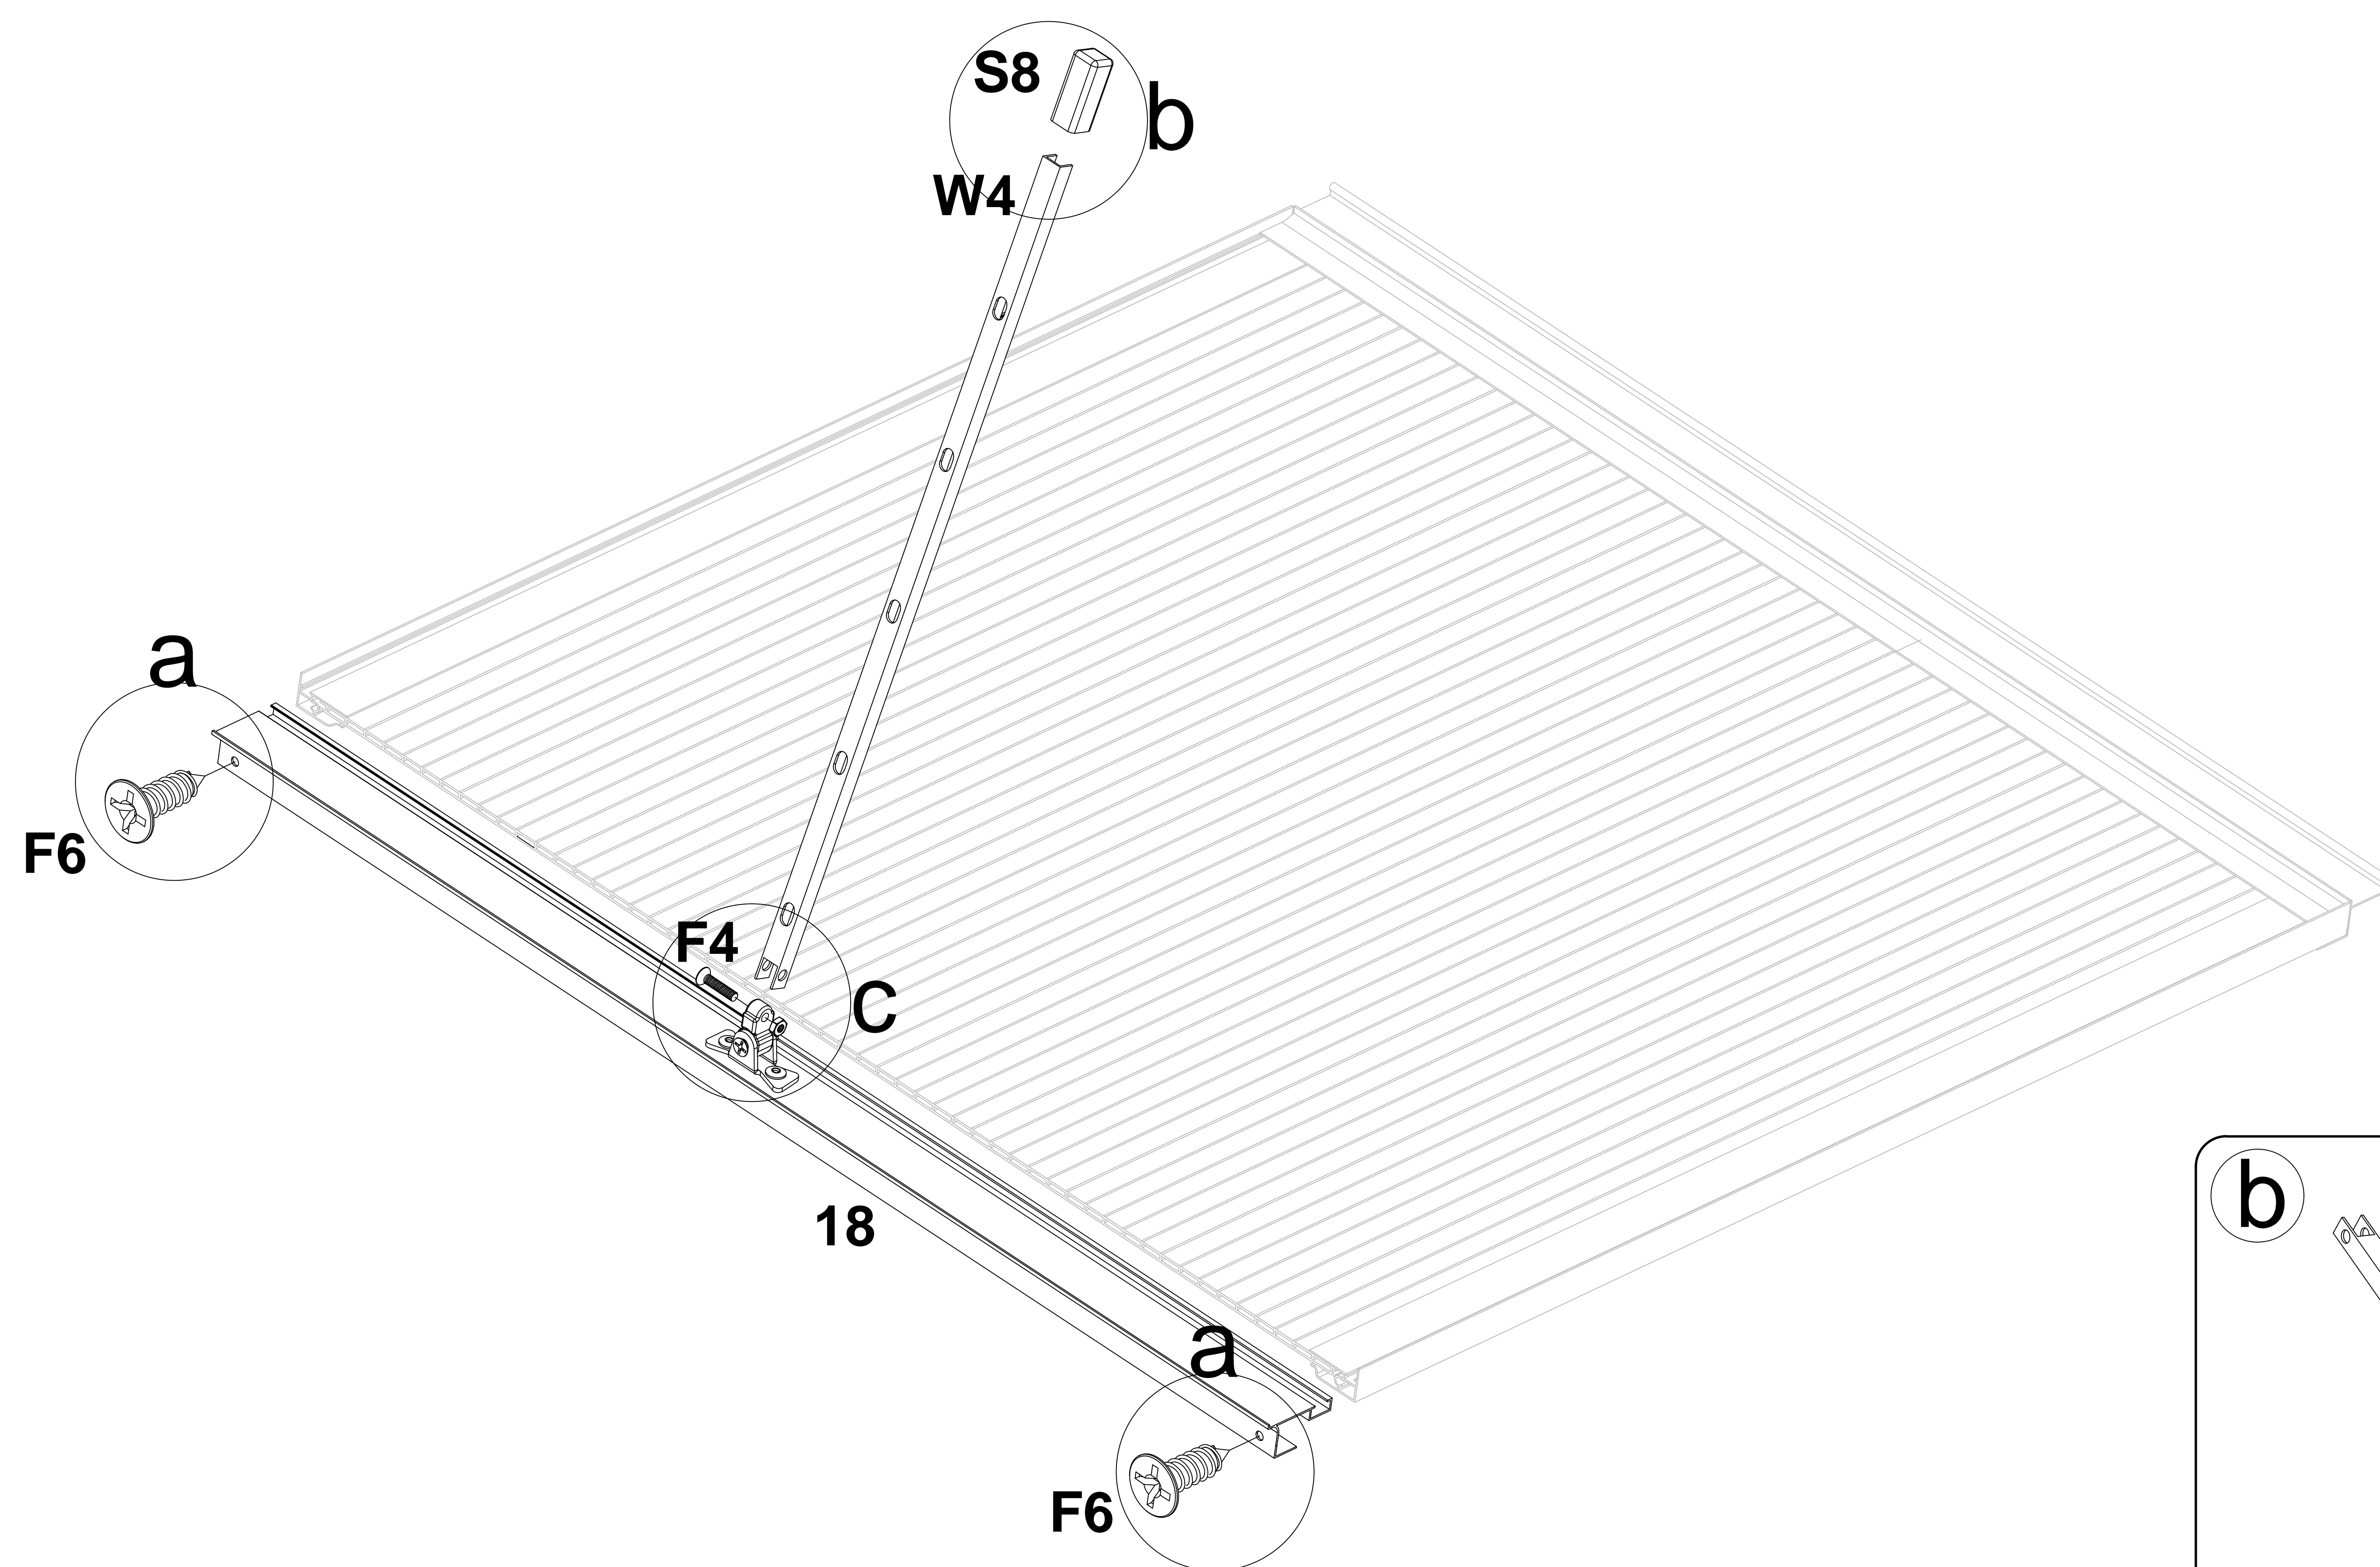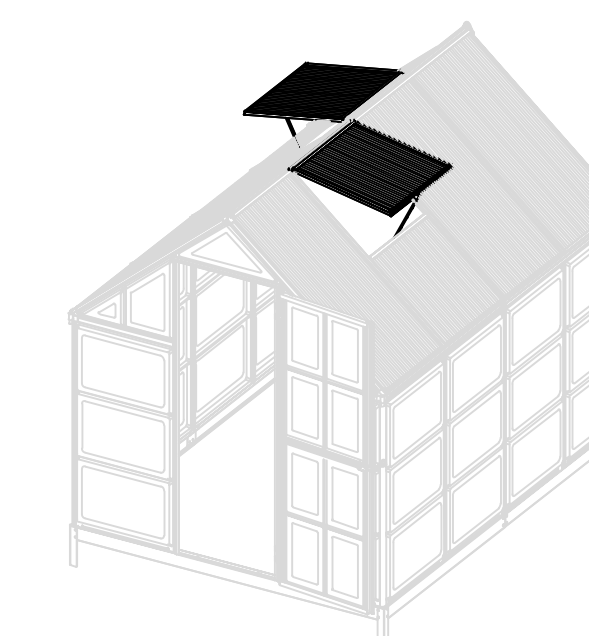




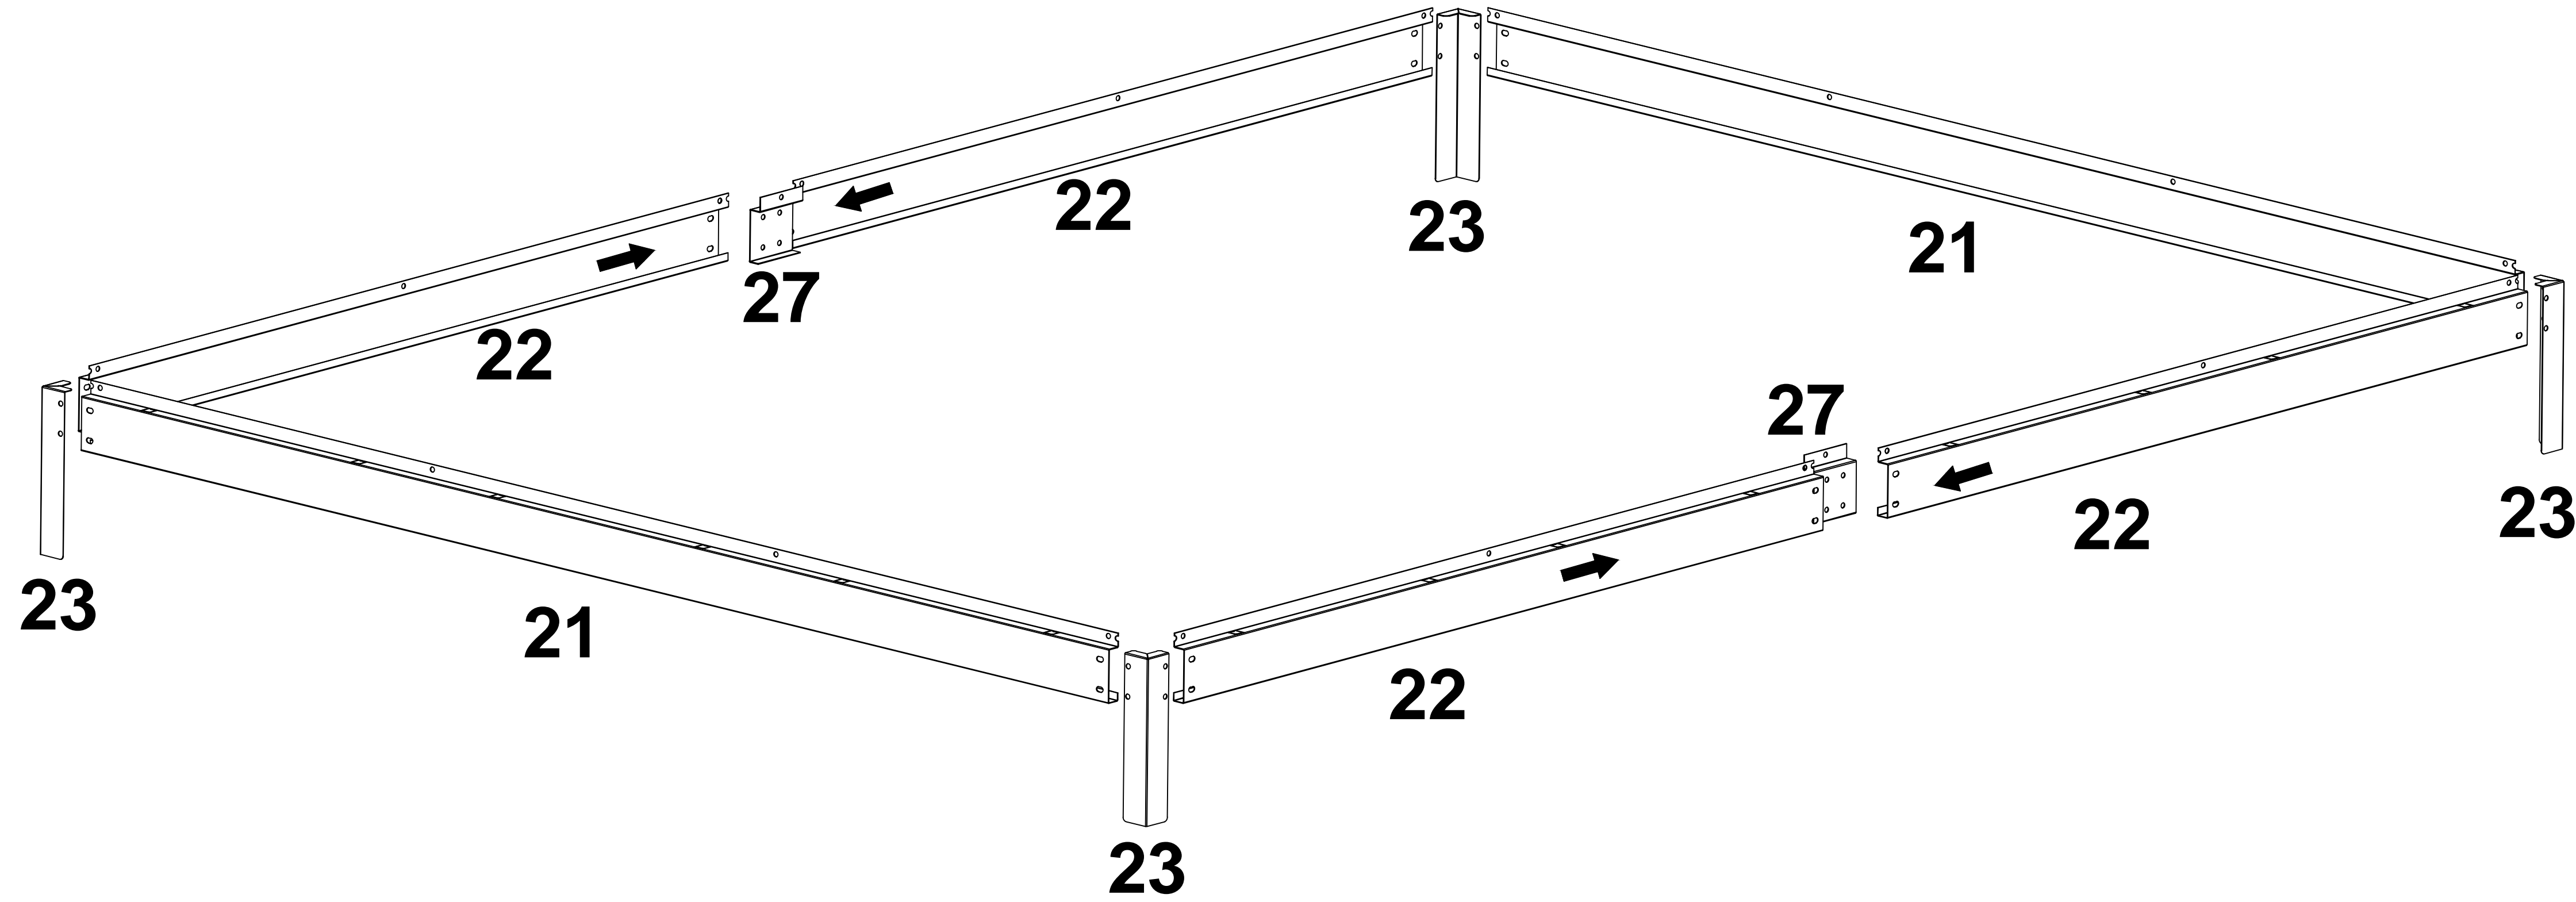


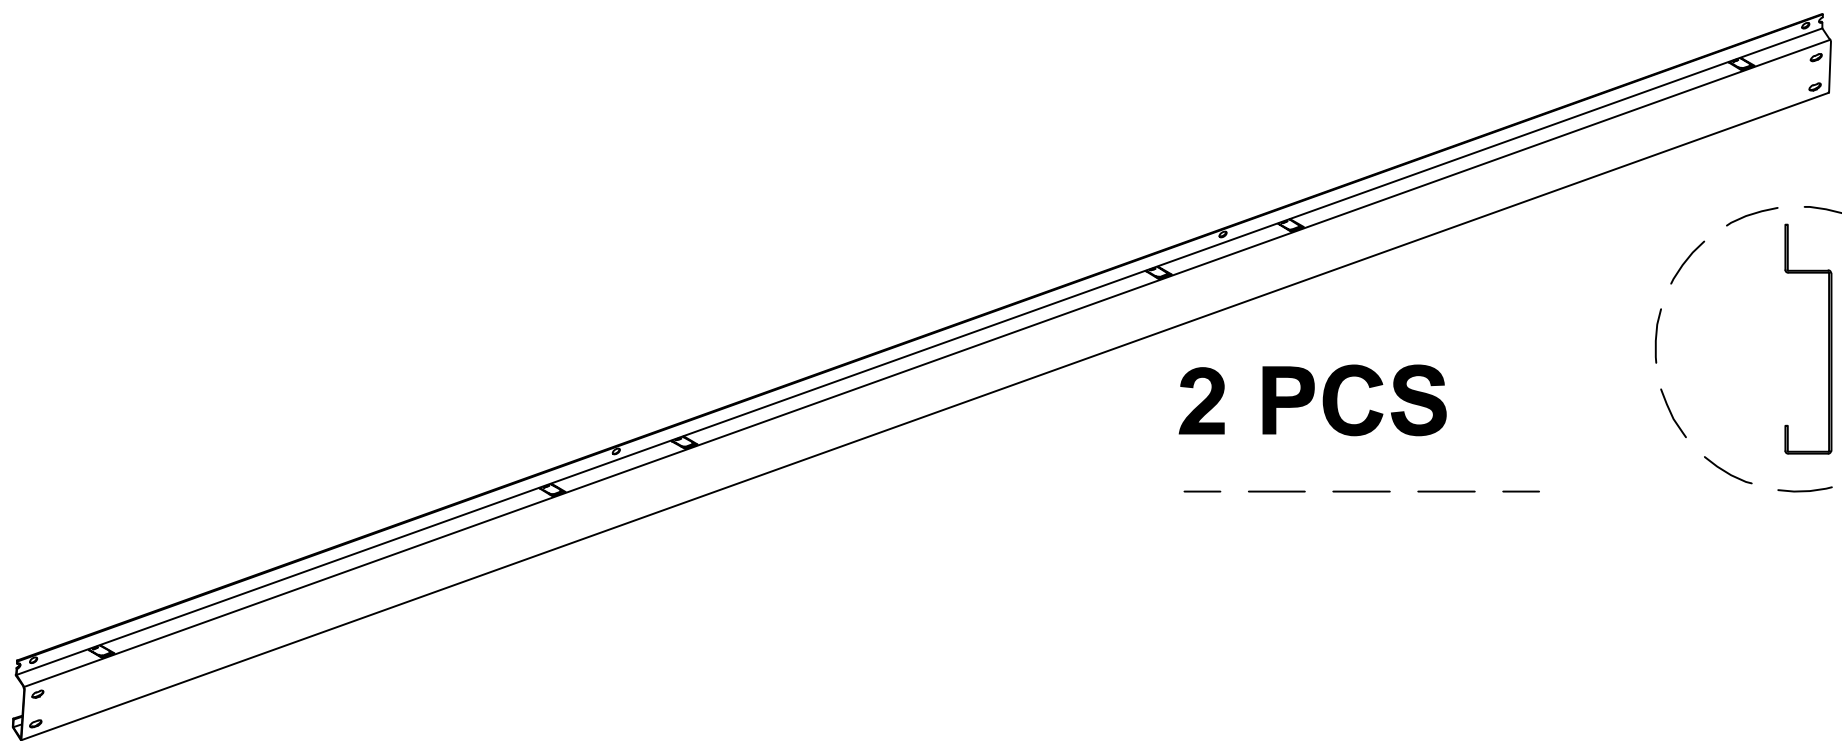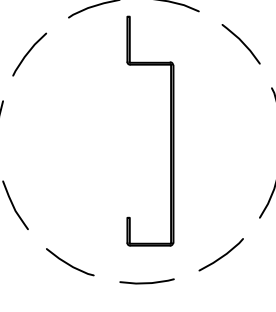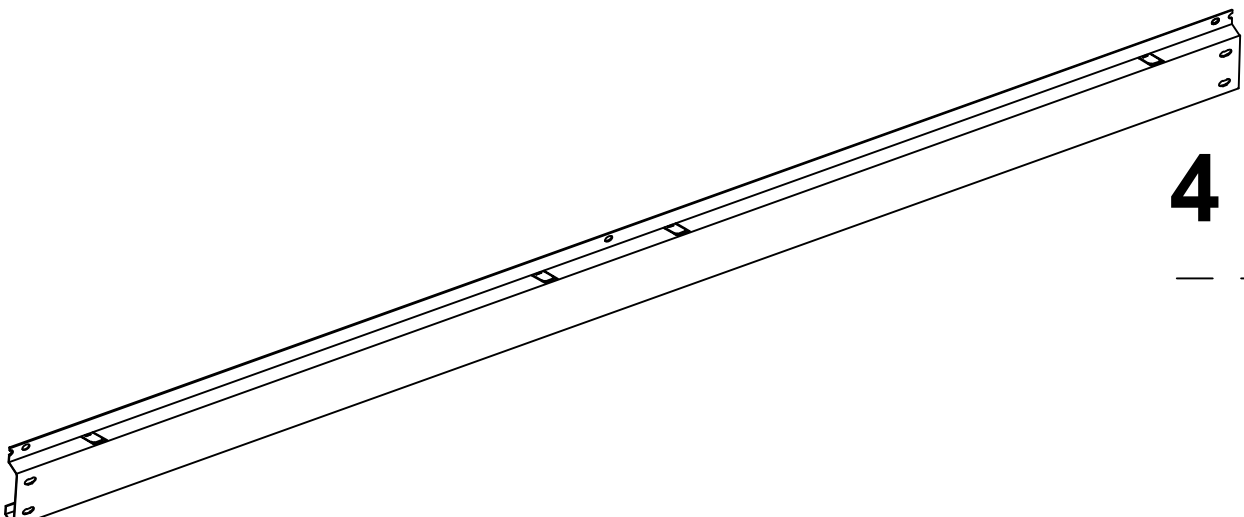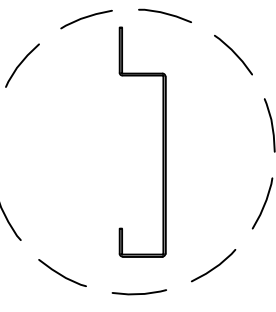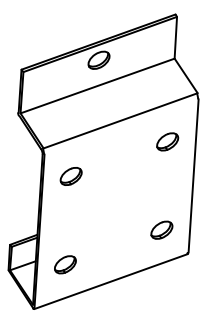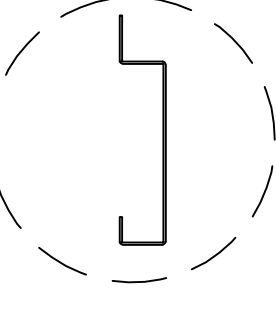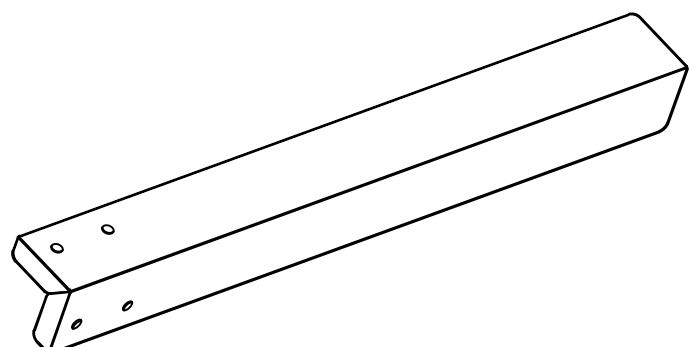
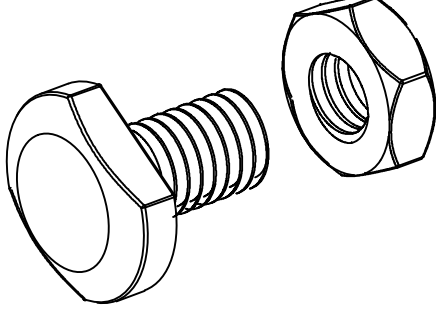
21		2 PCS		MM 1788
22		4 PCS		1190
27		2 PCS		80
23		4 PCS		345
F5		24 PCS		
















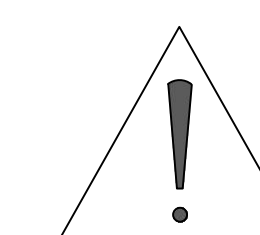
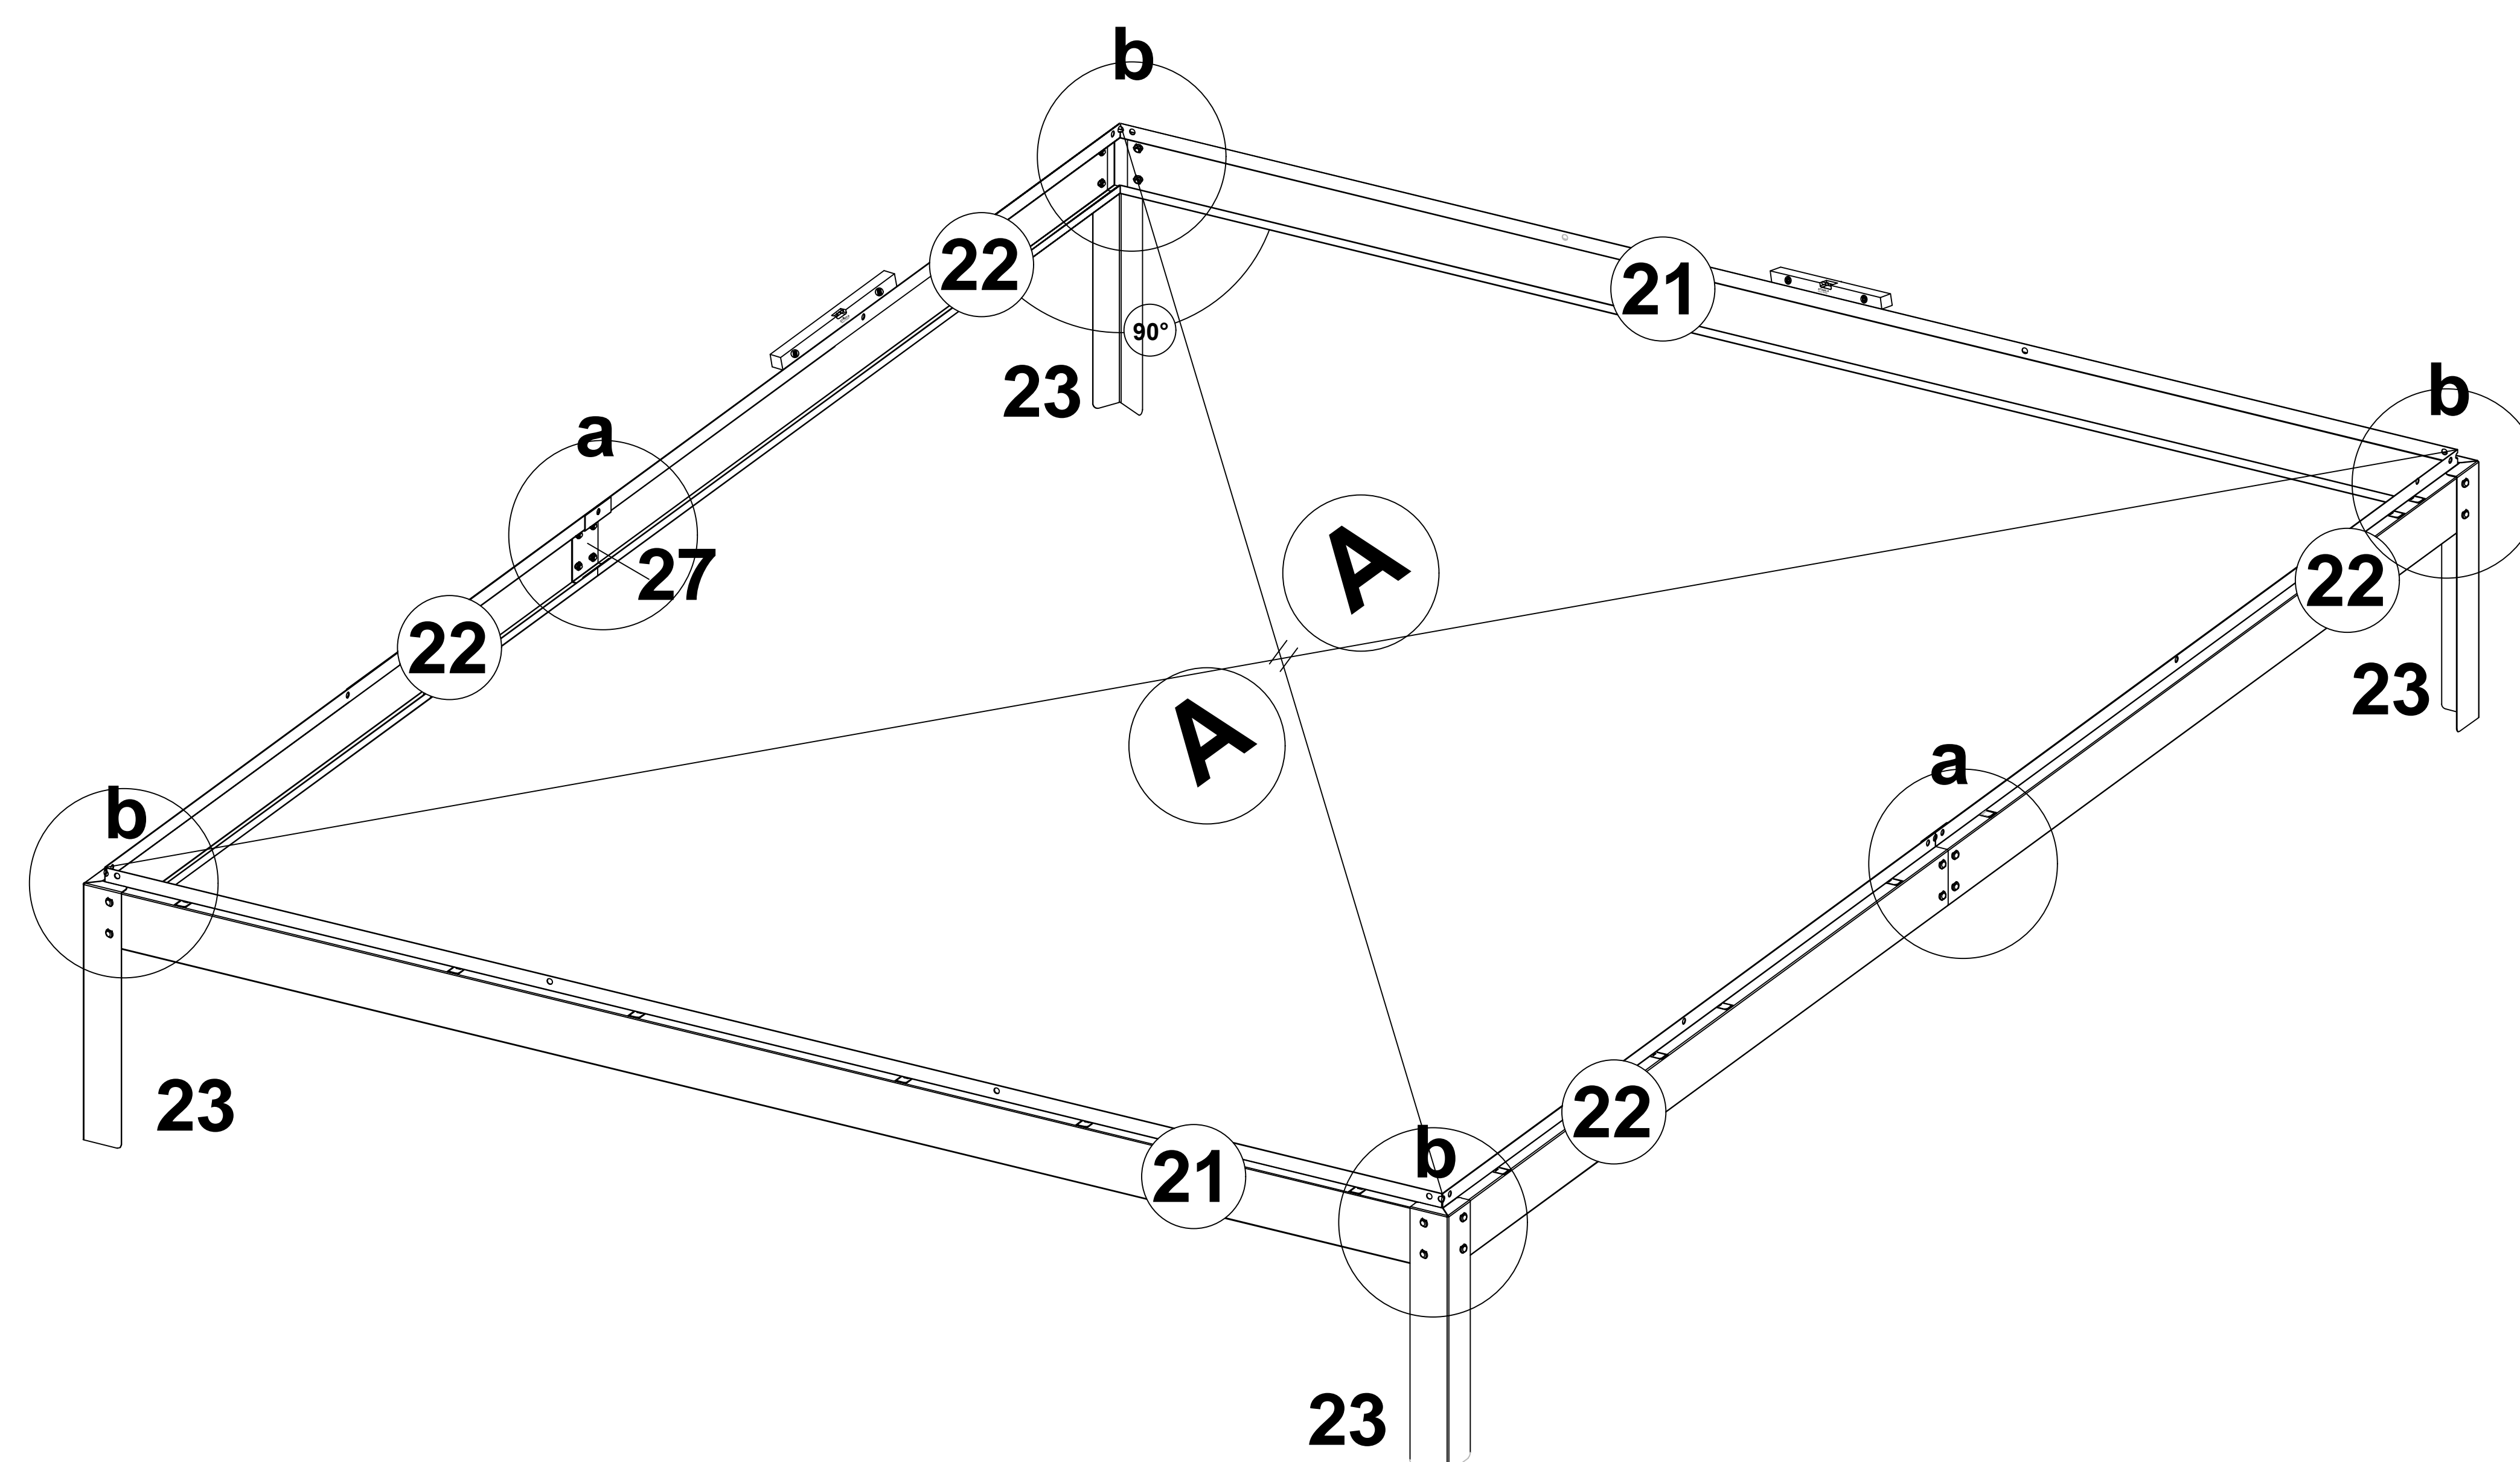
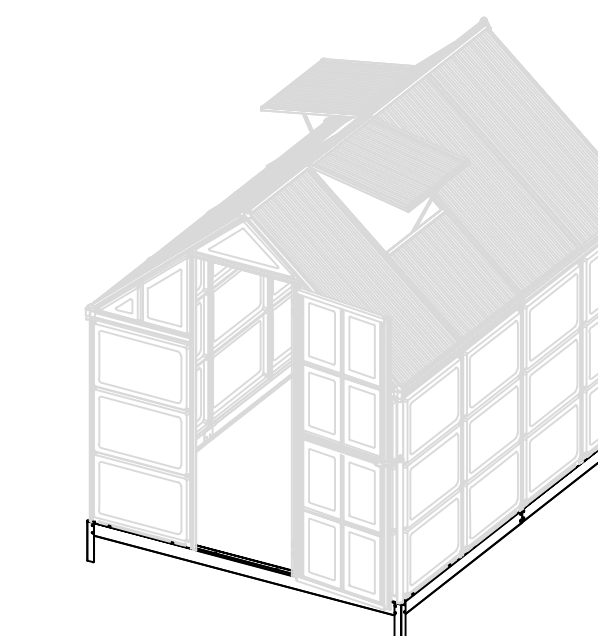


The corner post needs inserted into the soil in advance according to the instruction picture. If not, please make the corner post inserted backwards. The foundation needs to be installed on a flat ground.



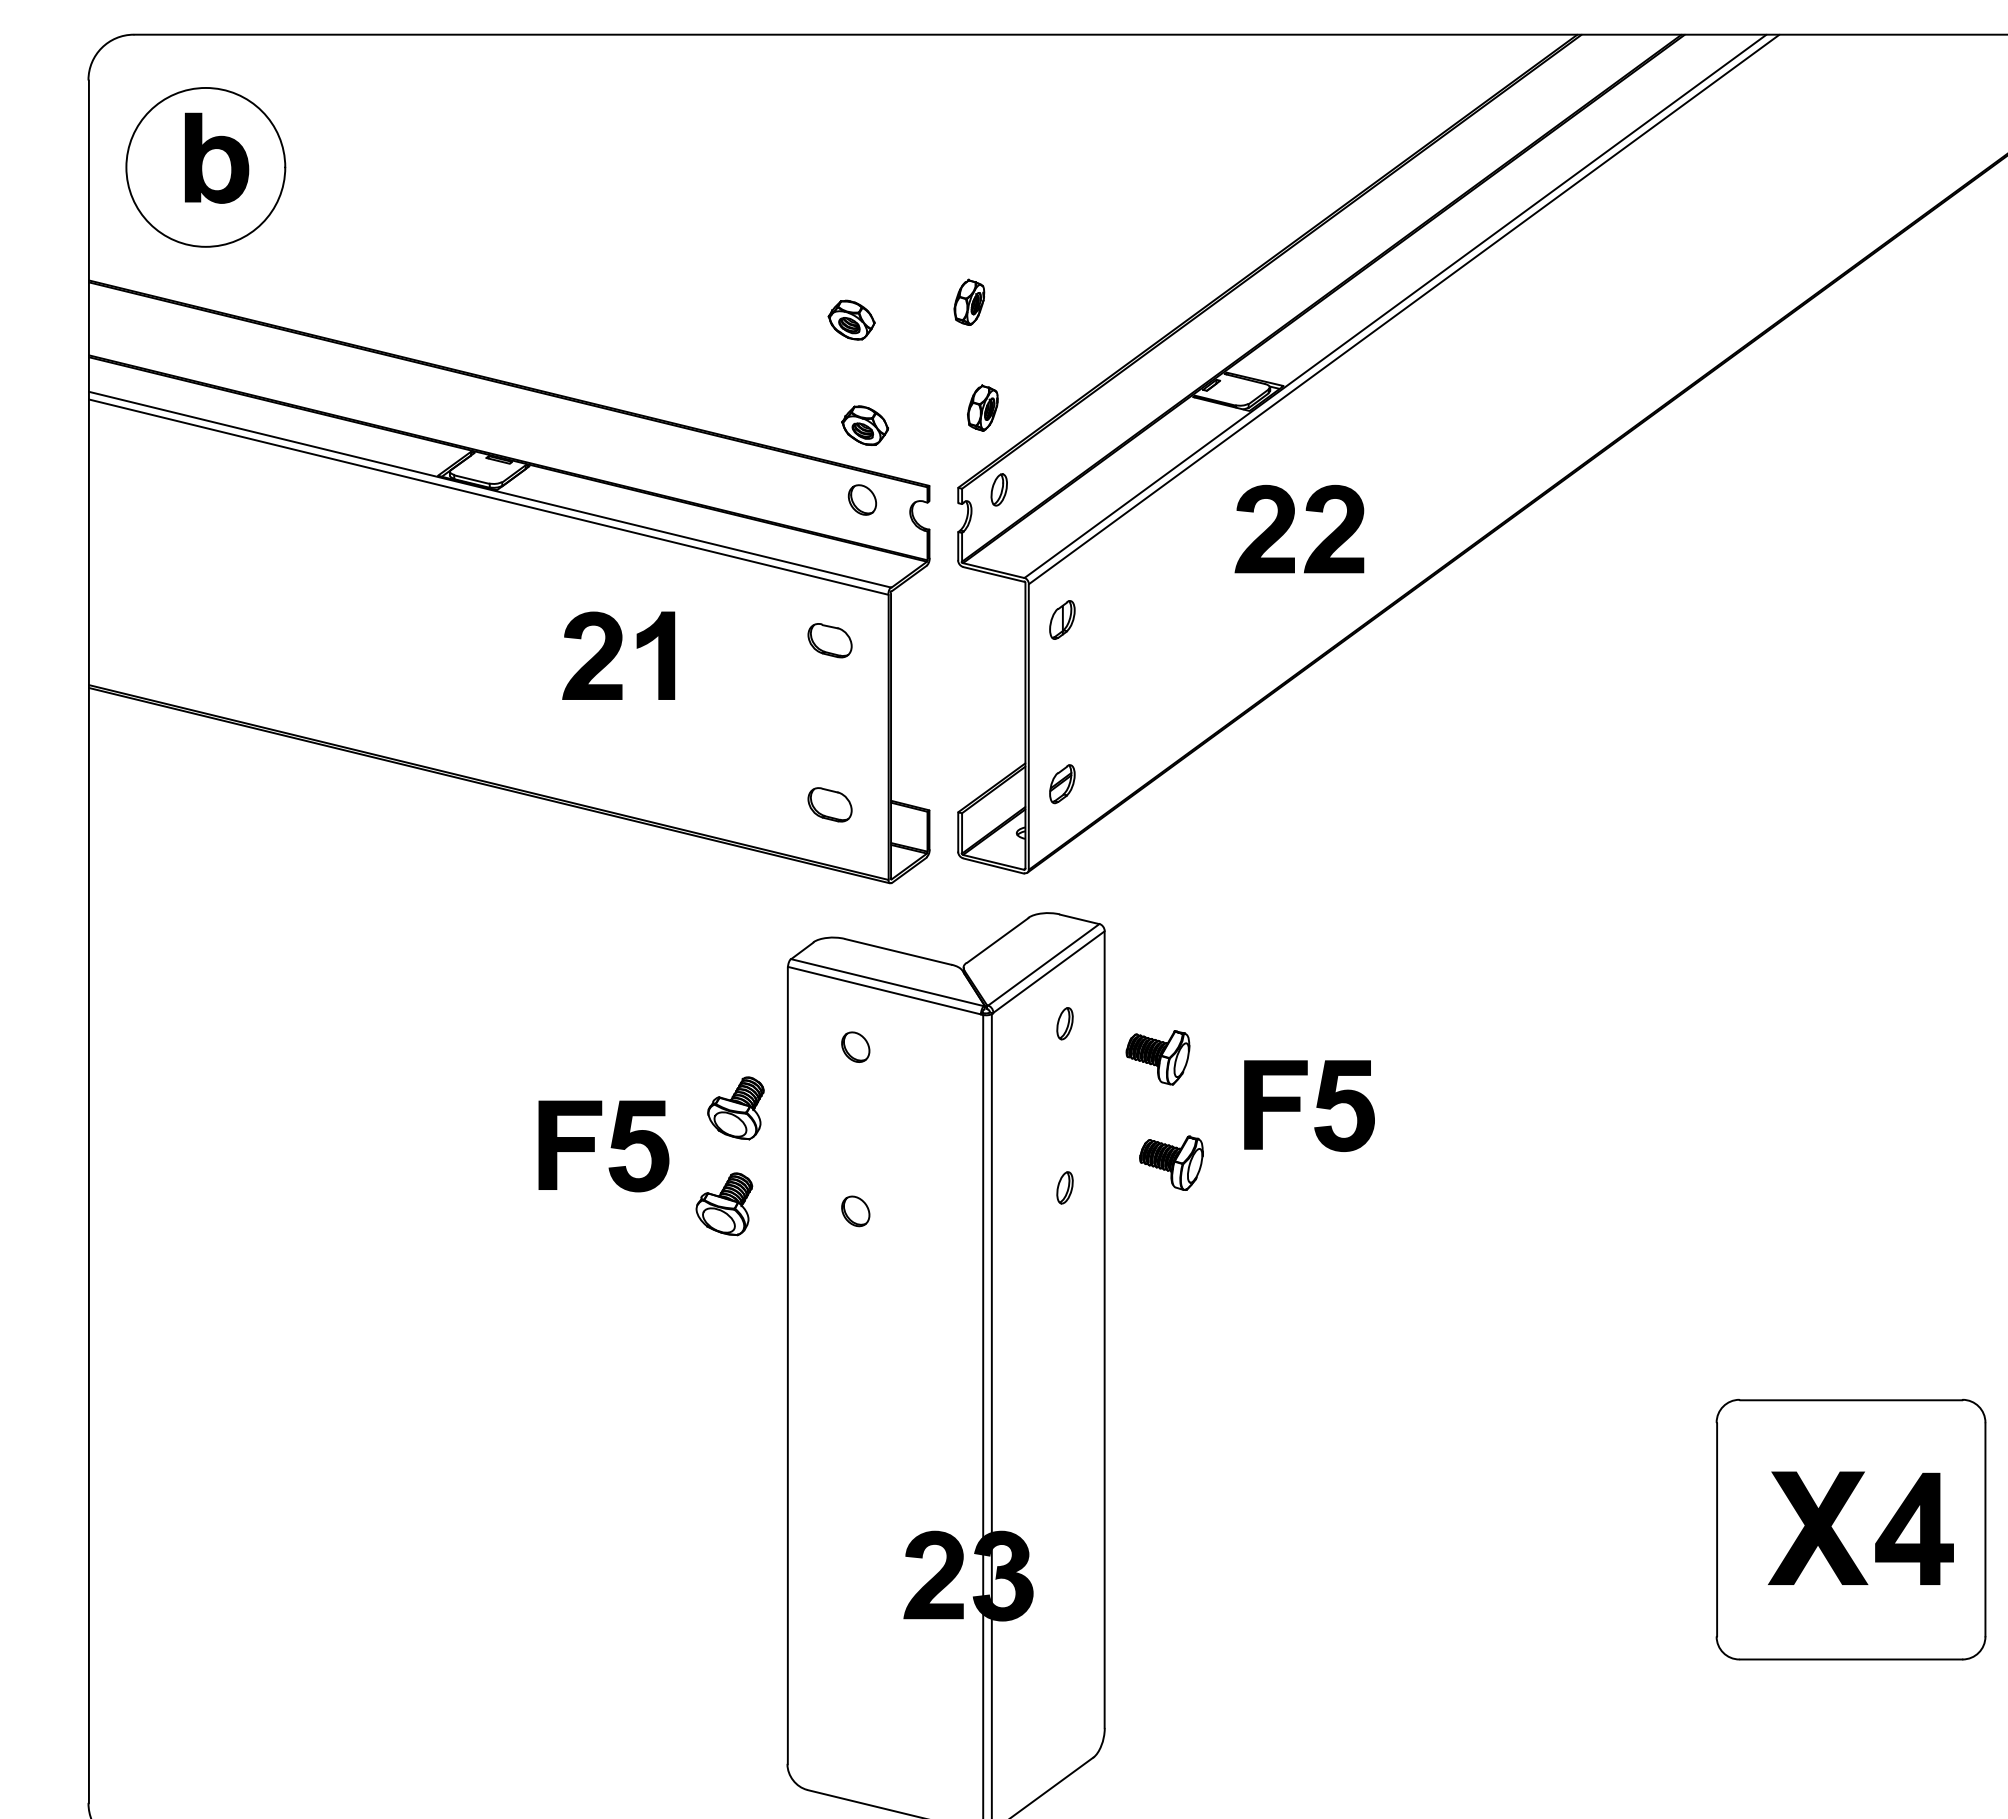
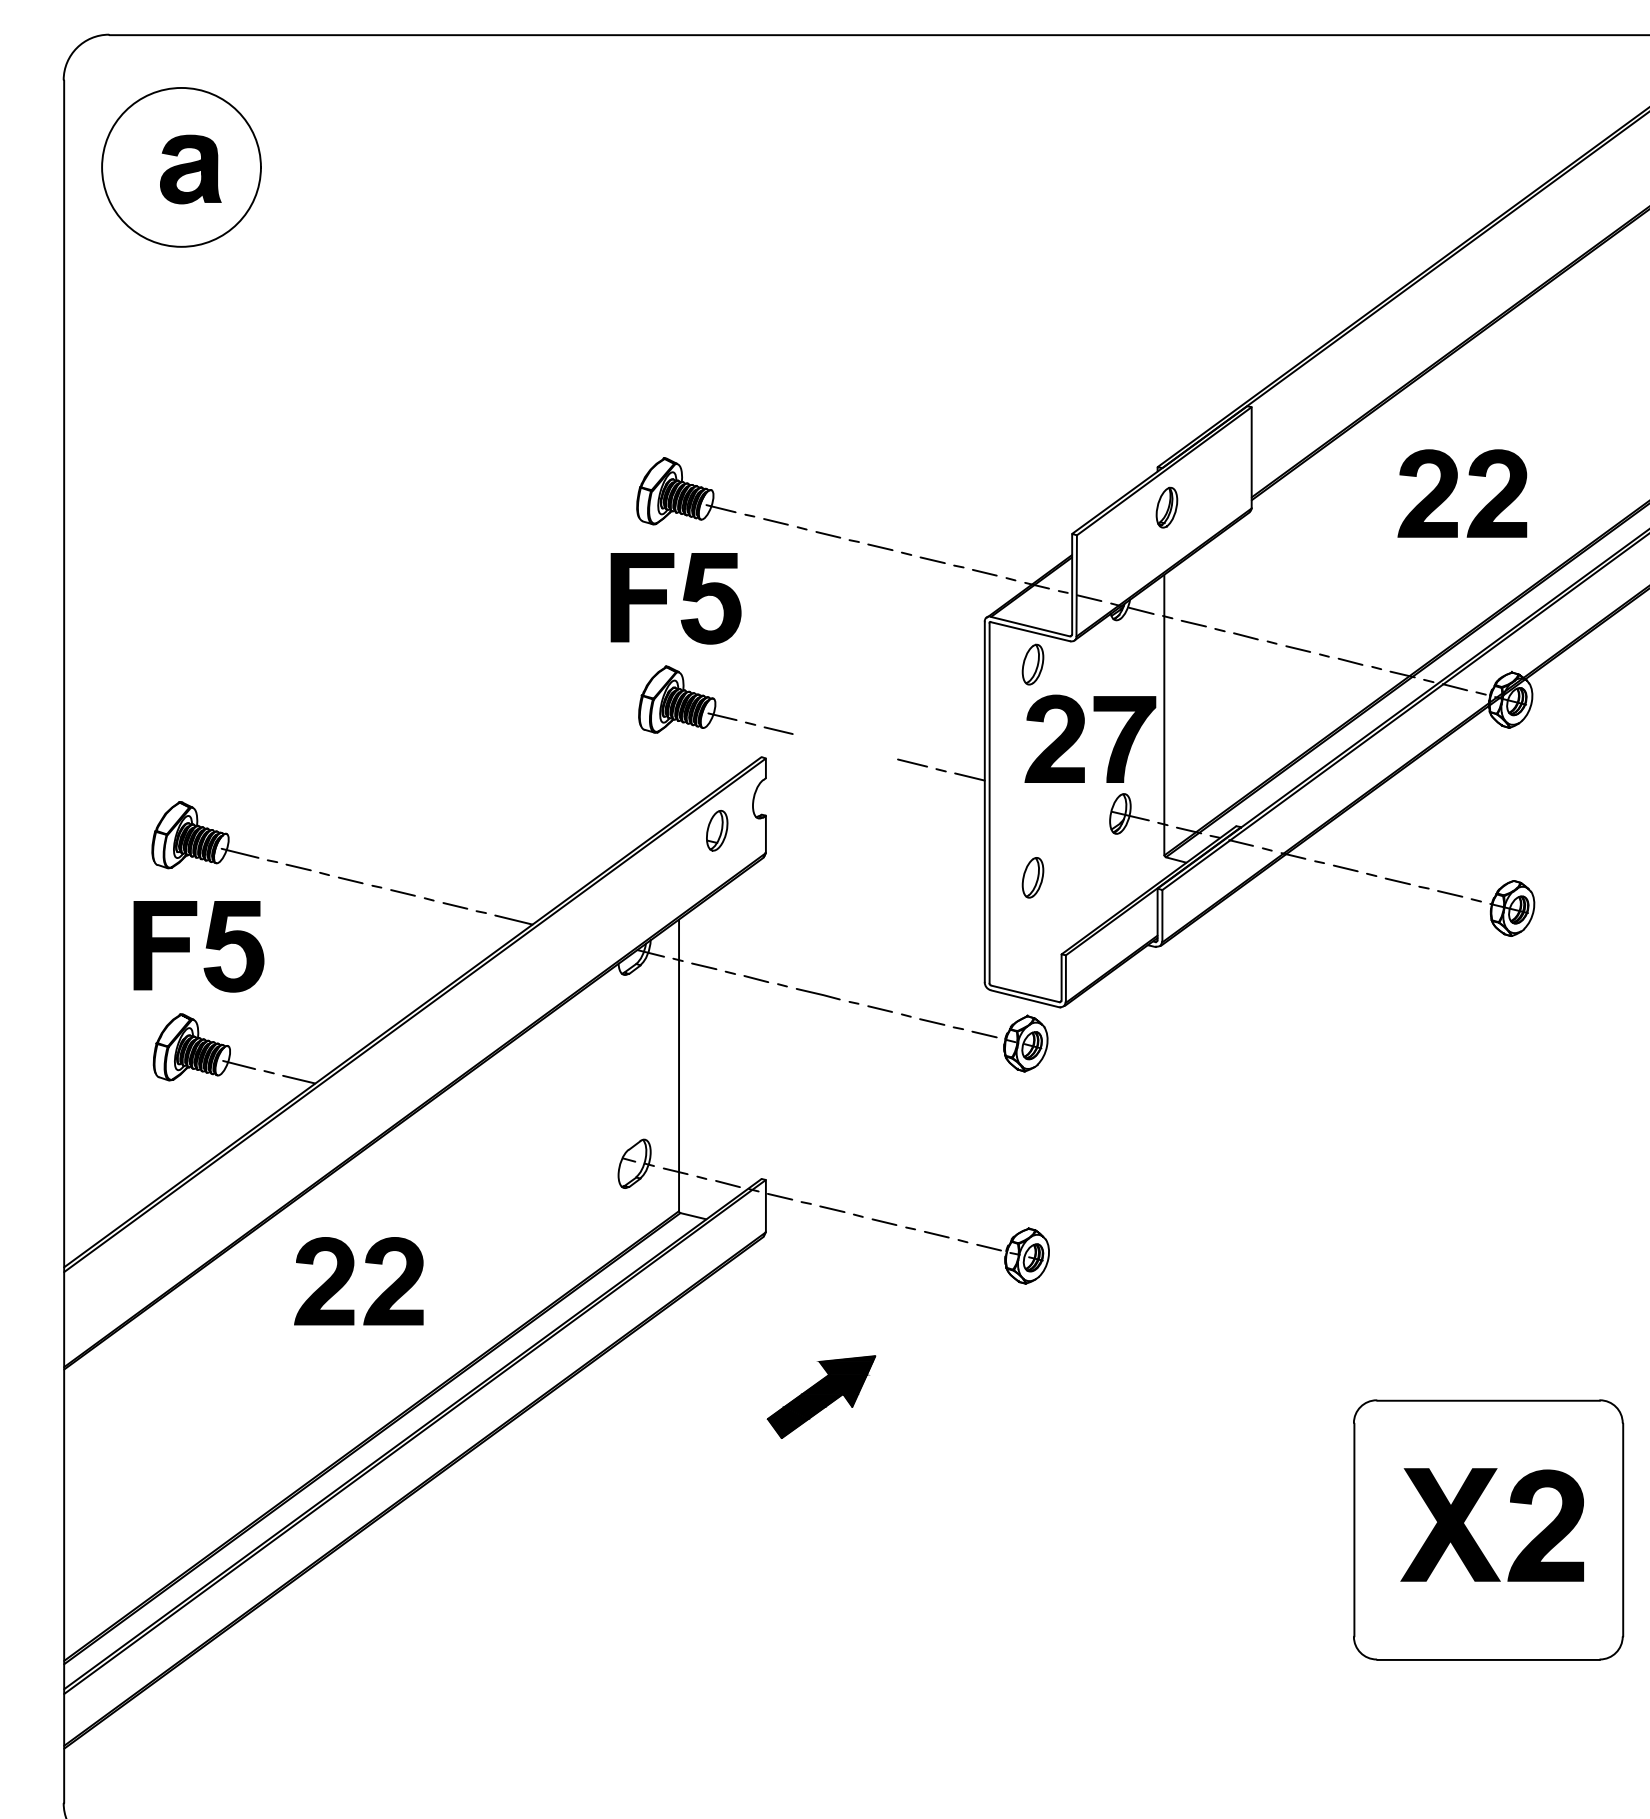
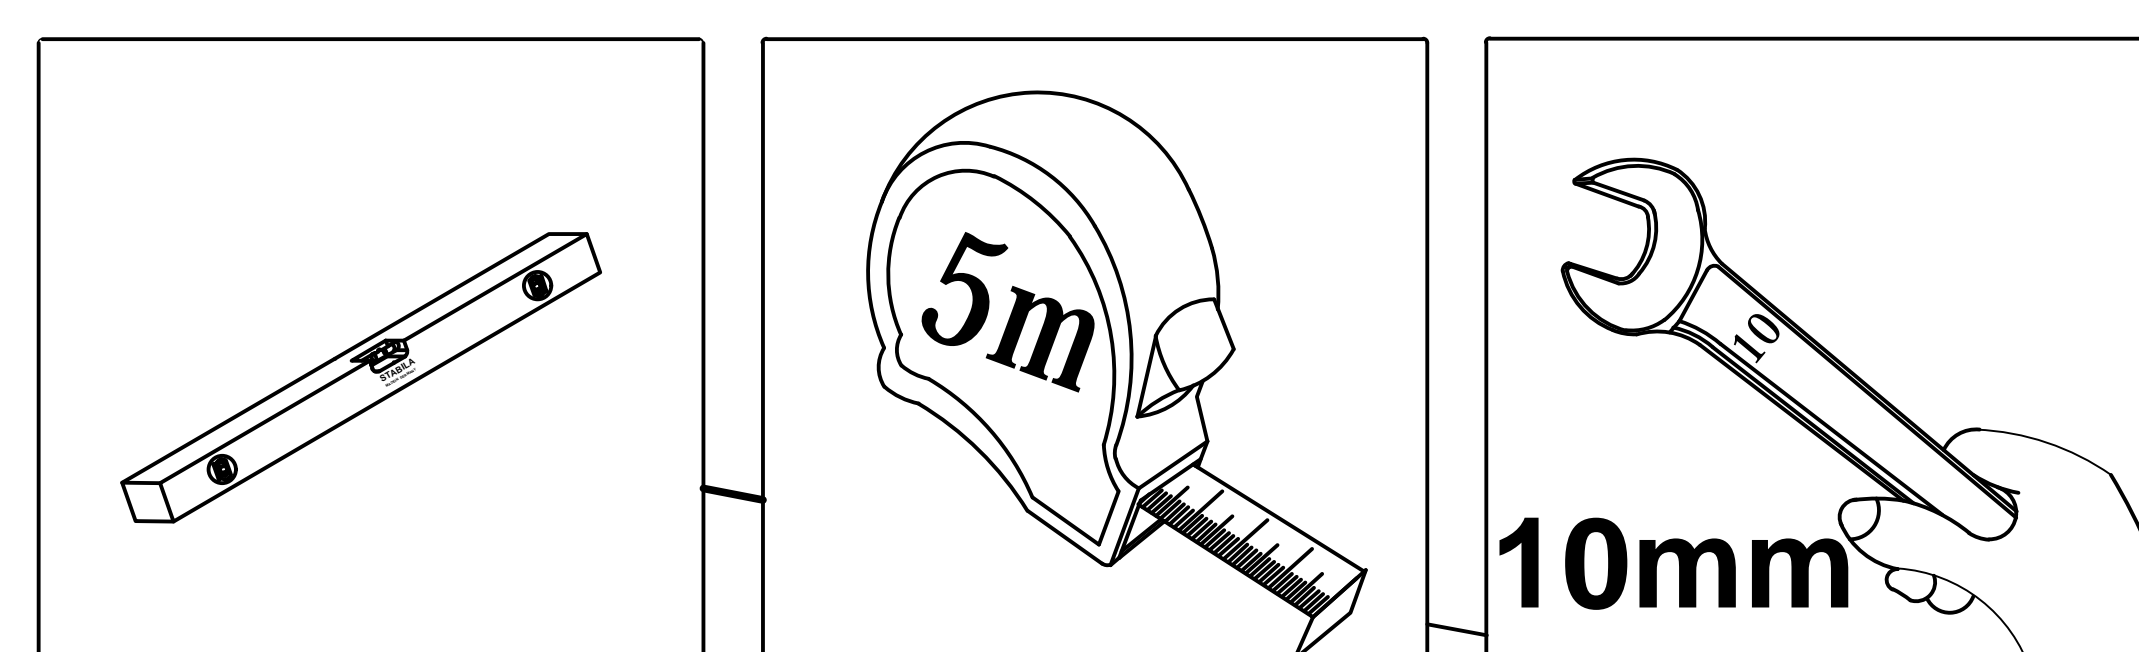
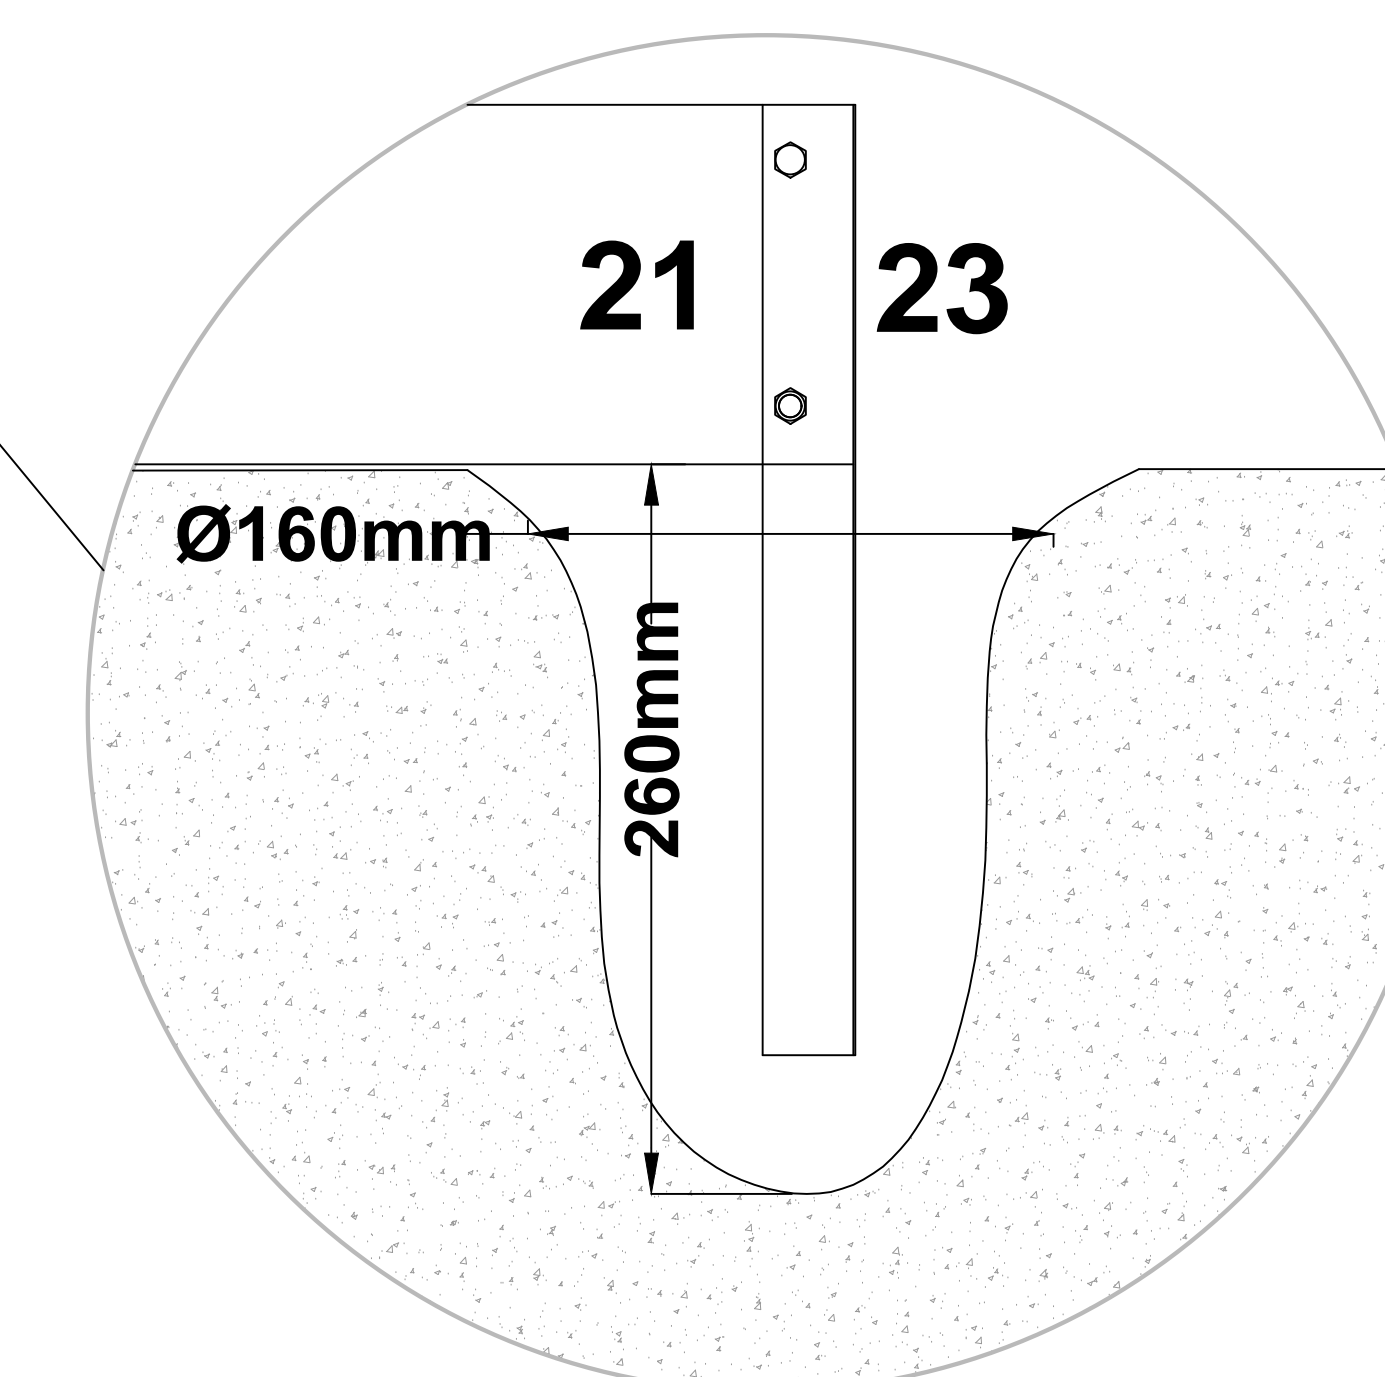


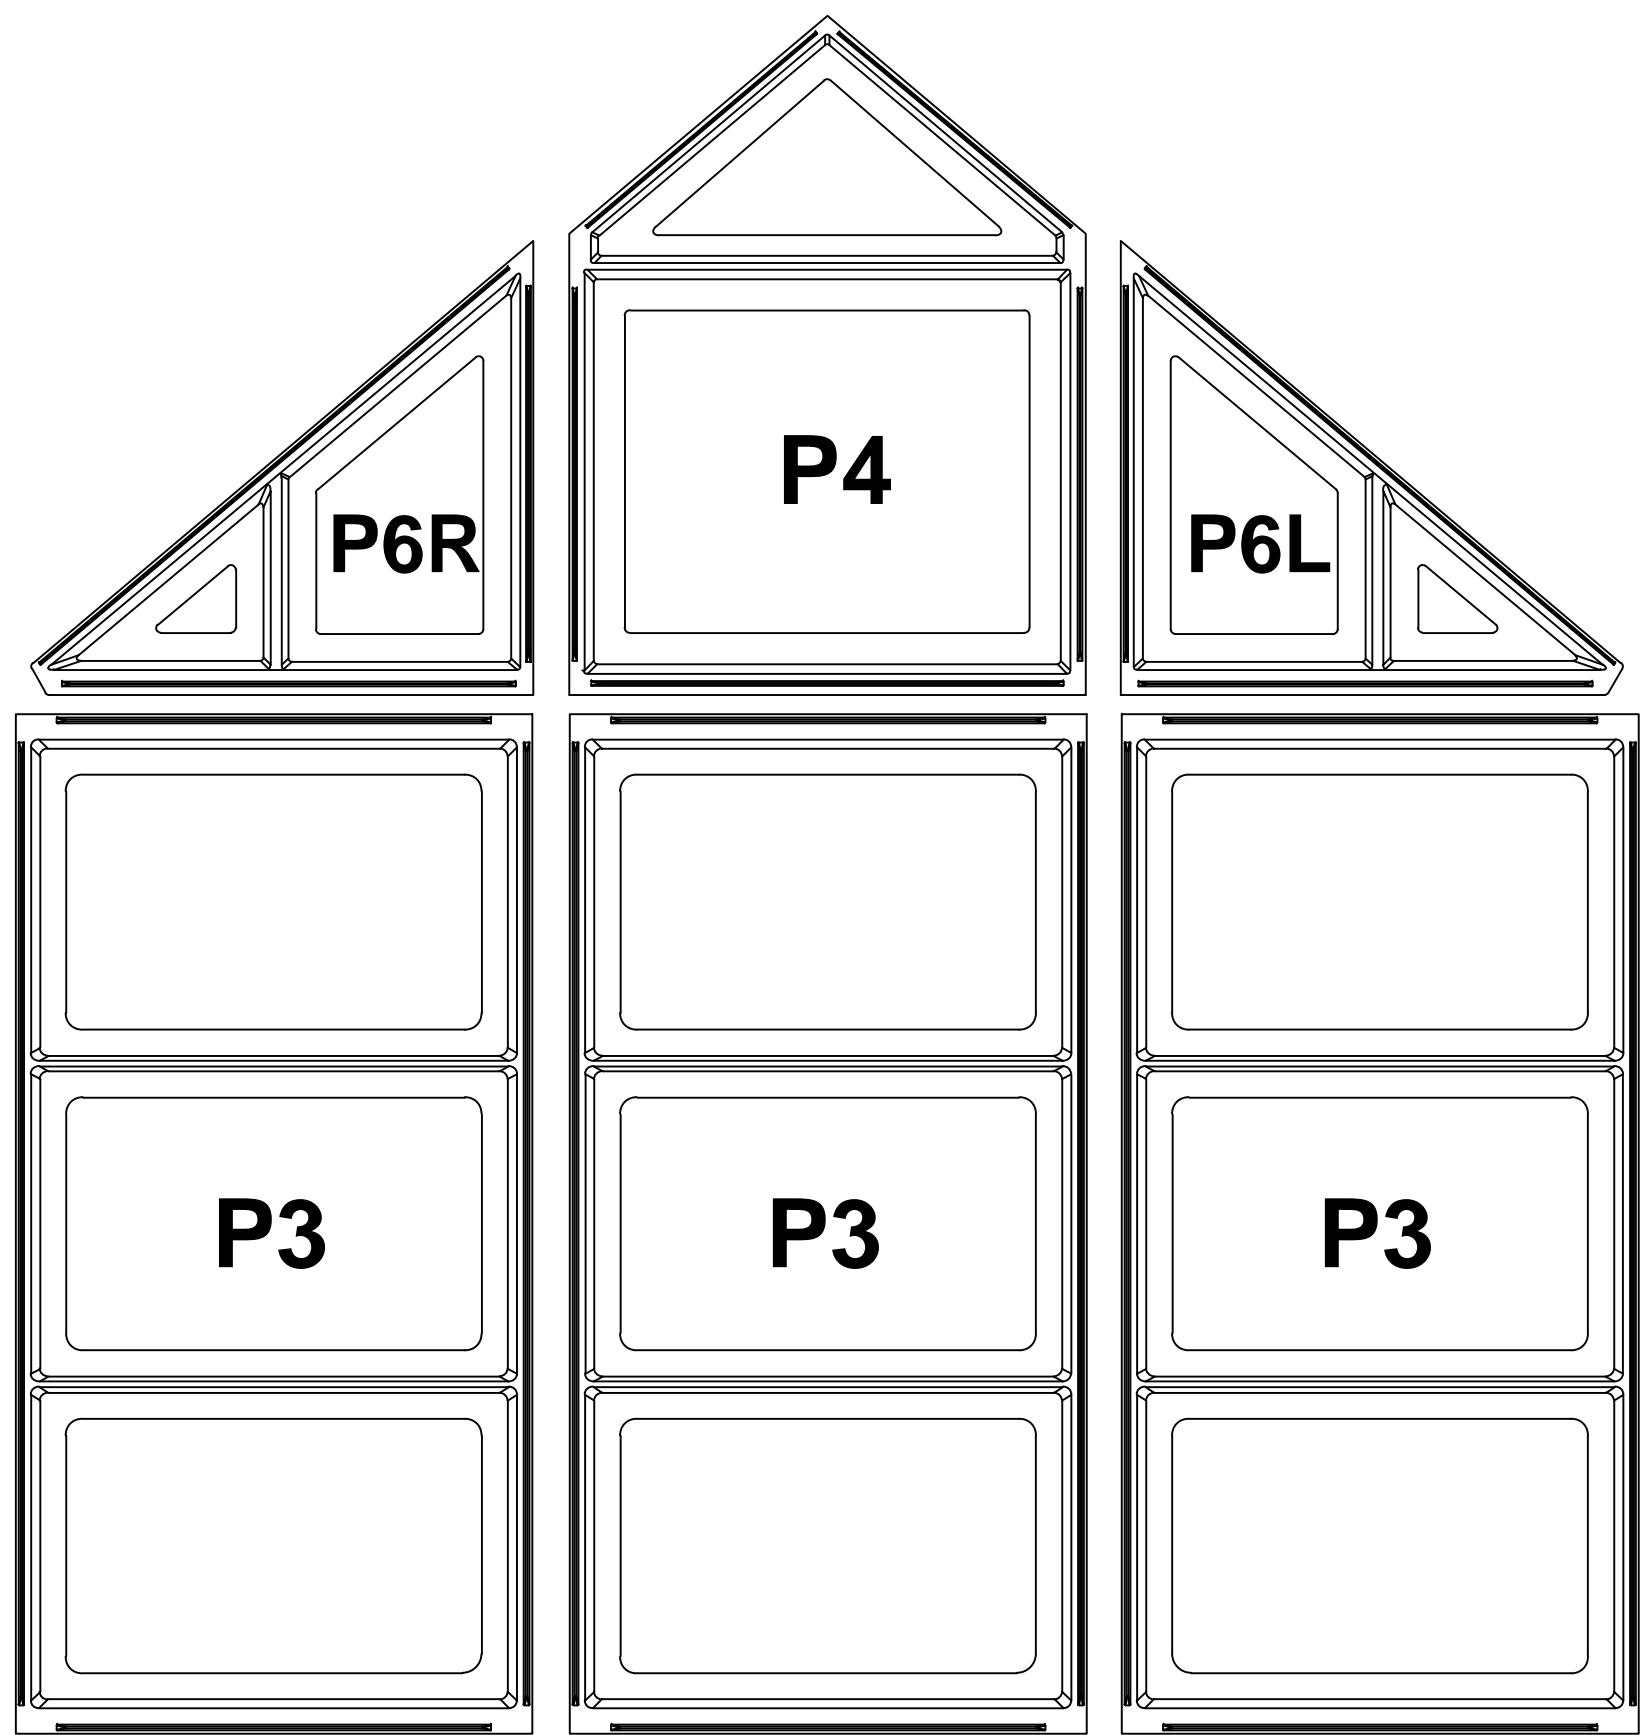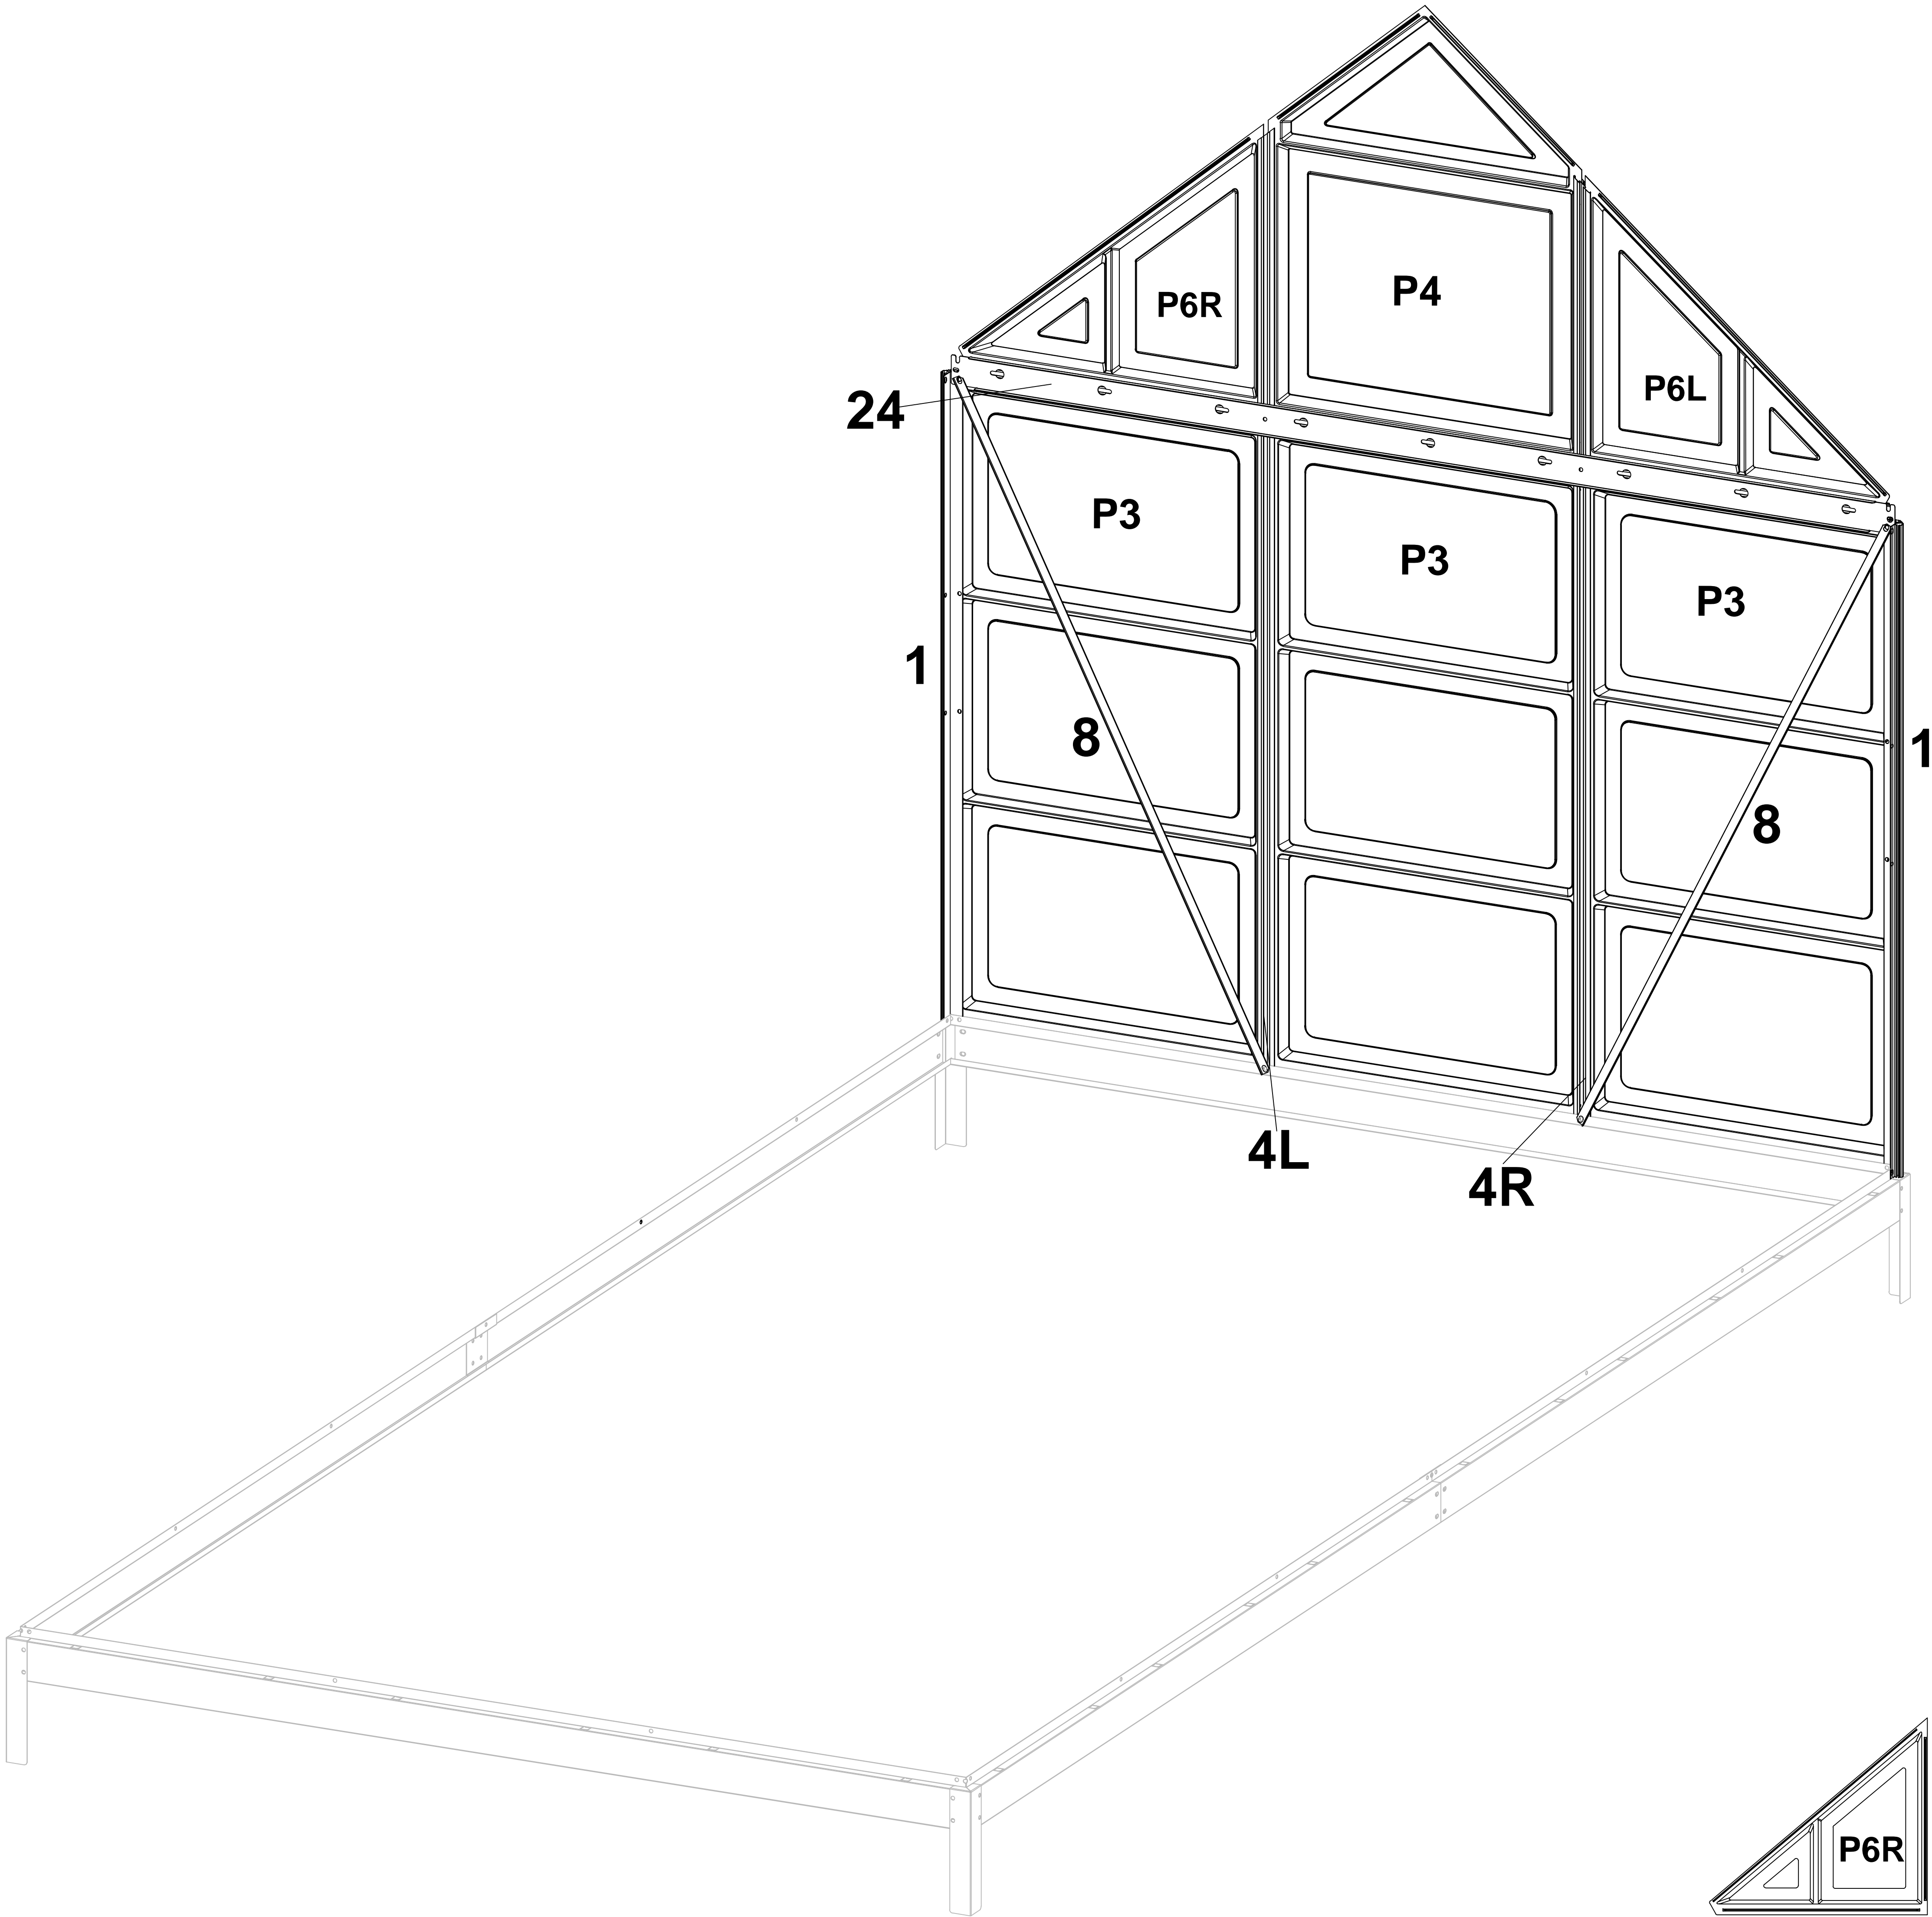

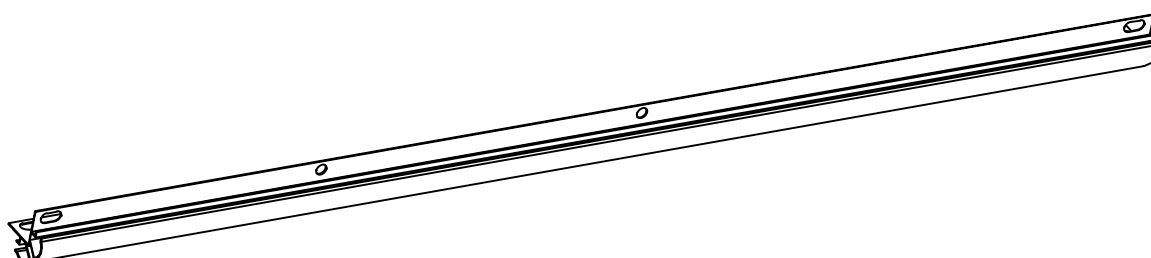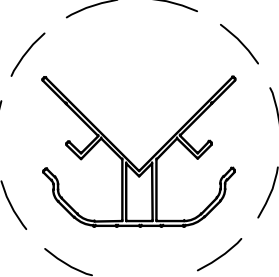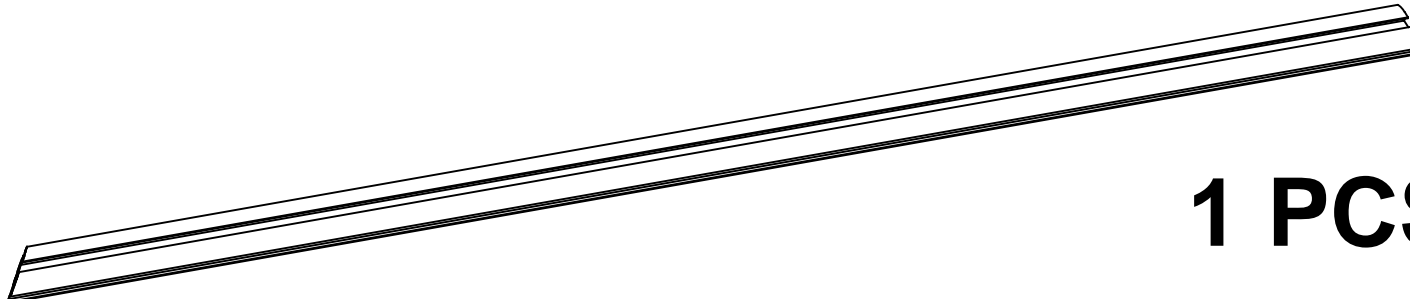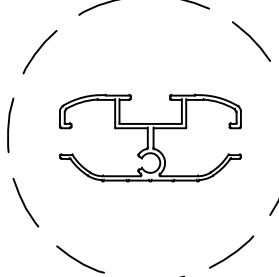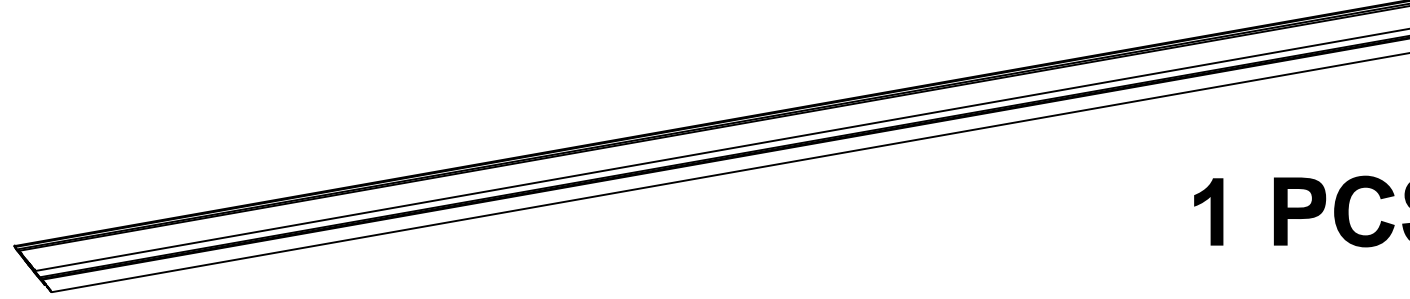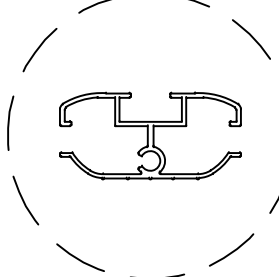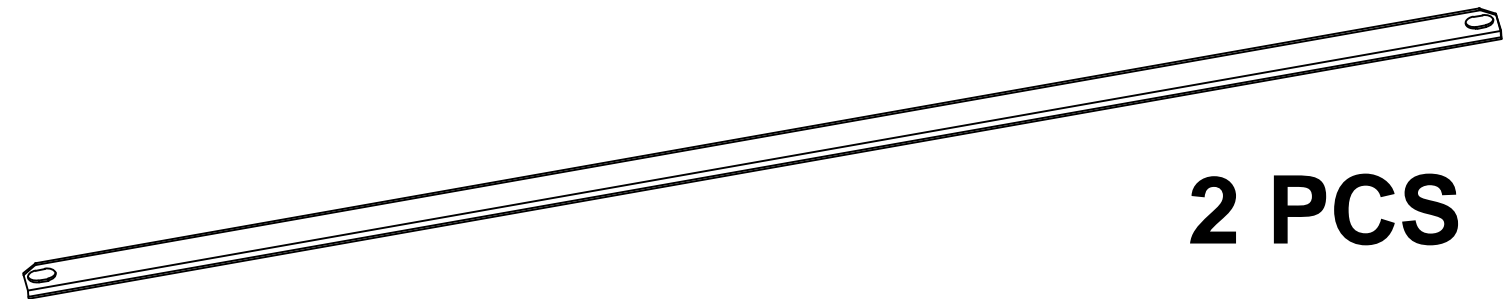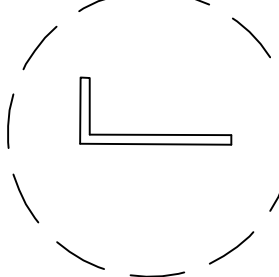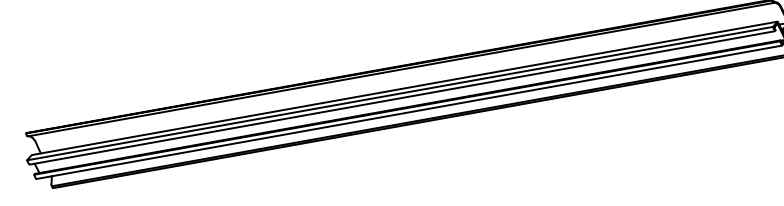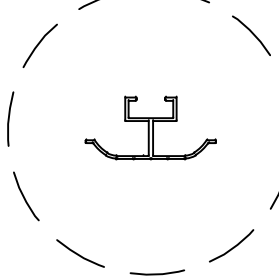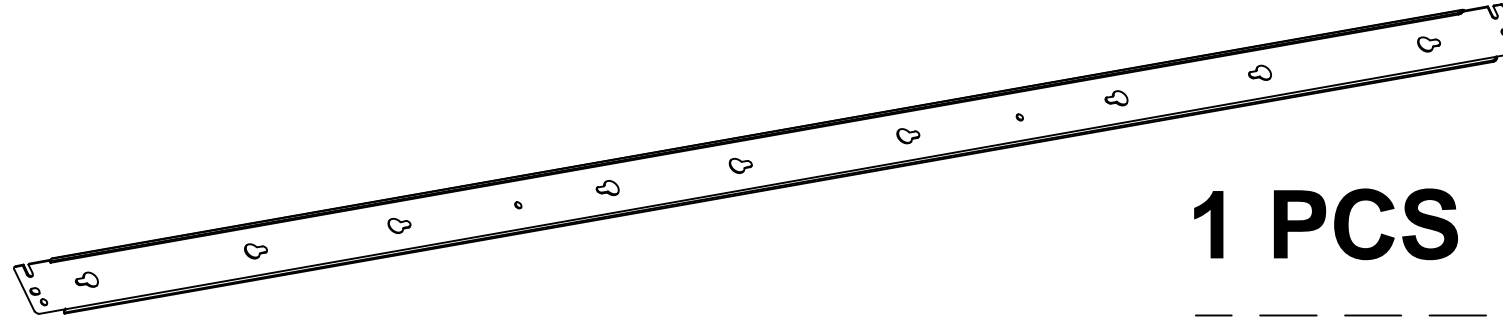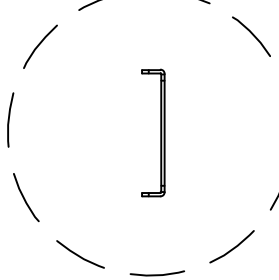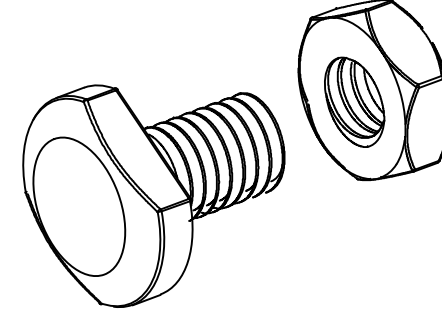
			MM
1		2 PCS	 1170
4L		1 PCS	 1700
4R		1 PCS	 1700
8		2 PCS	 1300
6		3 PCS	 560
24		1 PCS	 1785
F5		24 PCS	

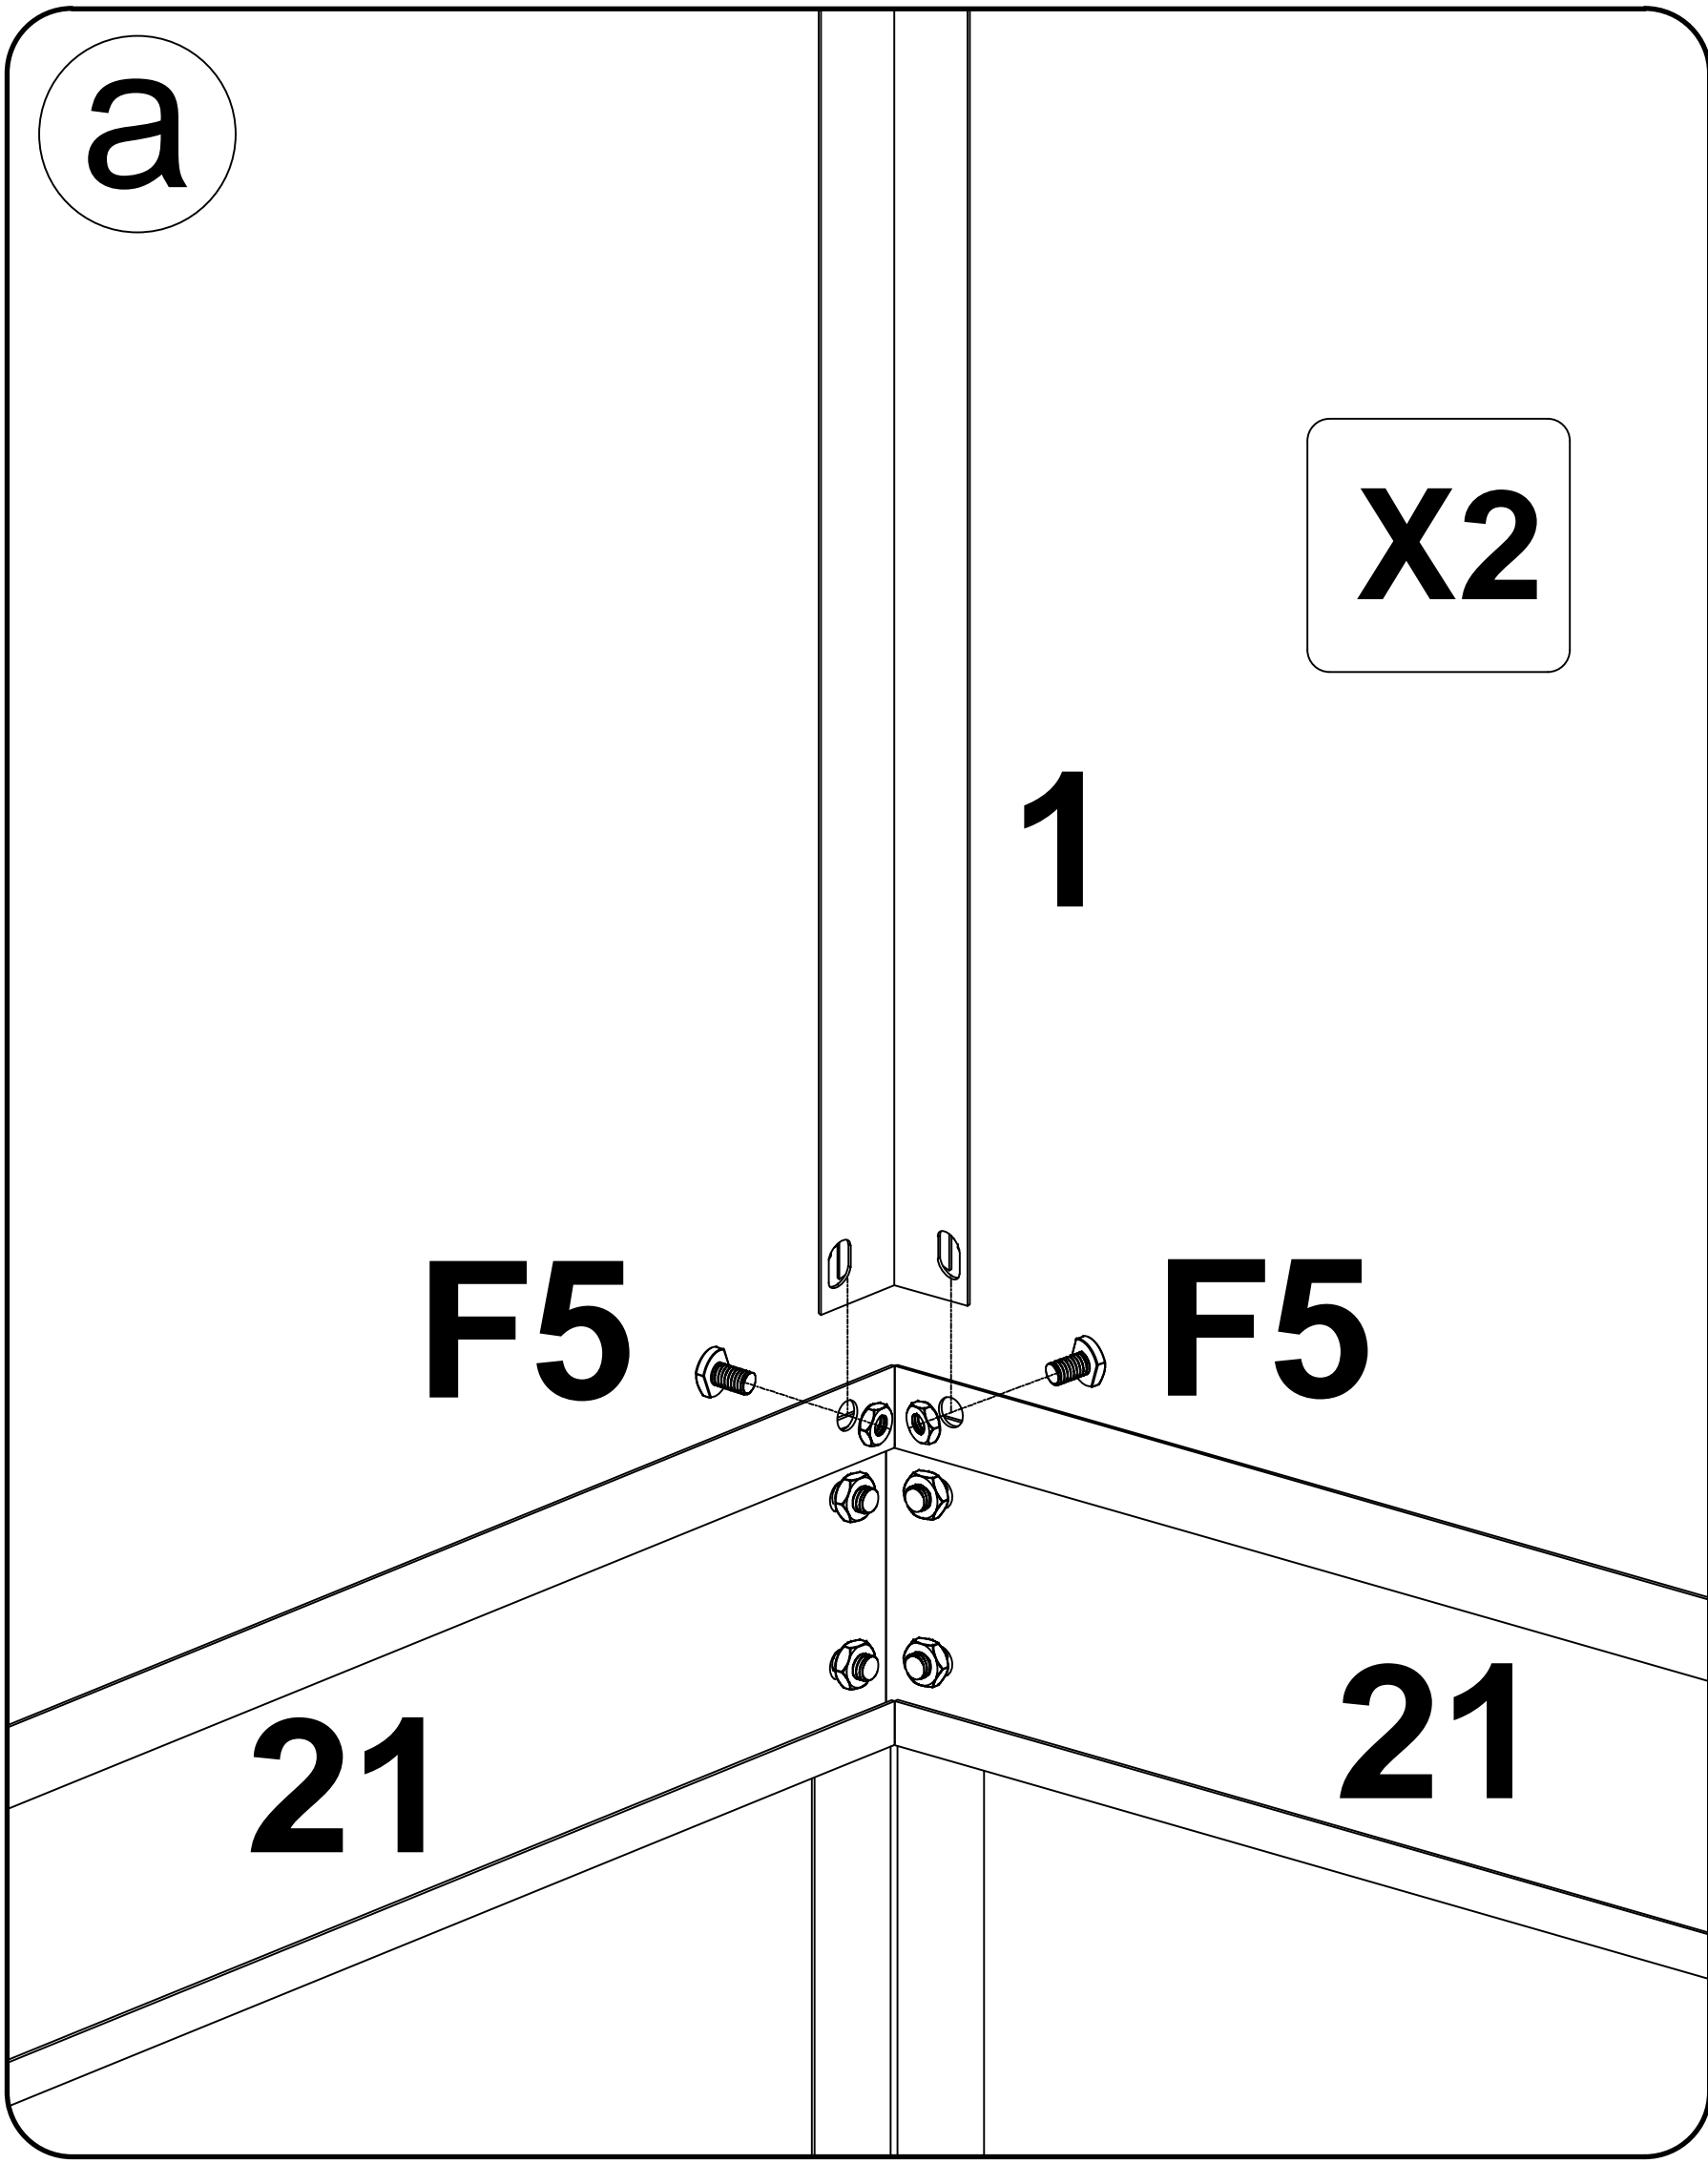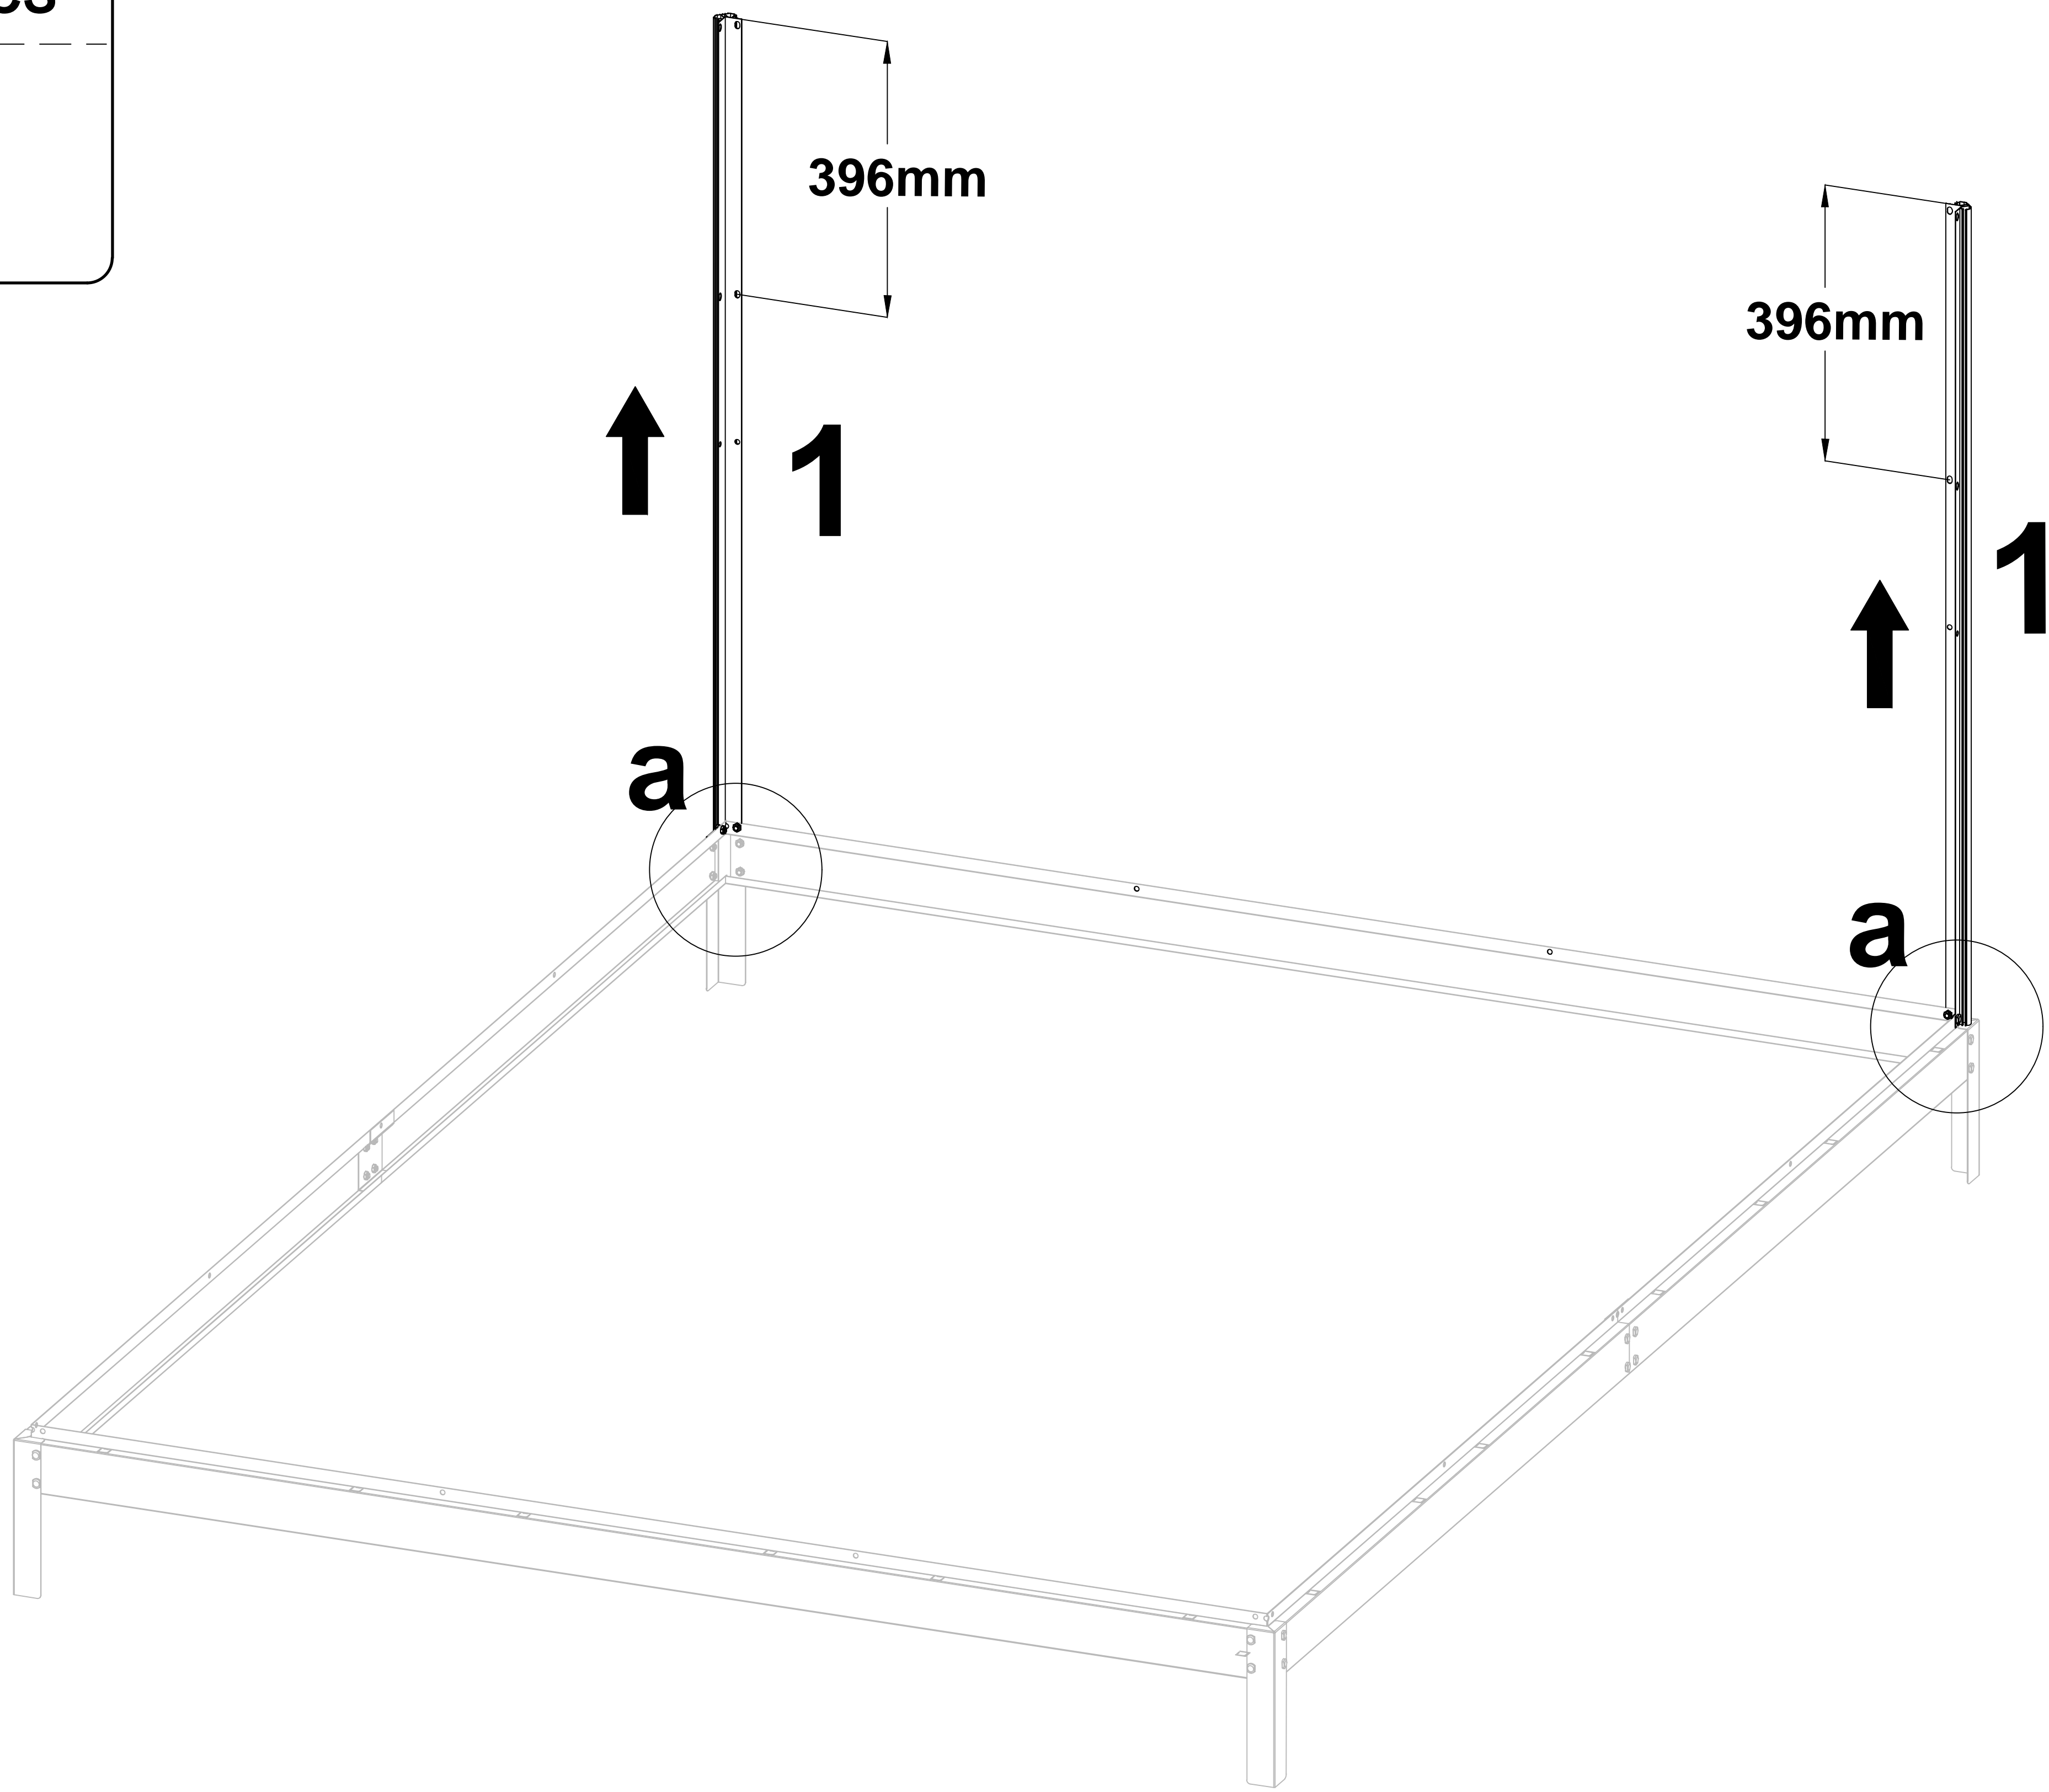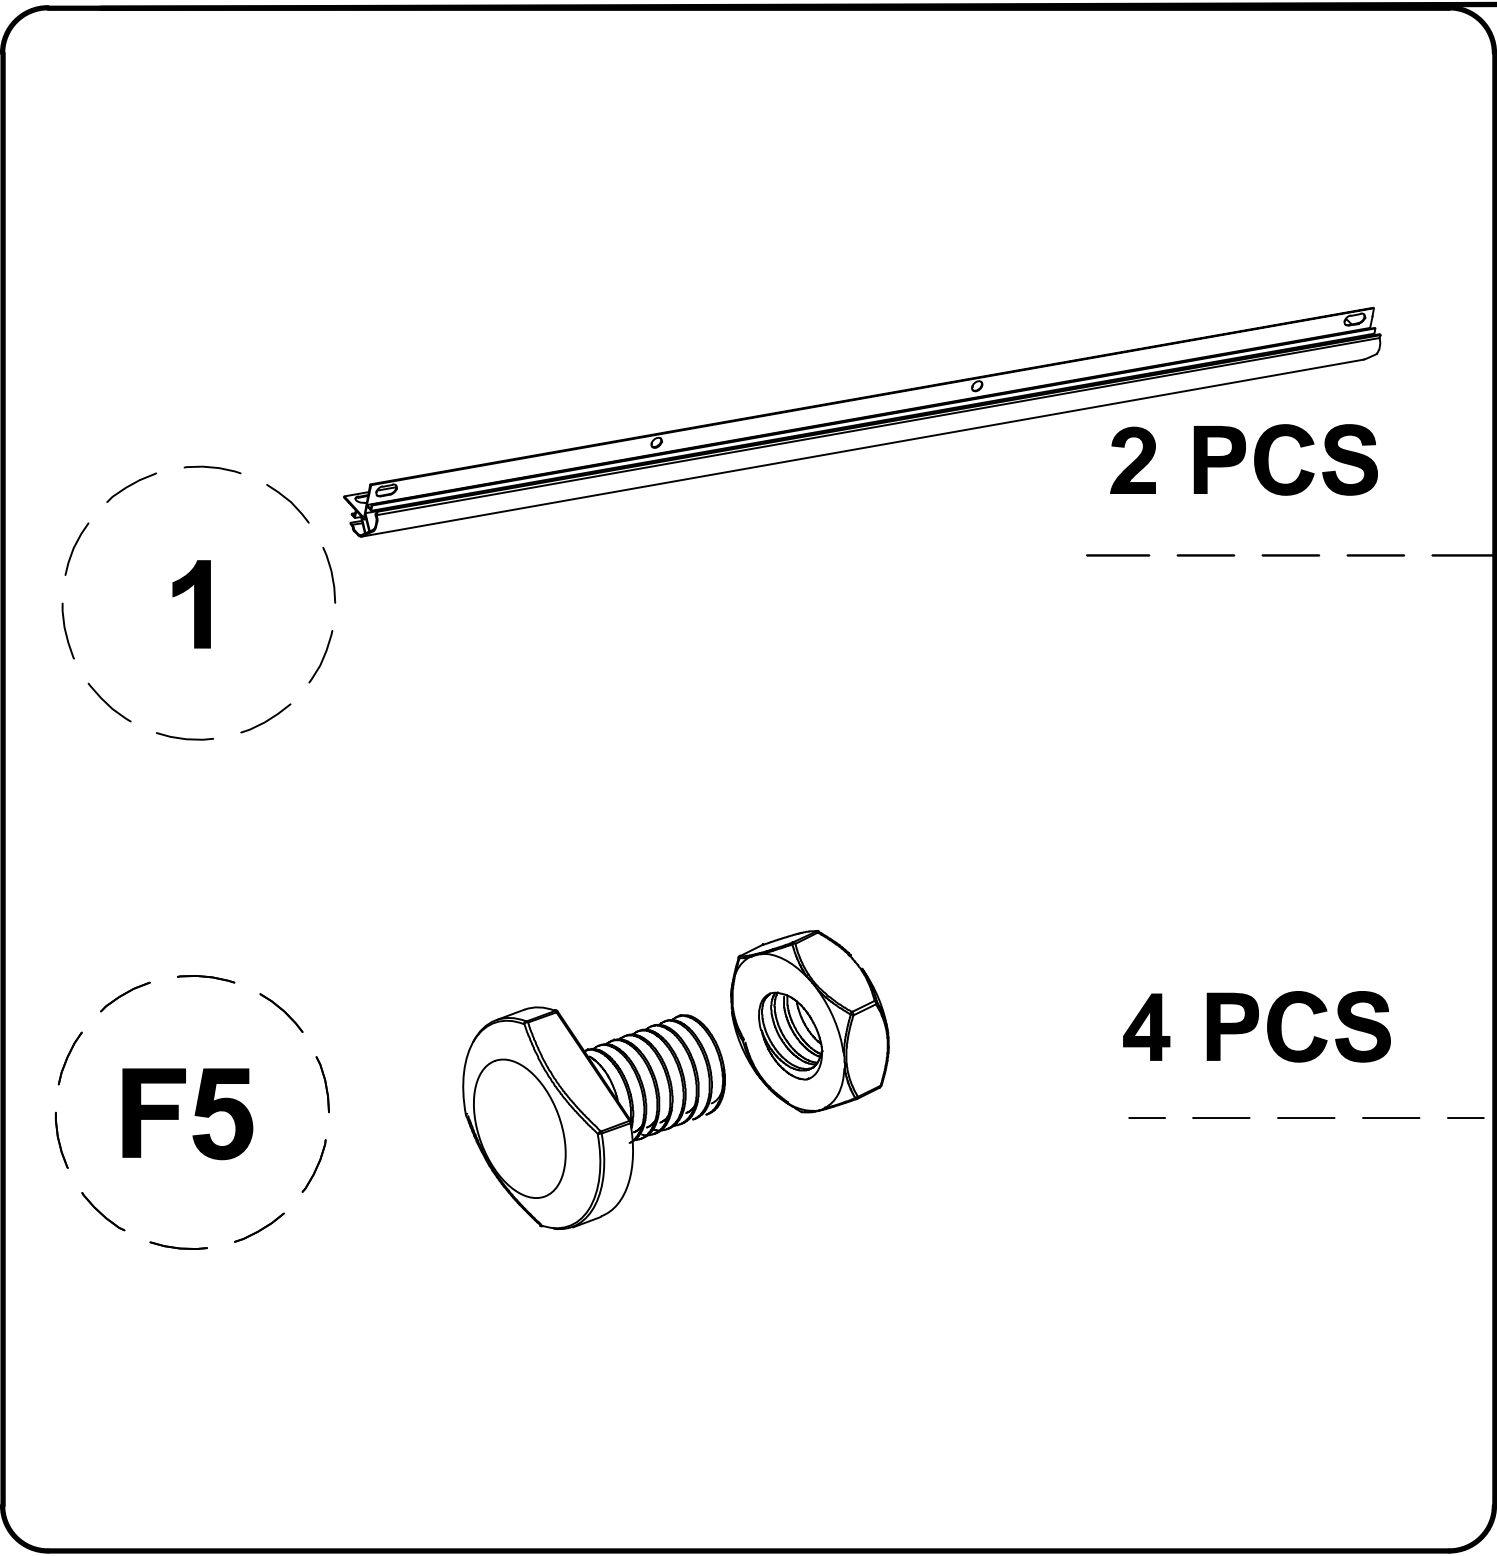




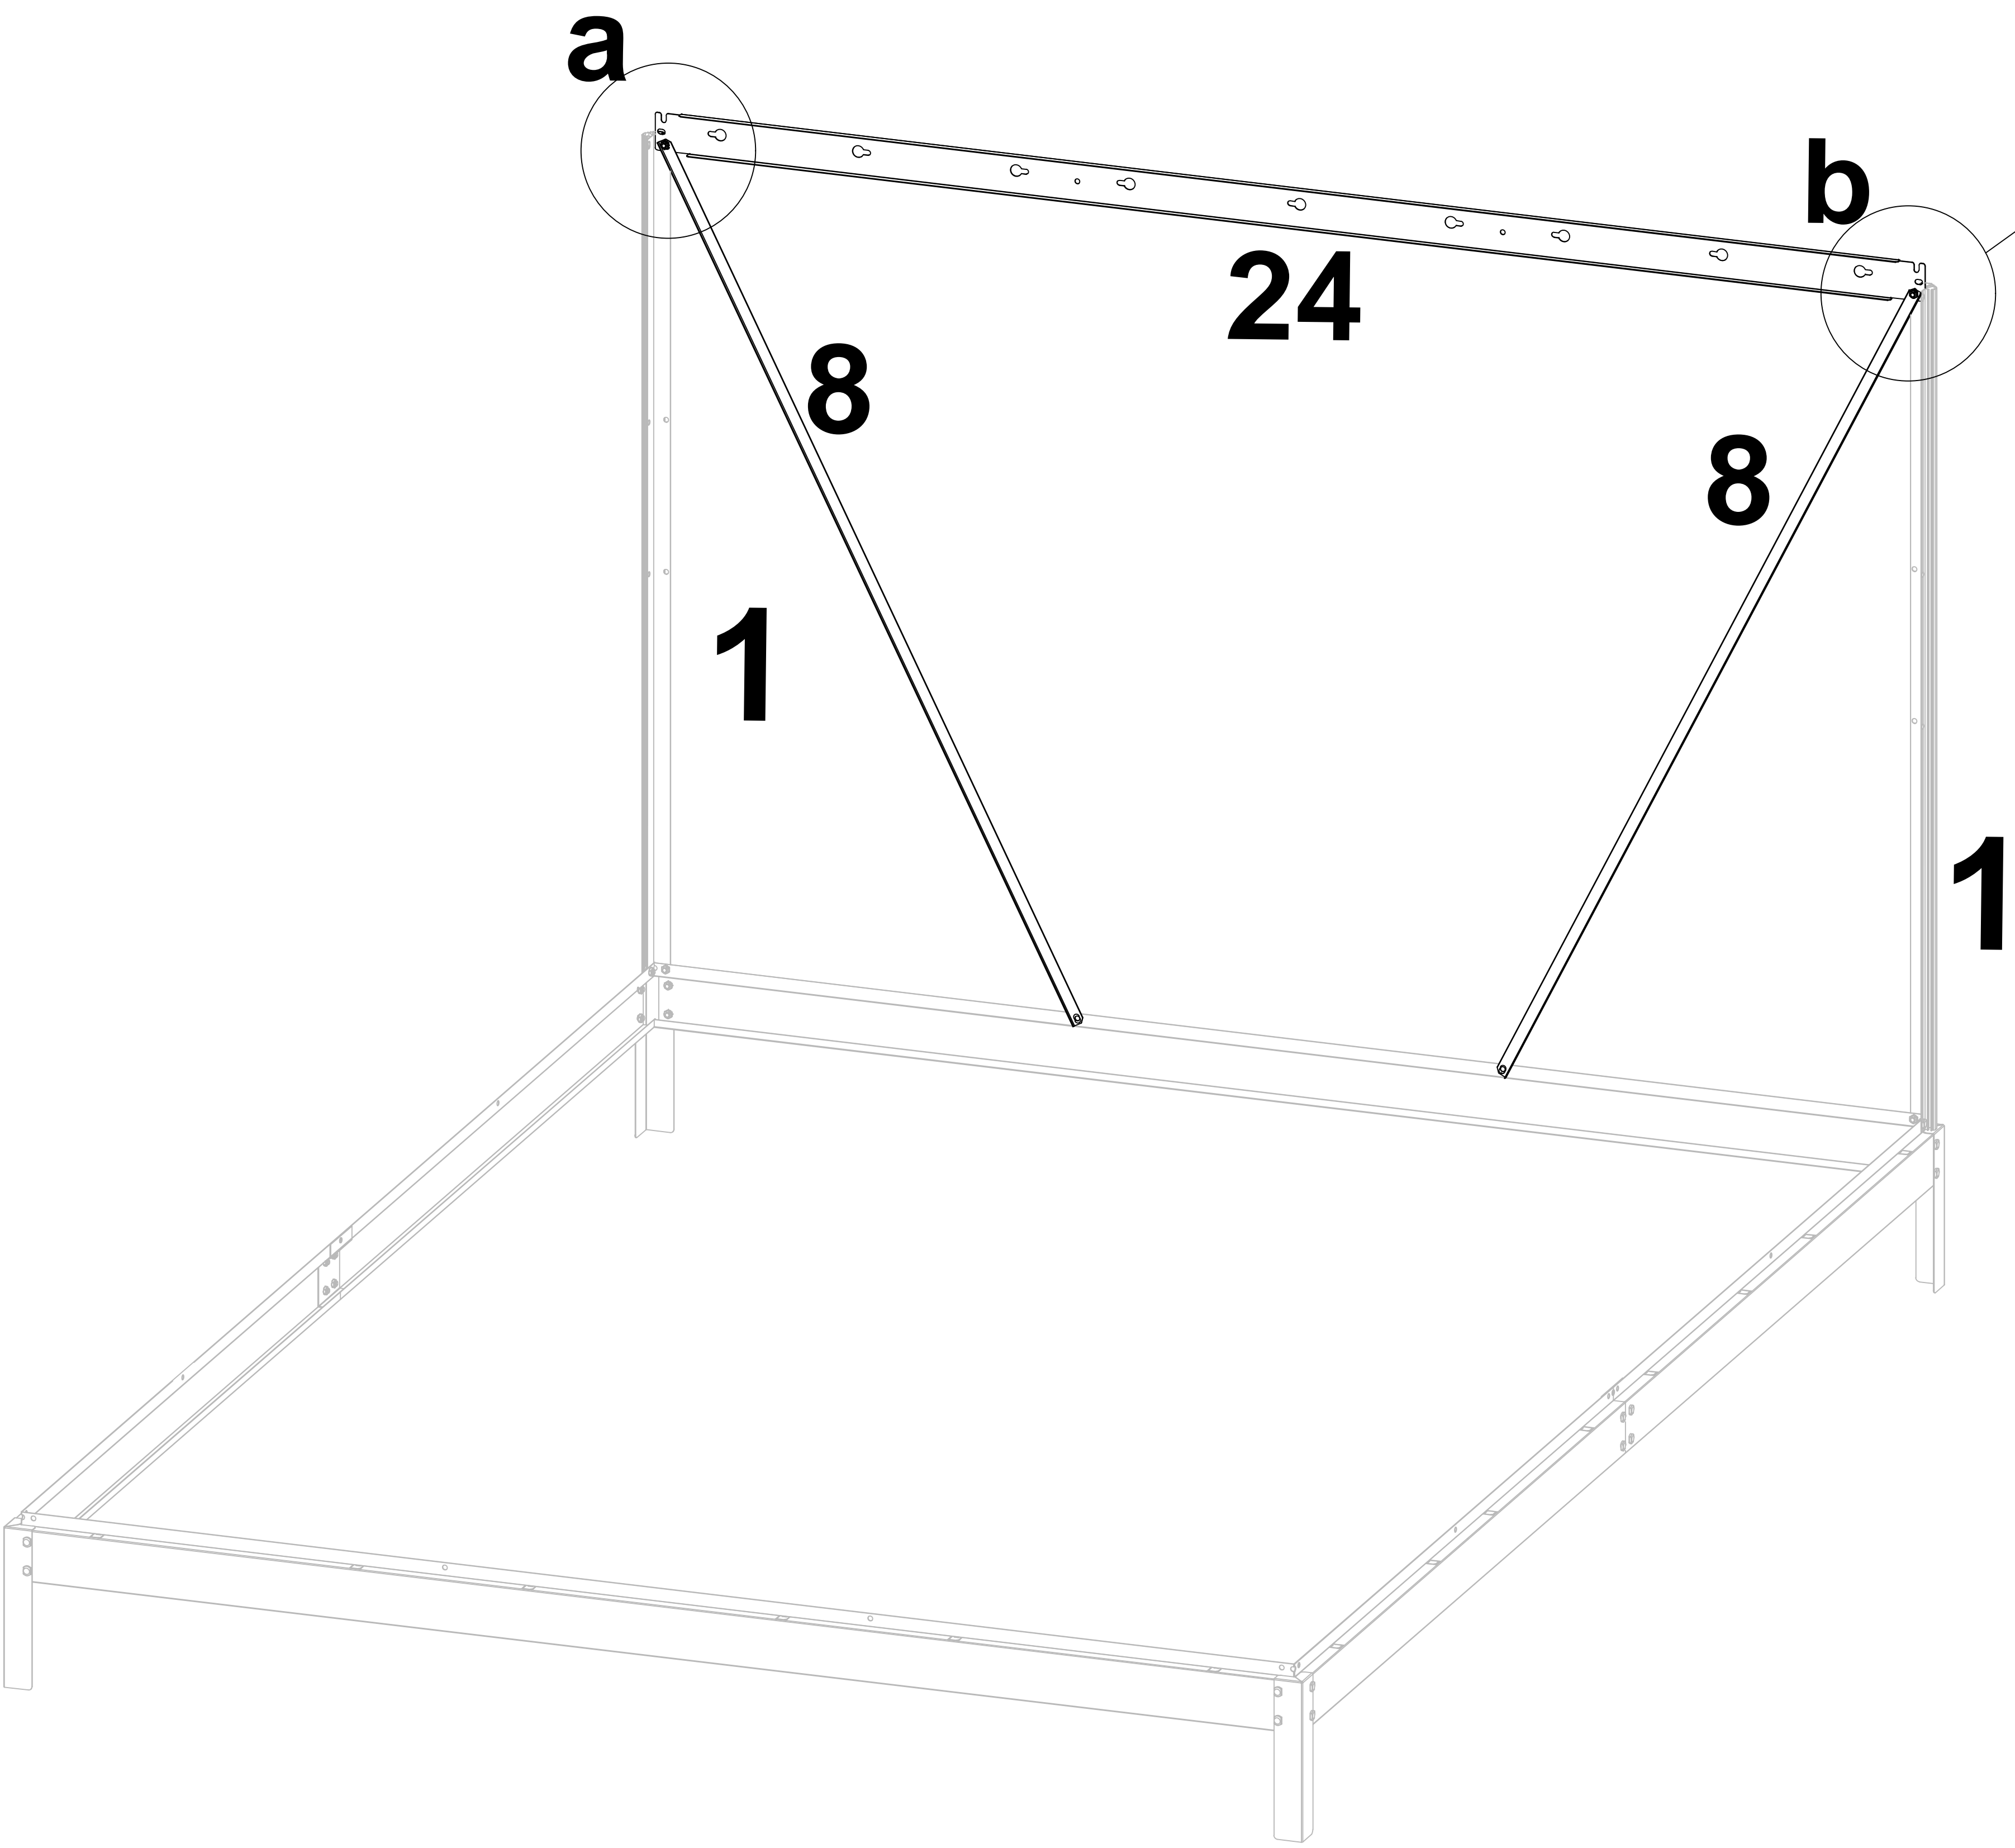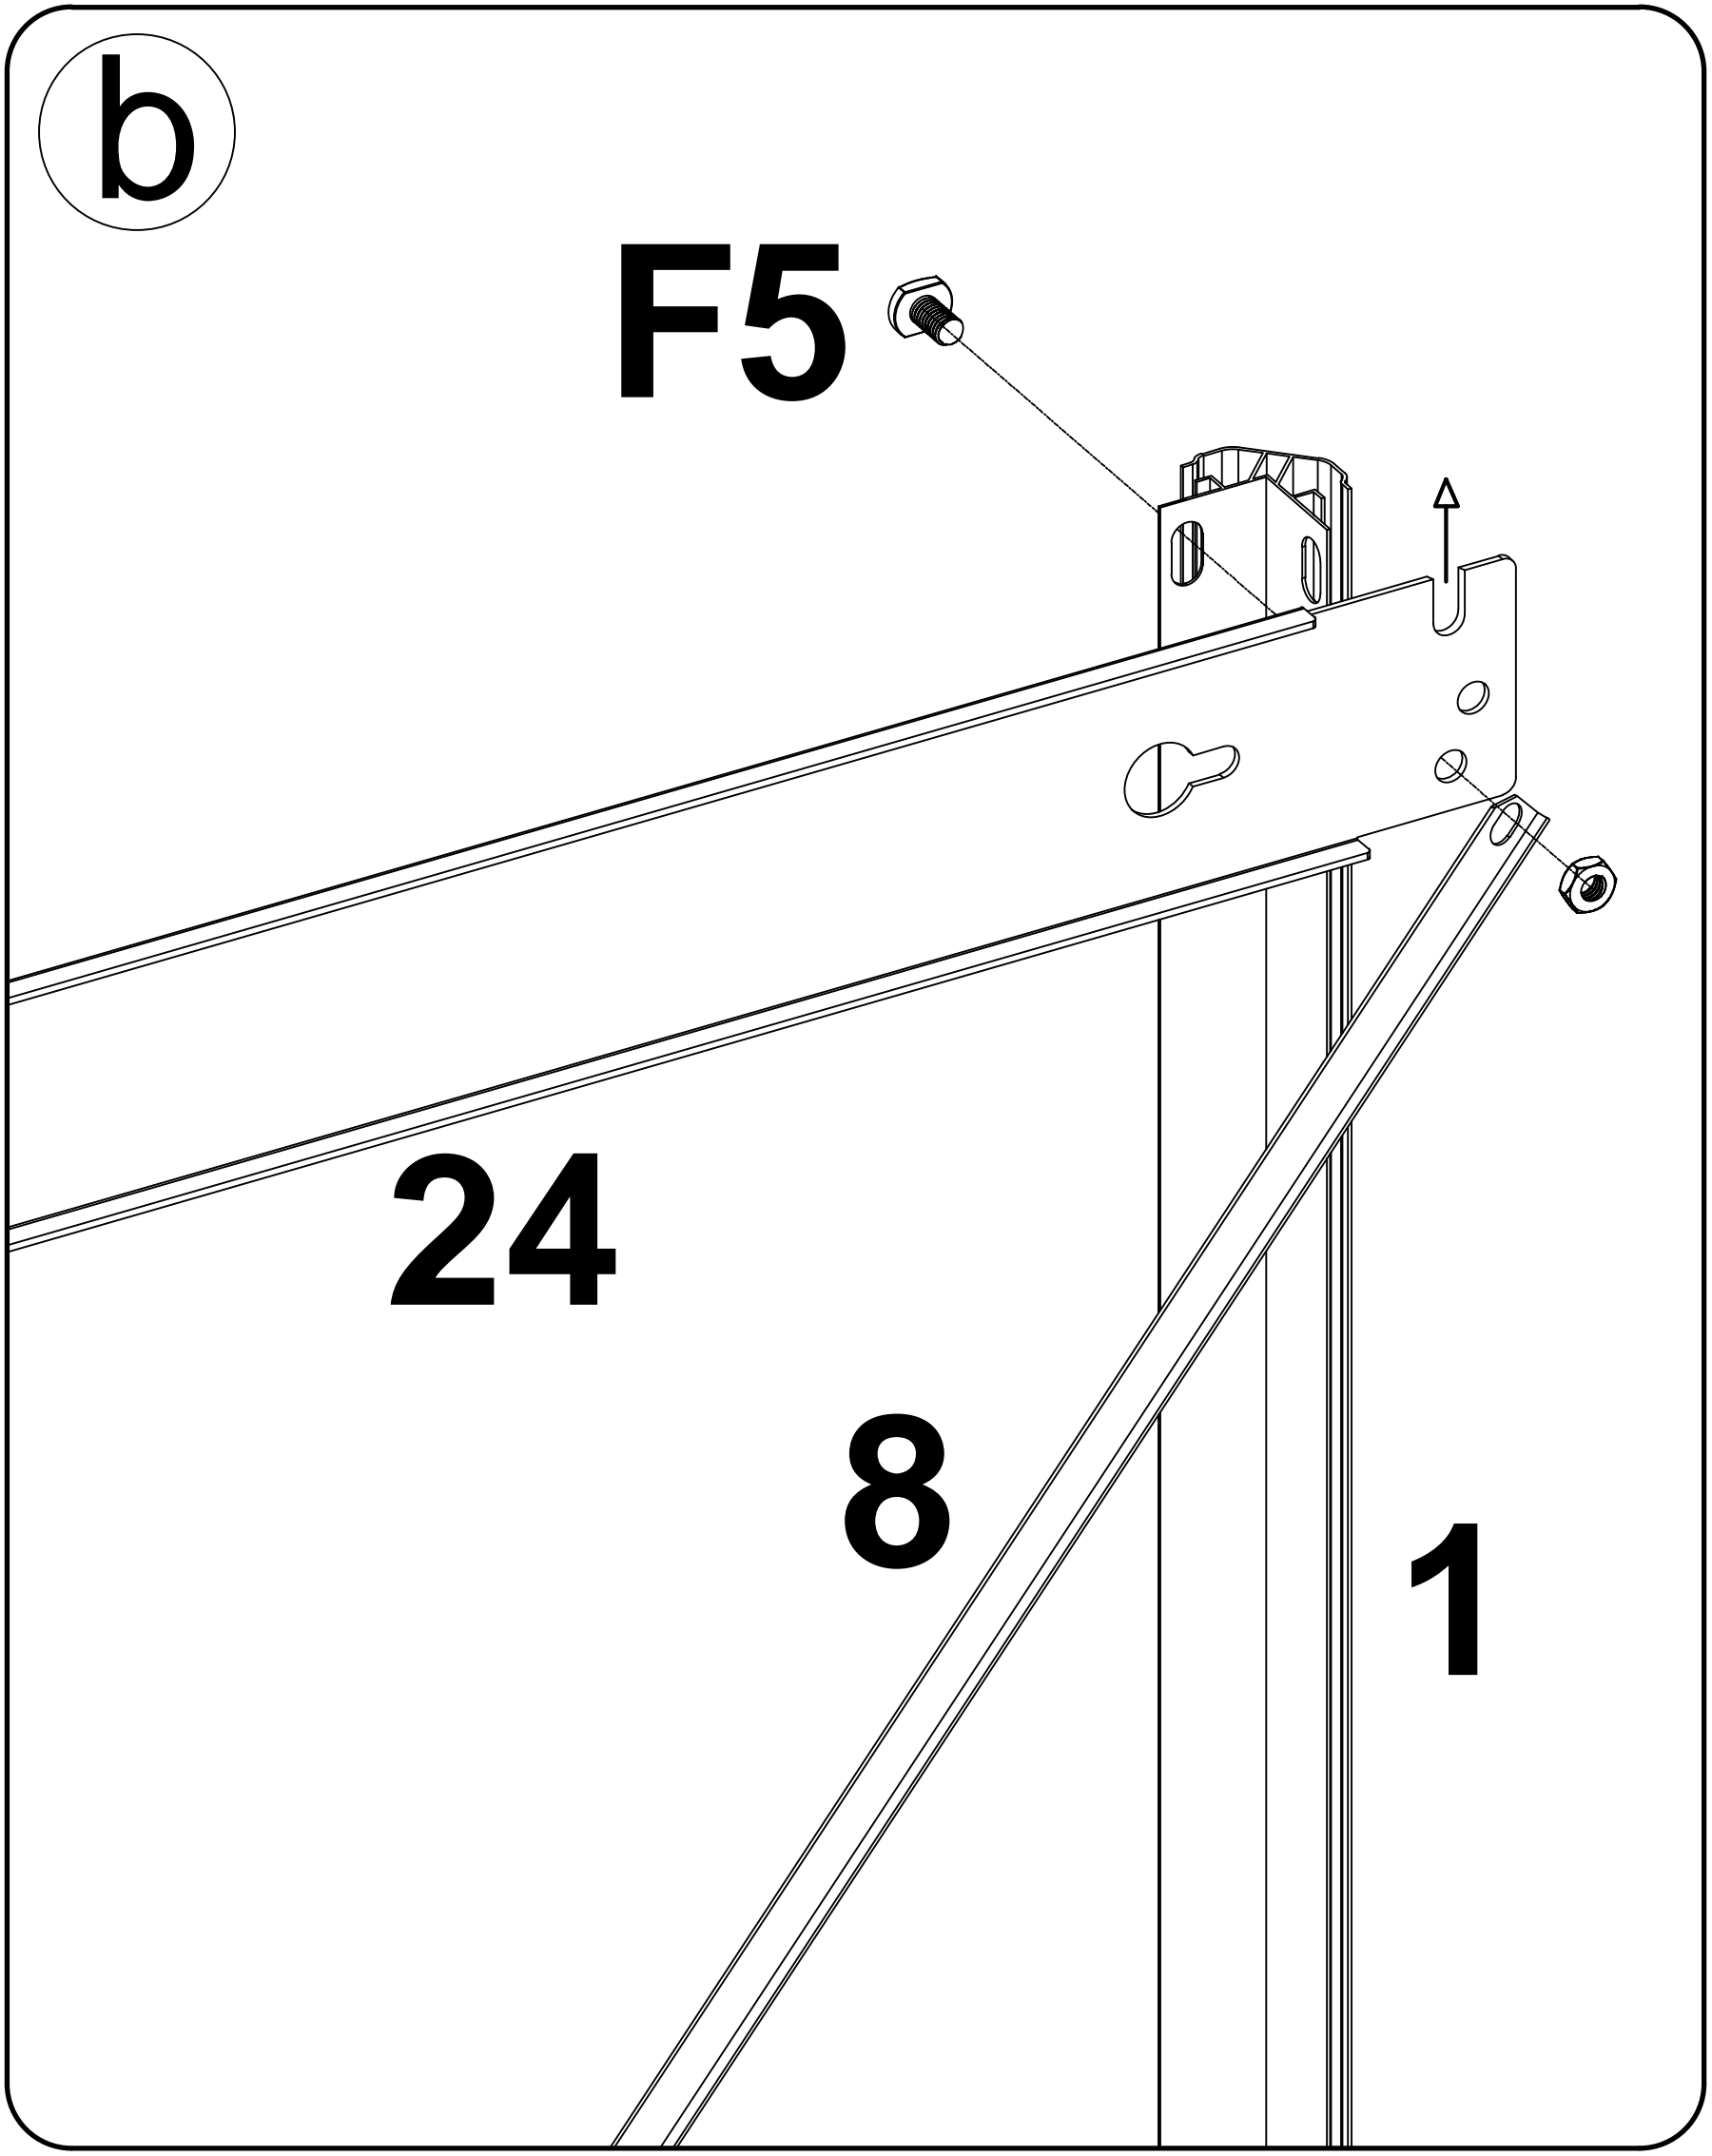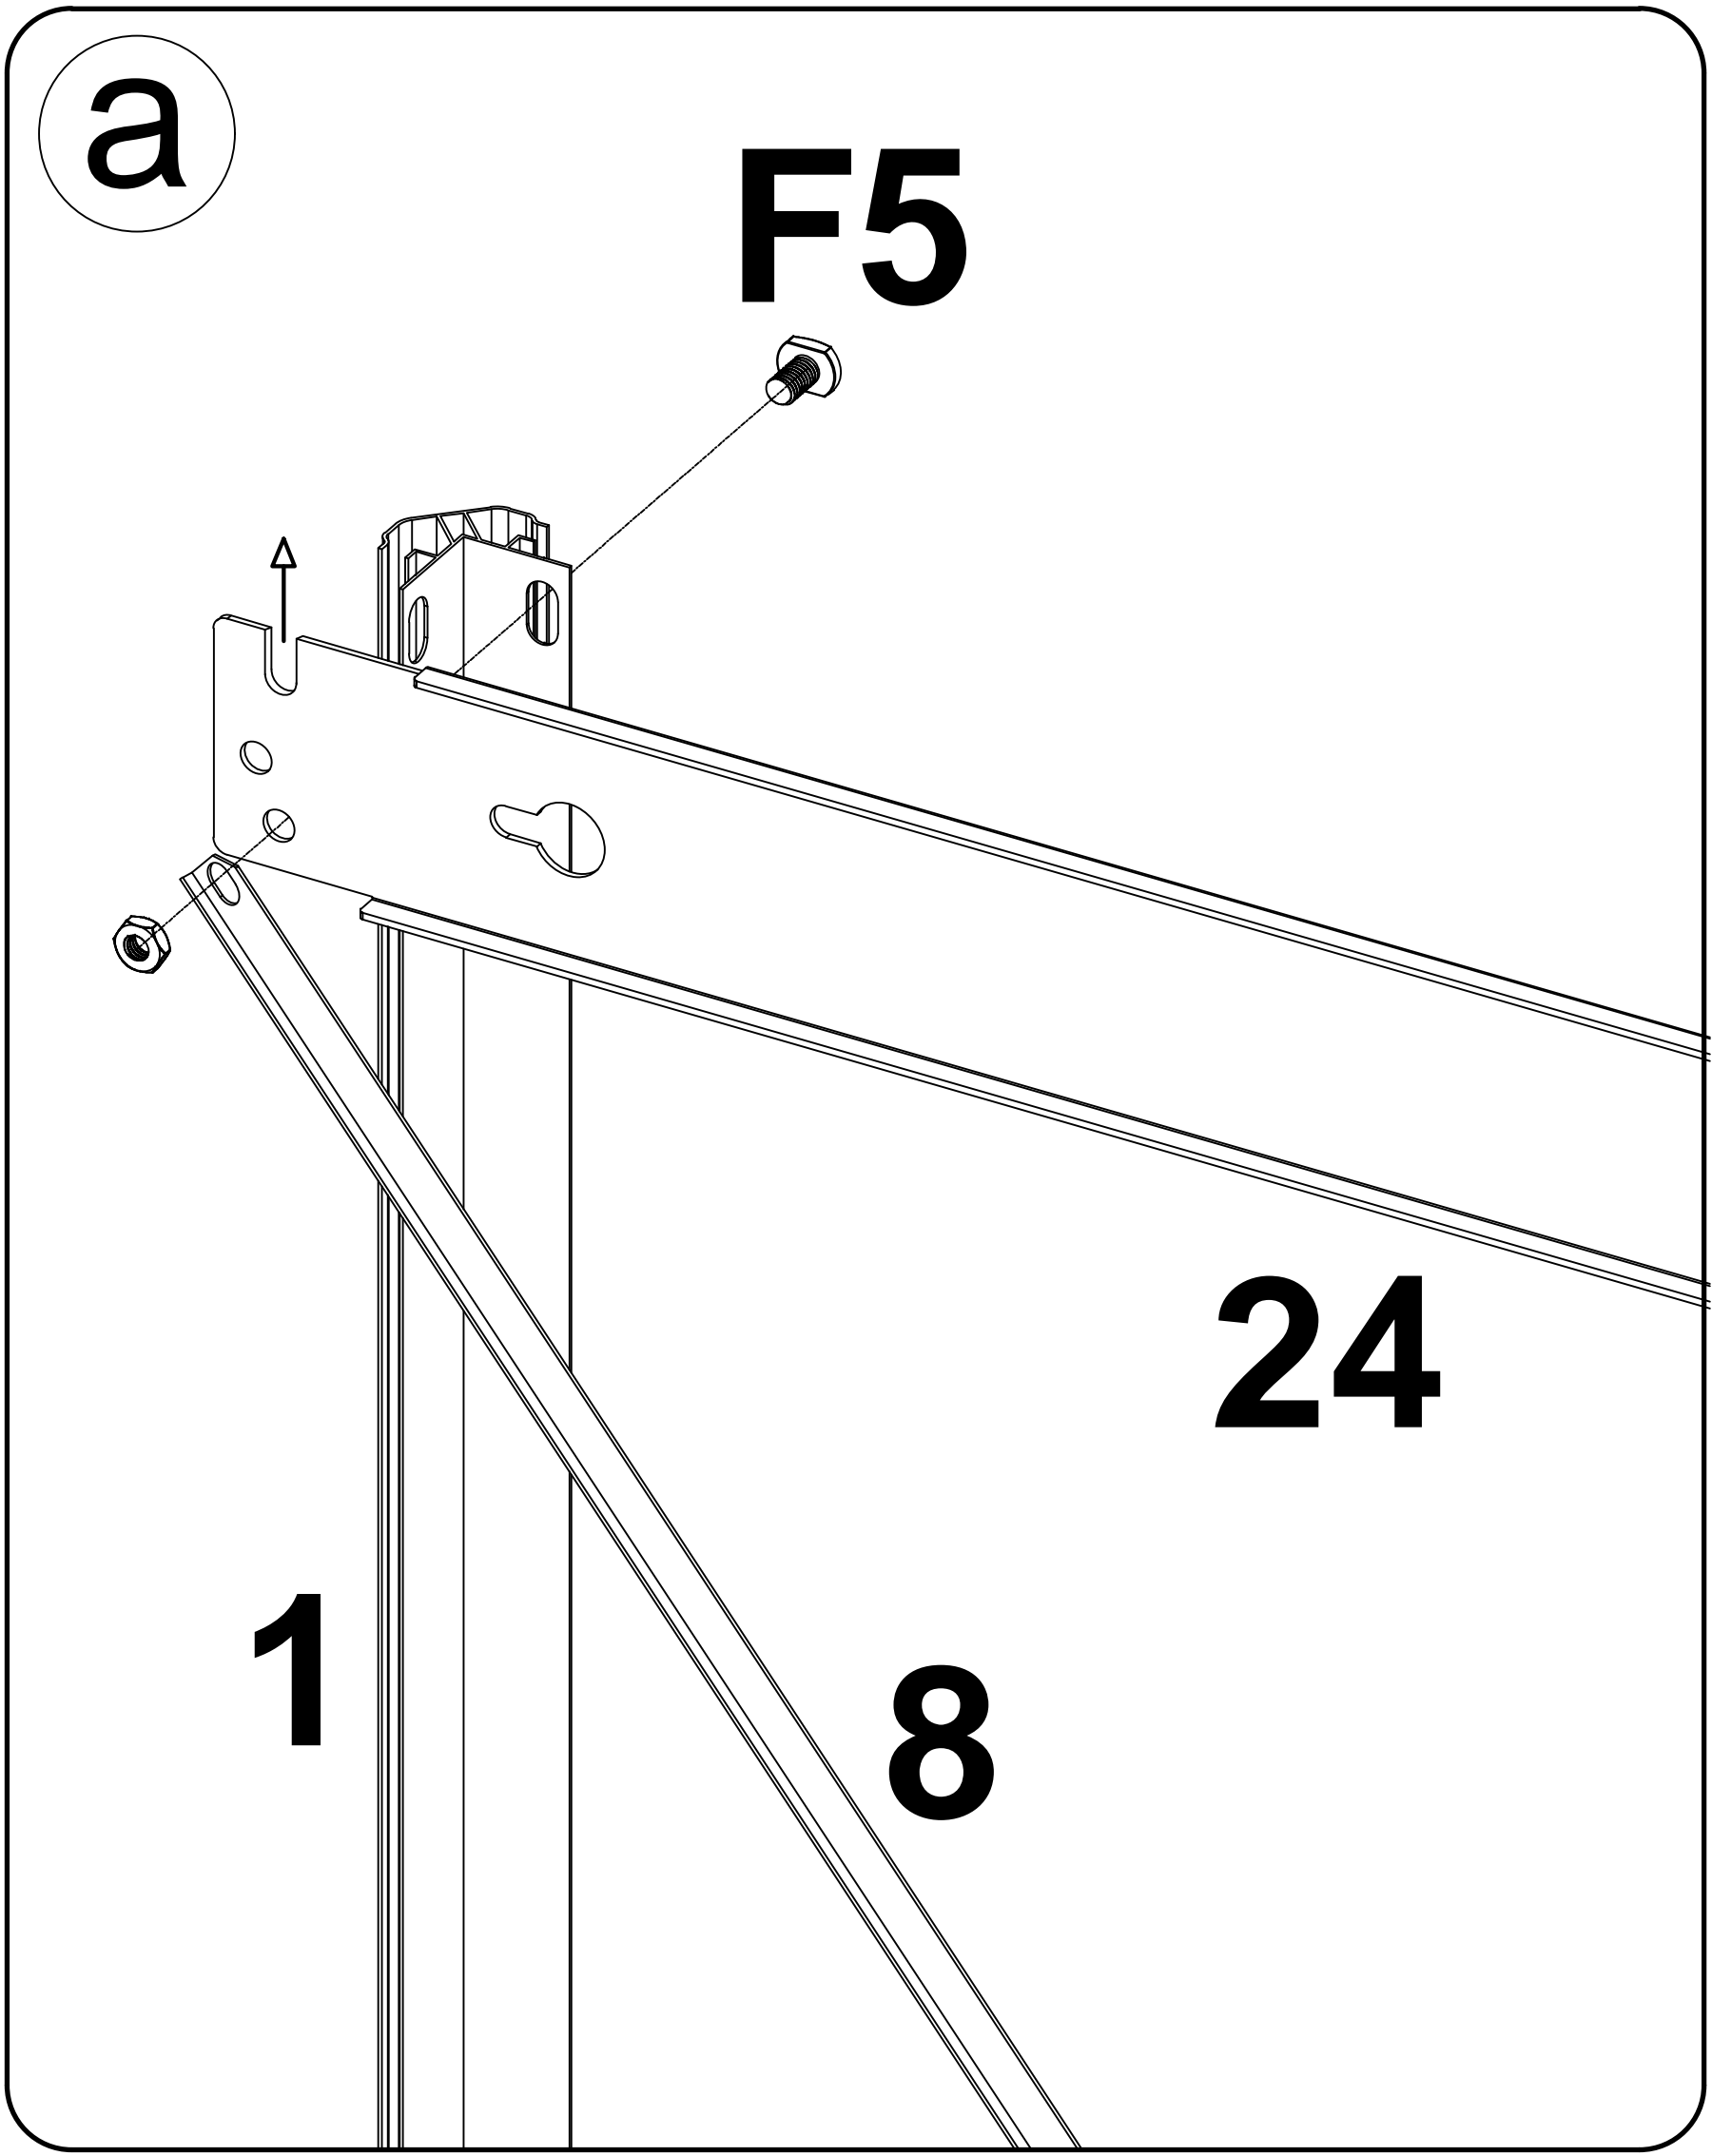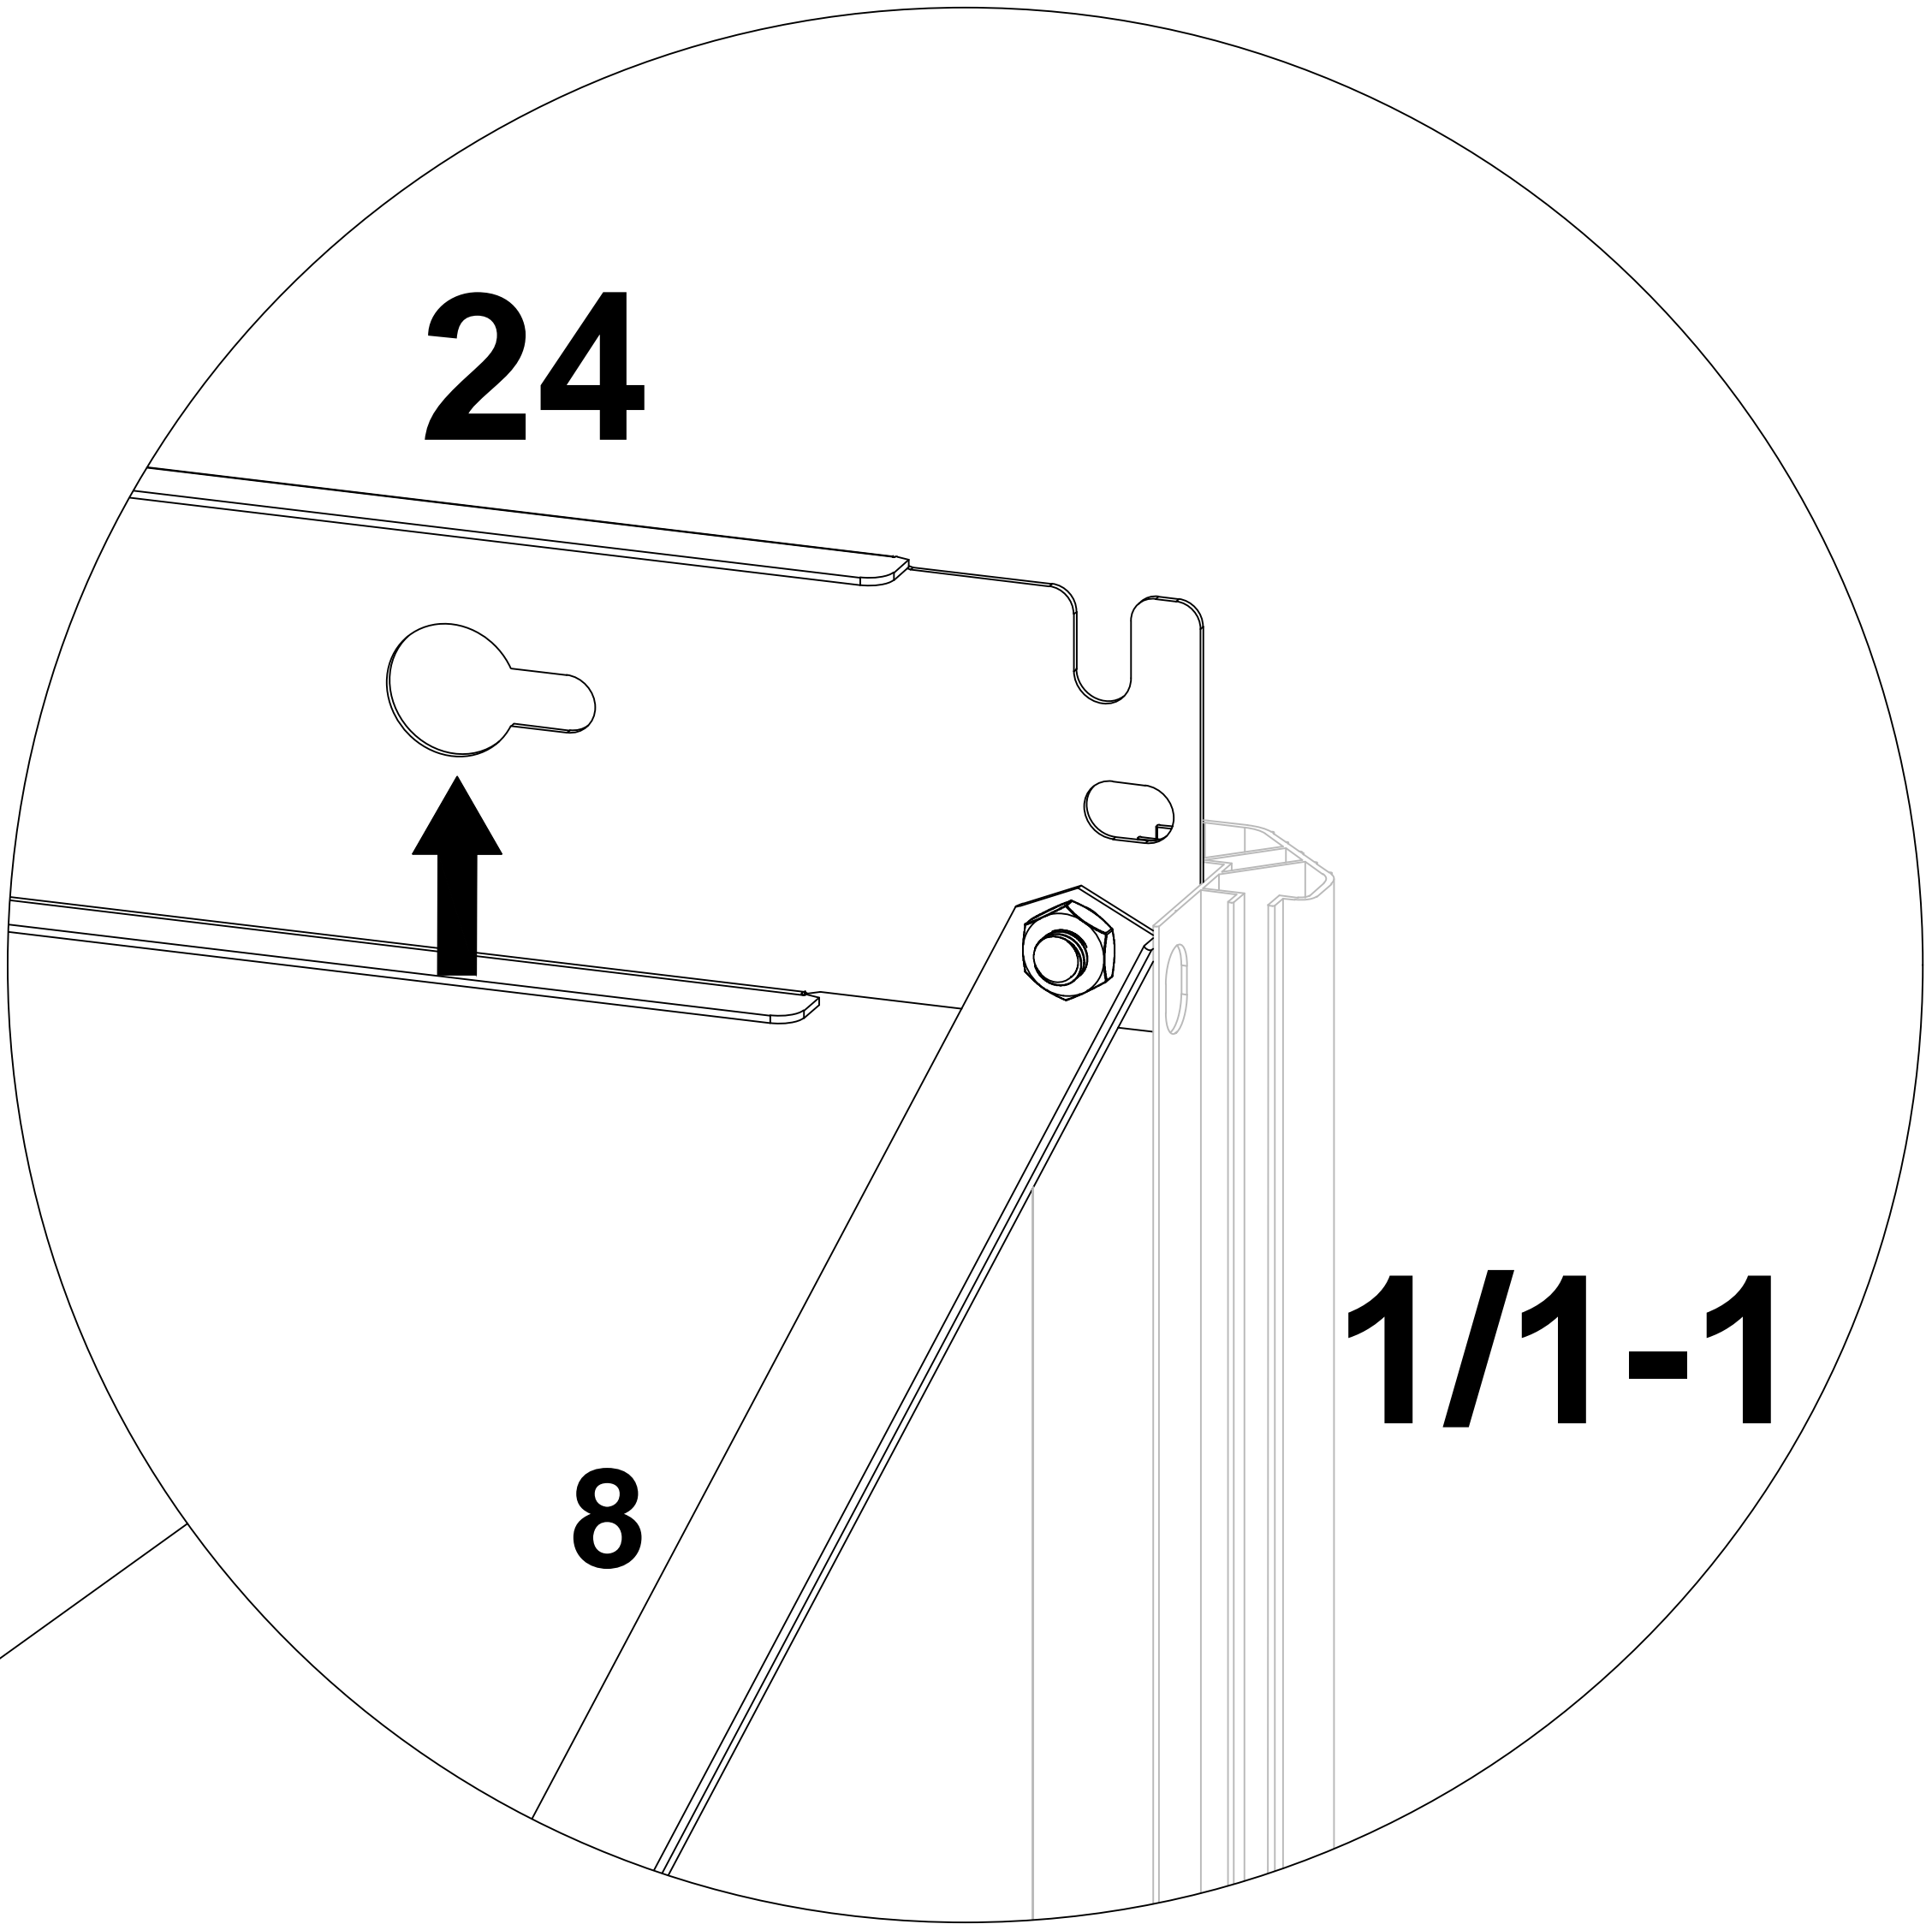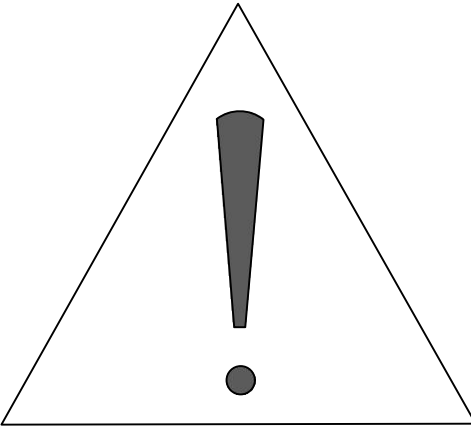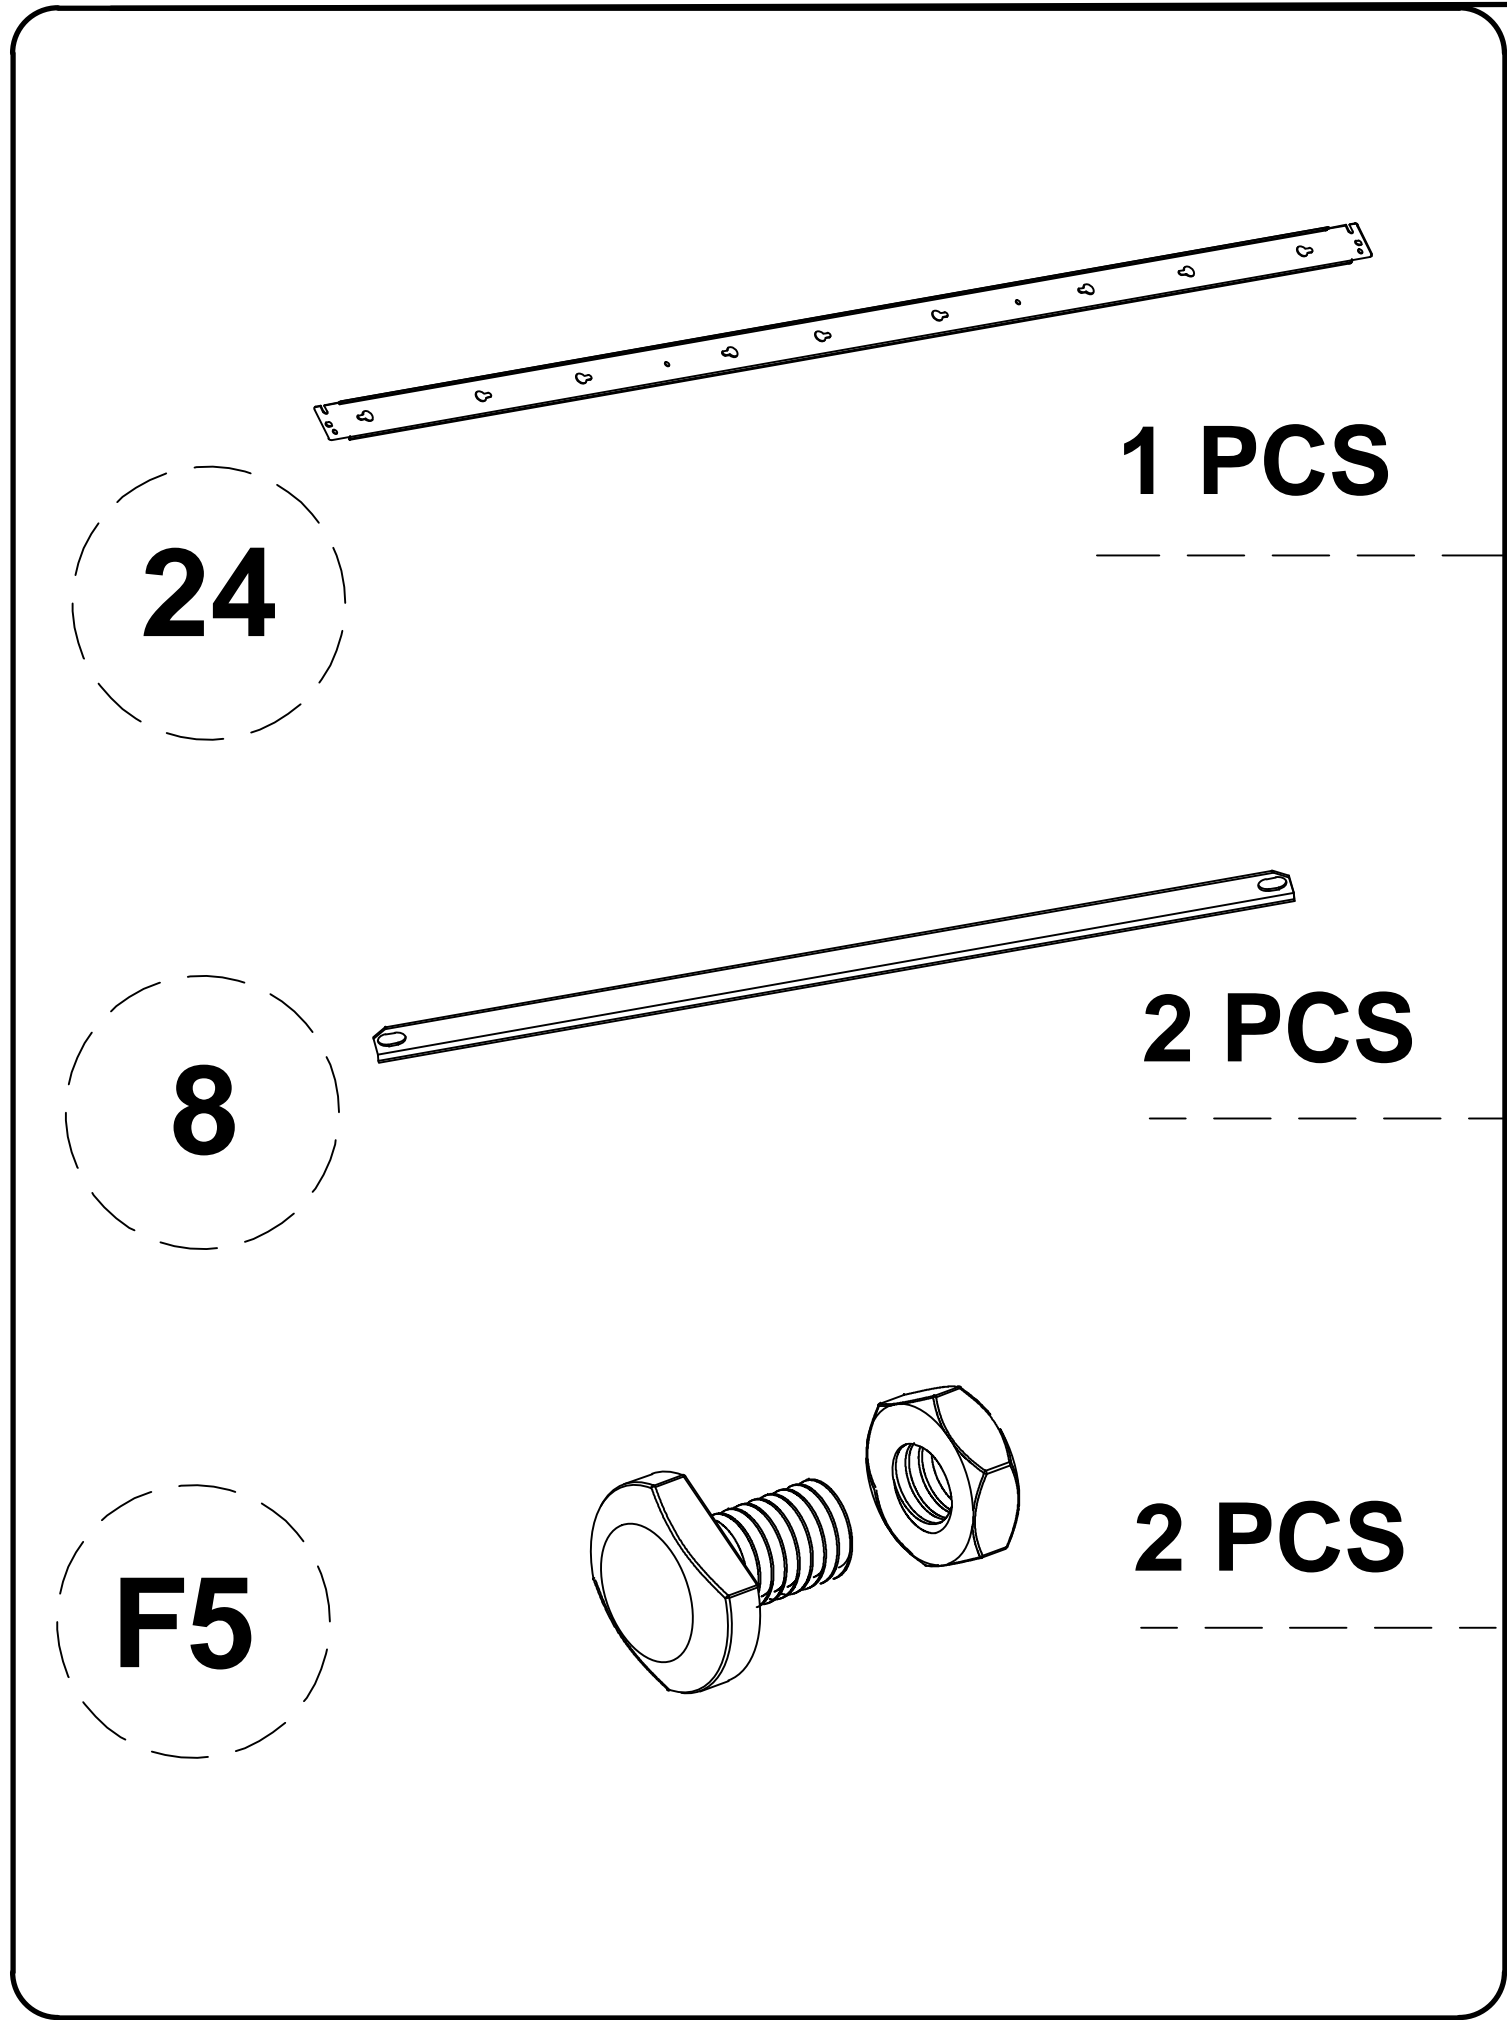


F5

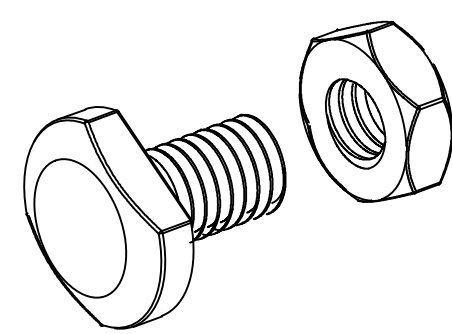

4 PCS

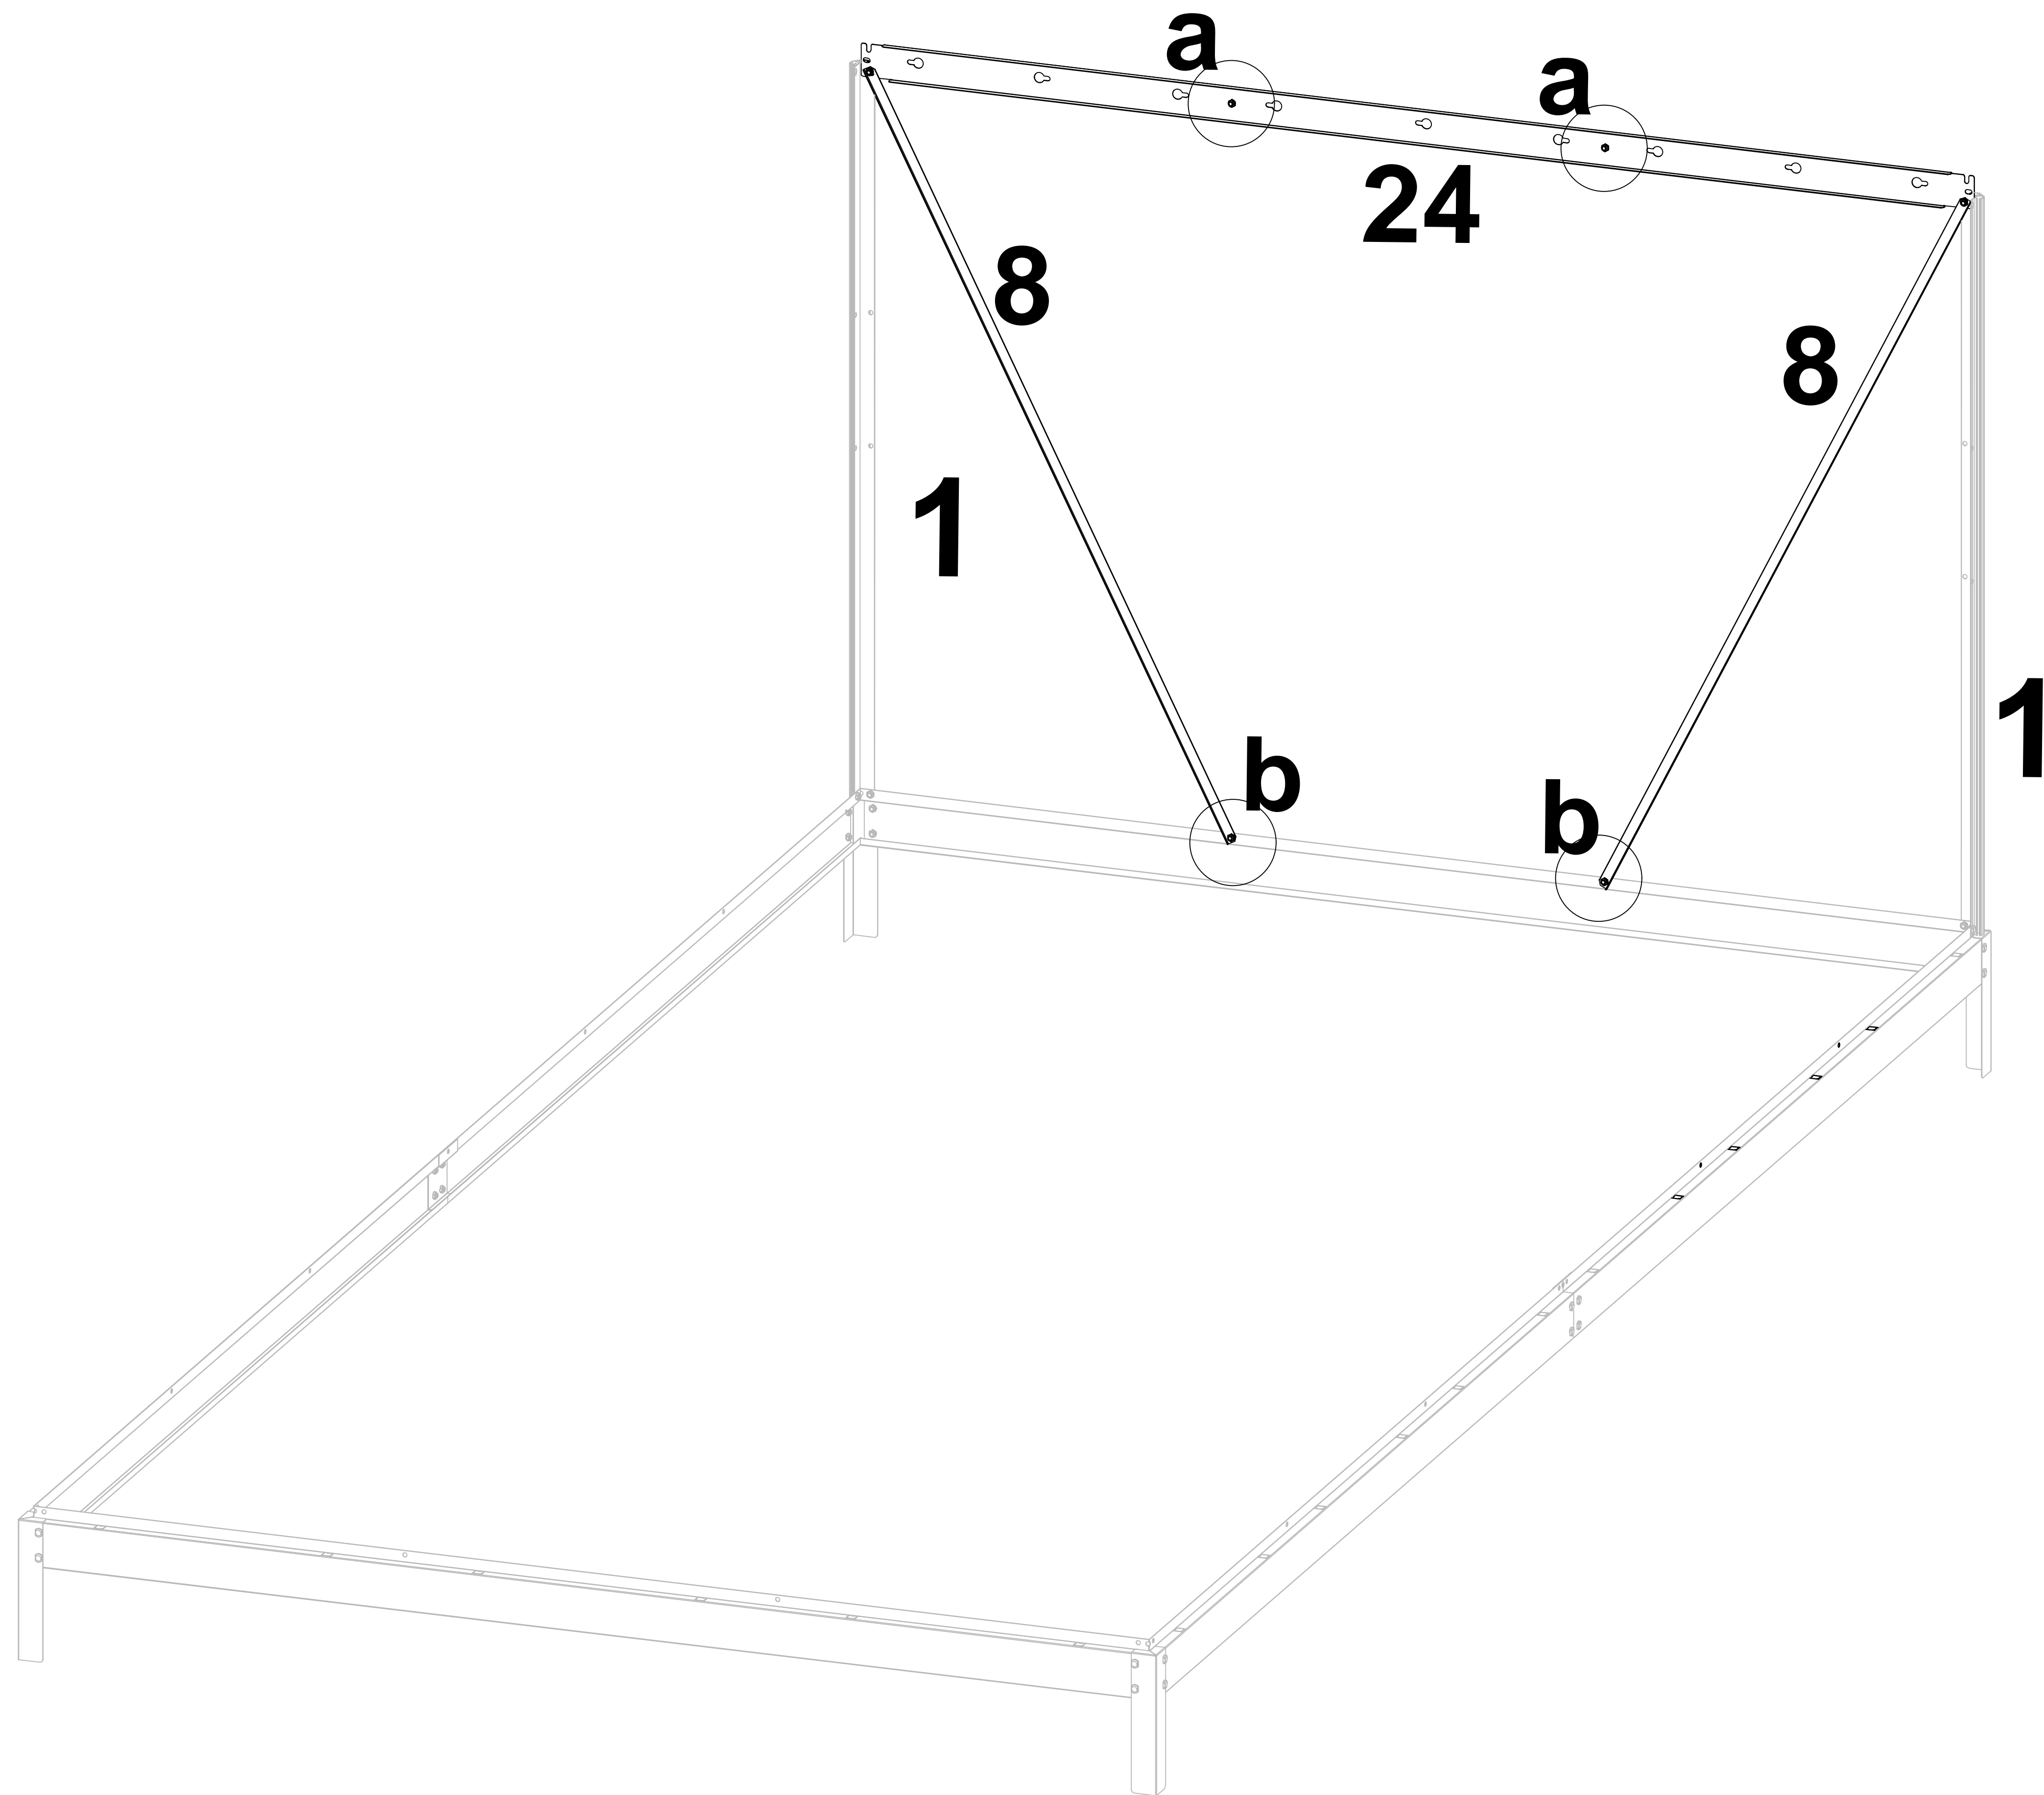

a

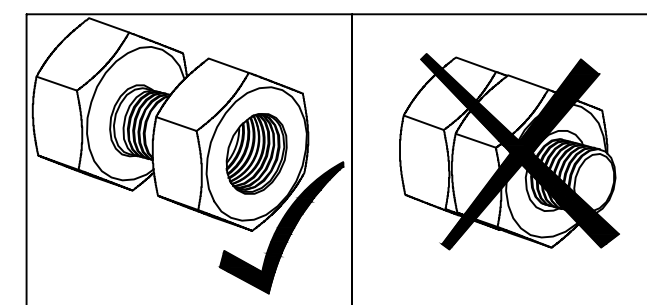


F5

X2

24

b

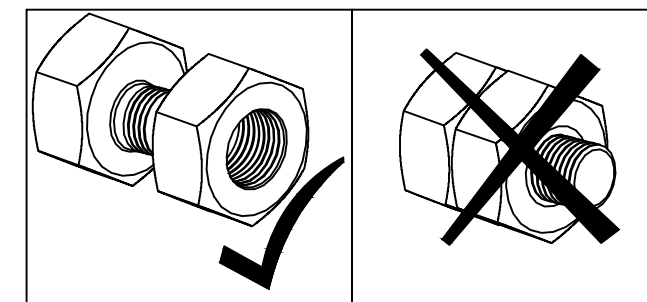





F5

F5

21


8

8

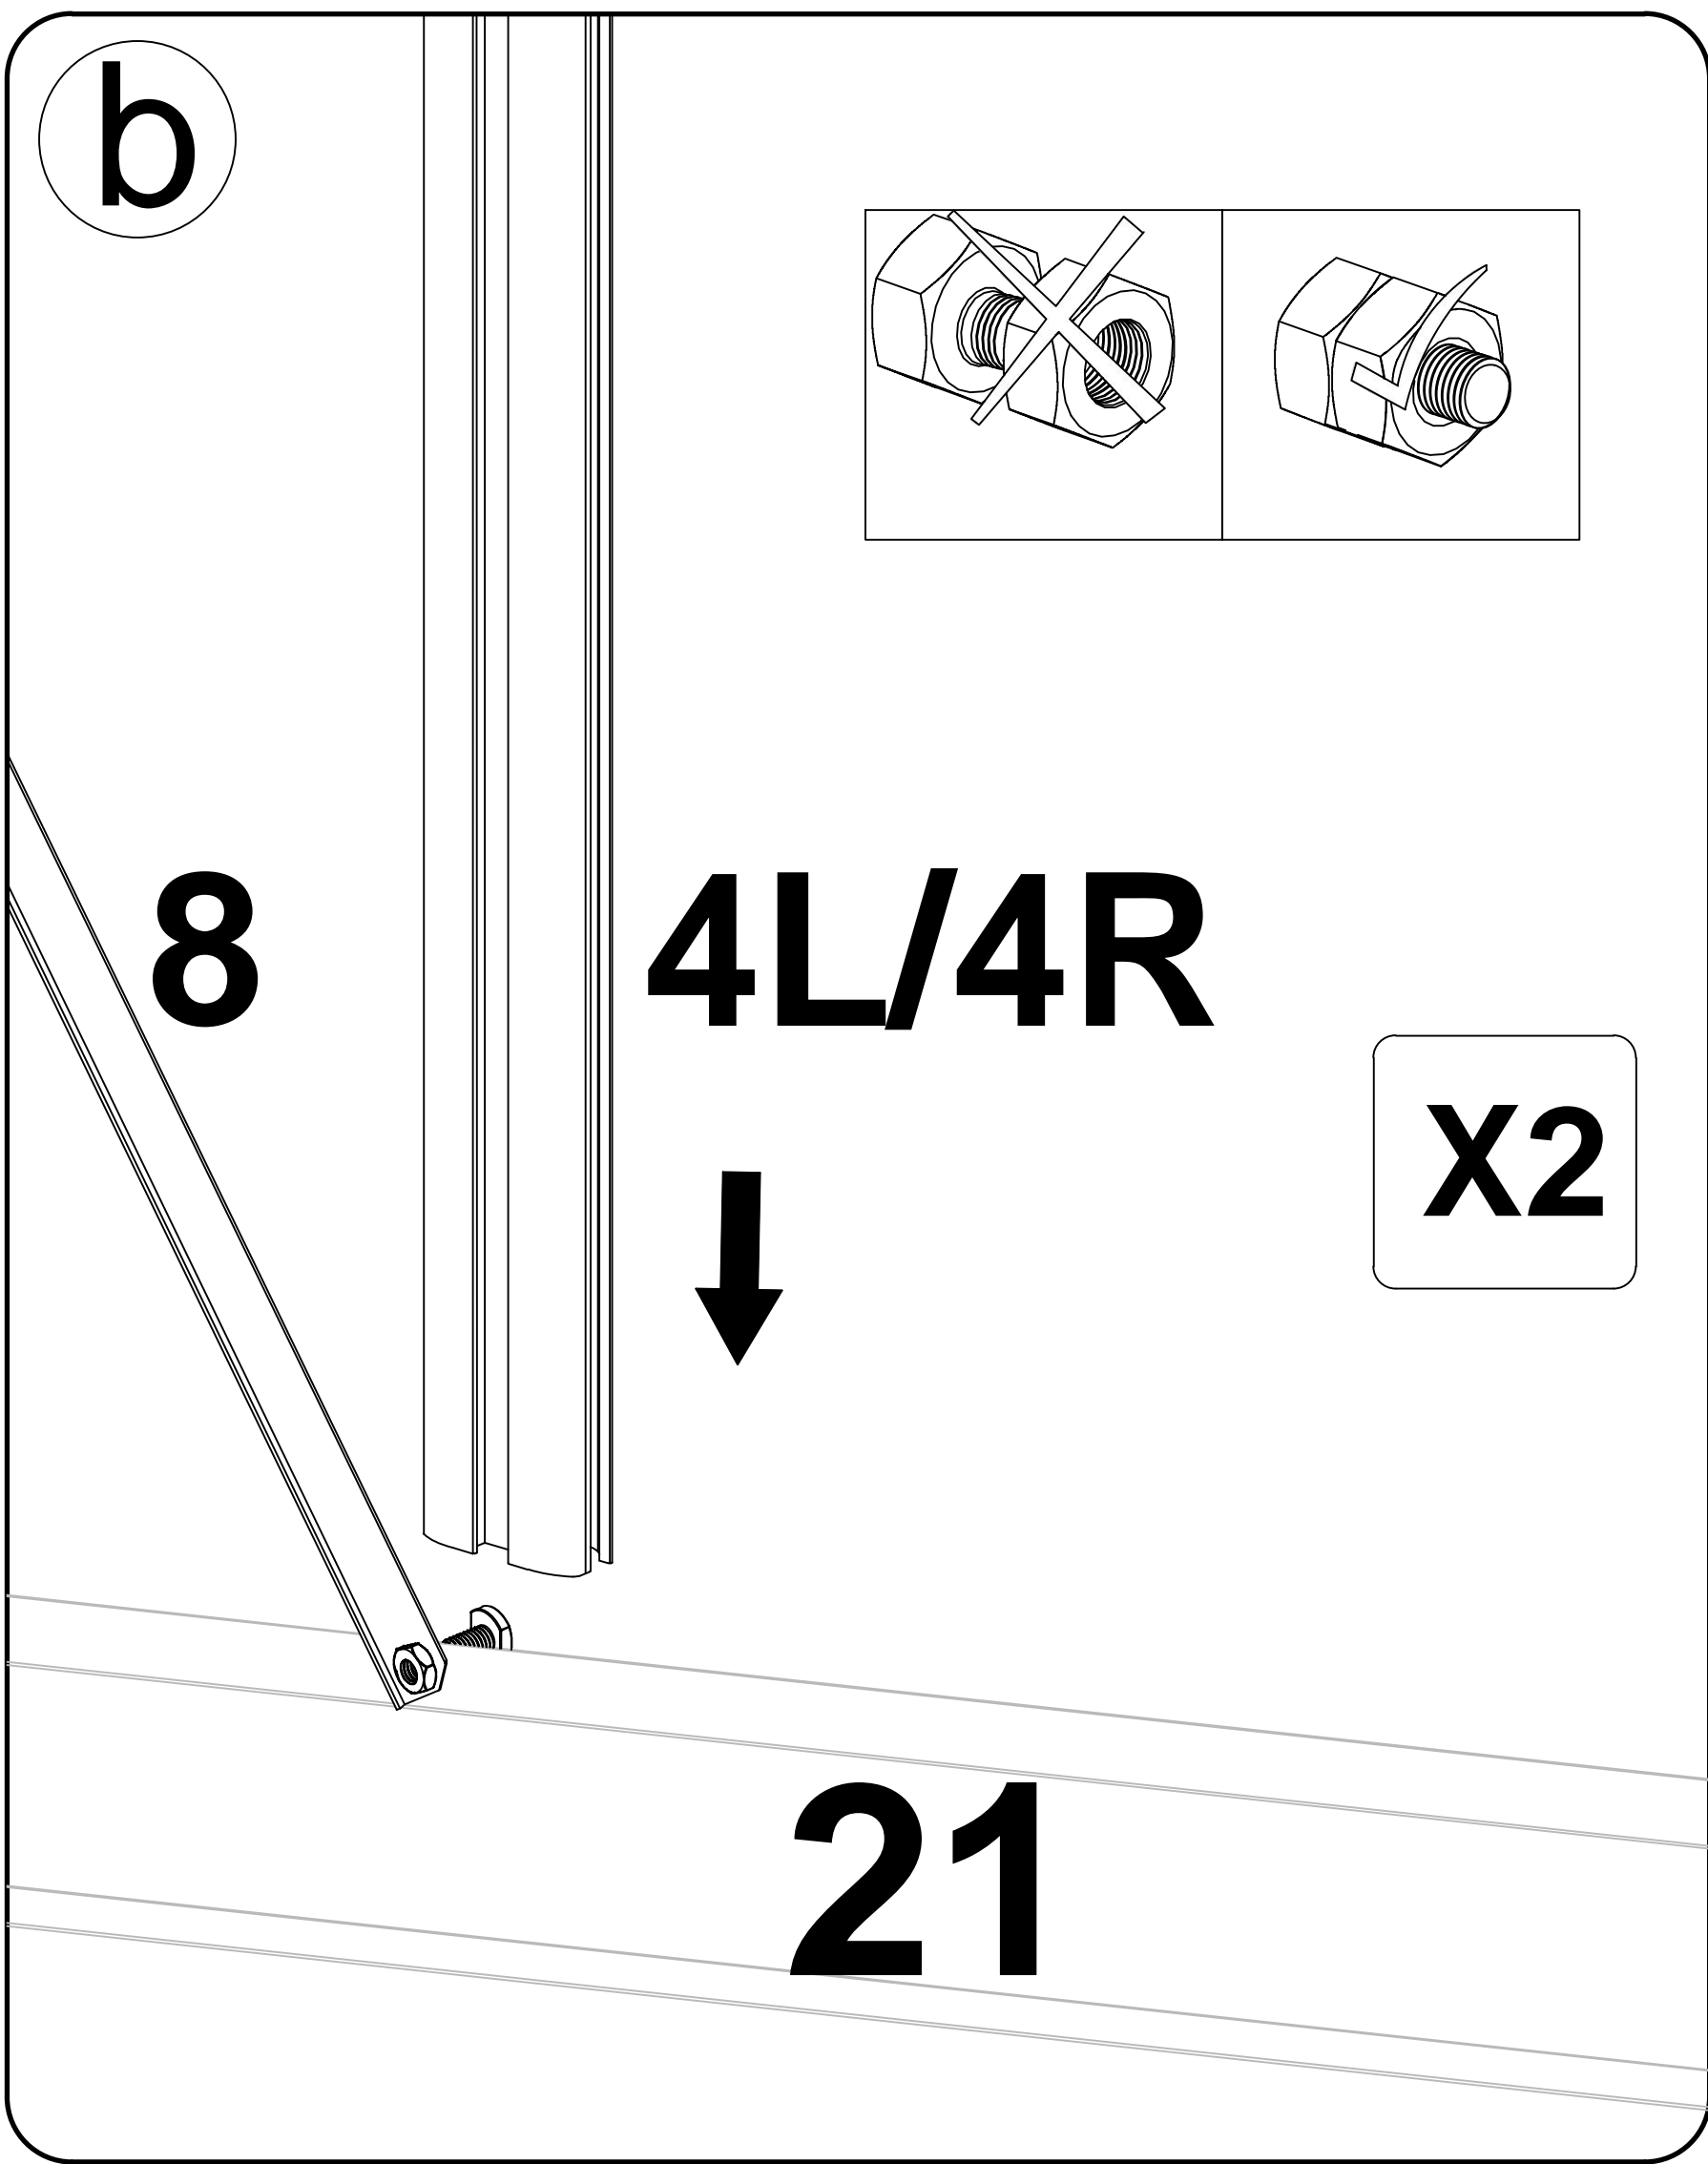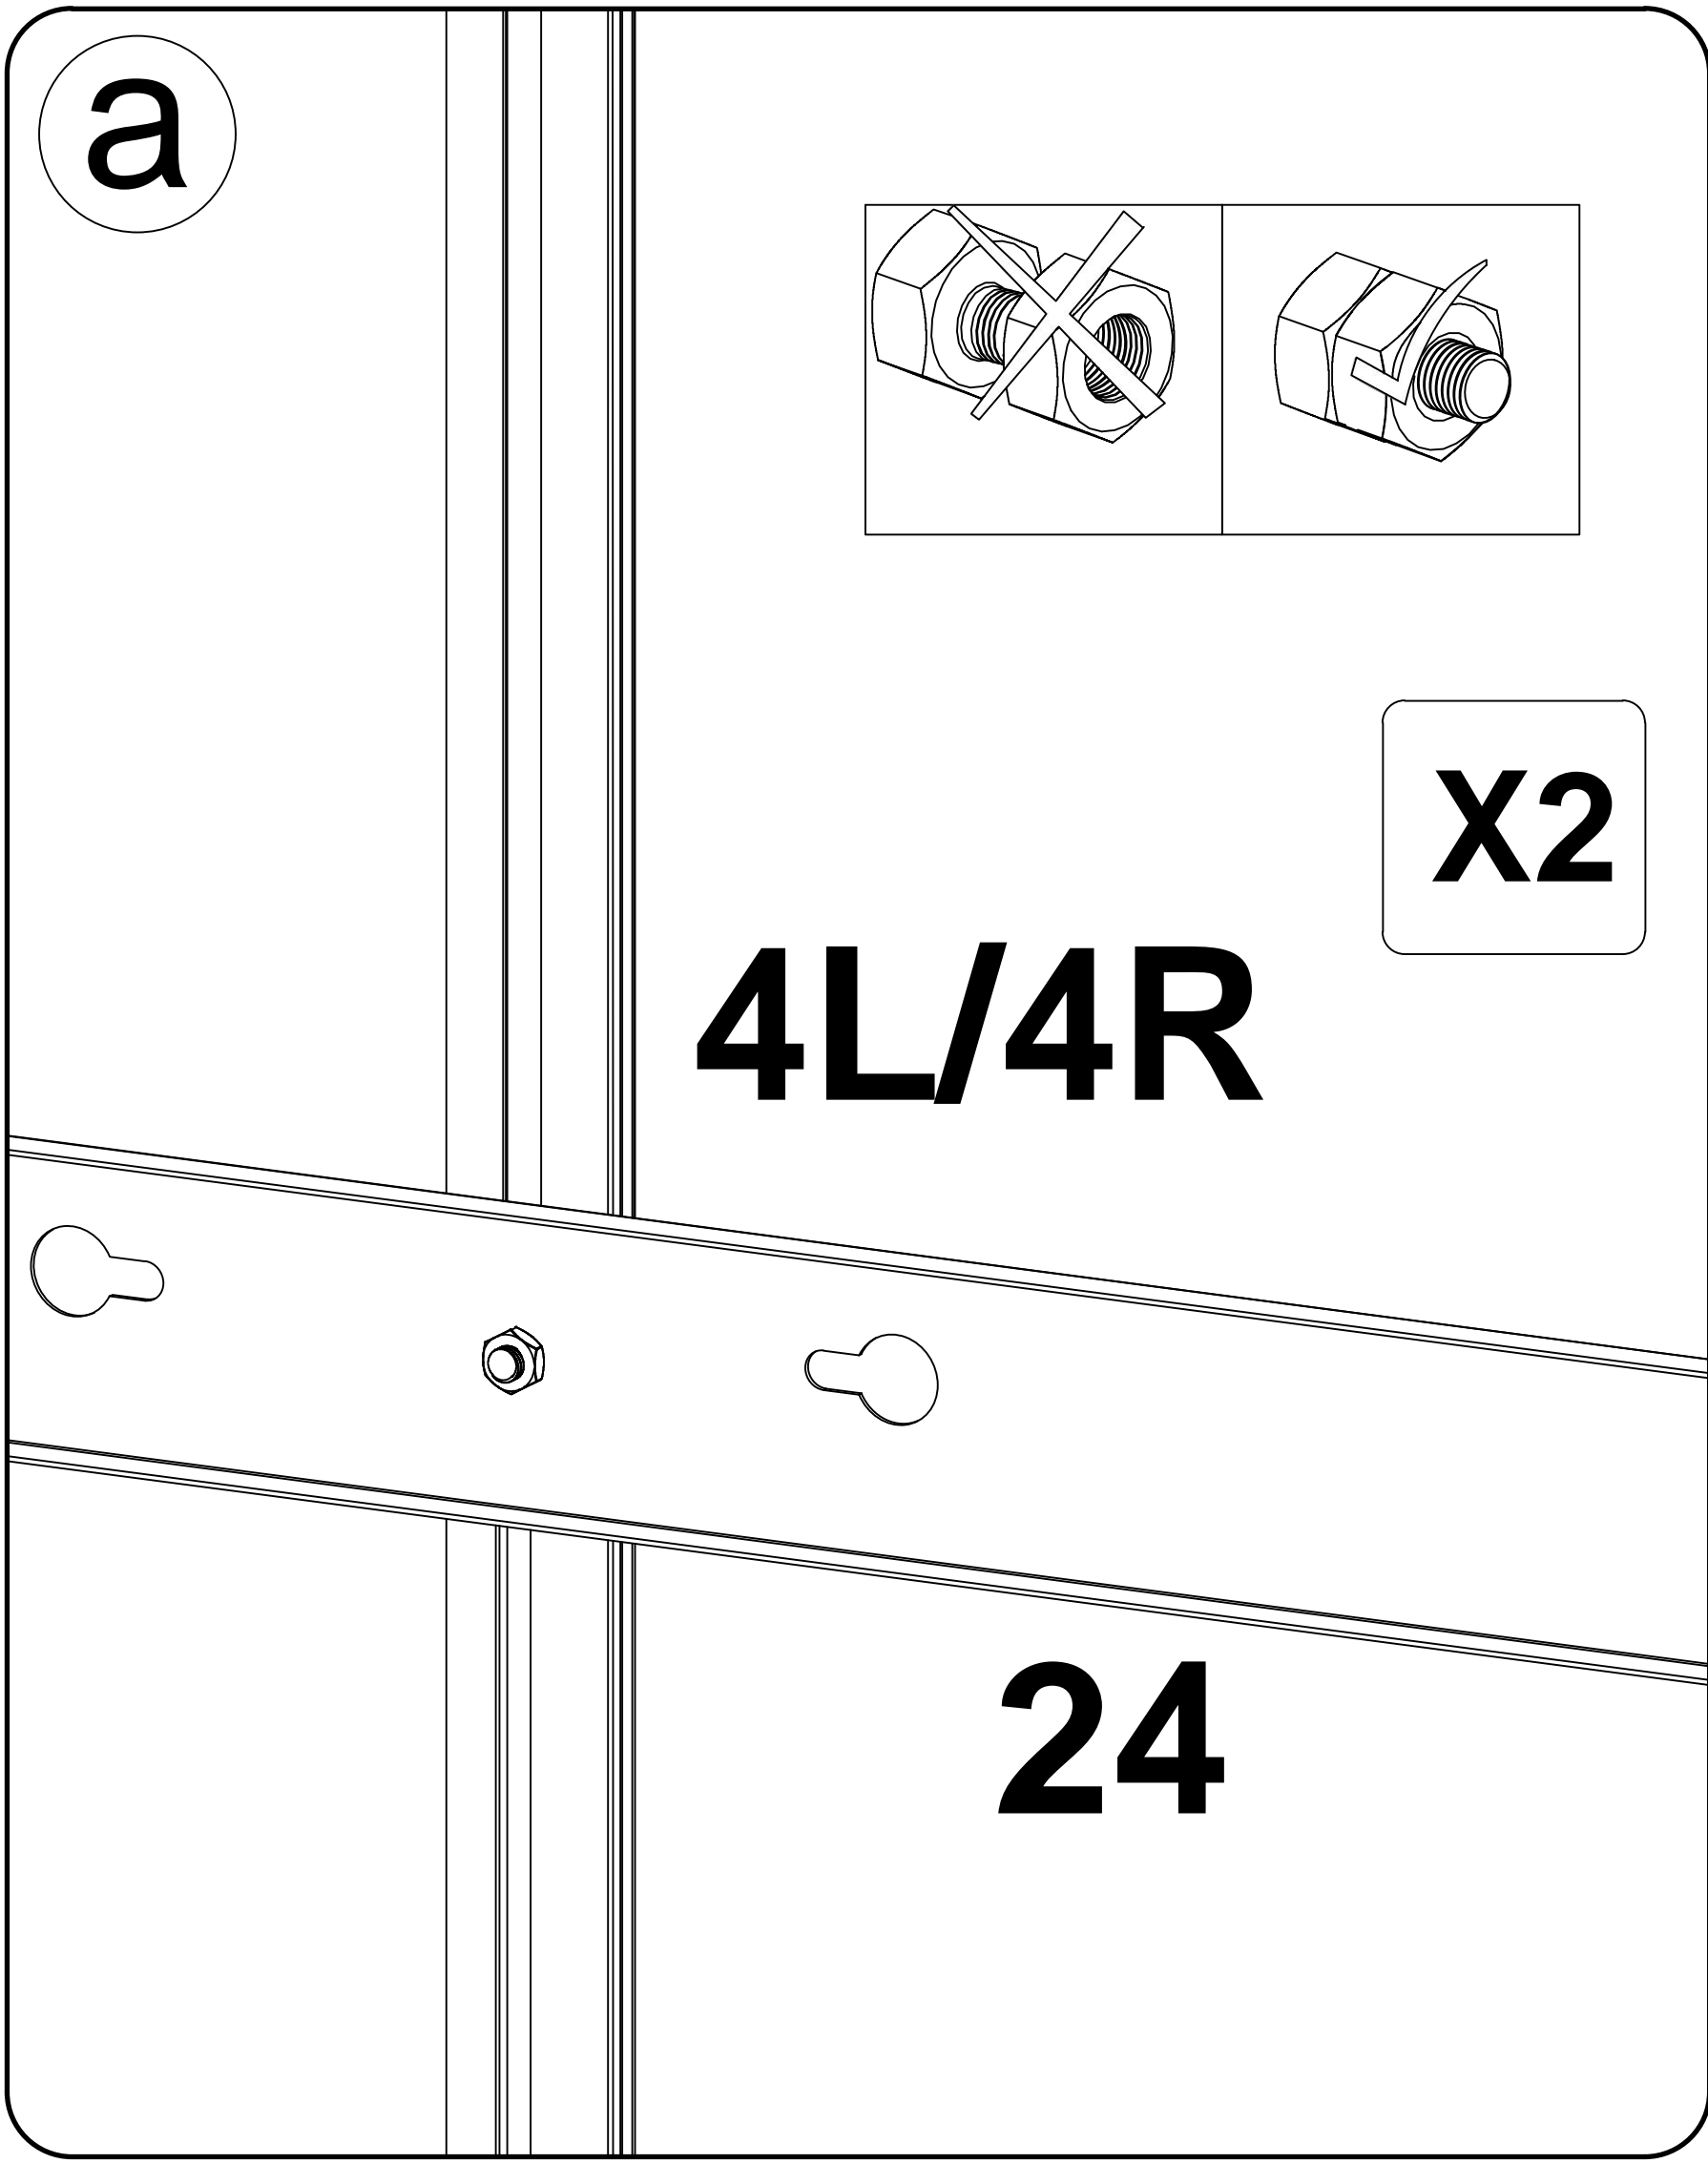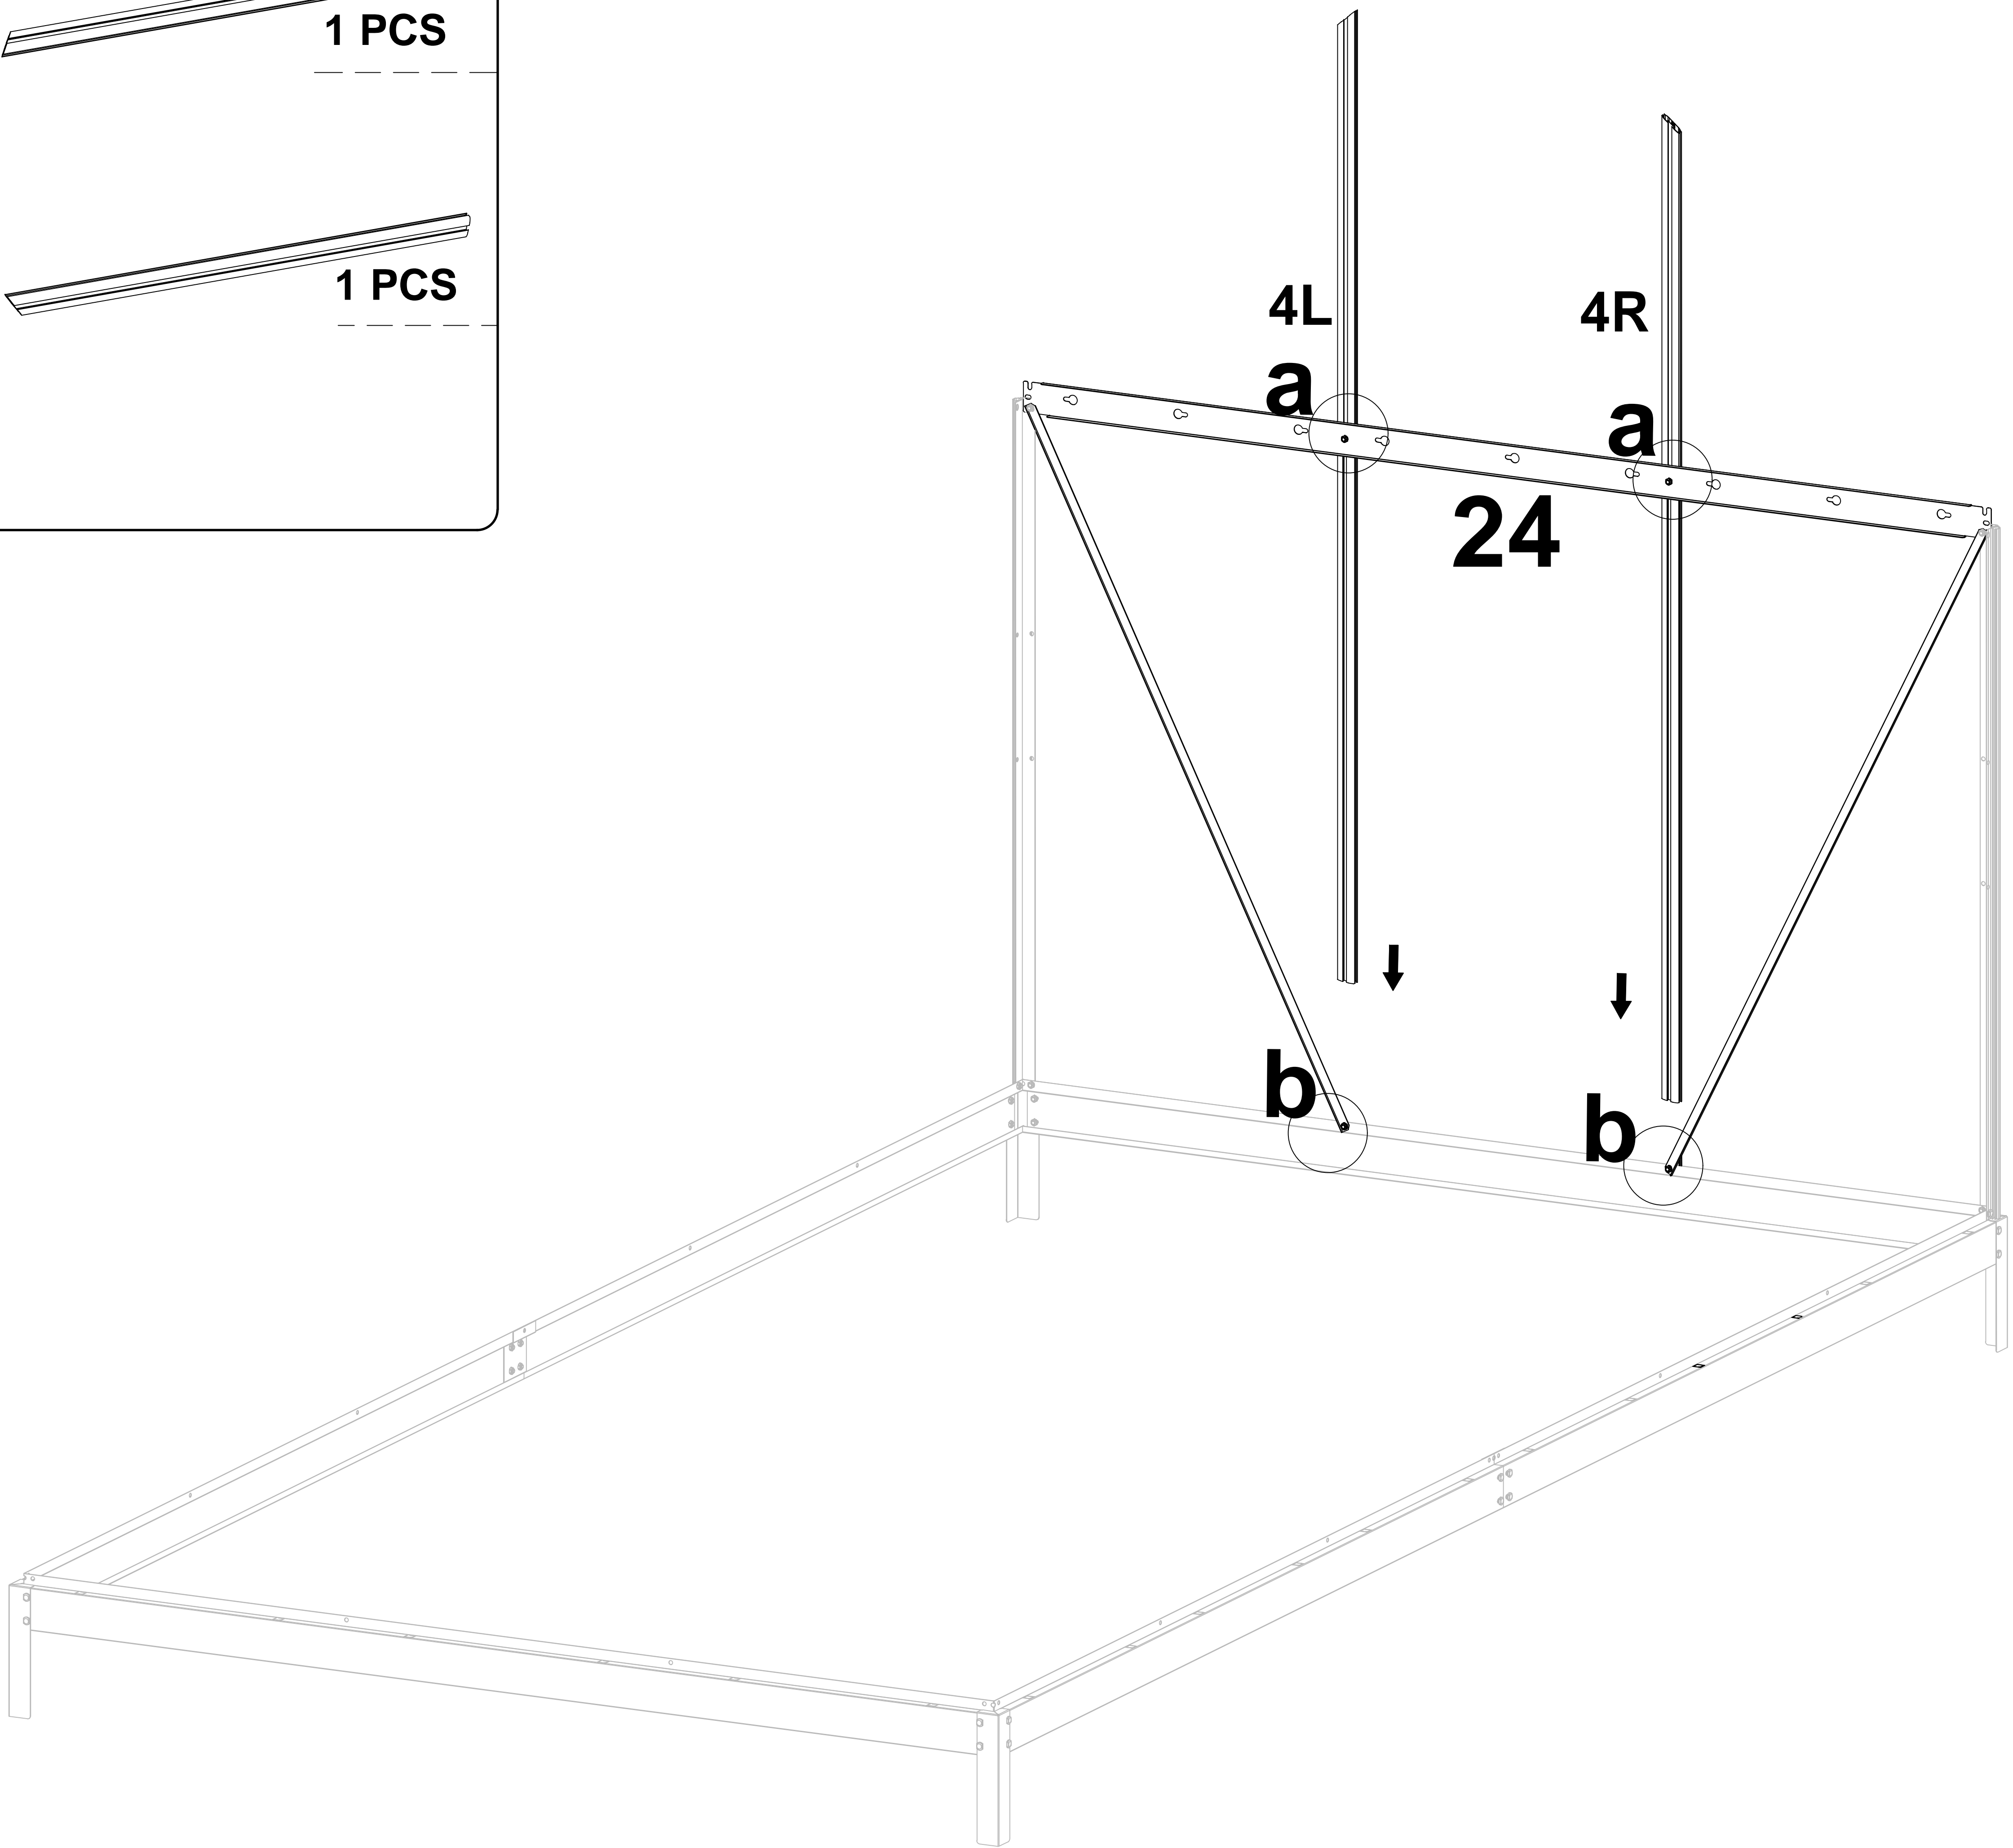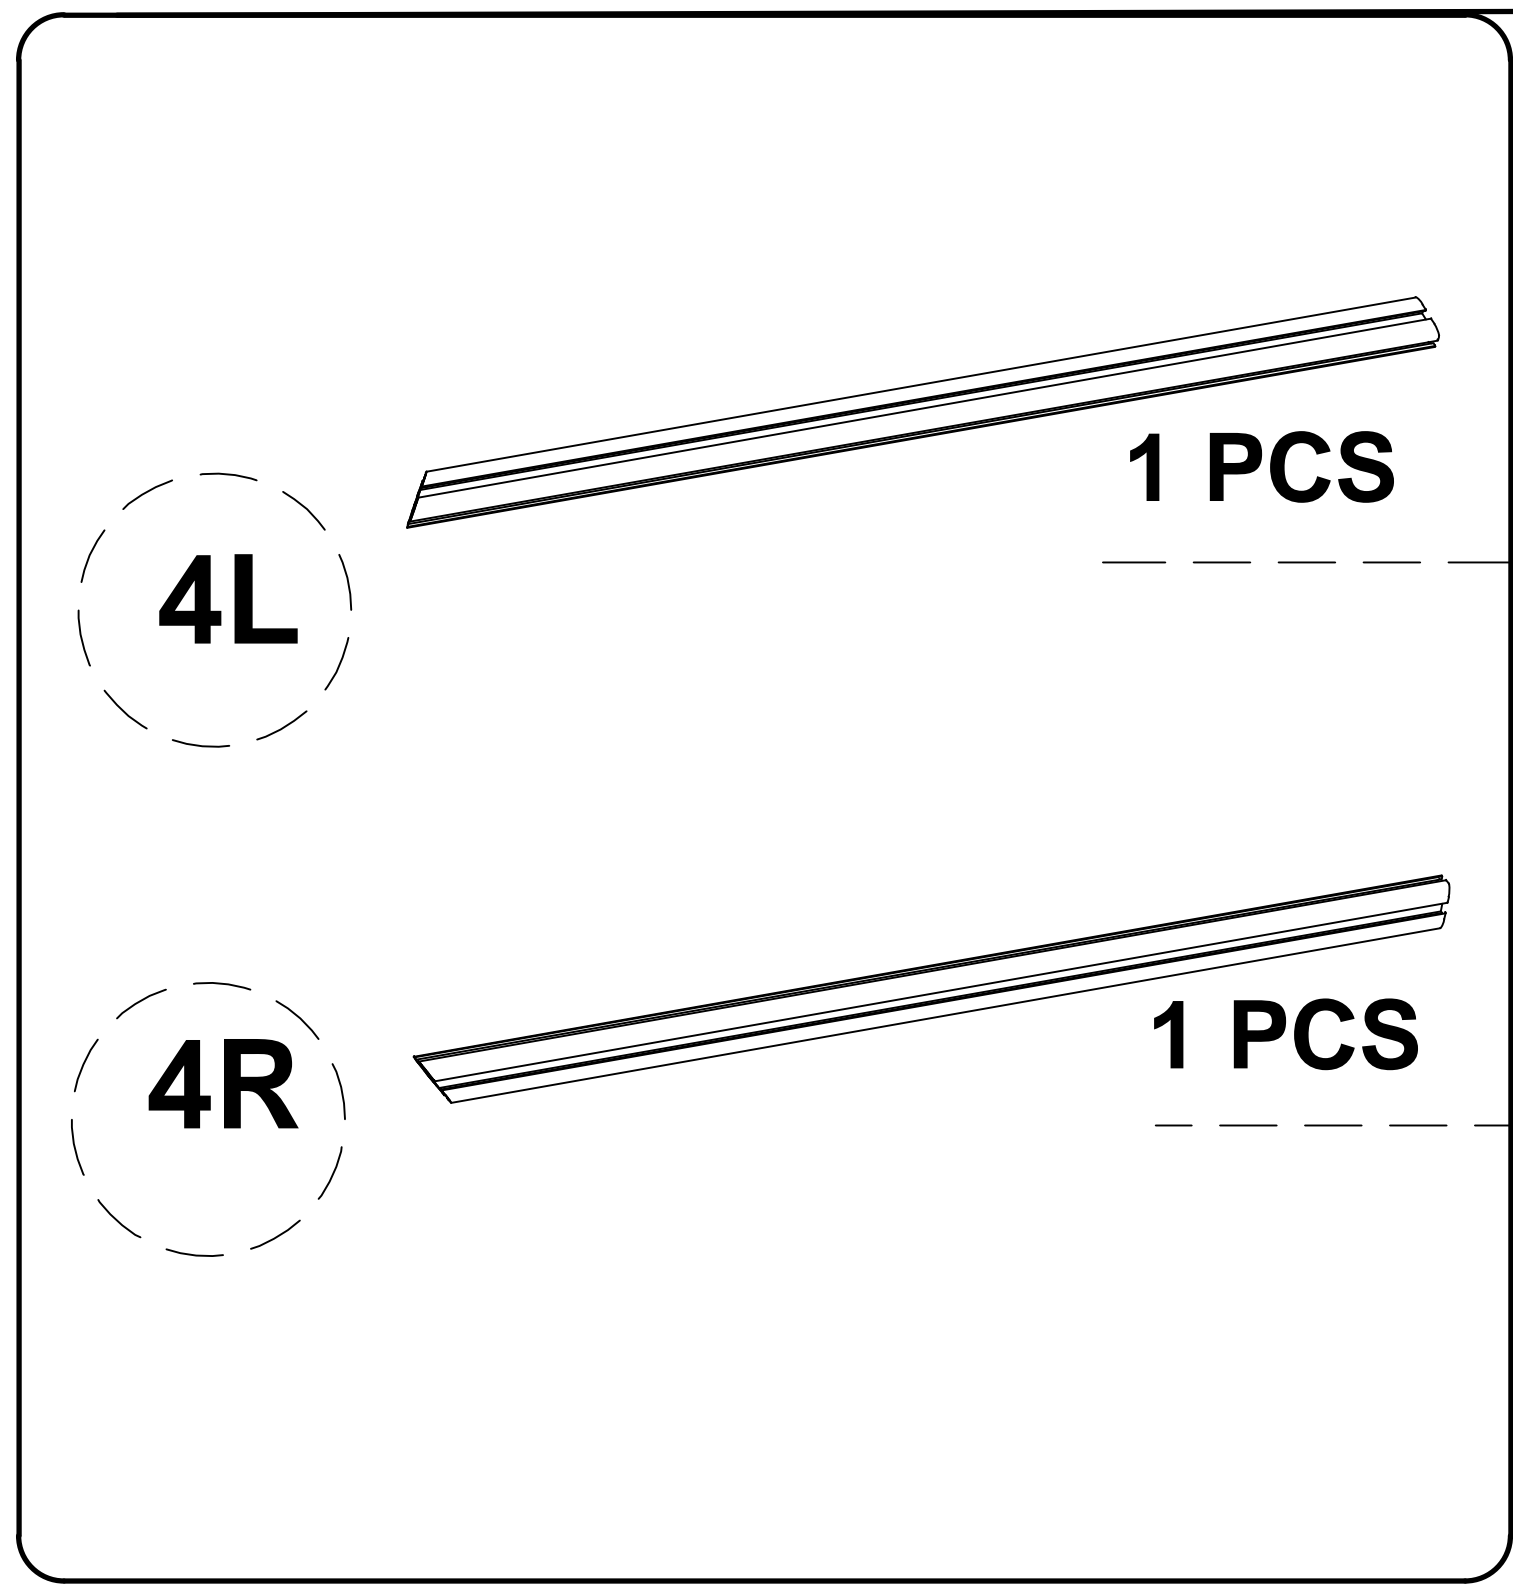






23

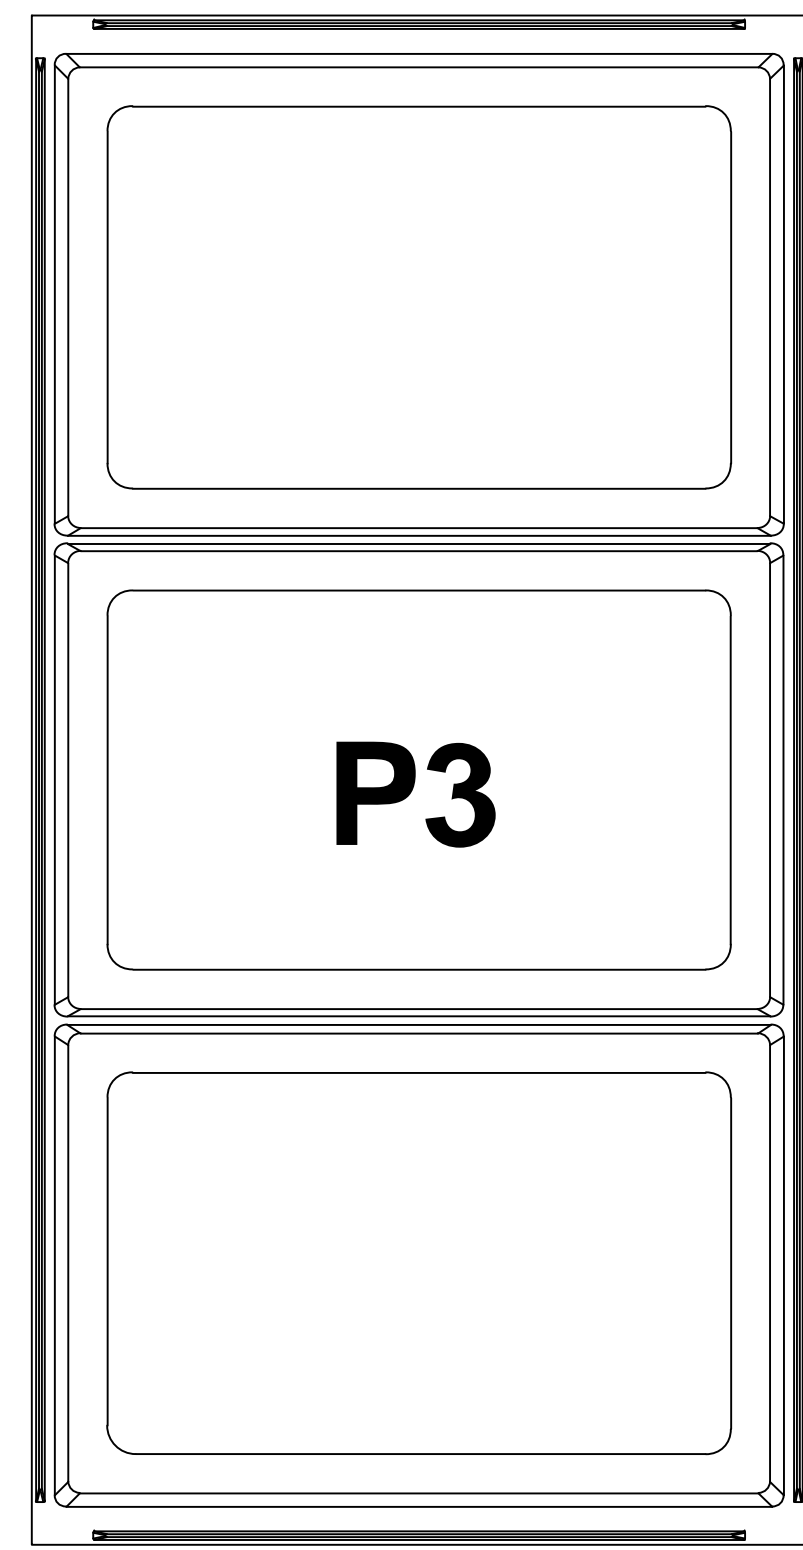


x3

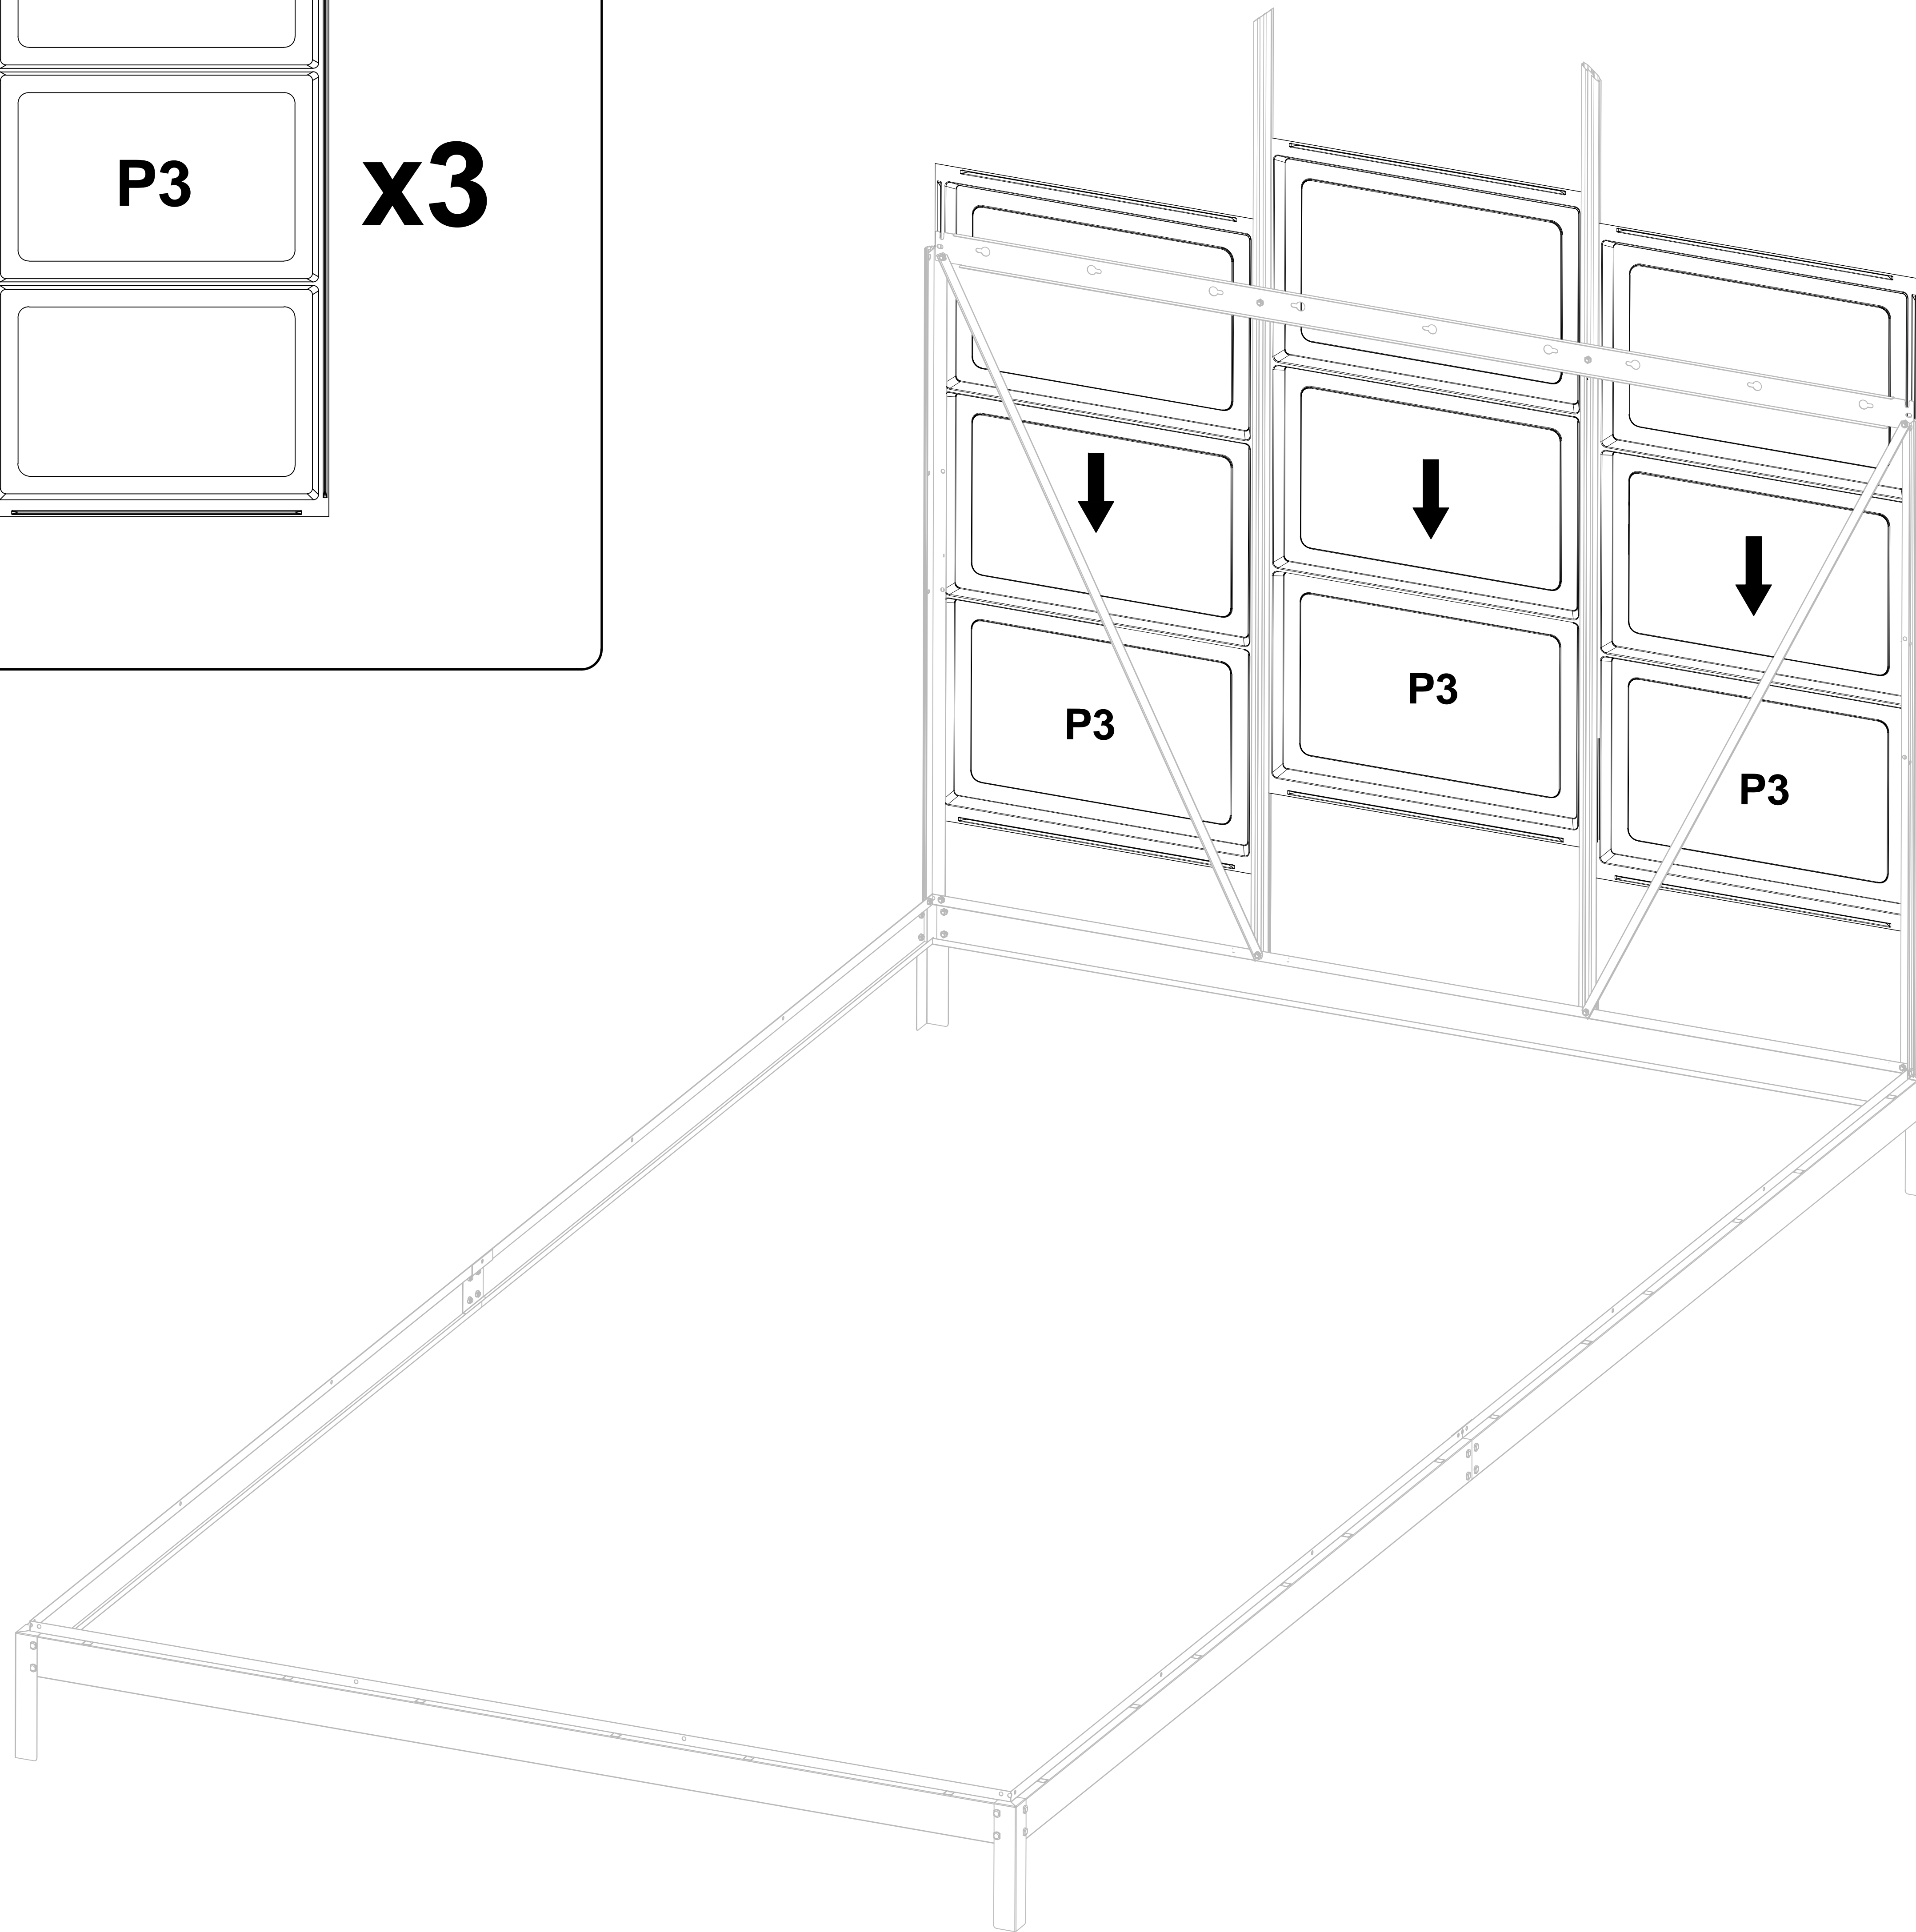


Remove the protect film

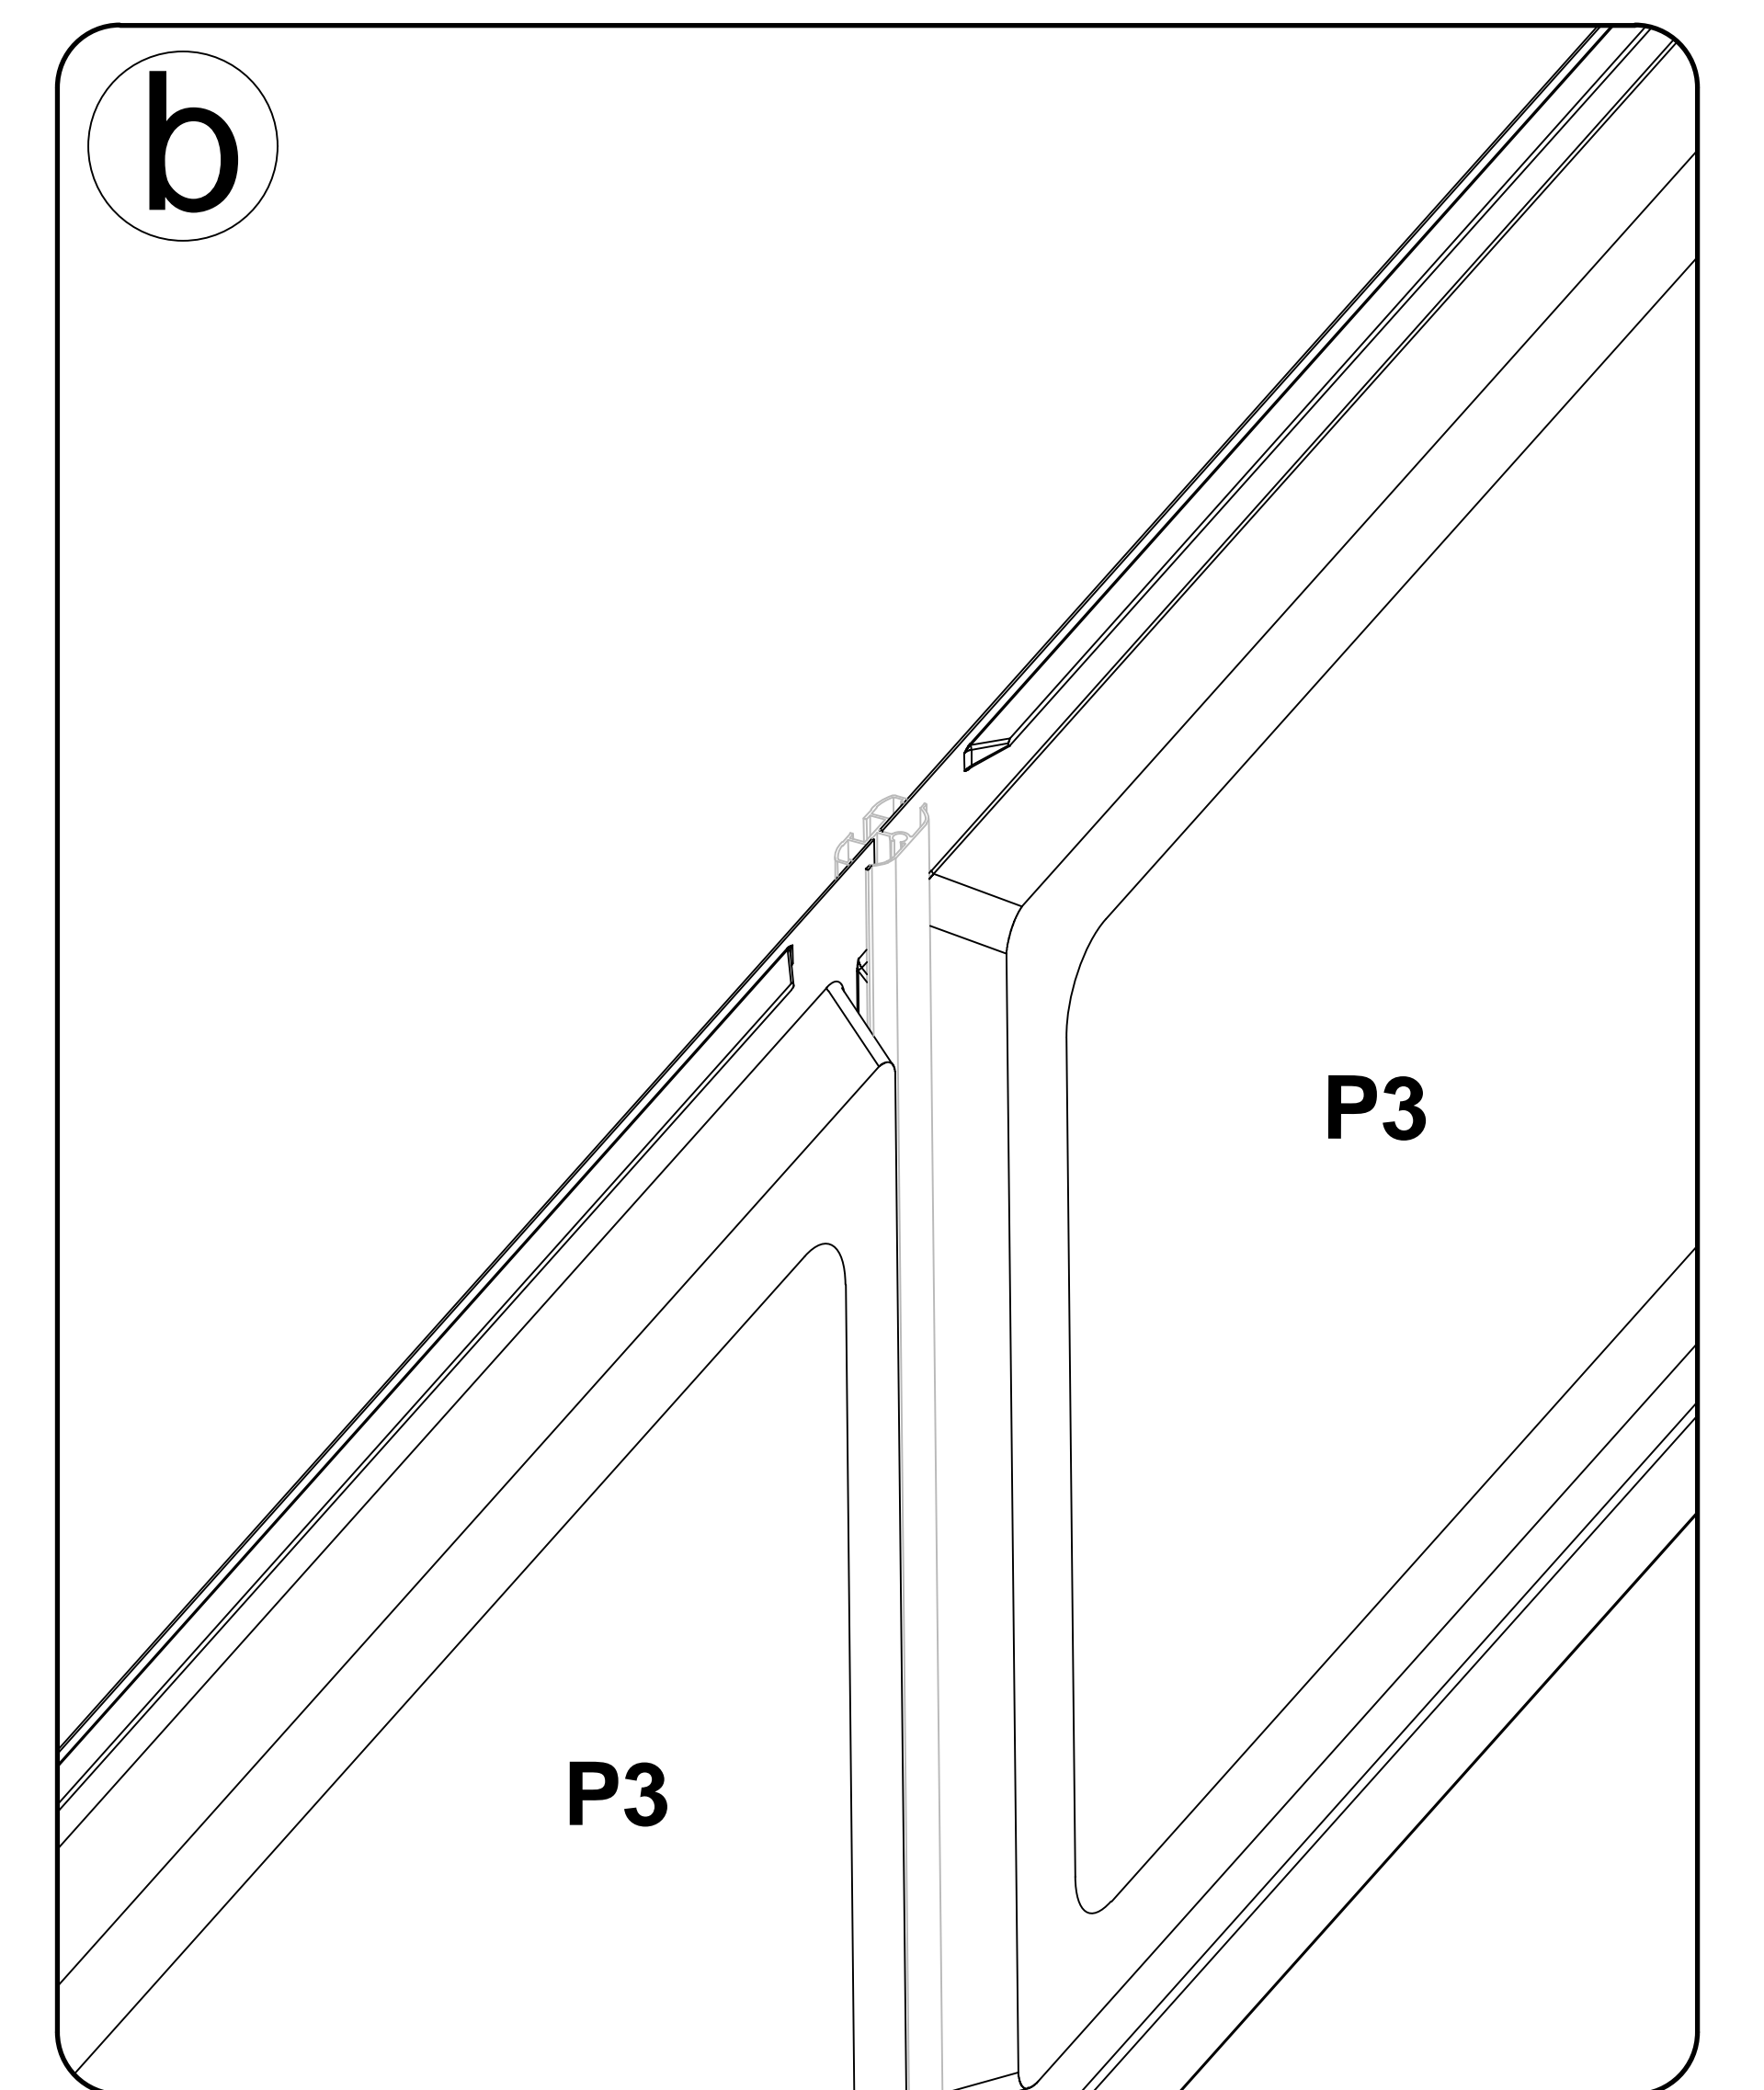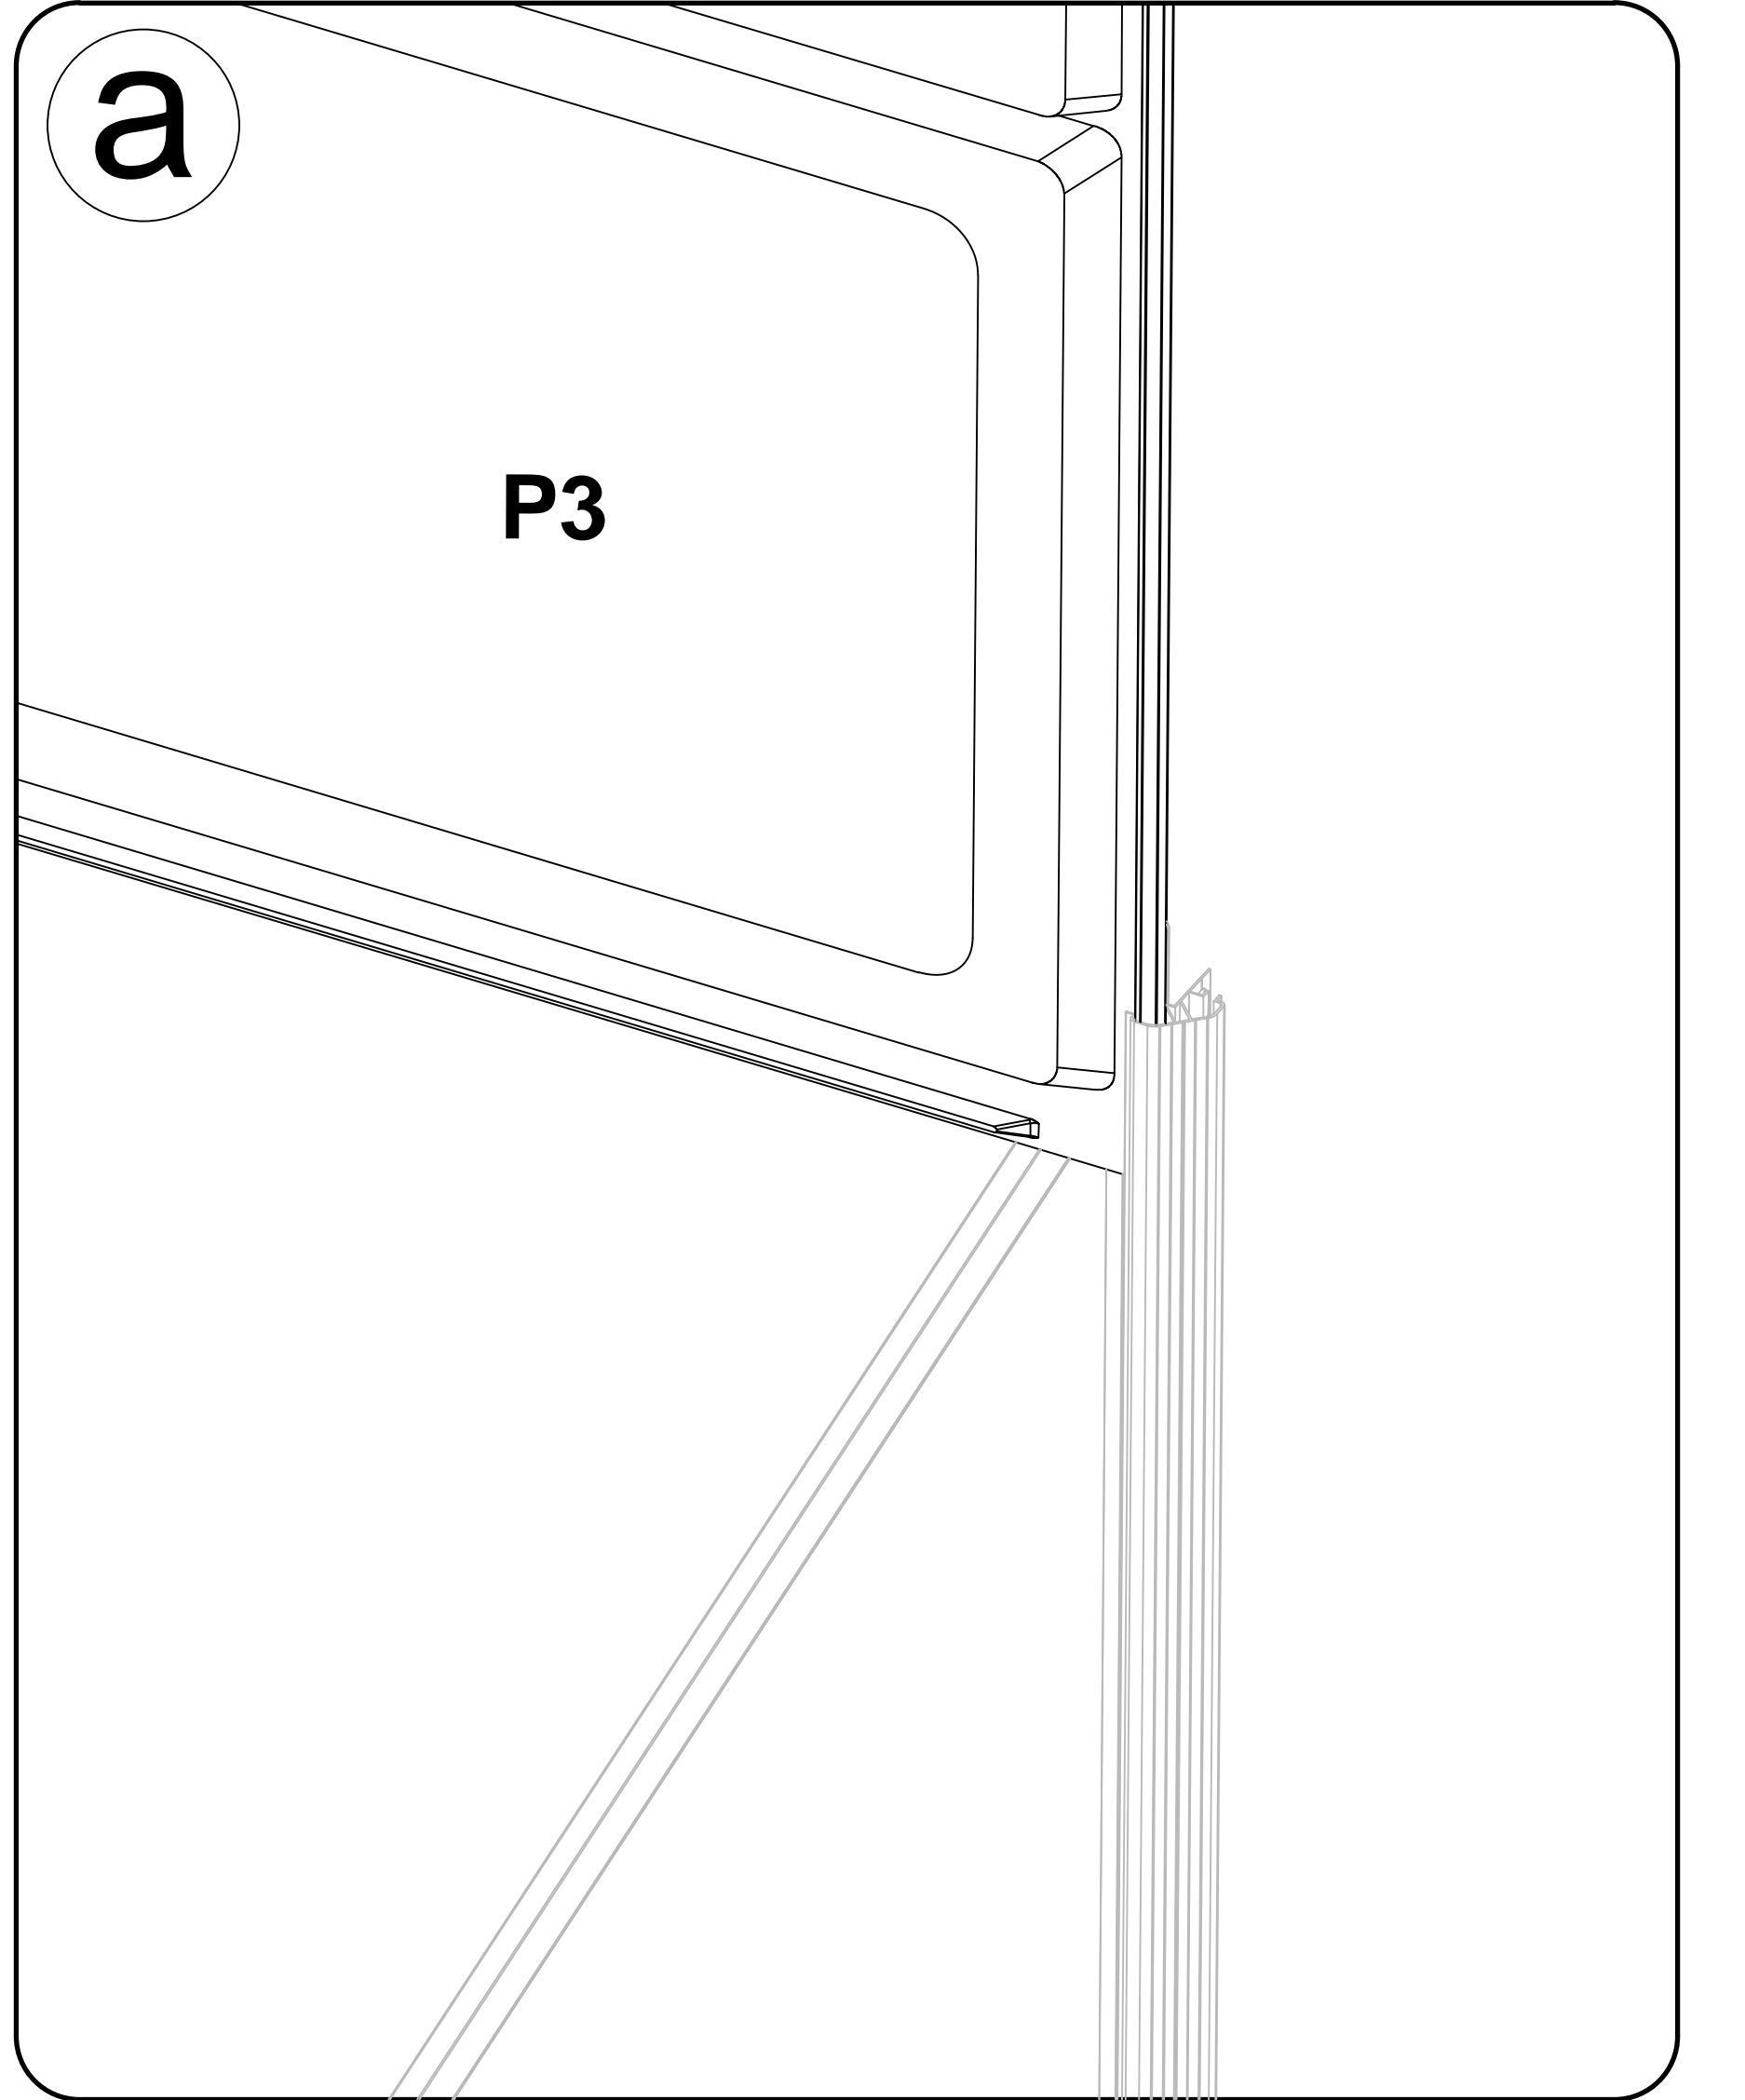


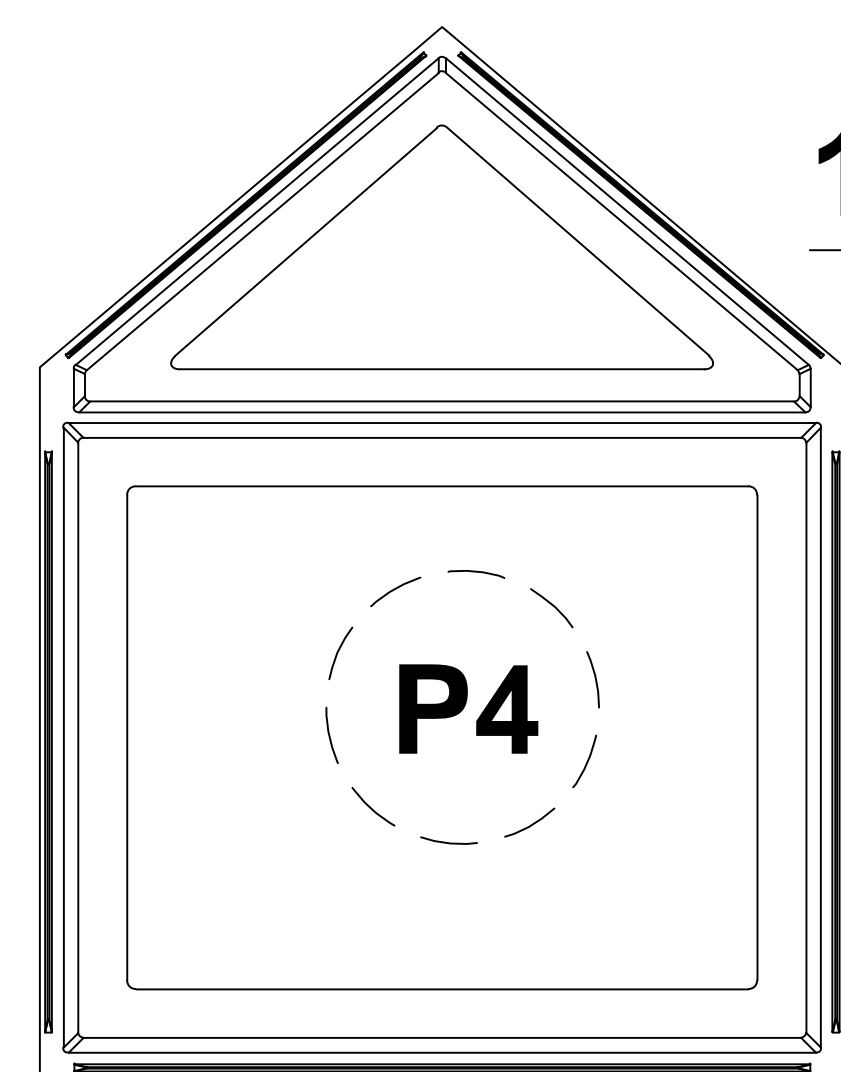



1 PCS

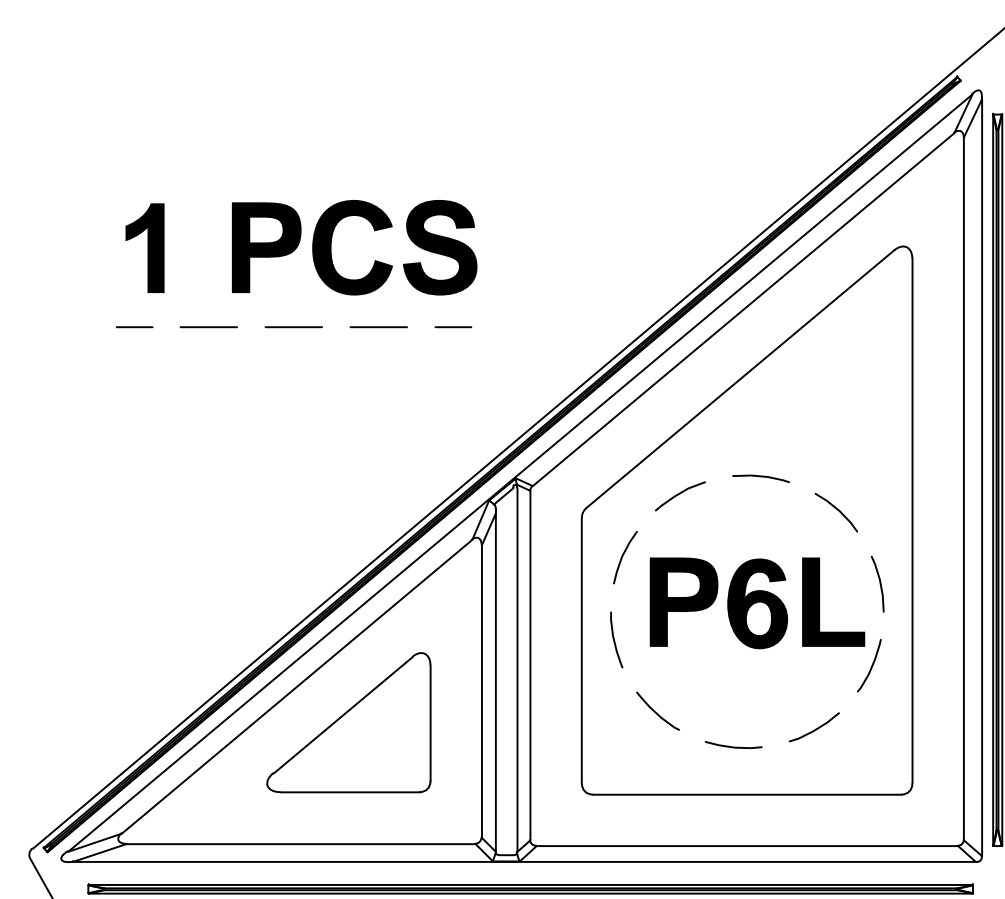

1 PCS

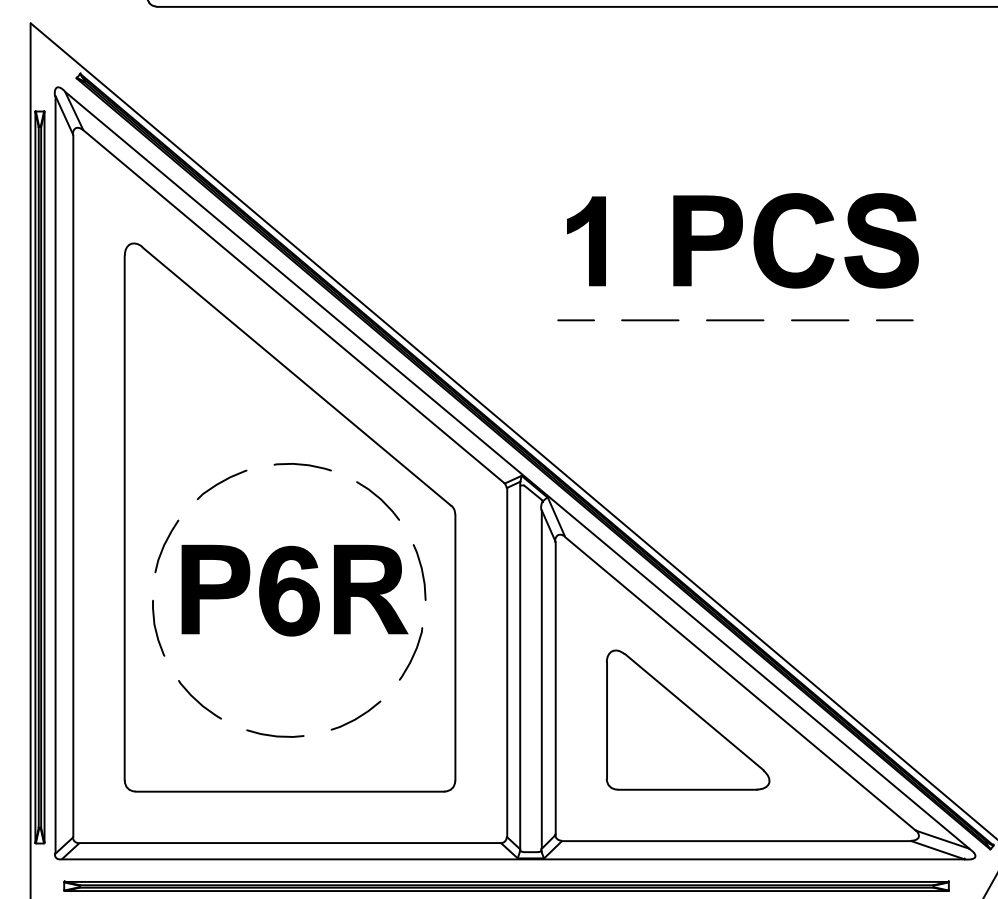




1 PCS














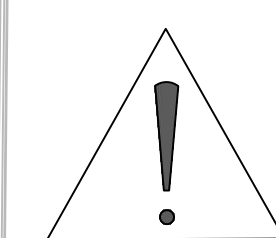
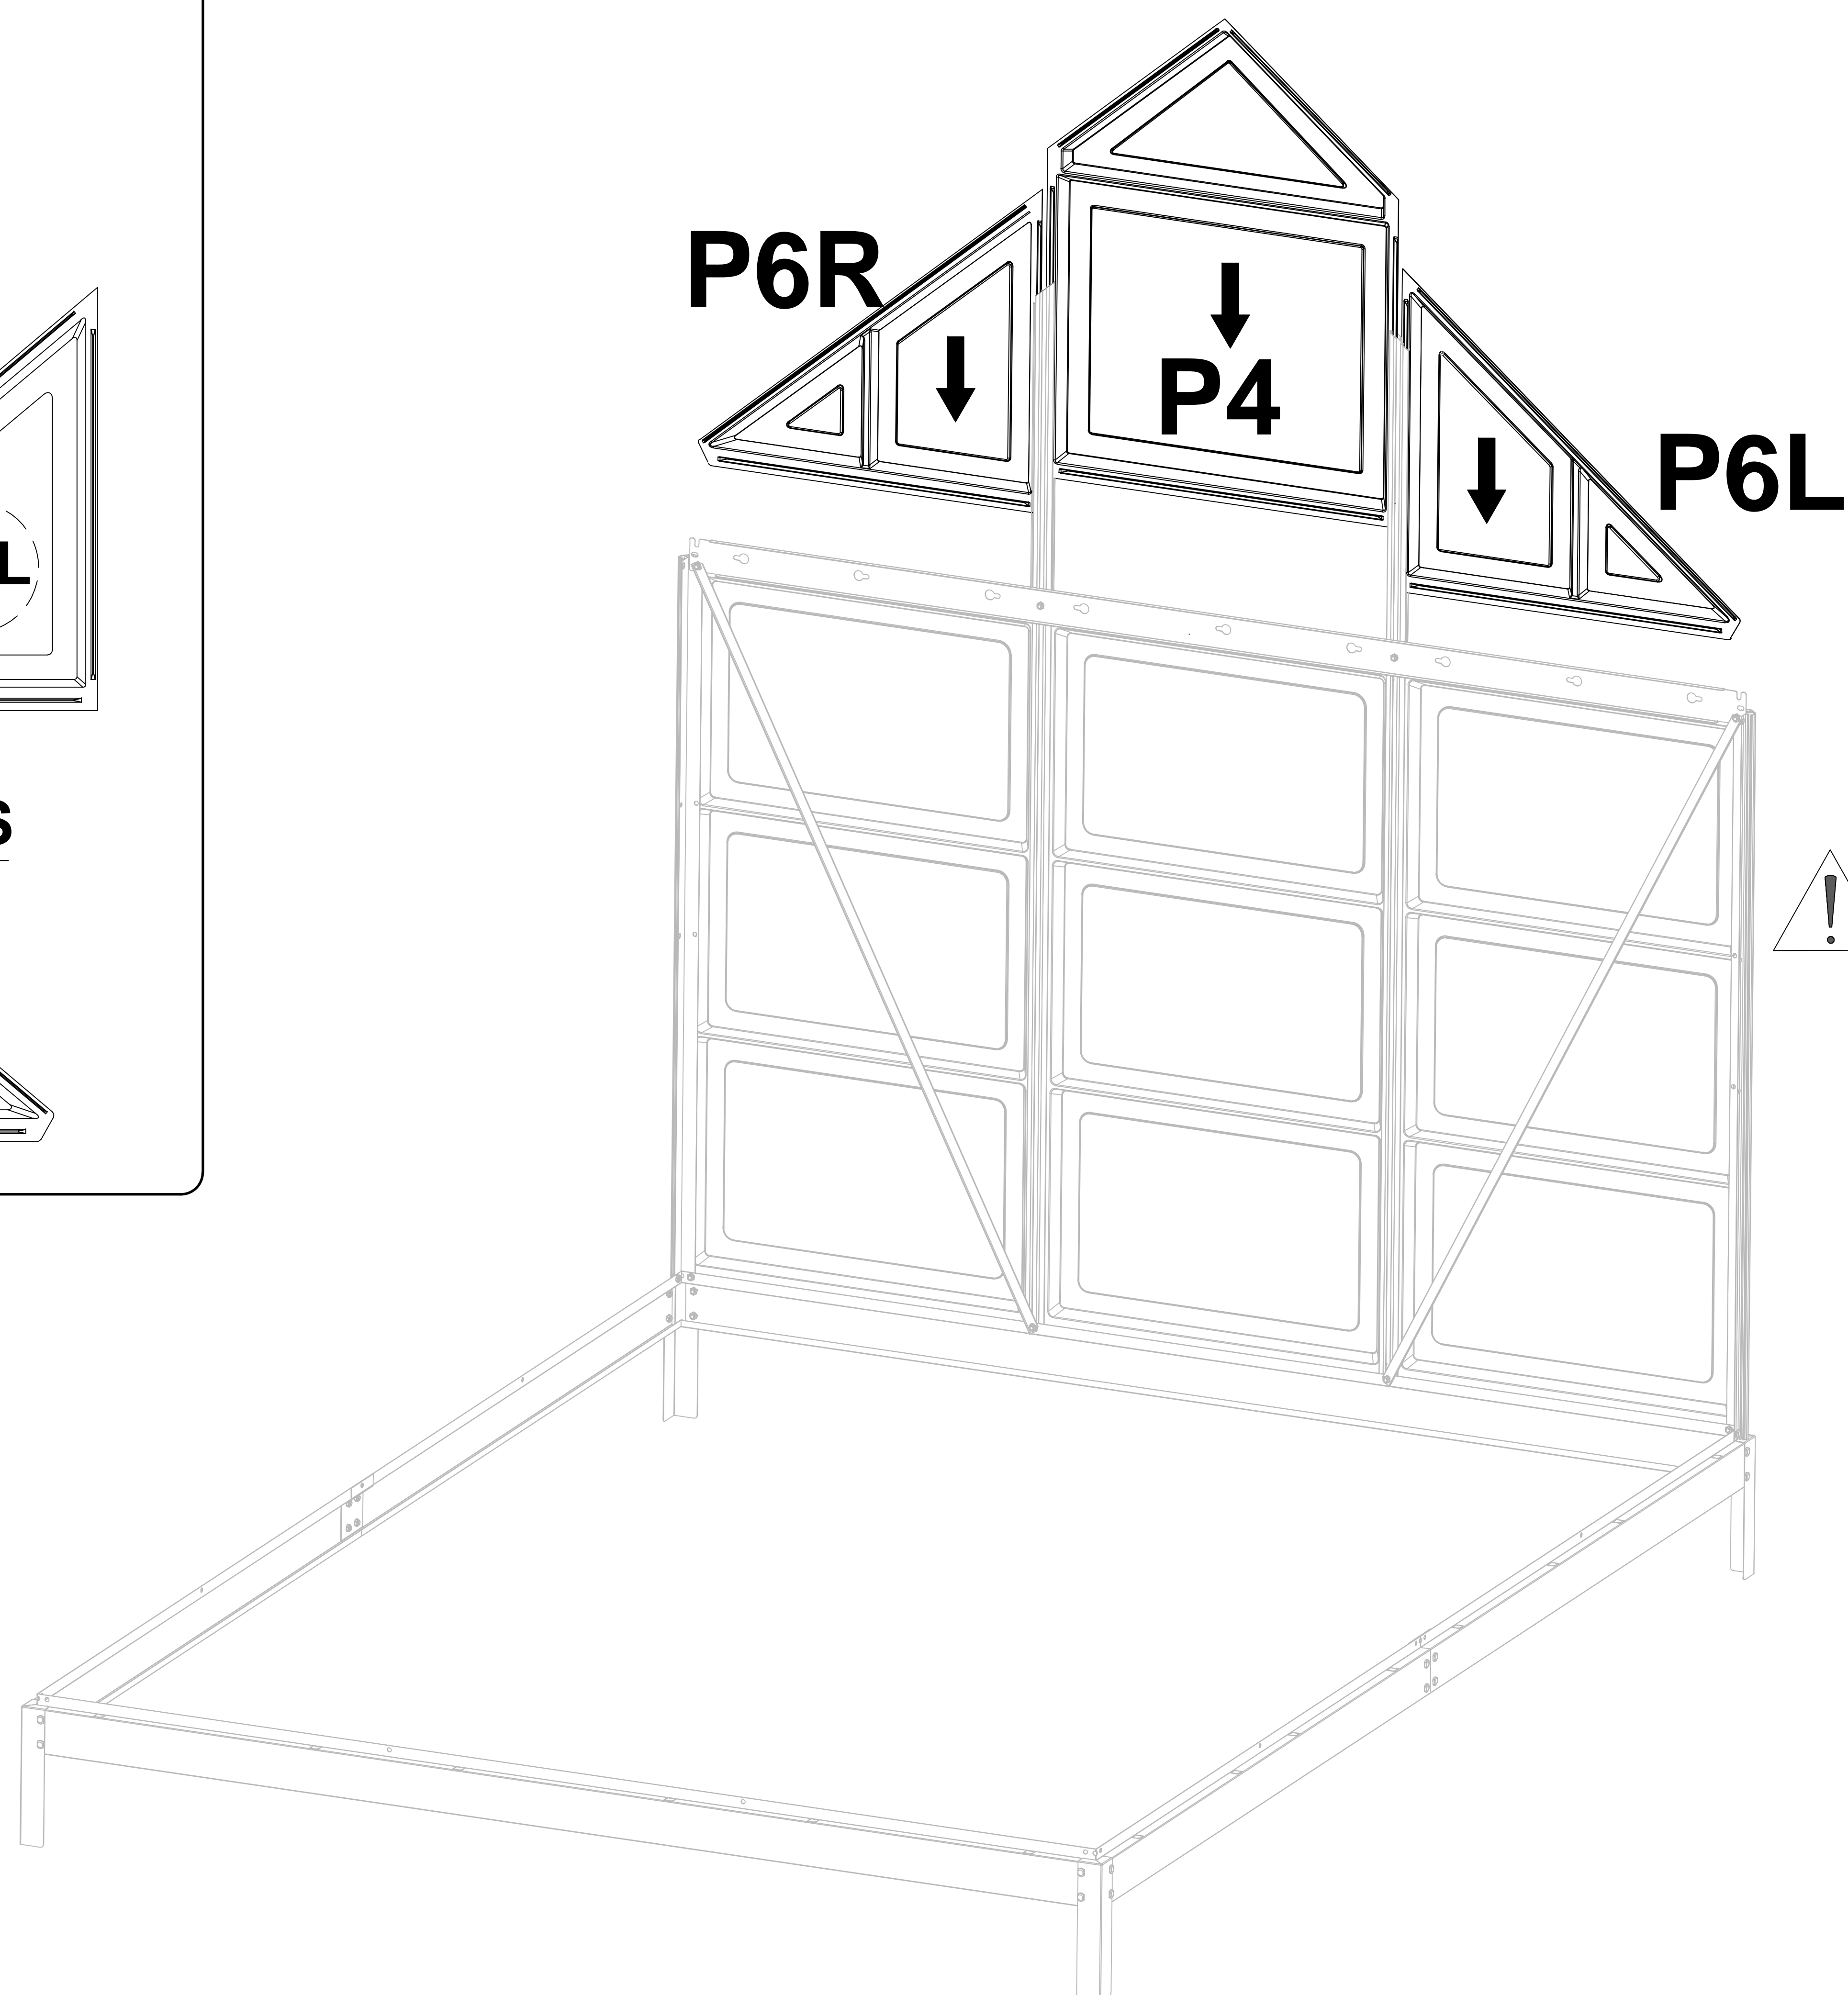


**Tear off the film before inseted into the board and the side of white film needs faced out.**

Remove the protect film



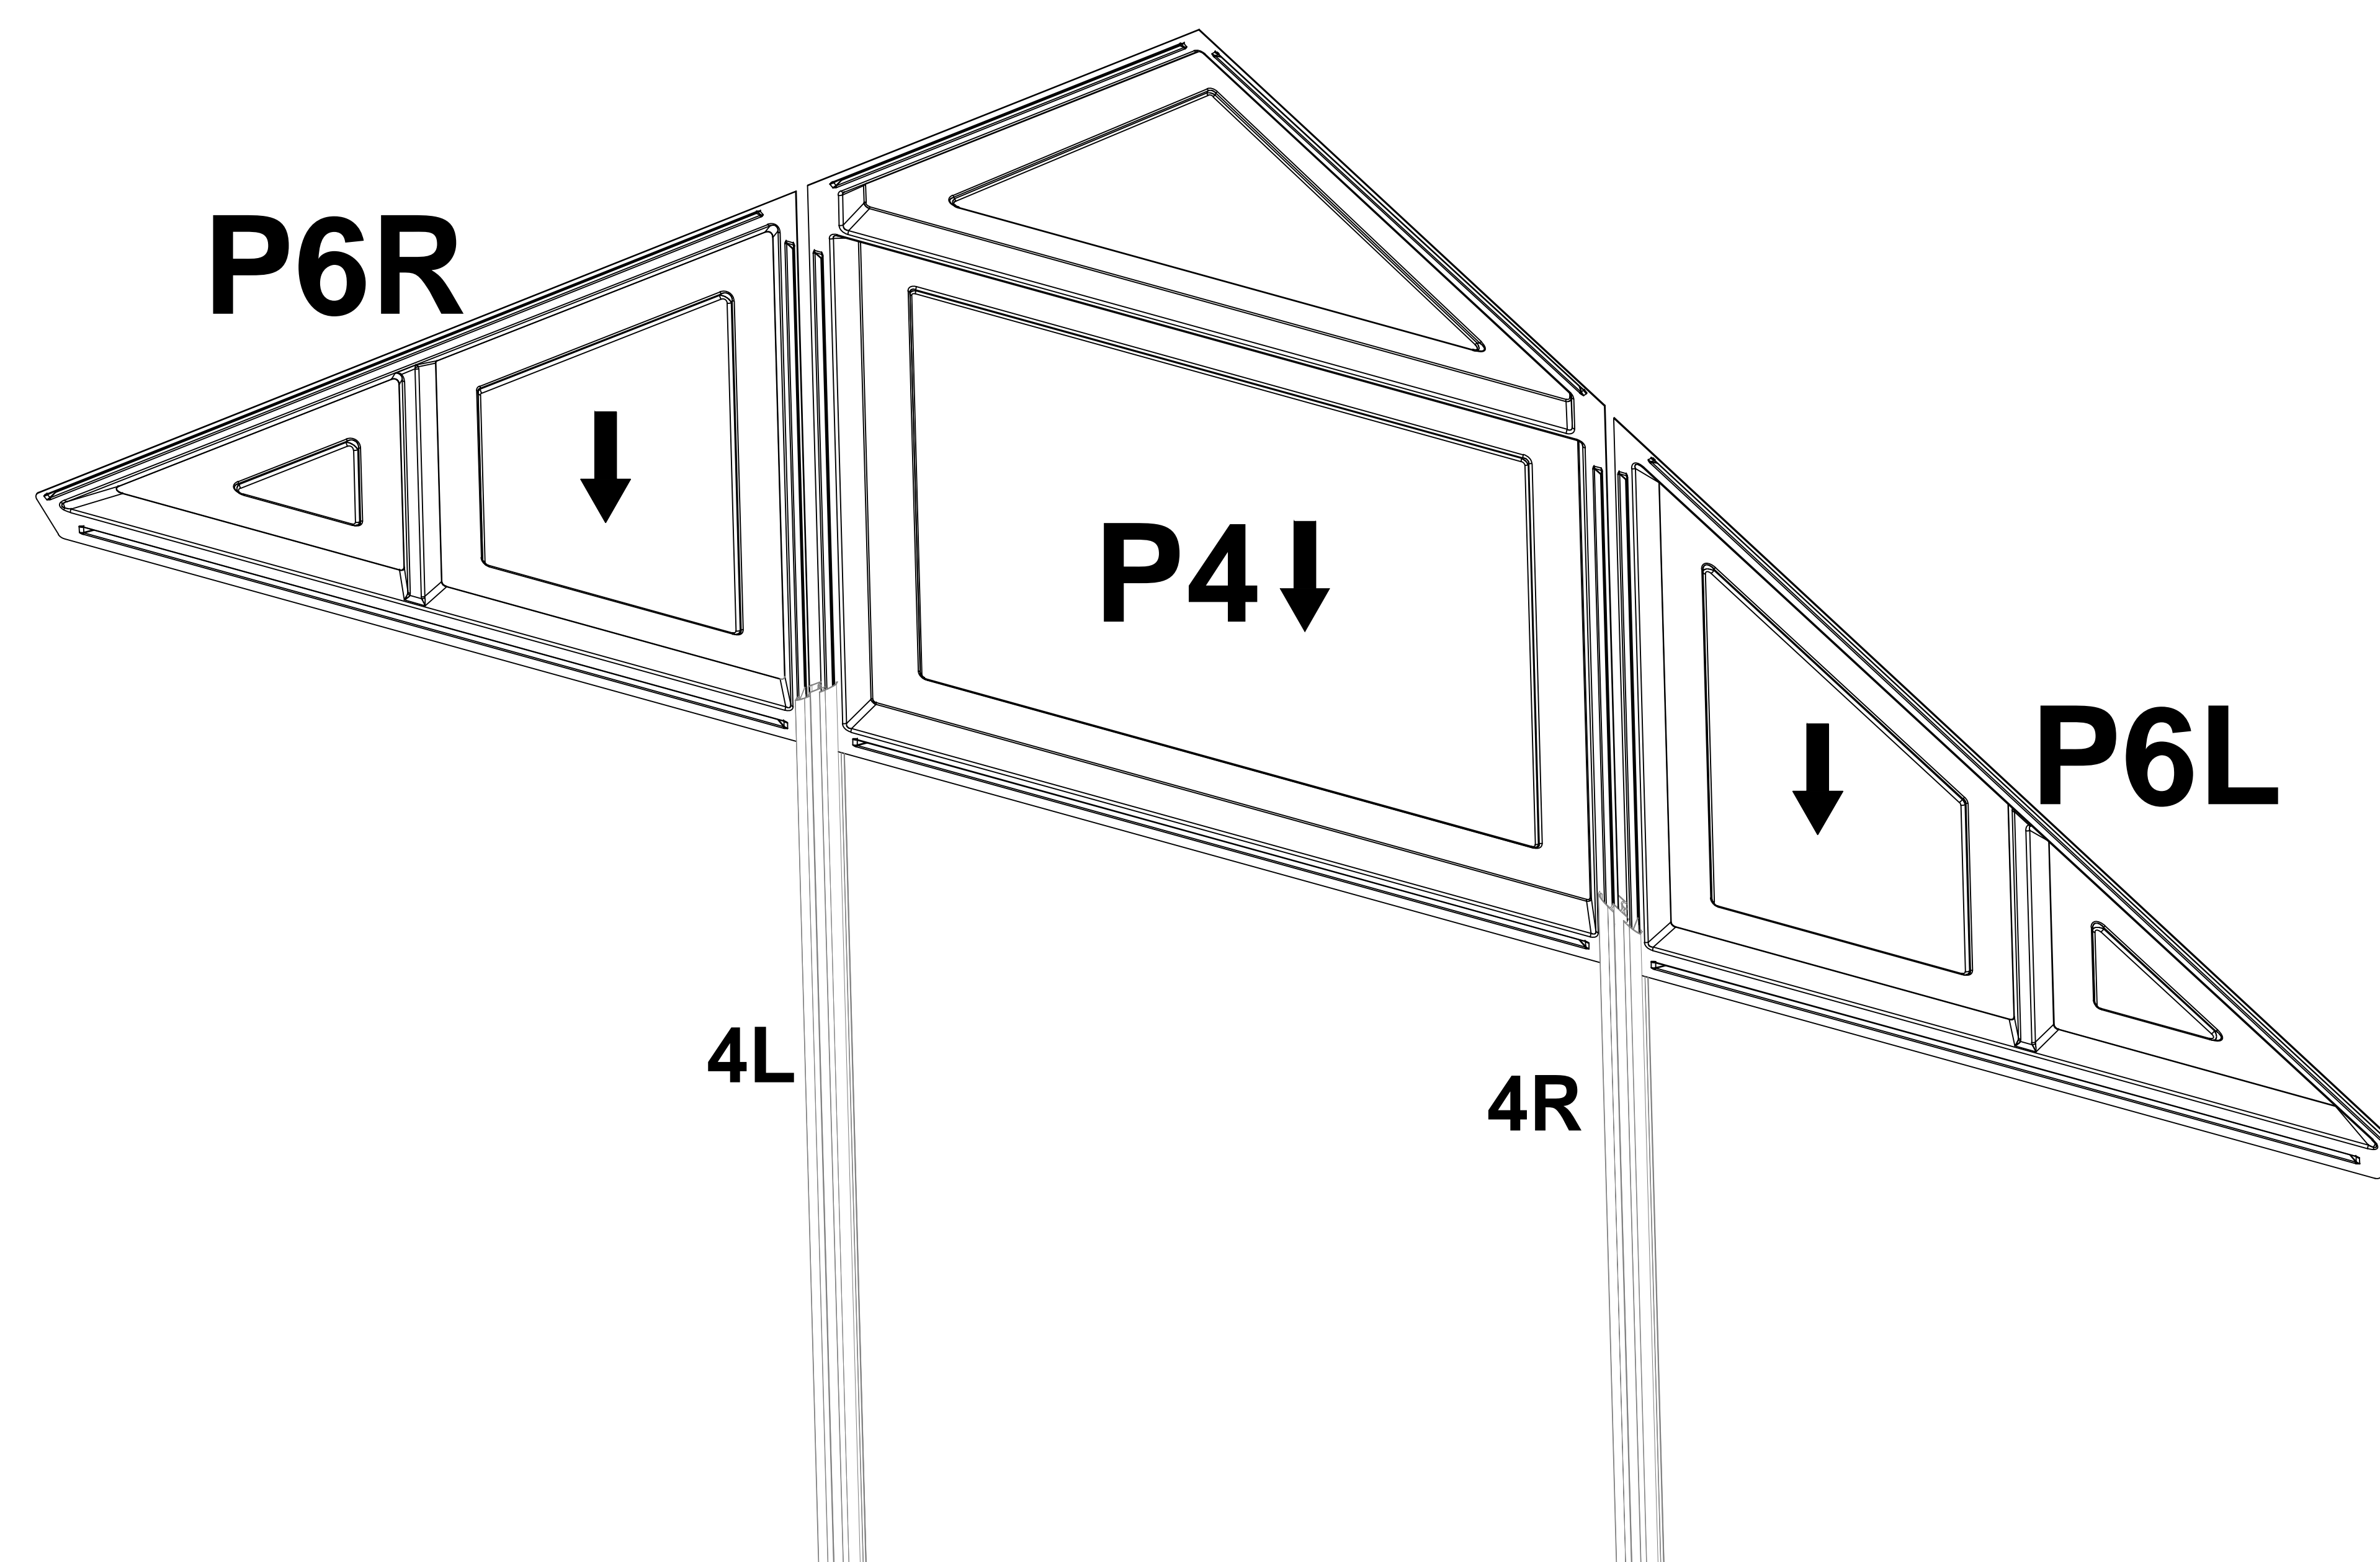




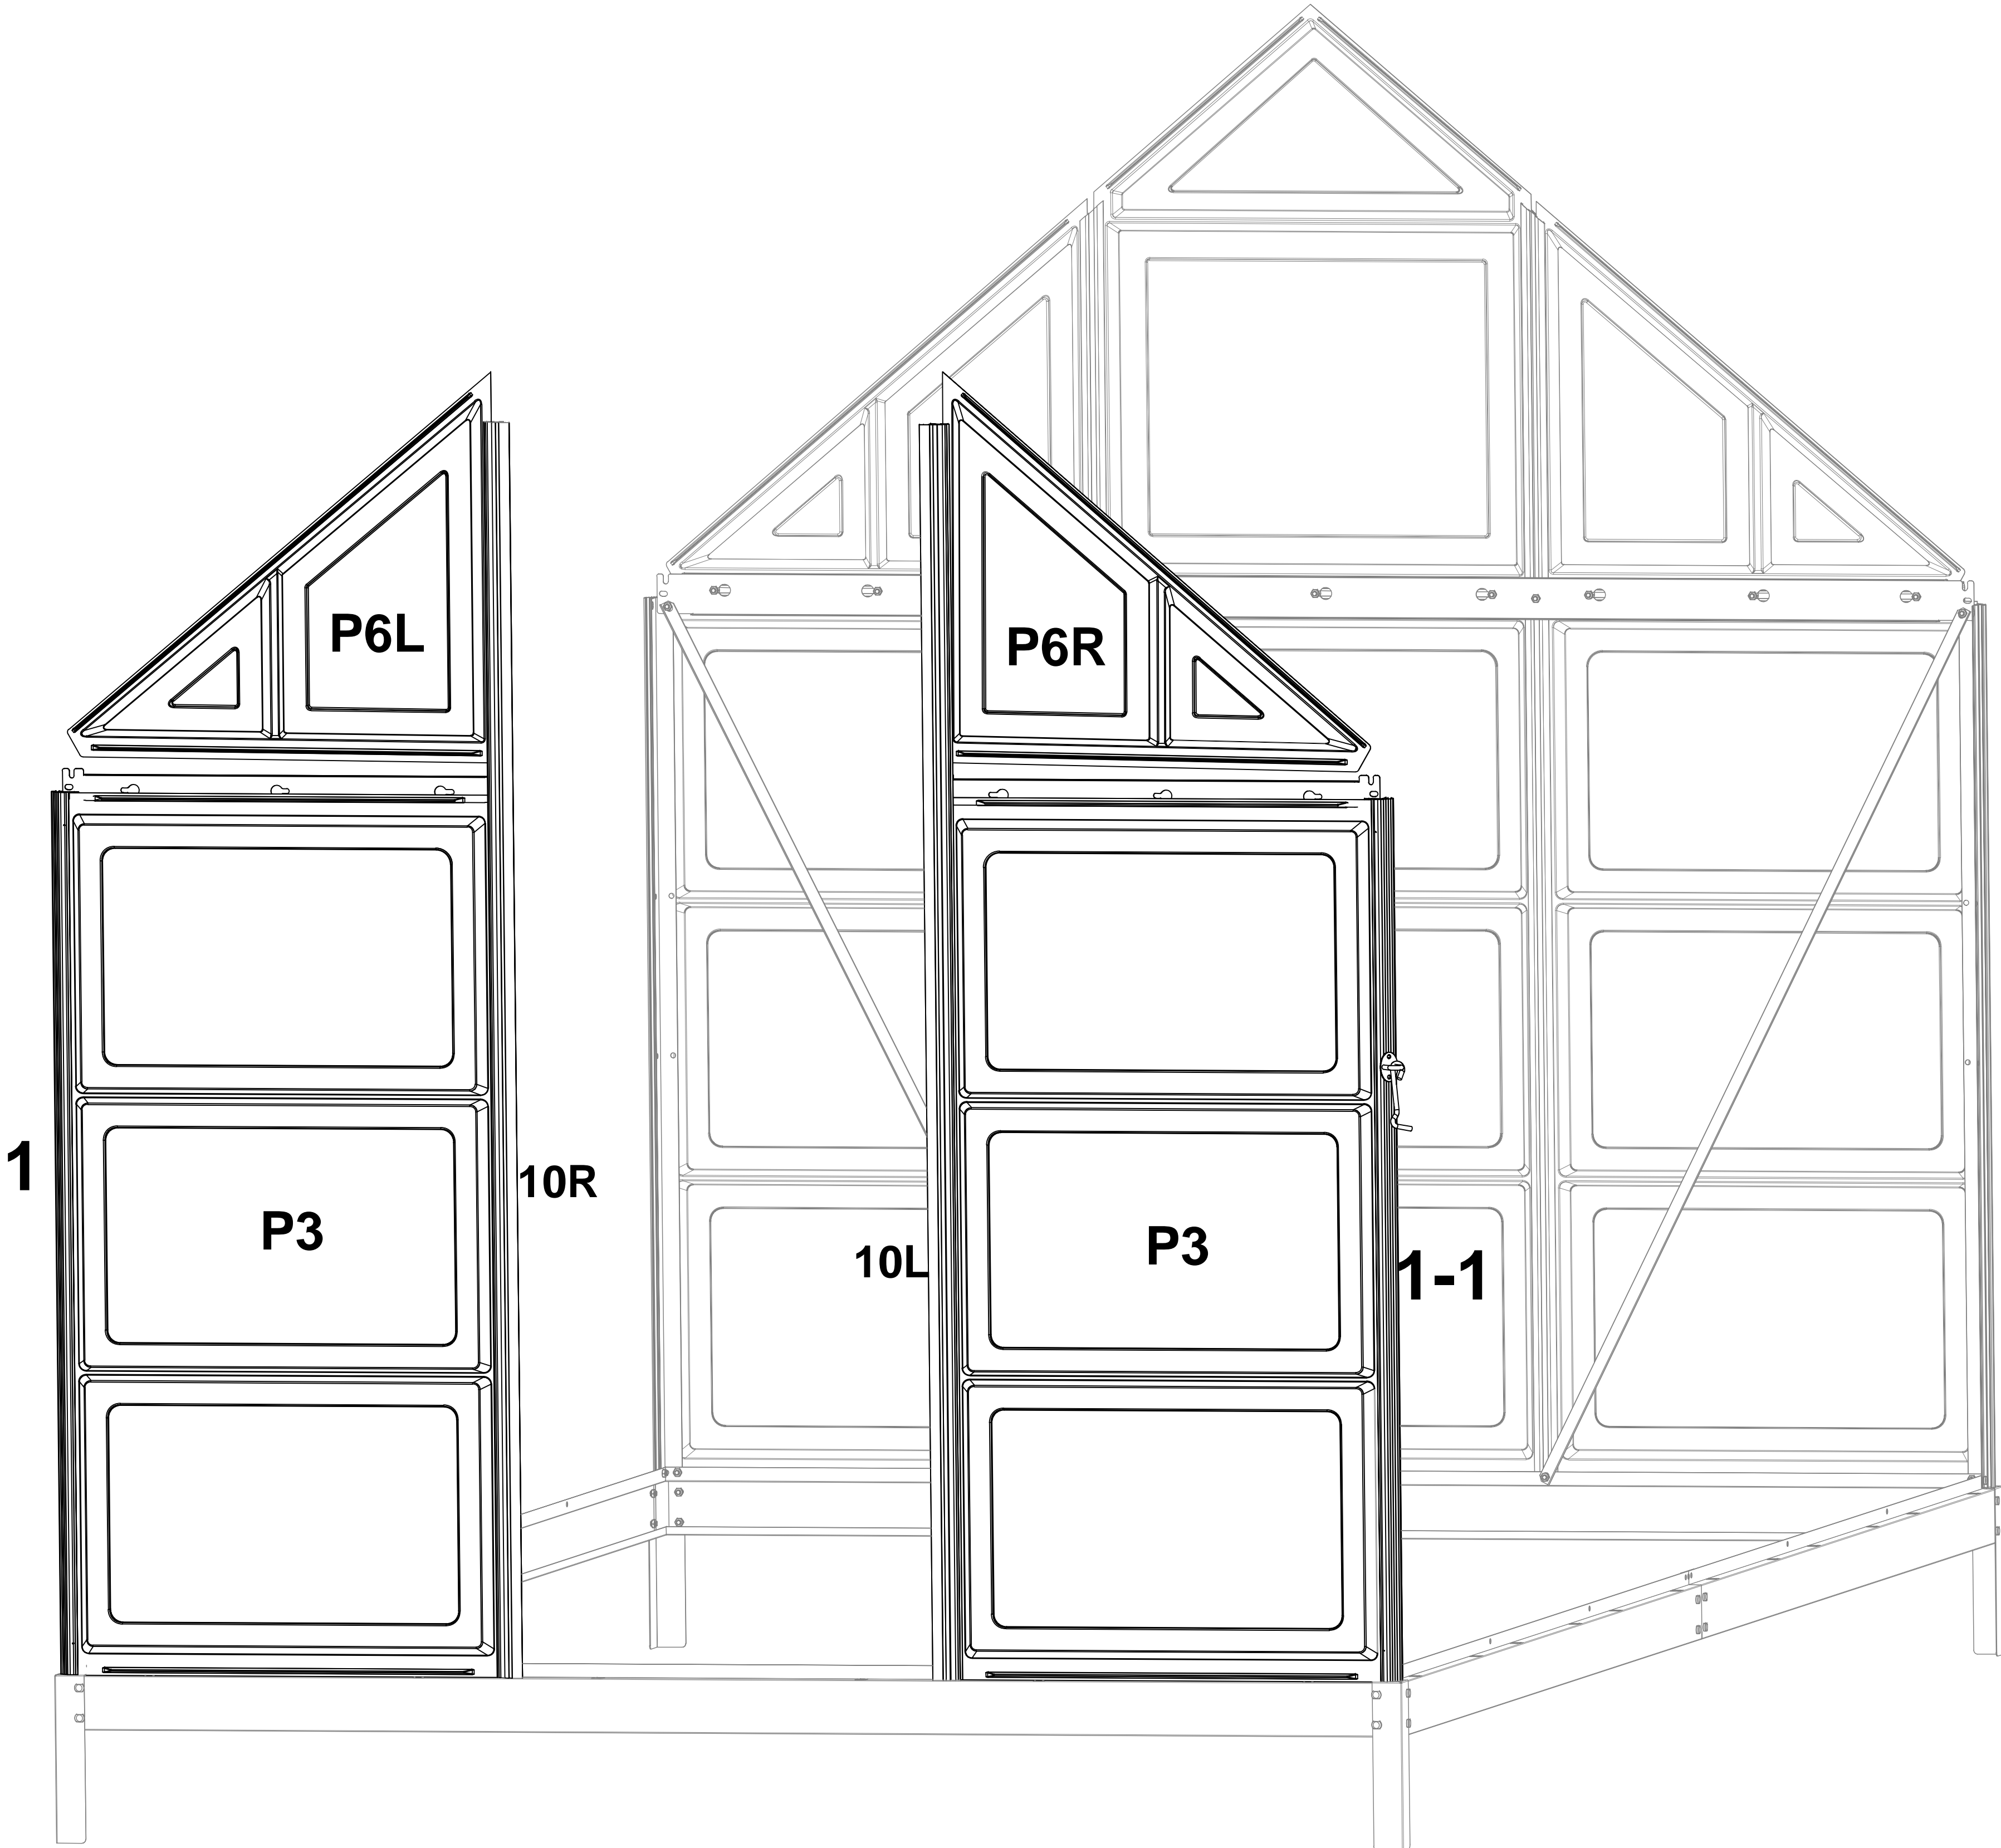
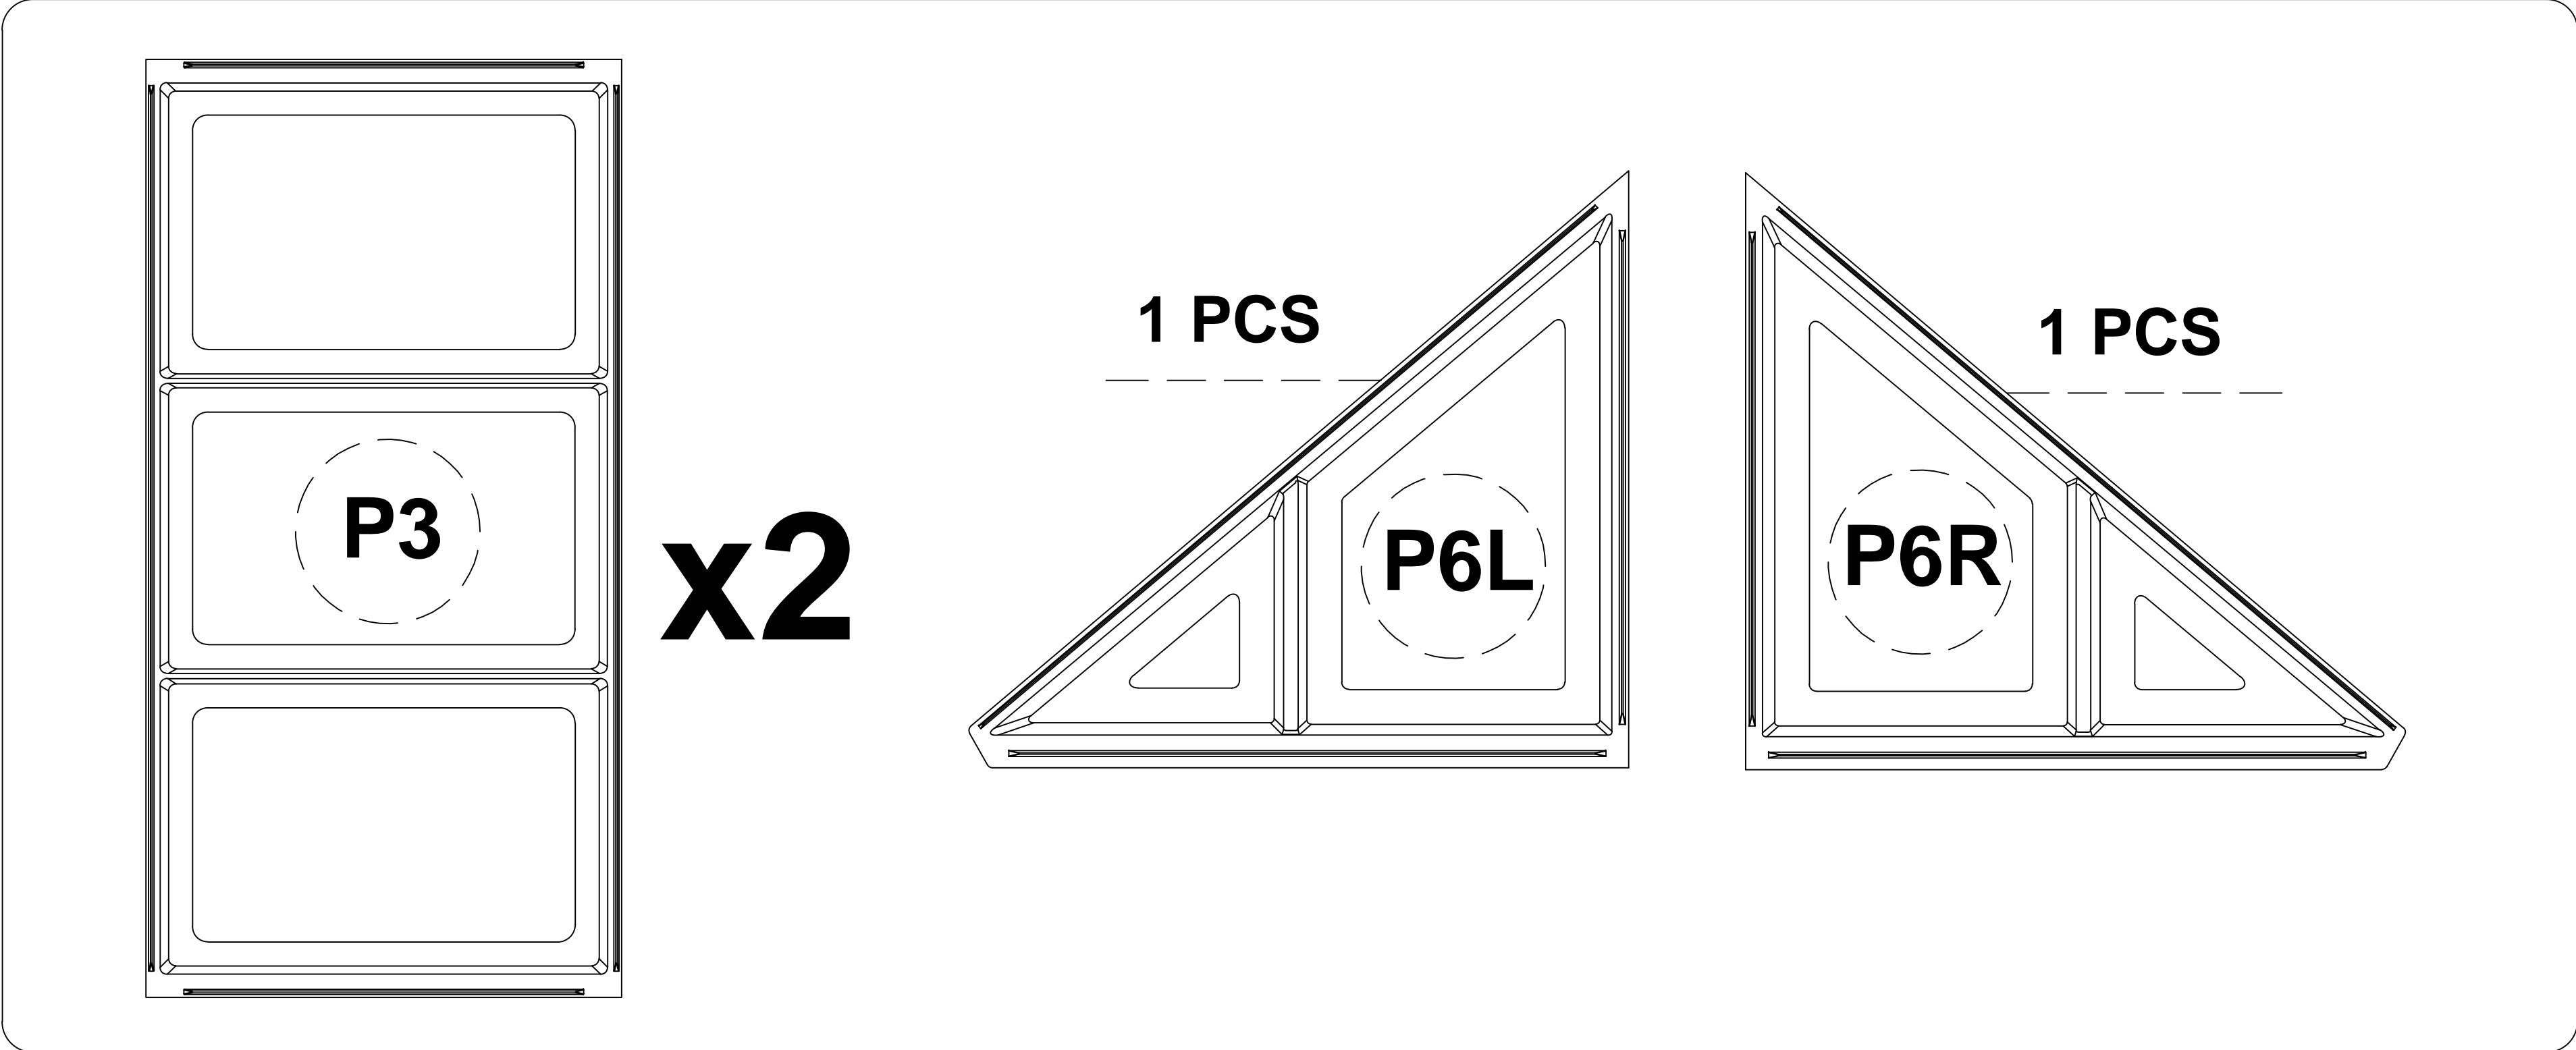


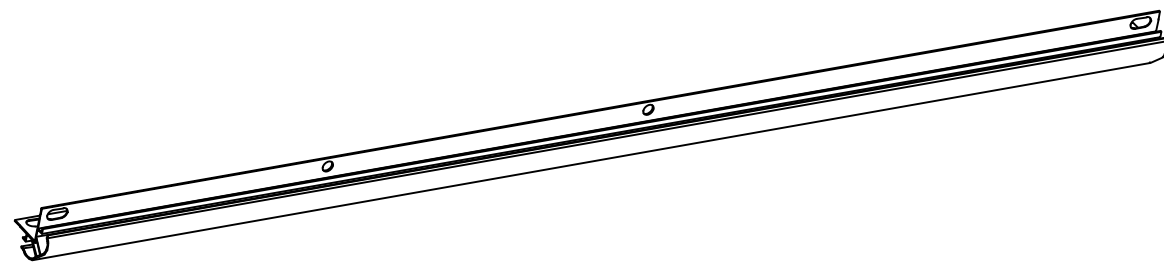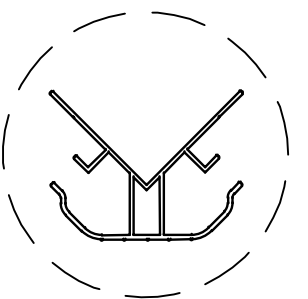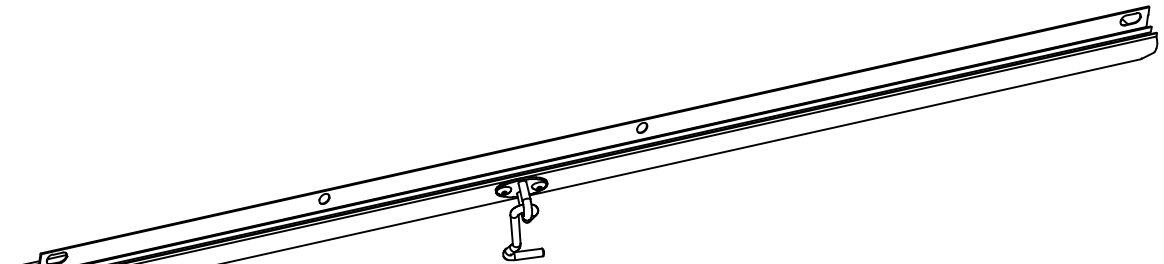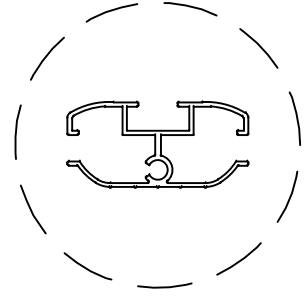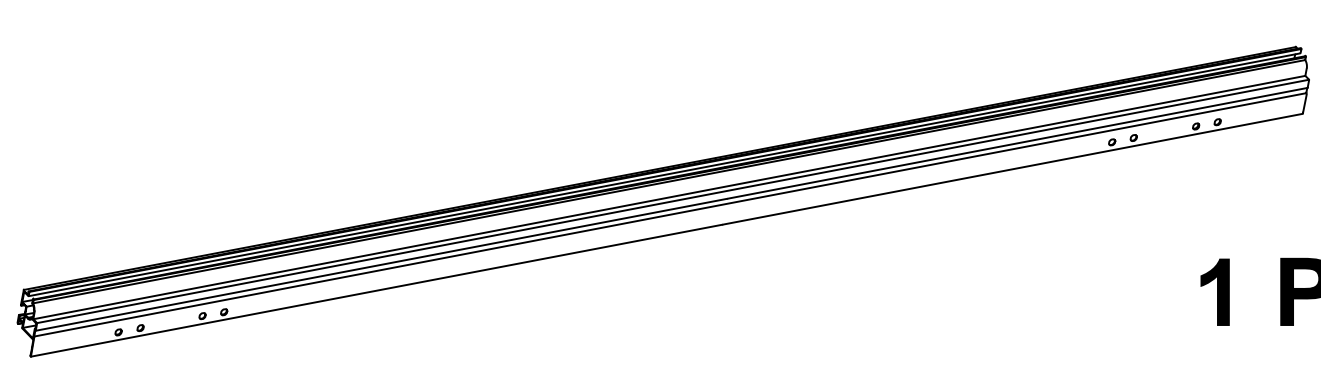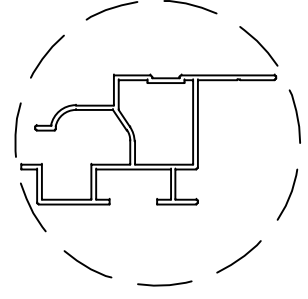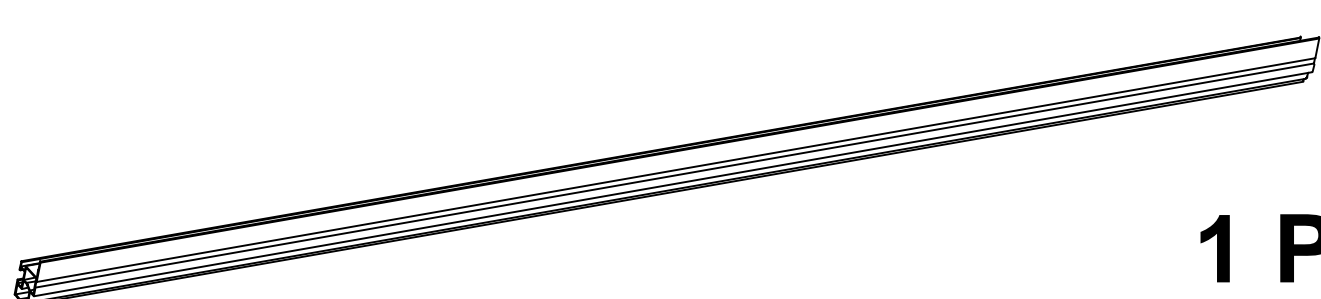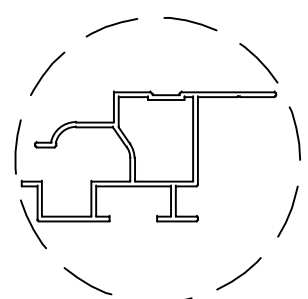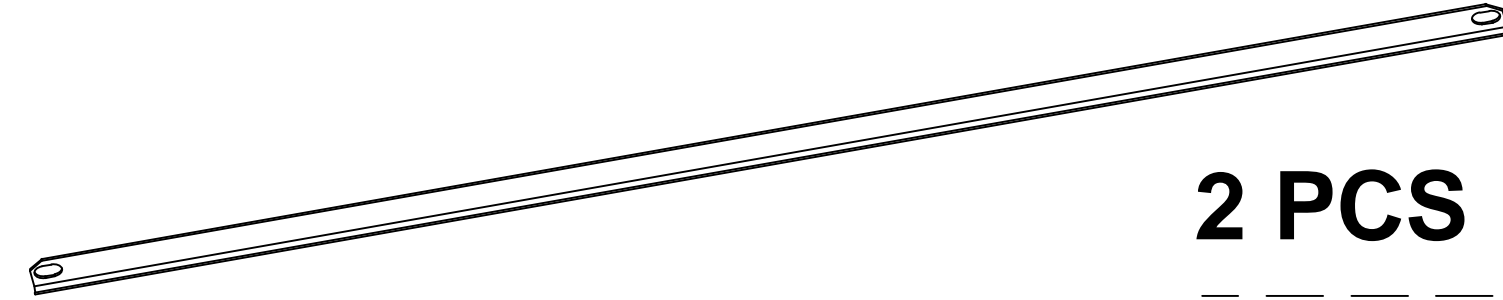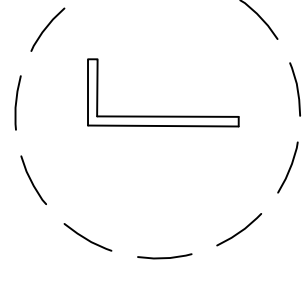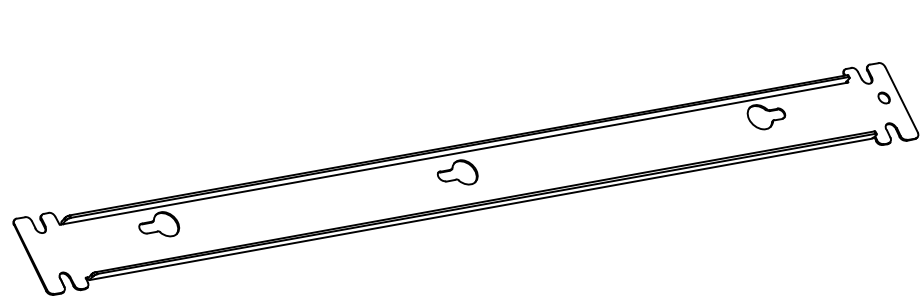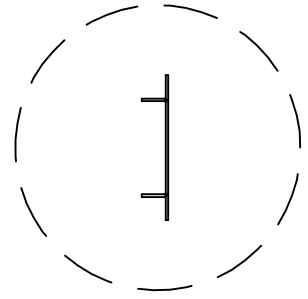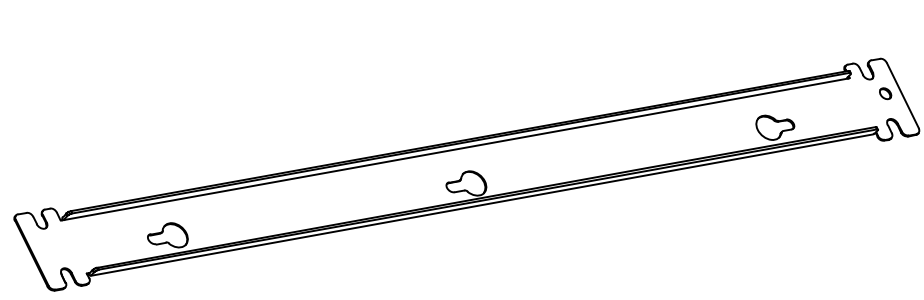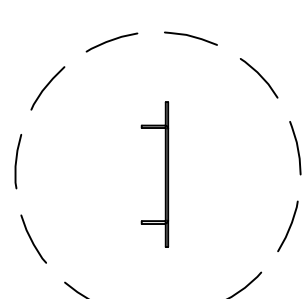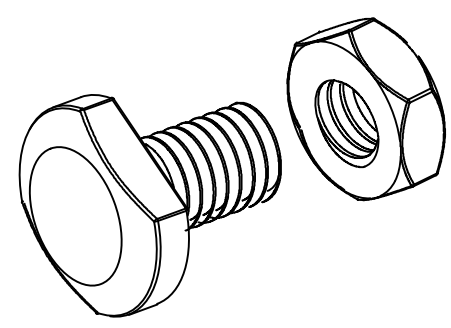
			MM
1		1 PCS	 1170
1-1		1 PCS	 1700
10L		1 PCS	 1665
10R		1 PCS	 1665
8		2 PCS	 1300
25L		1 PCS	 604
25R		1 PCS	 604
F5		12PCS	






- 1 1 PCS
- 10R 1 PCS
- 8 1PCS
- F5 3 PCS

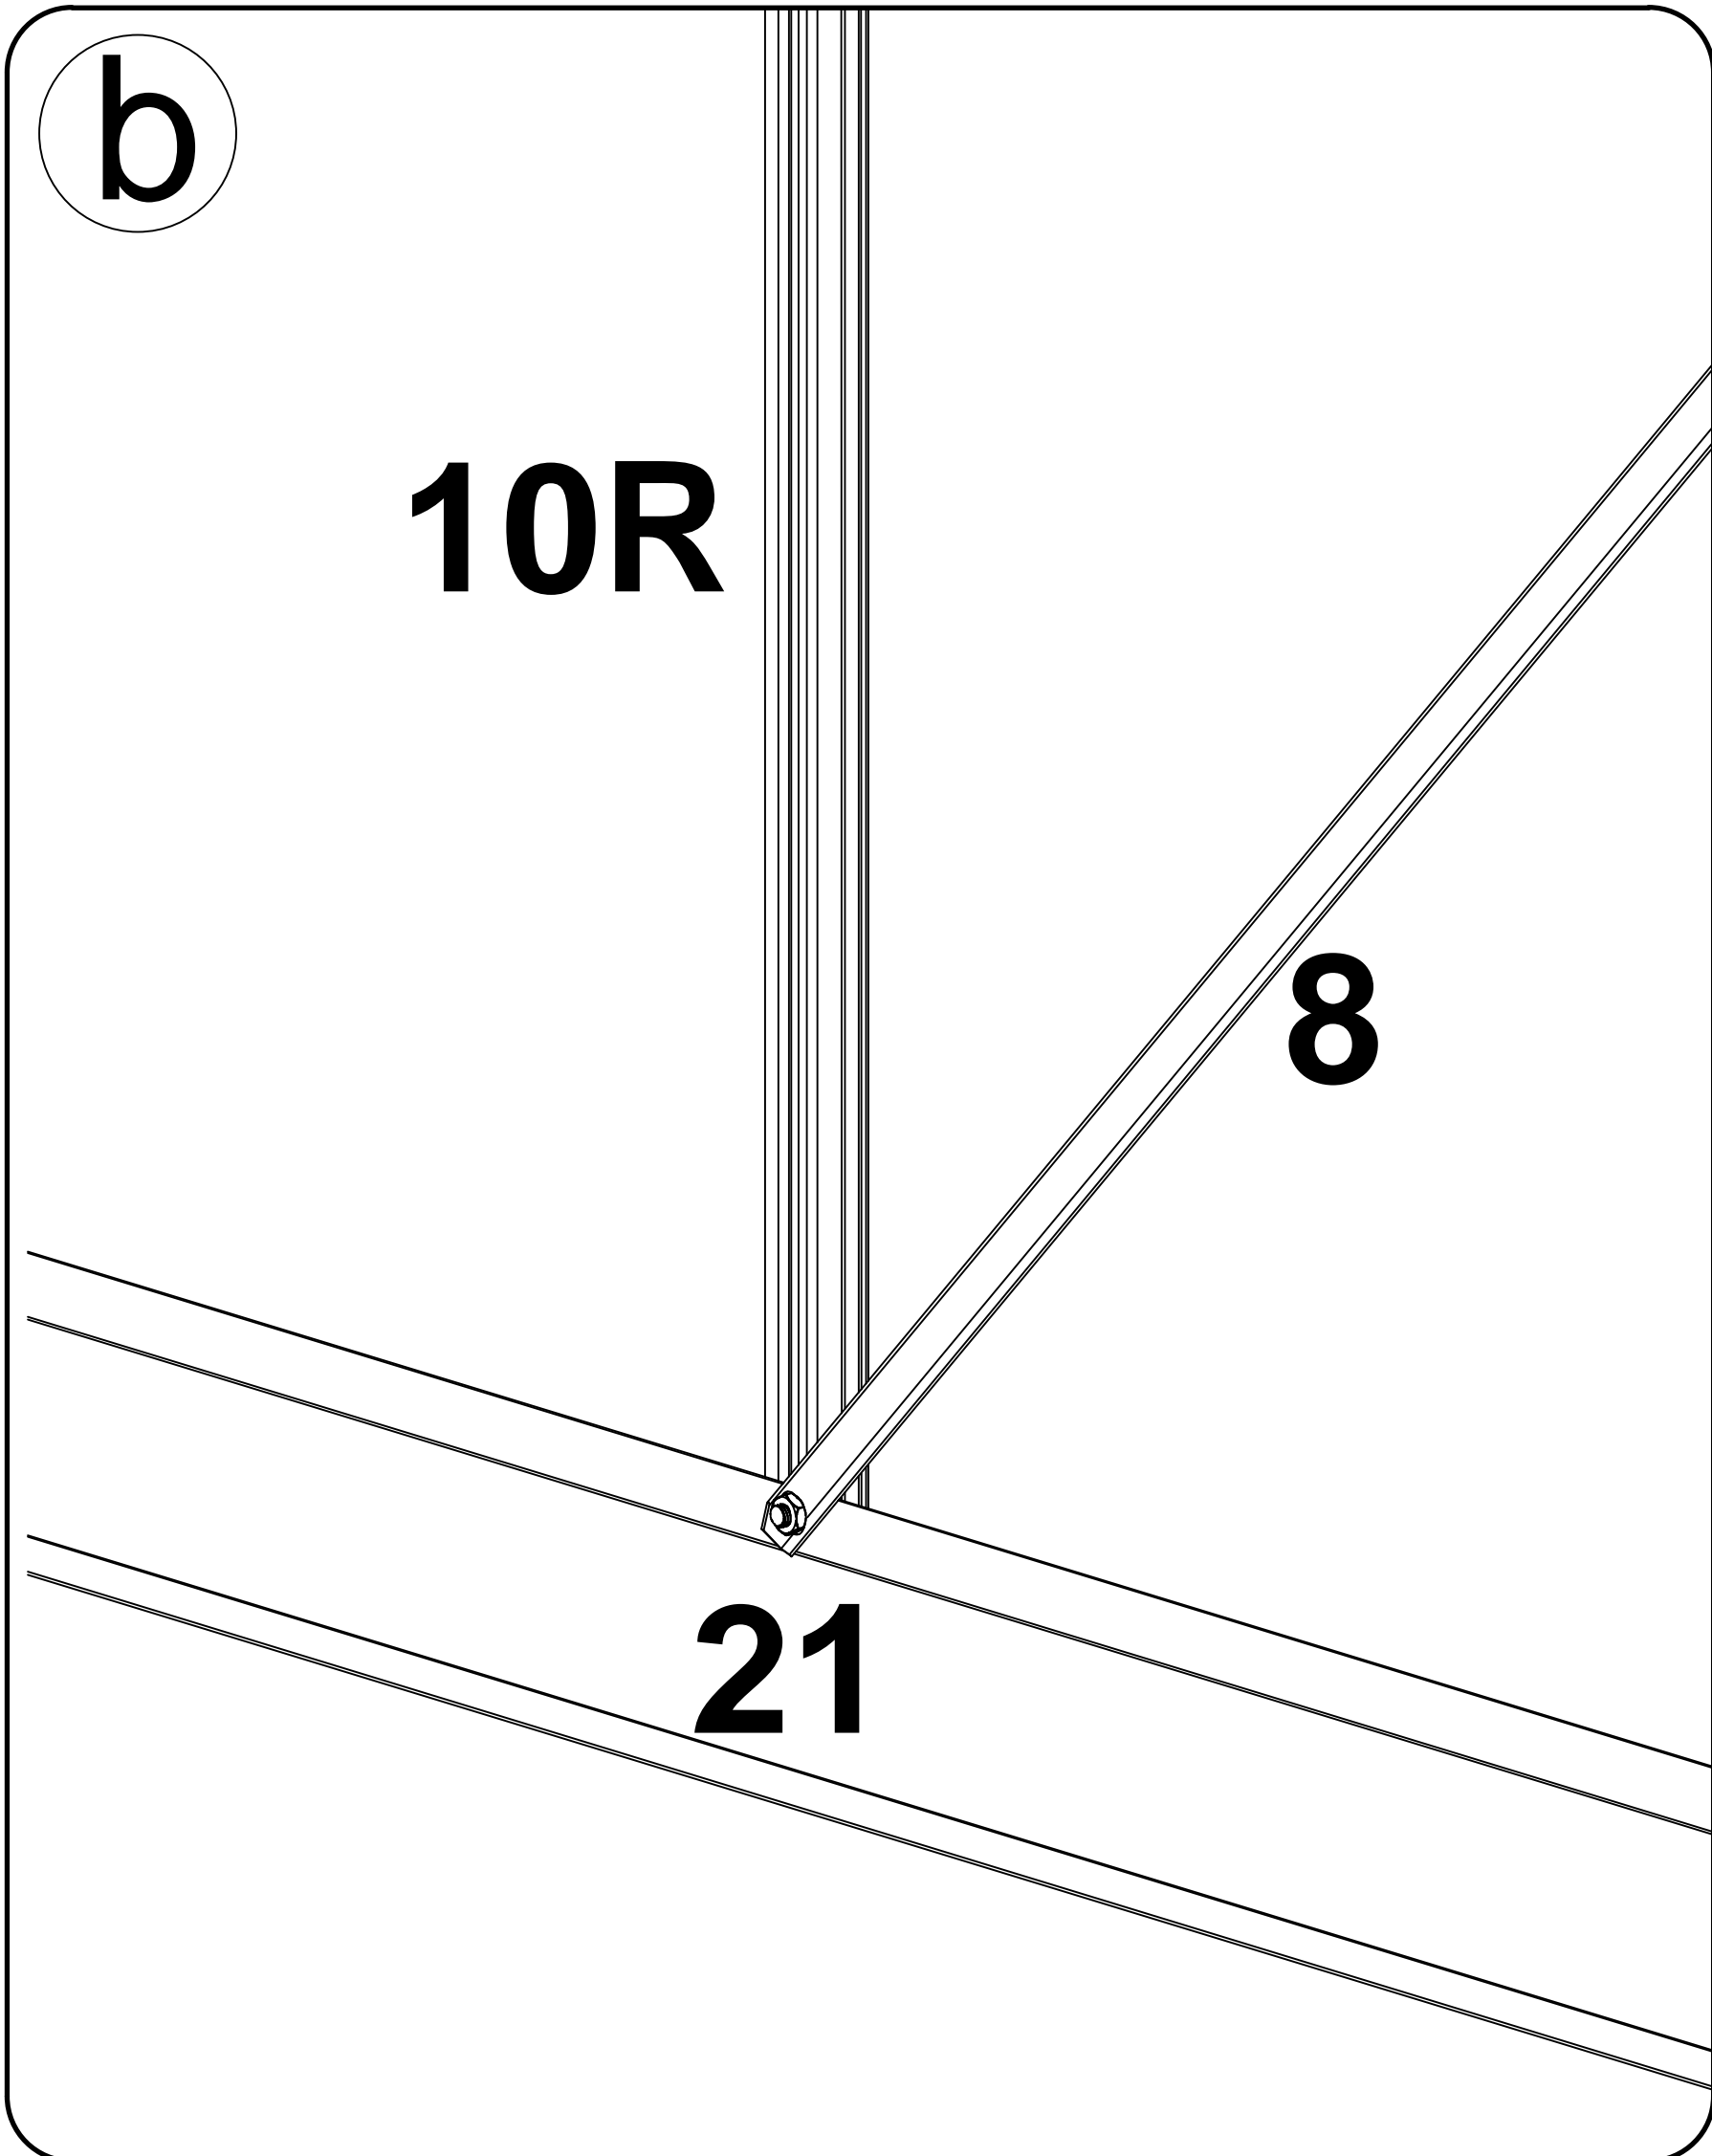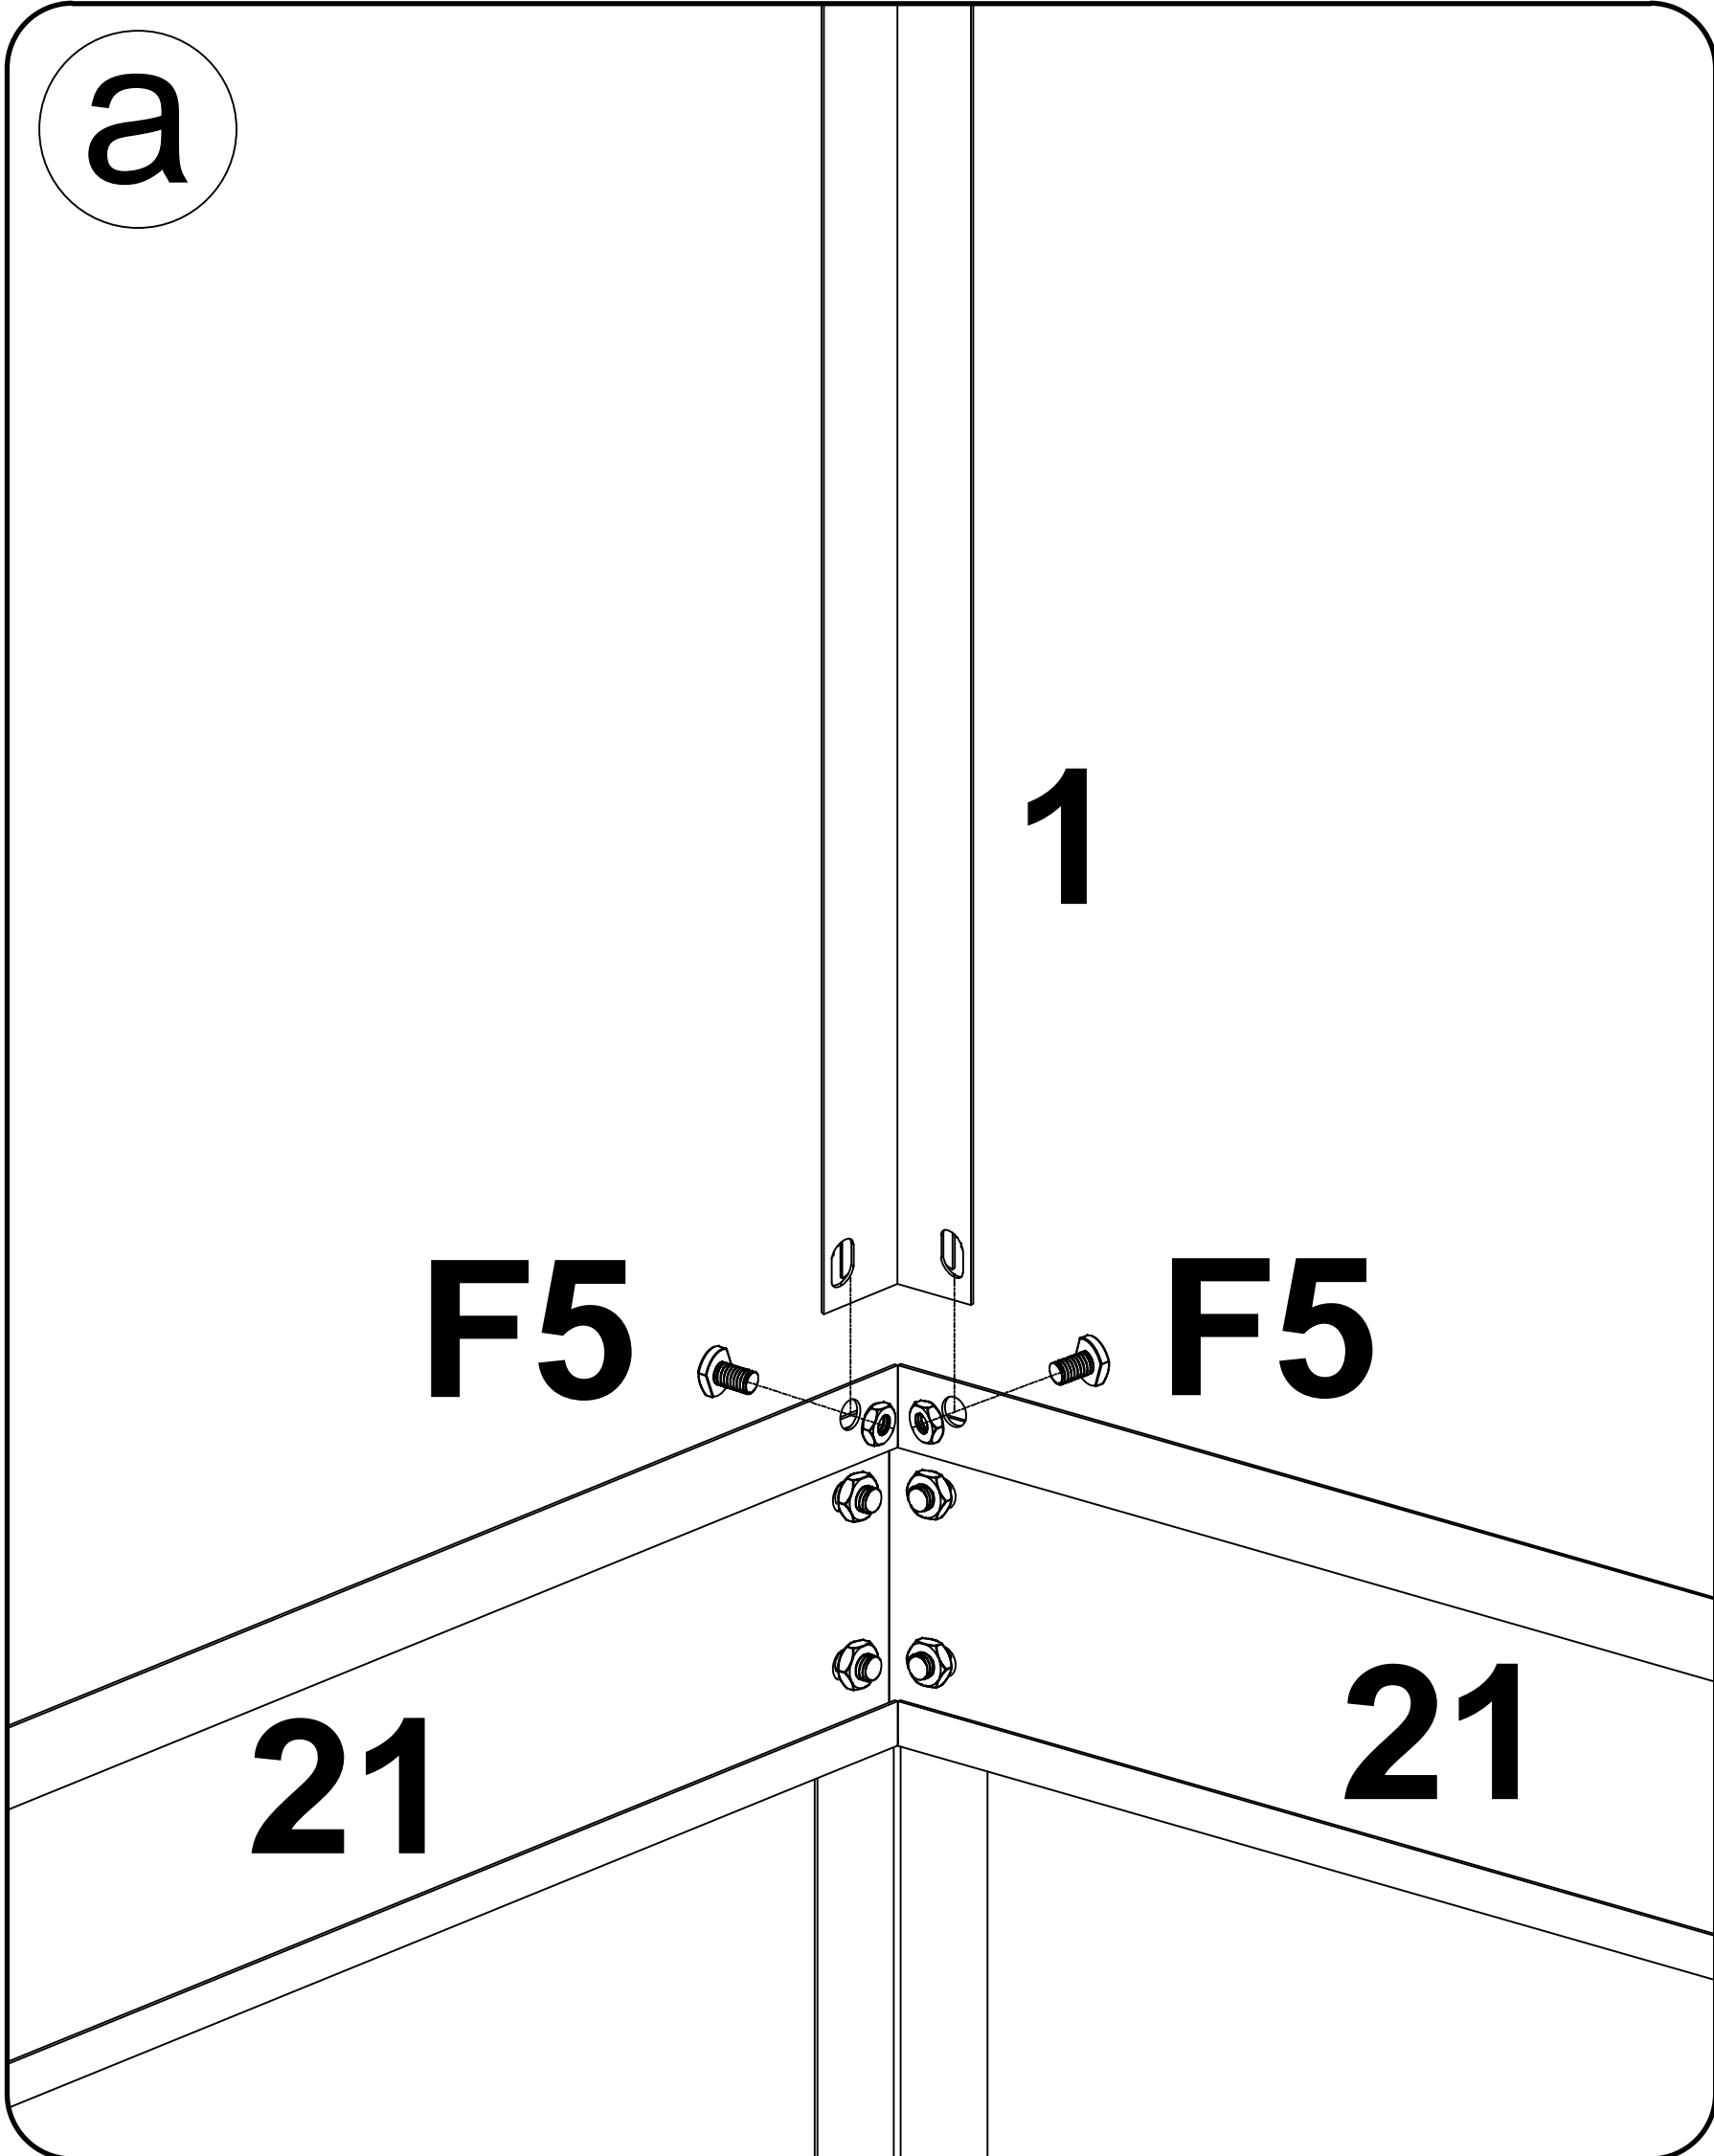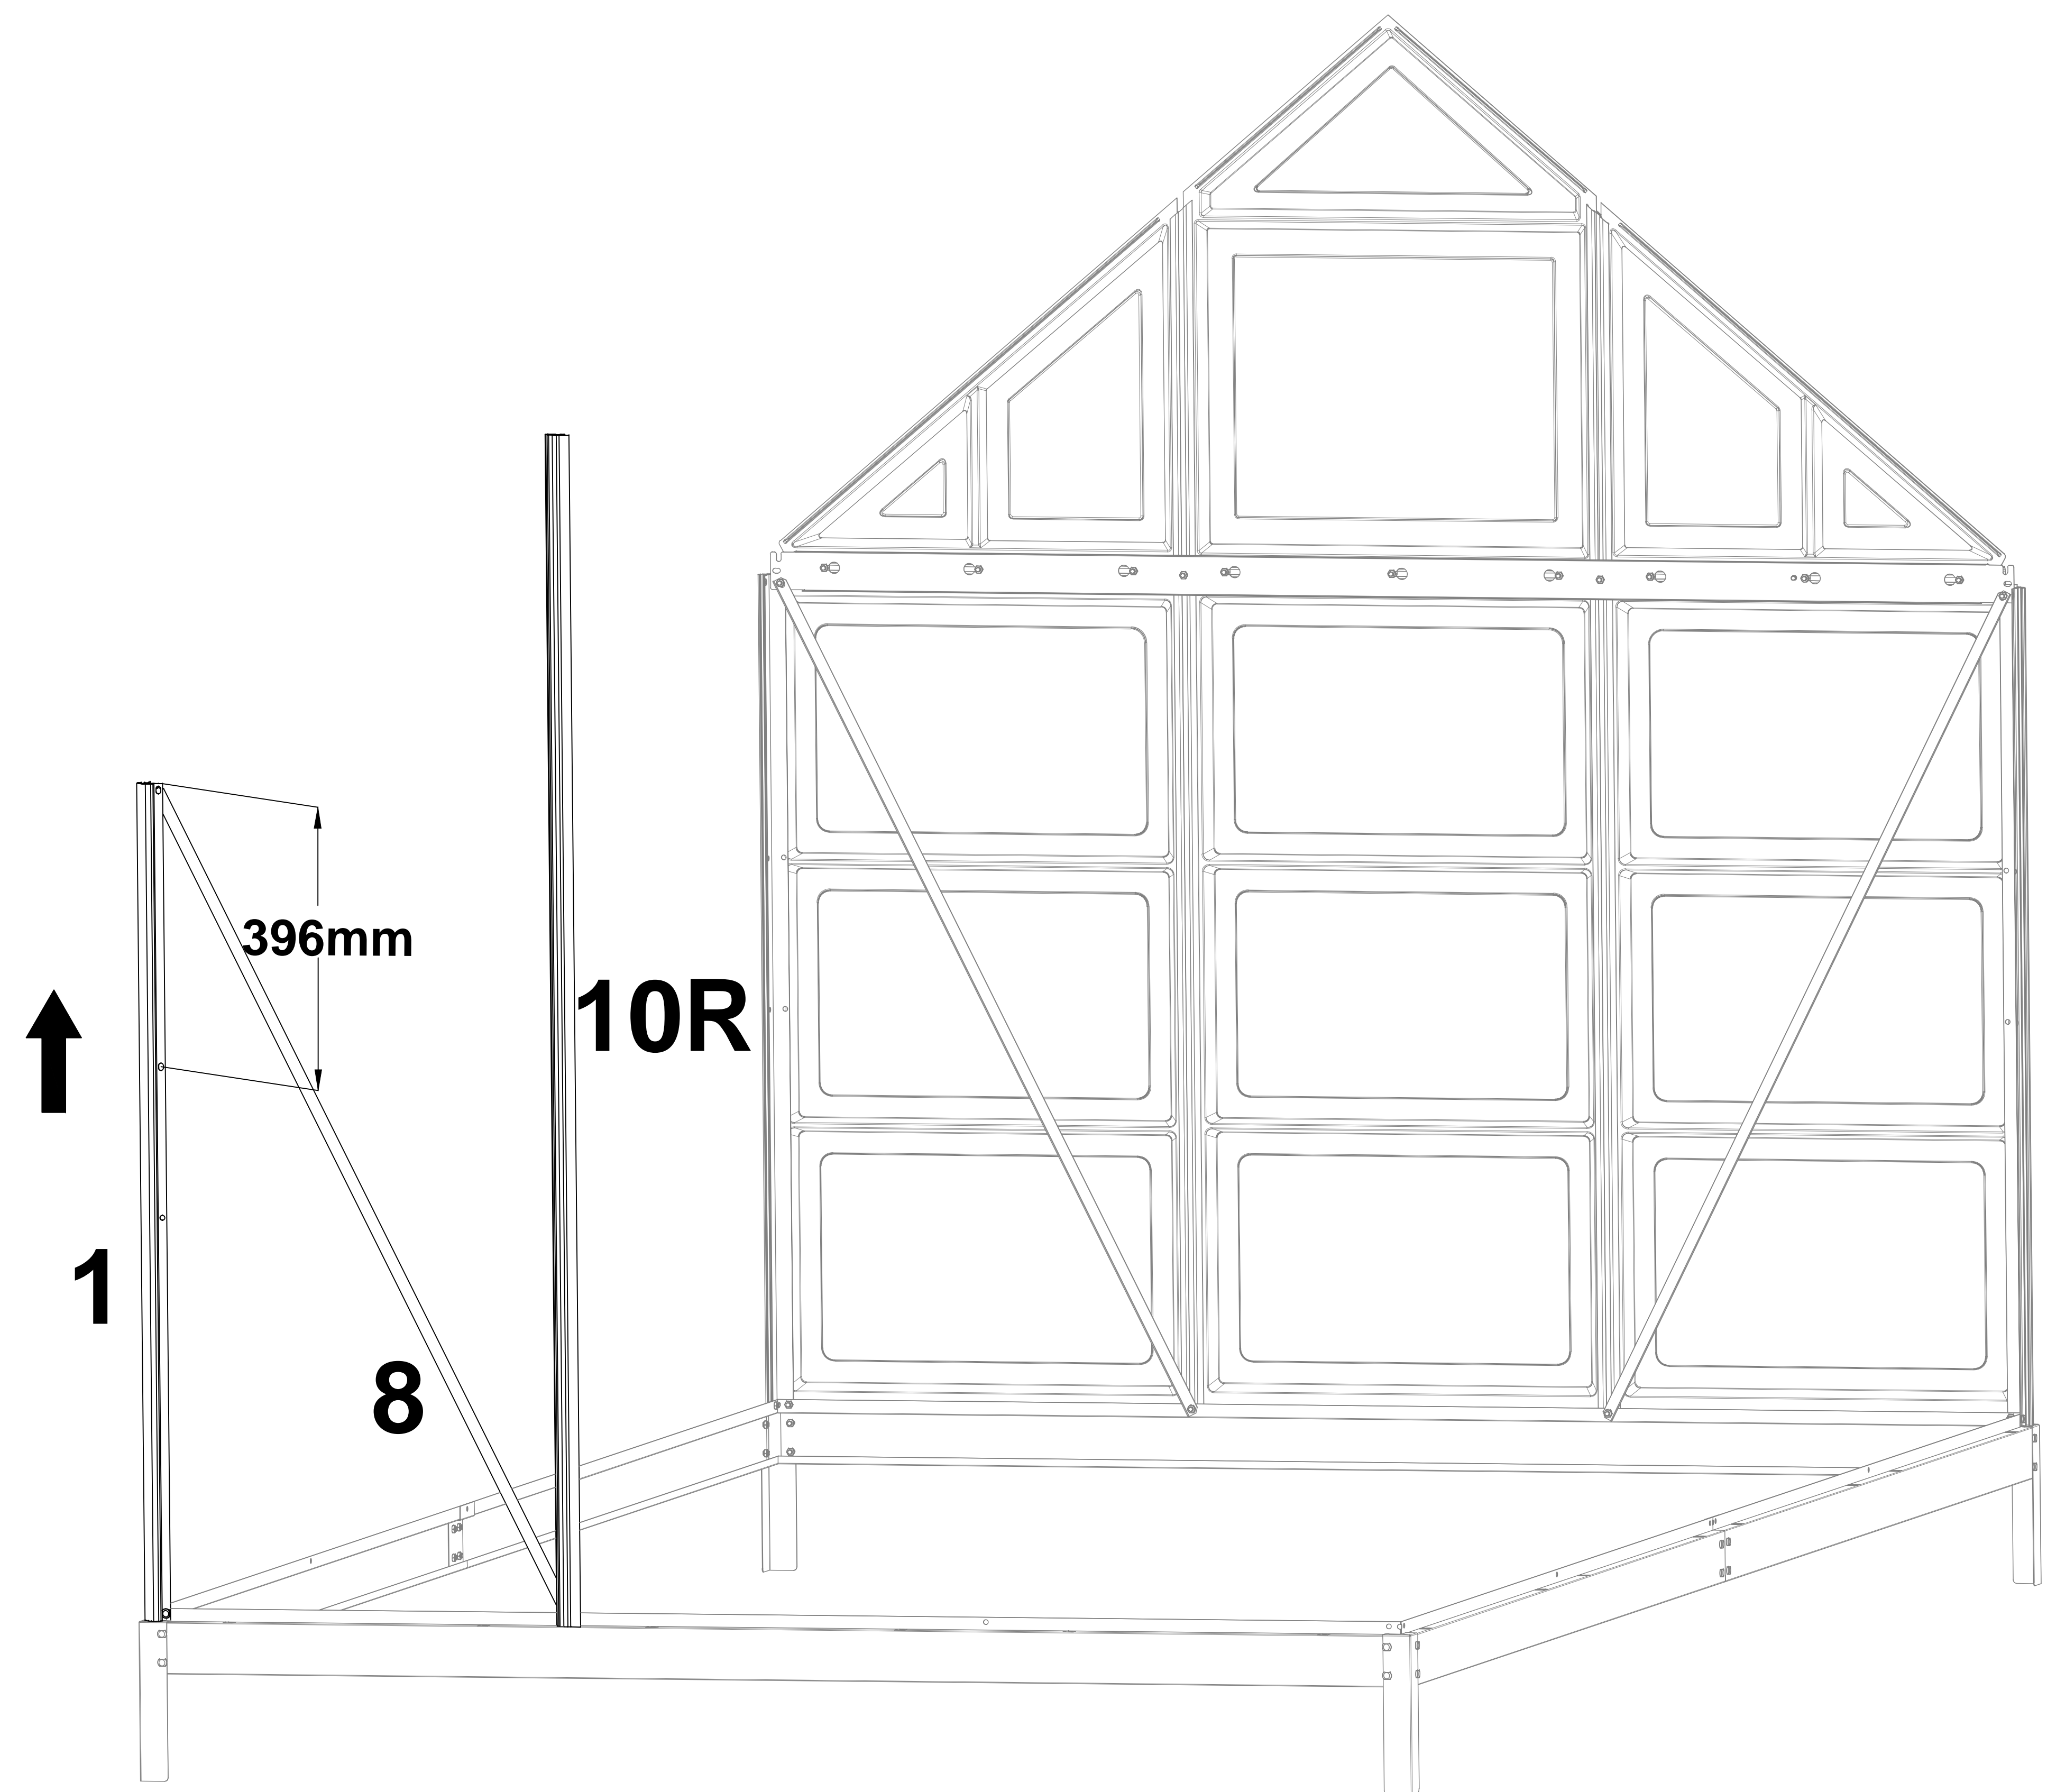

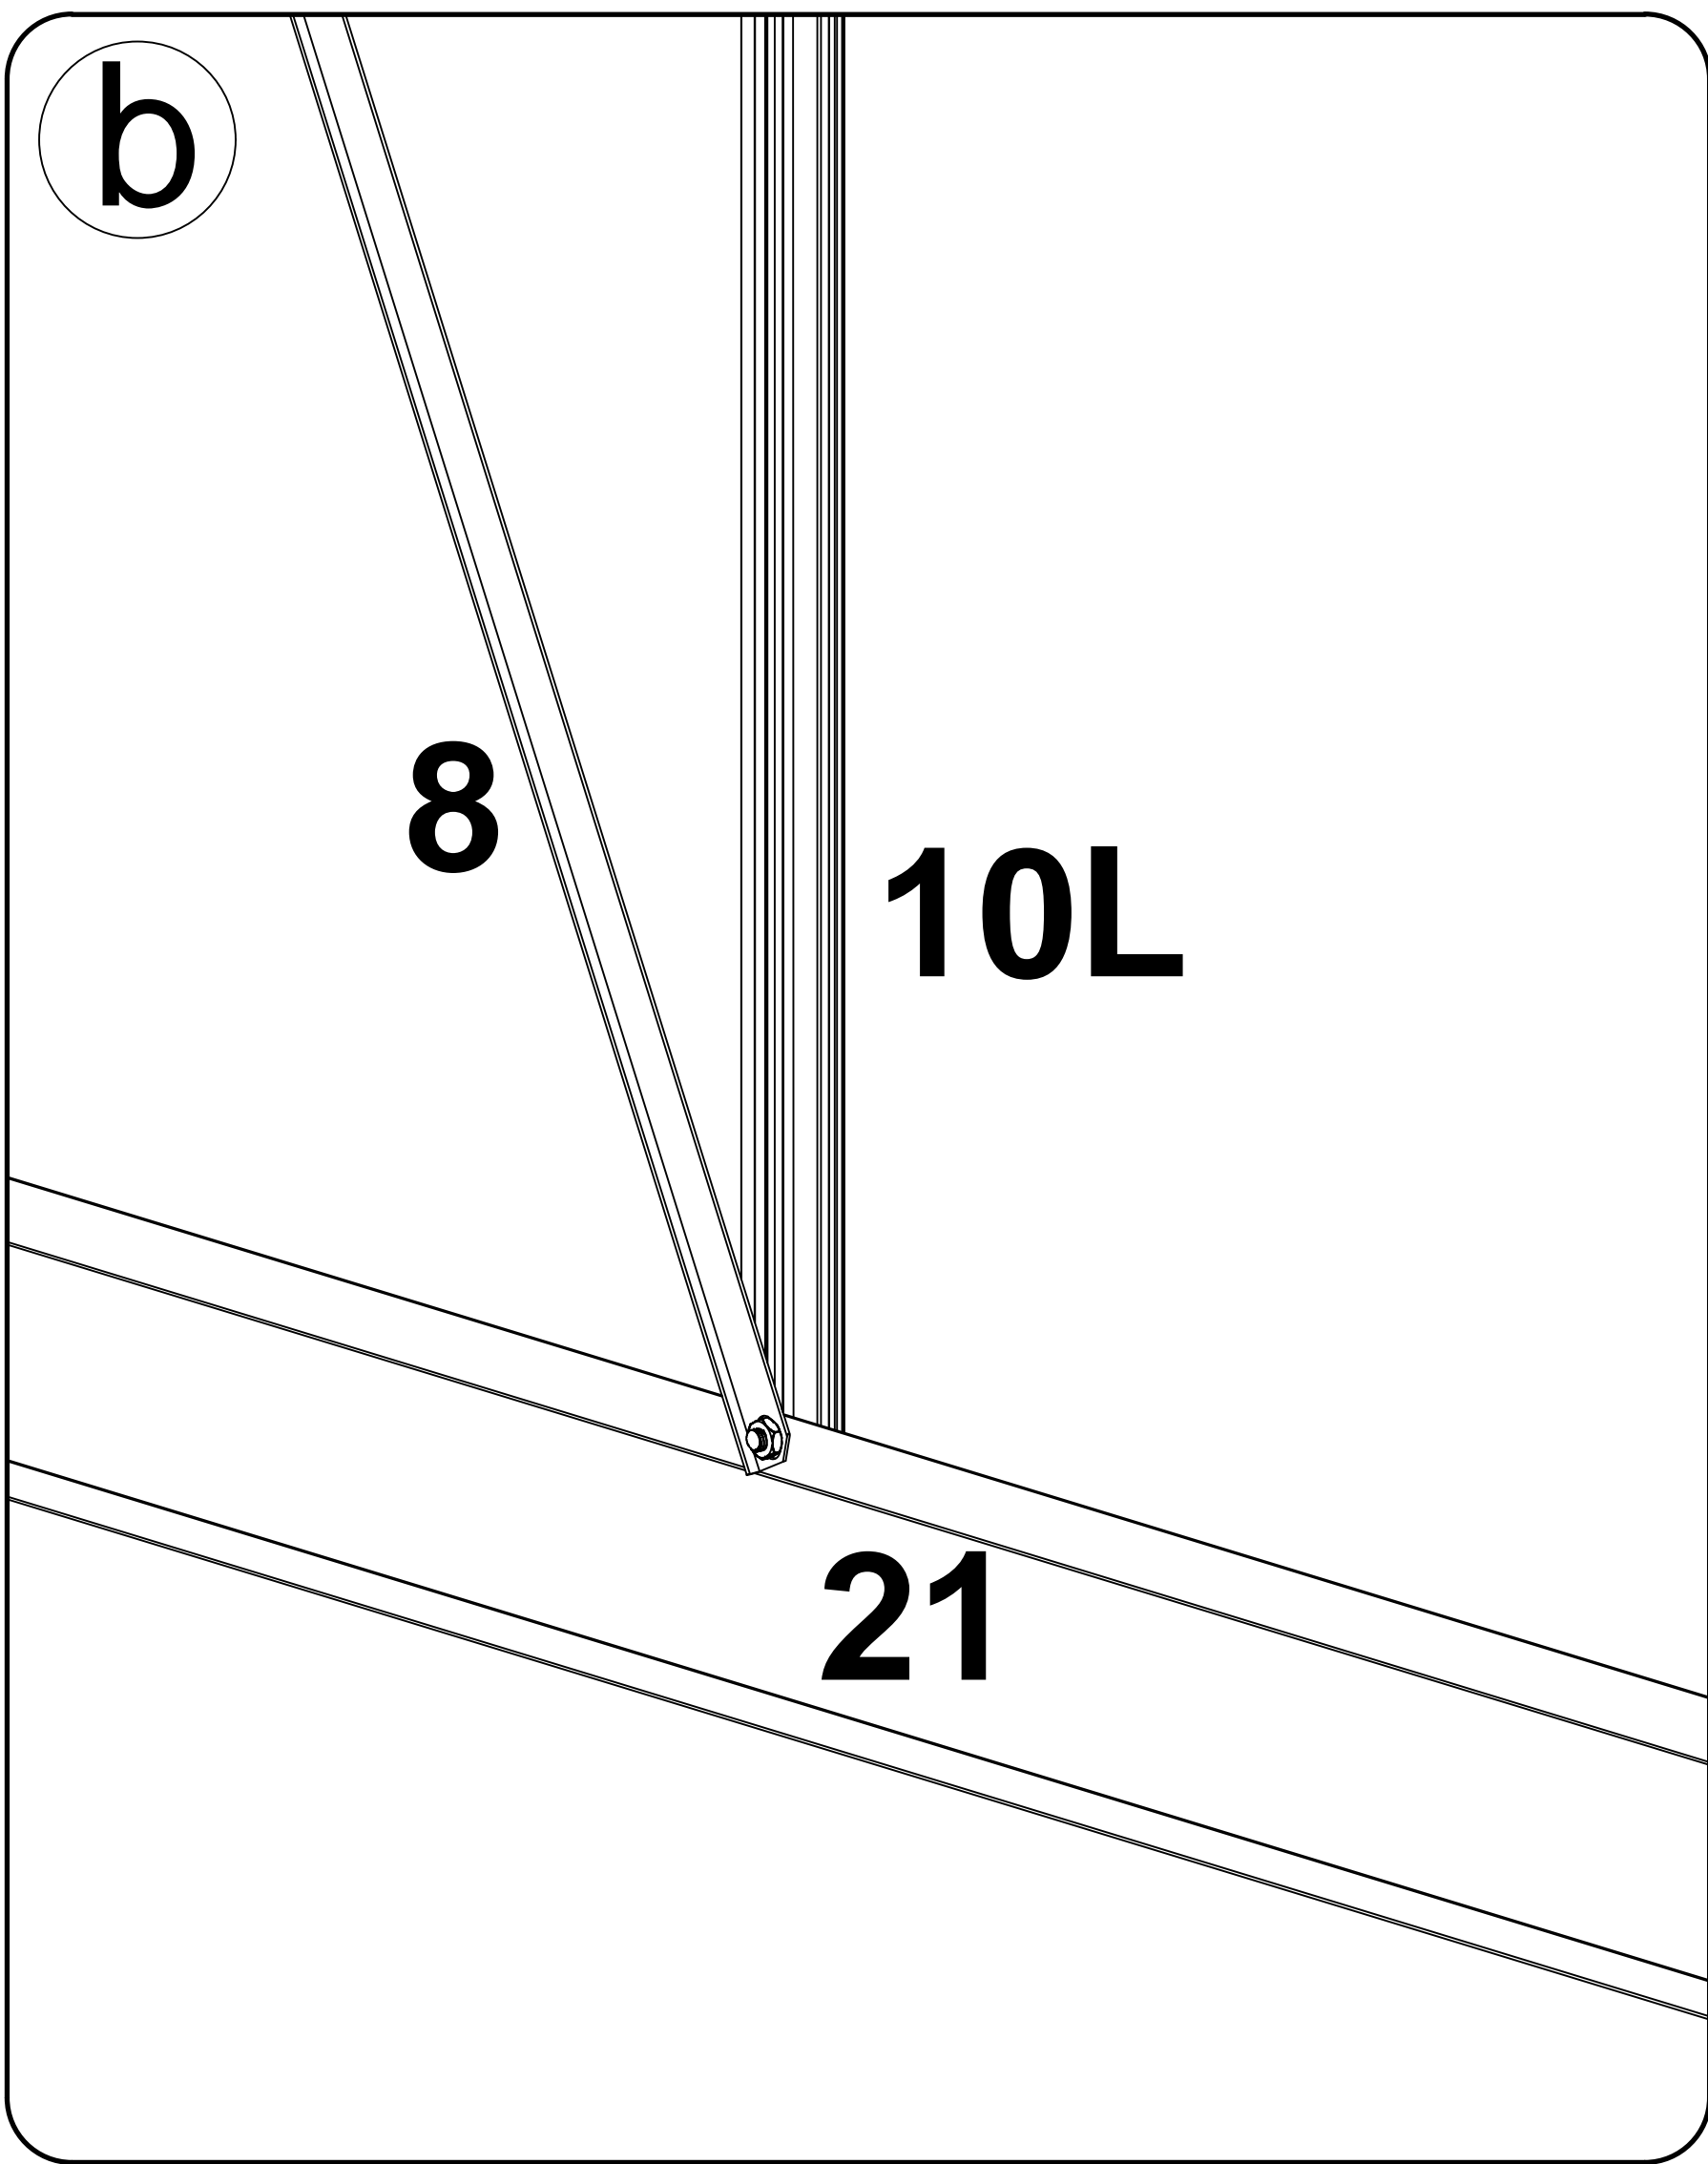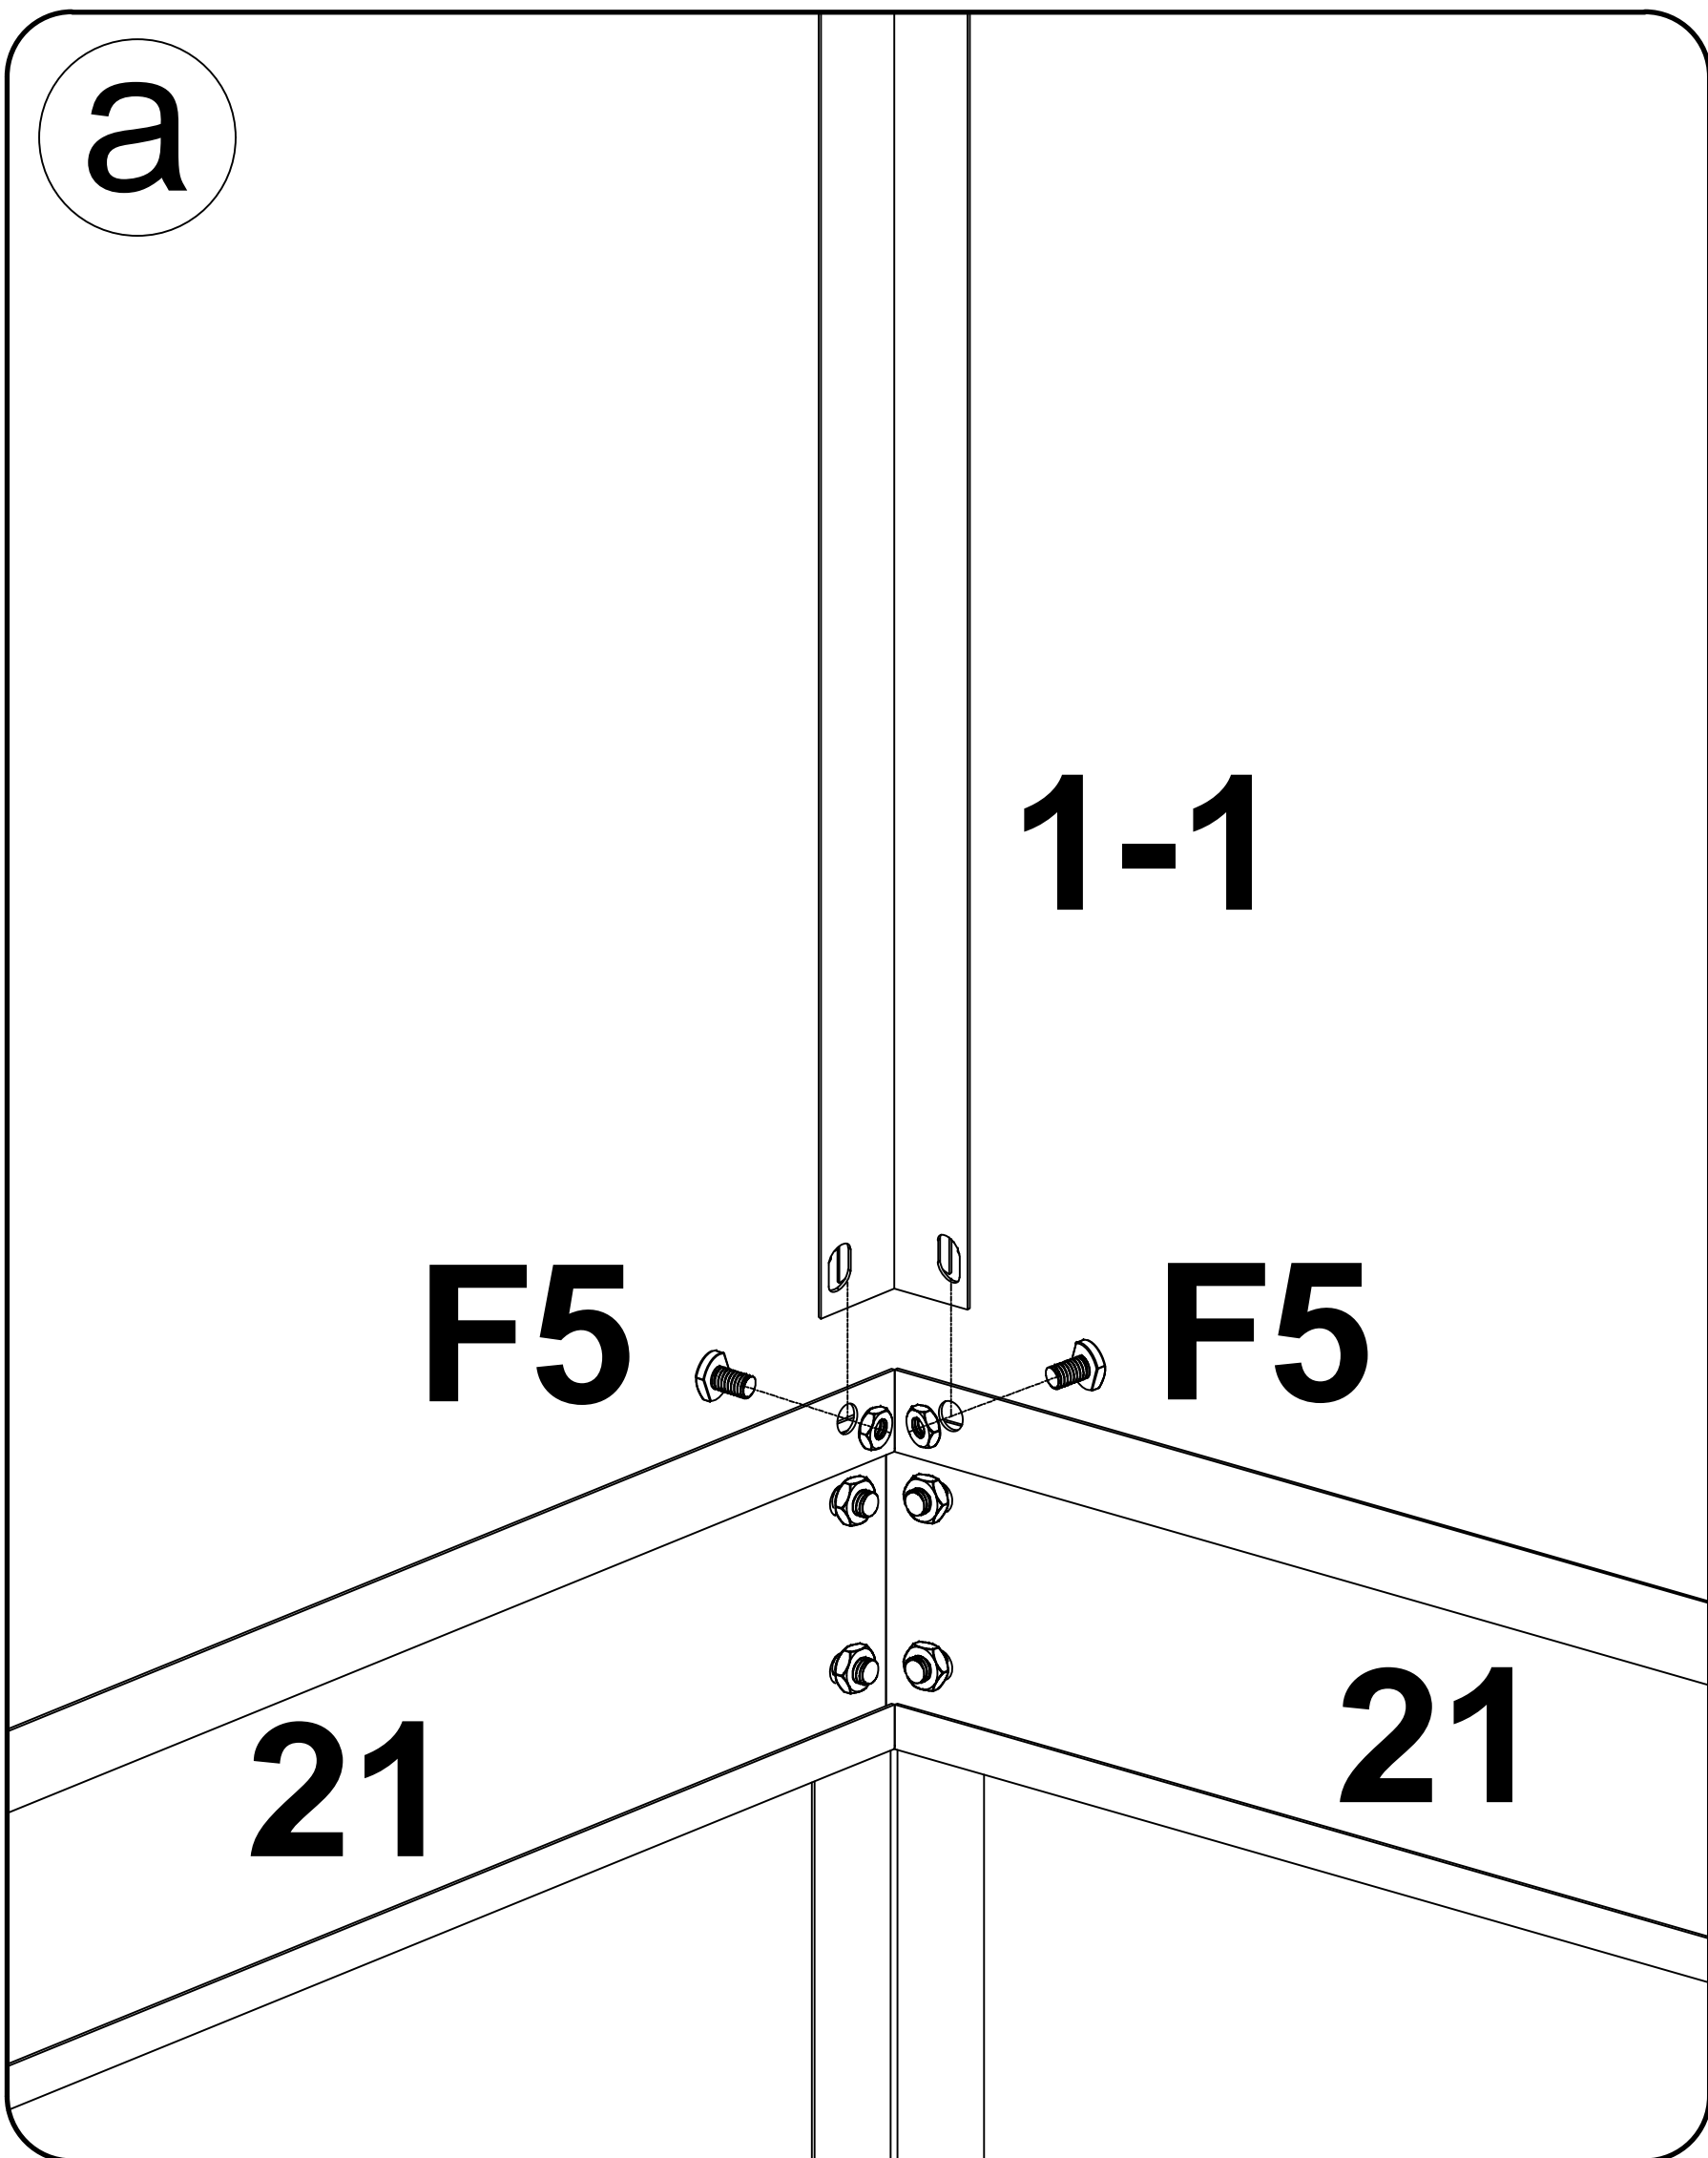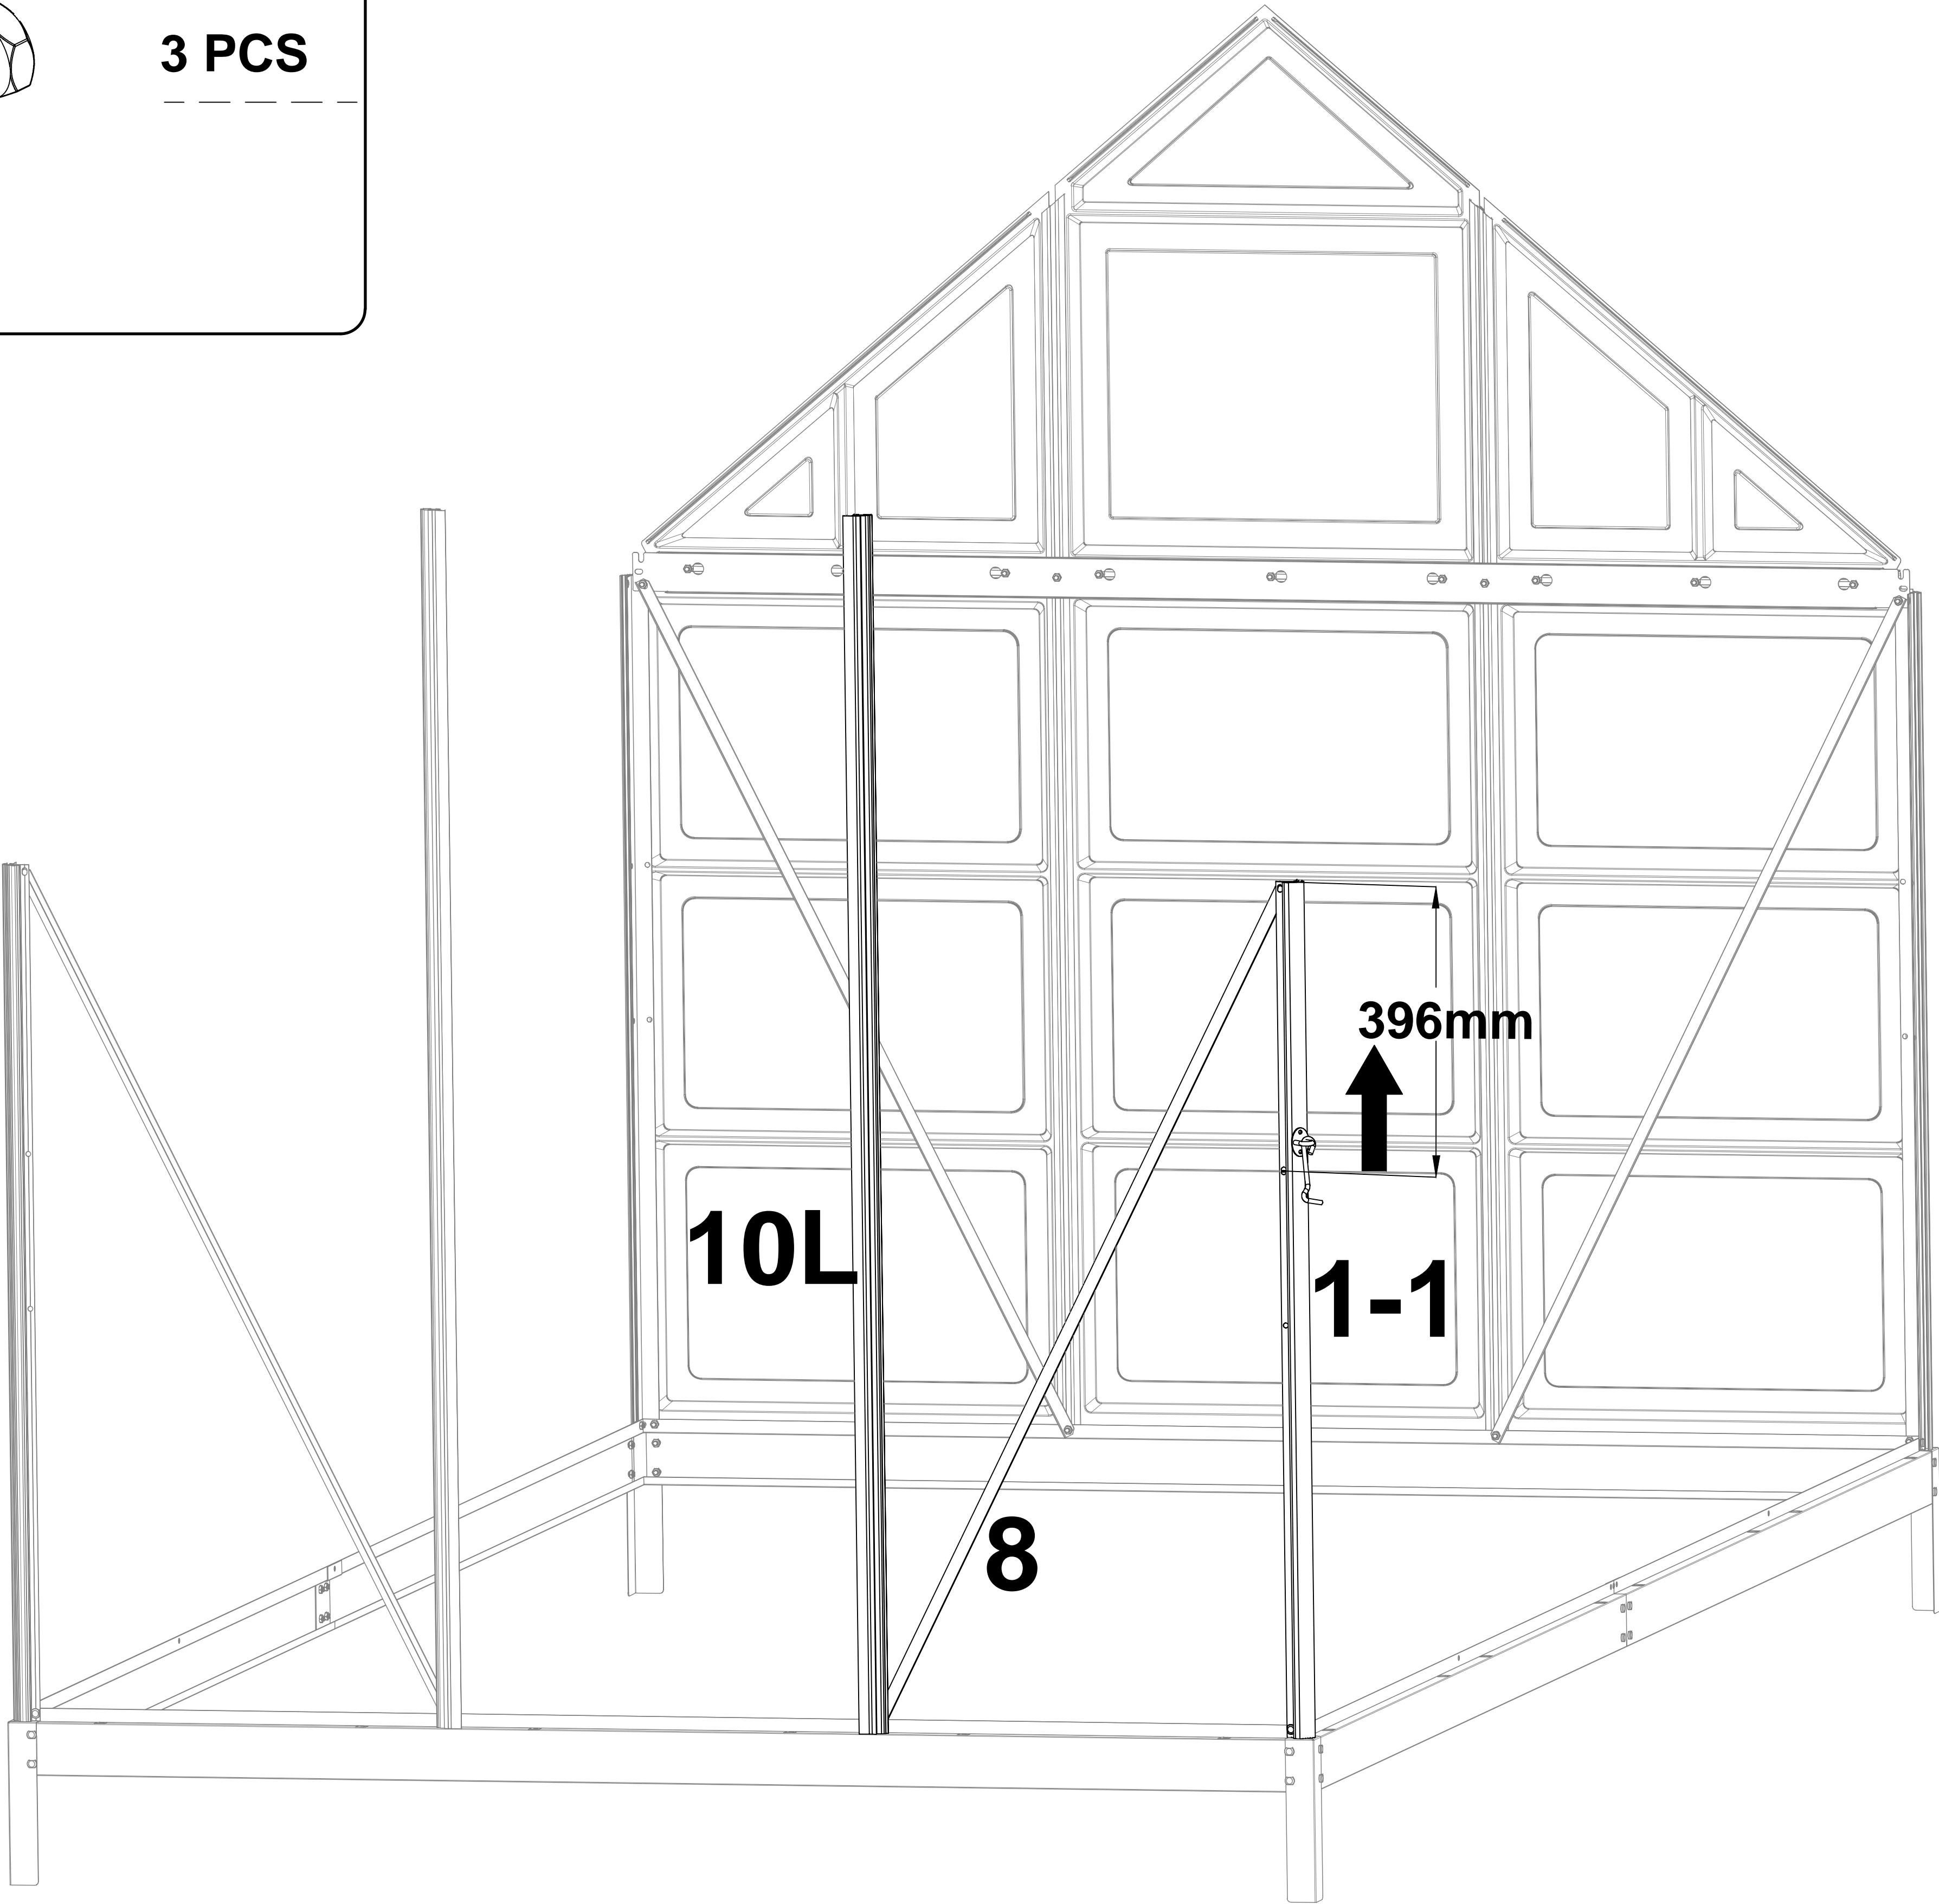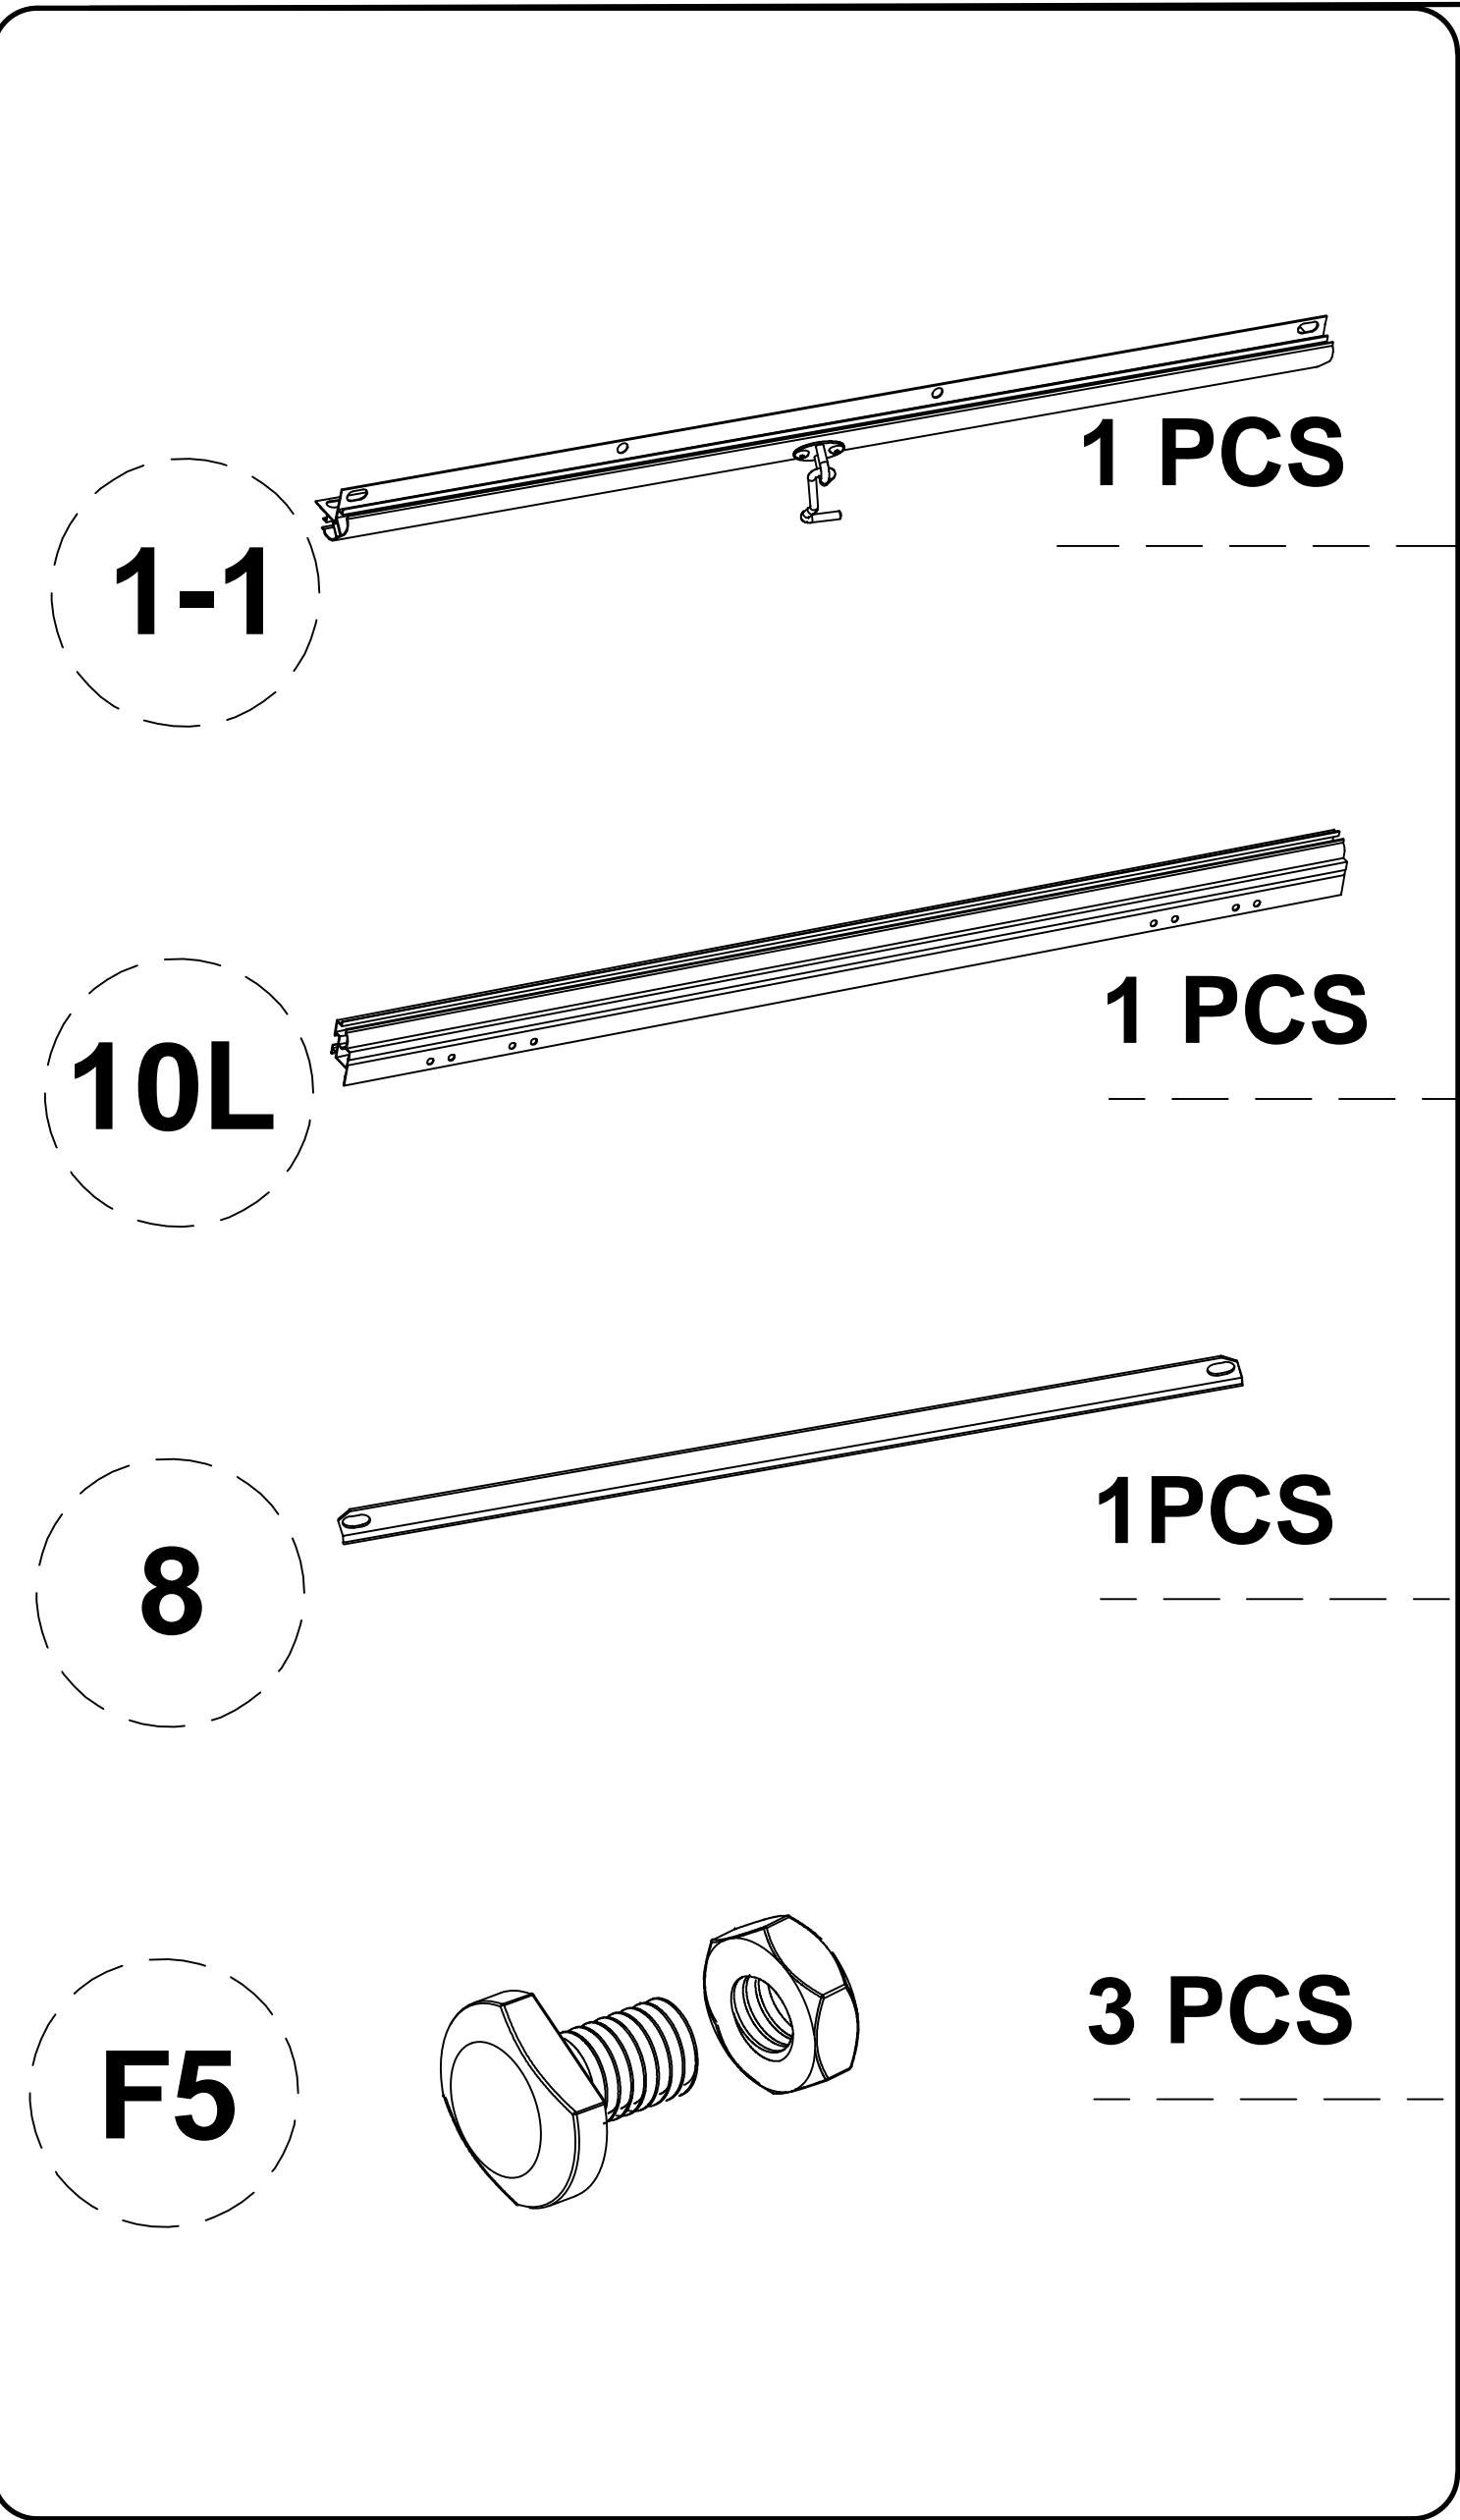

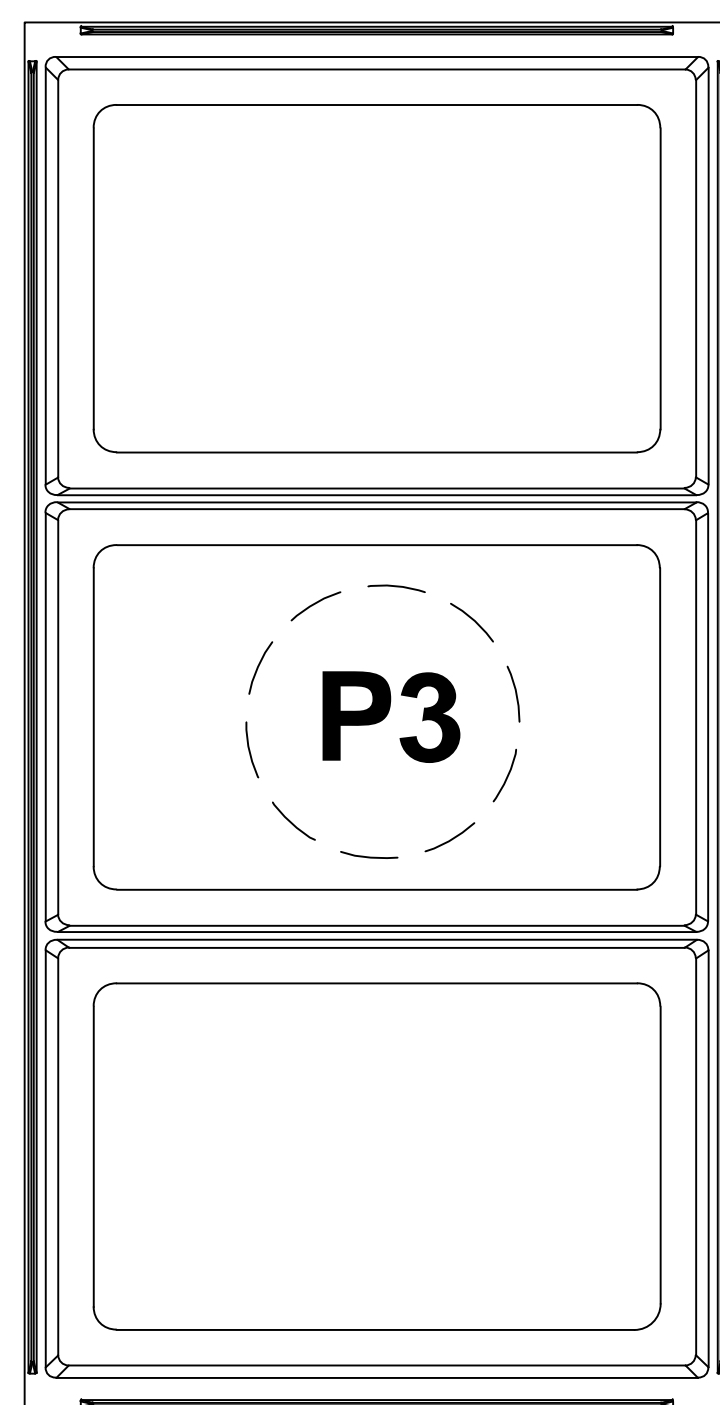

x2


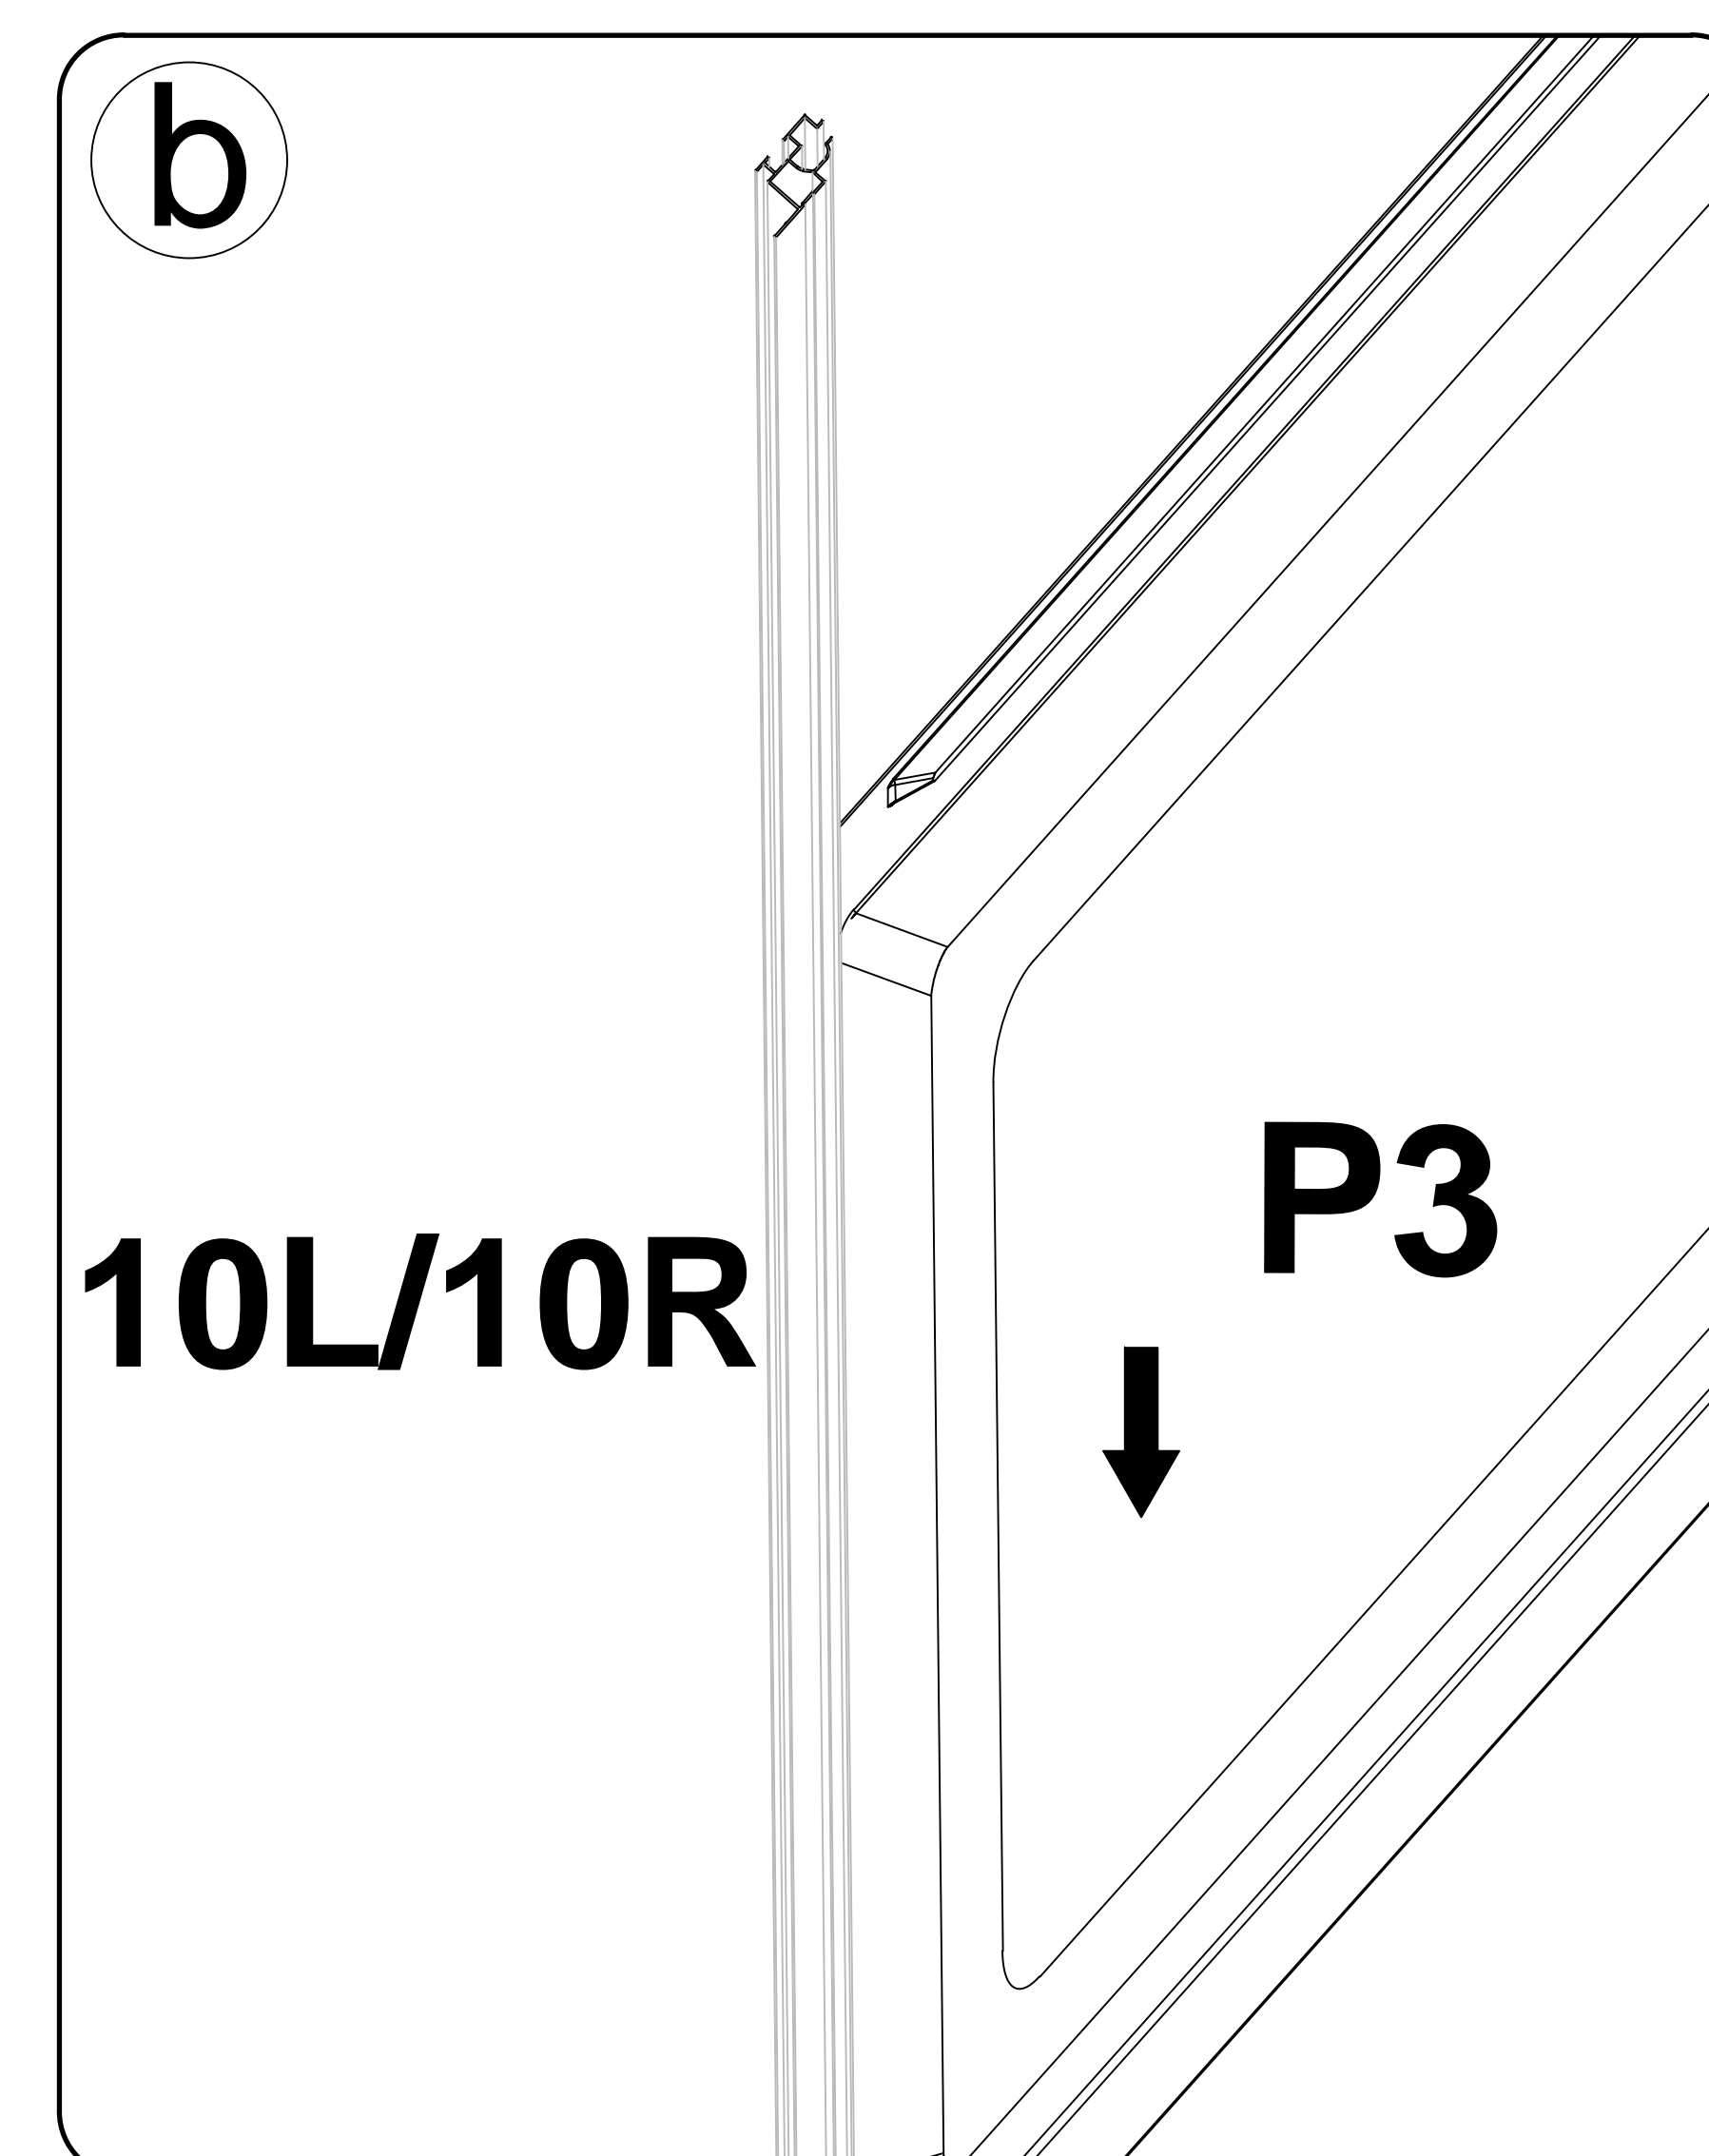
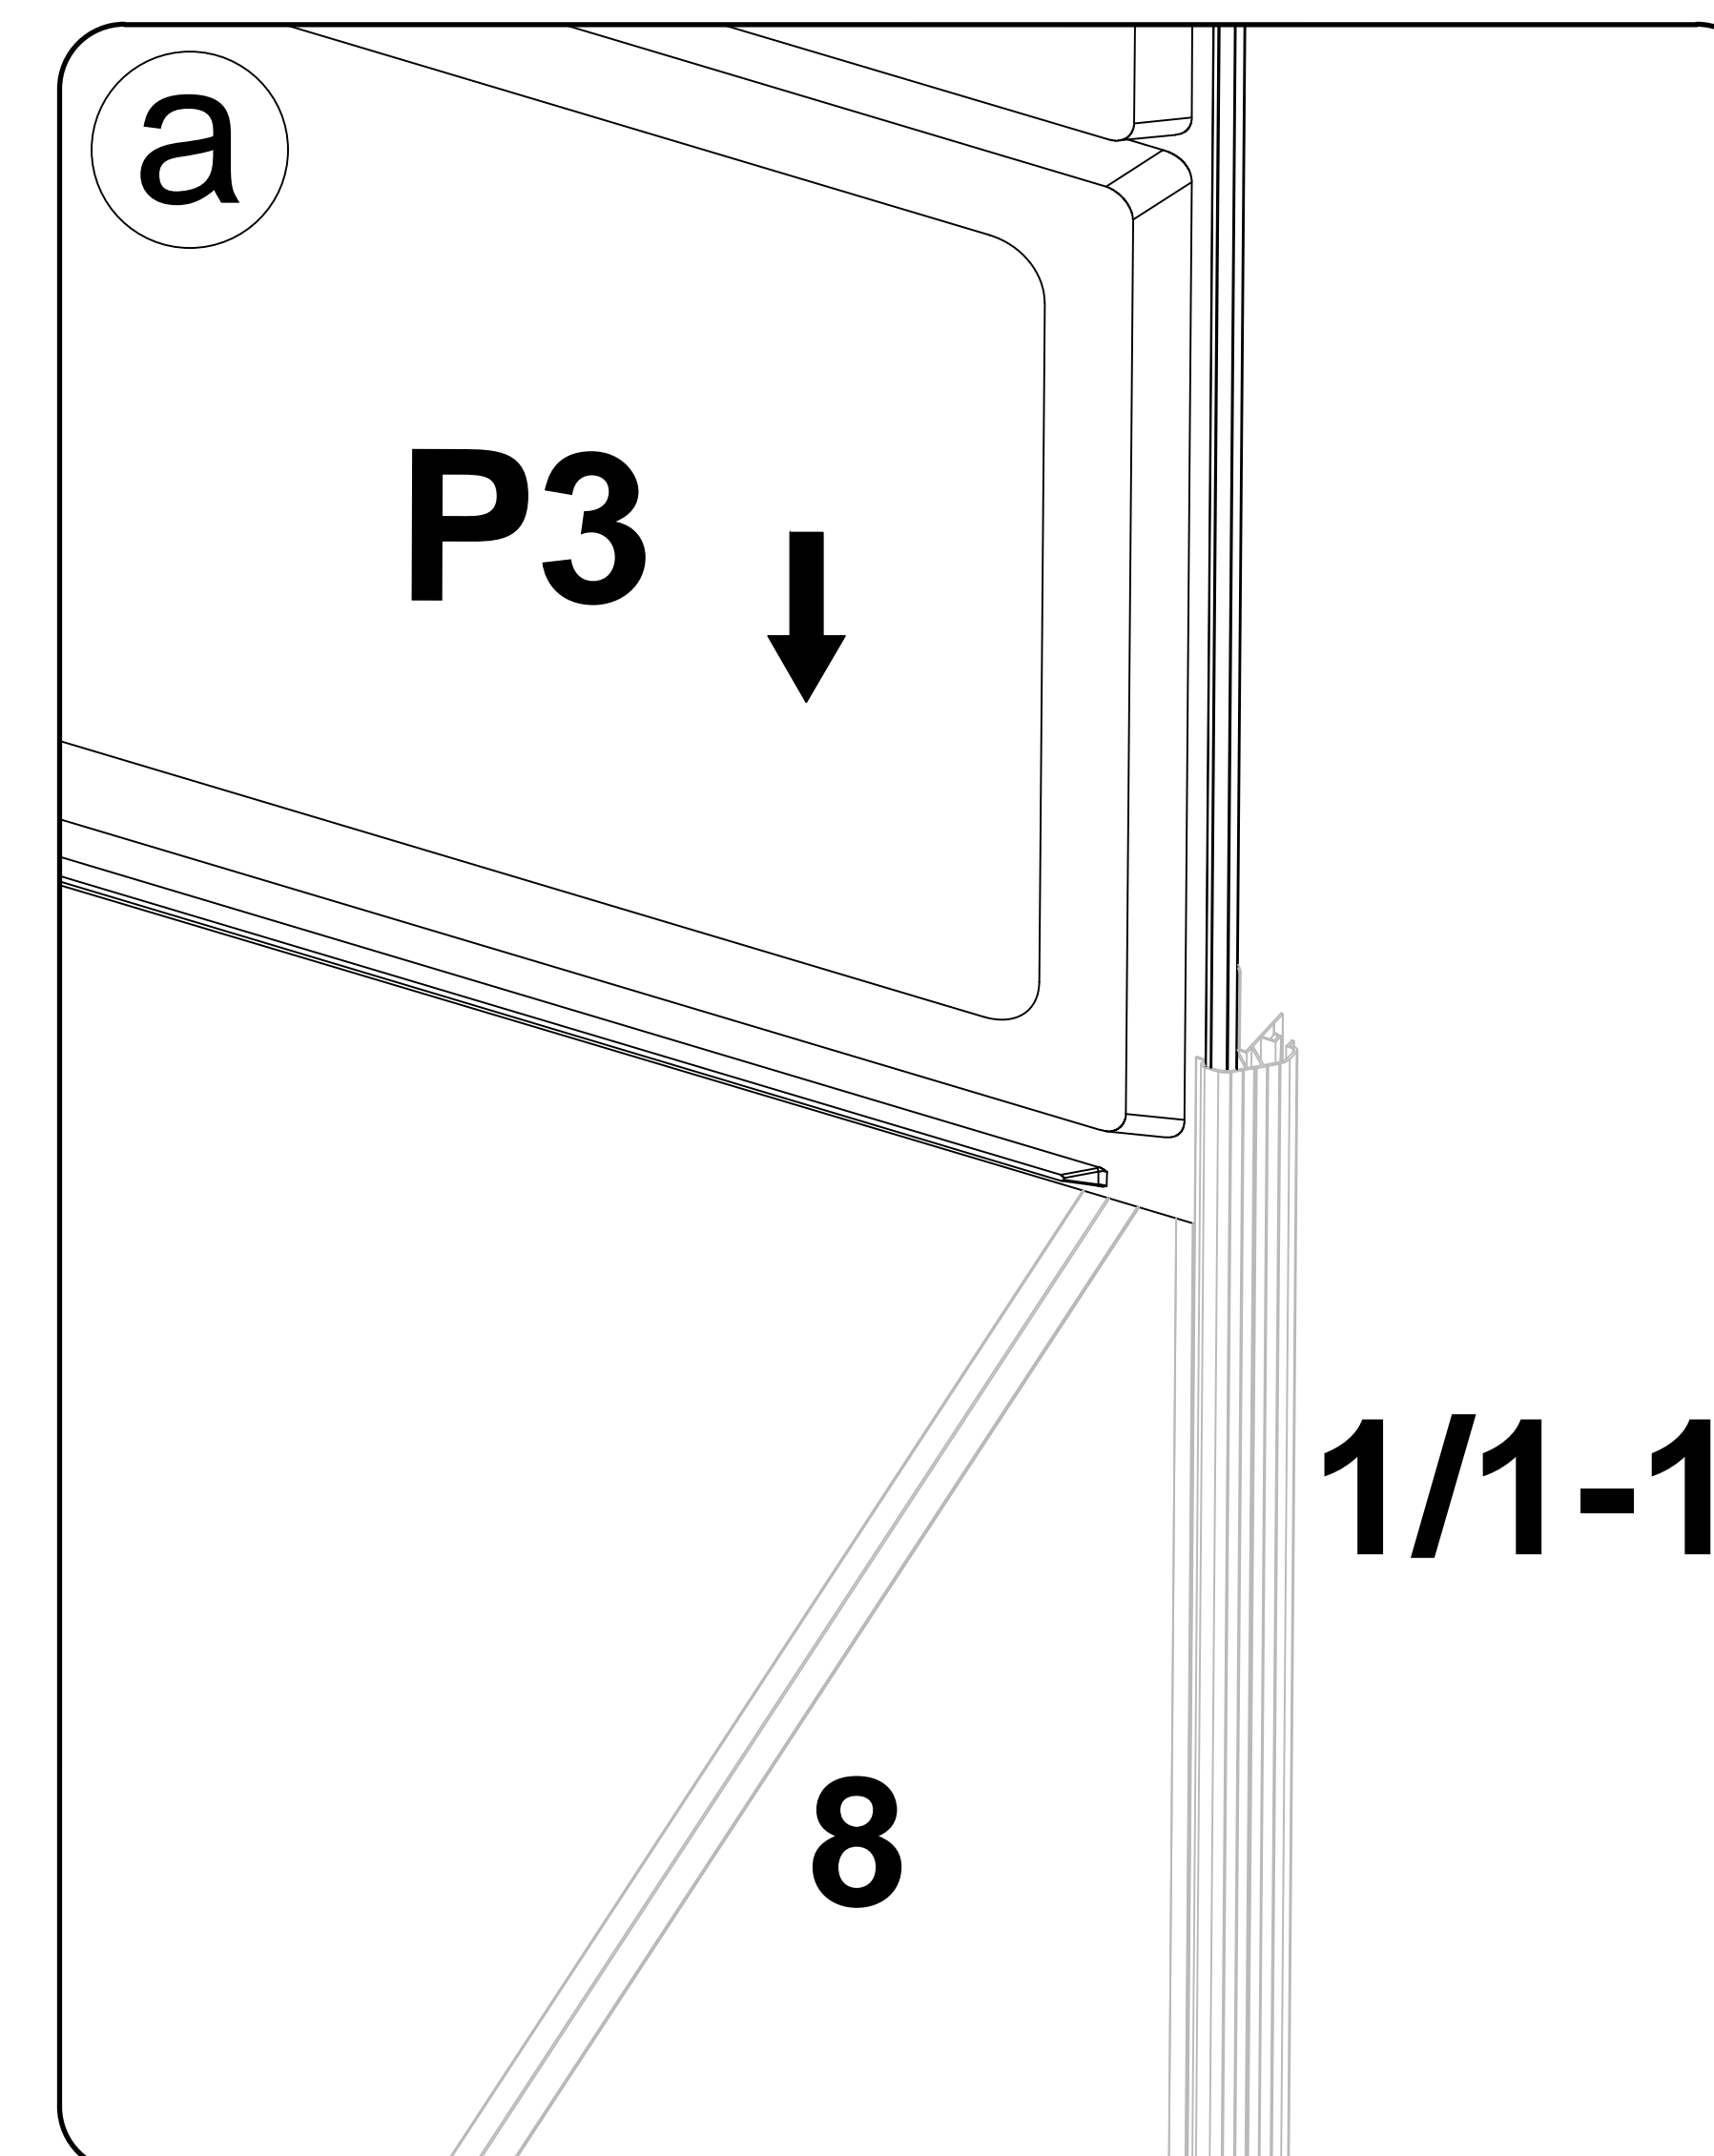
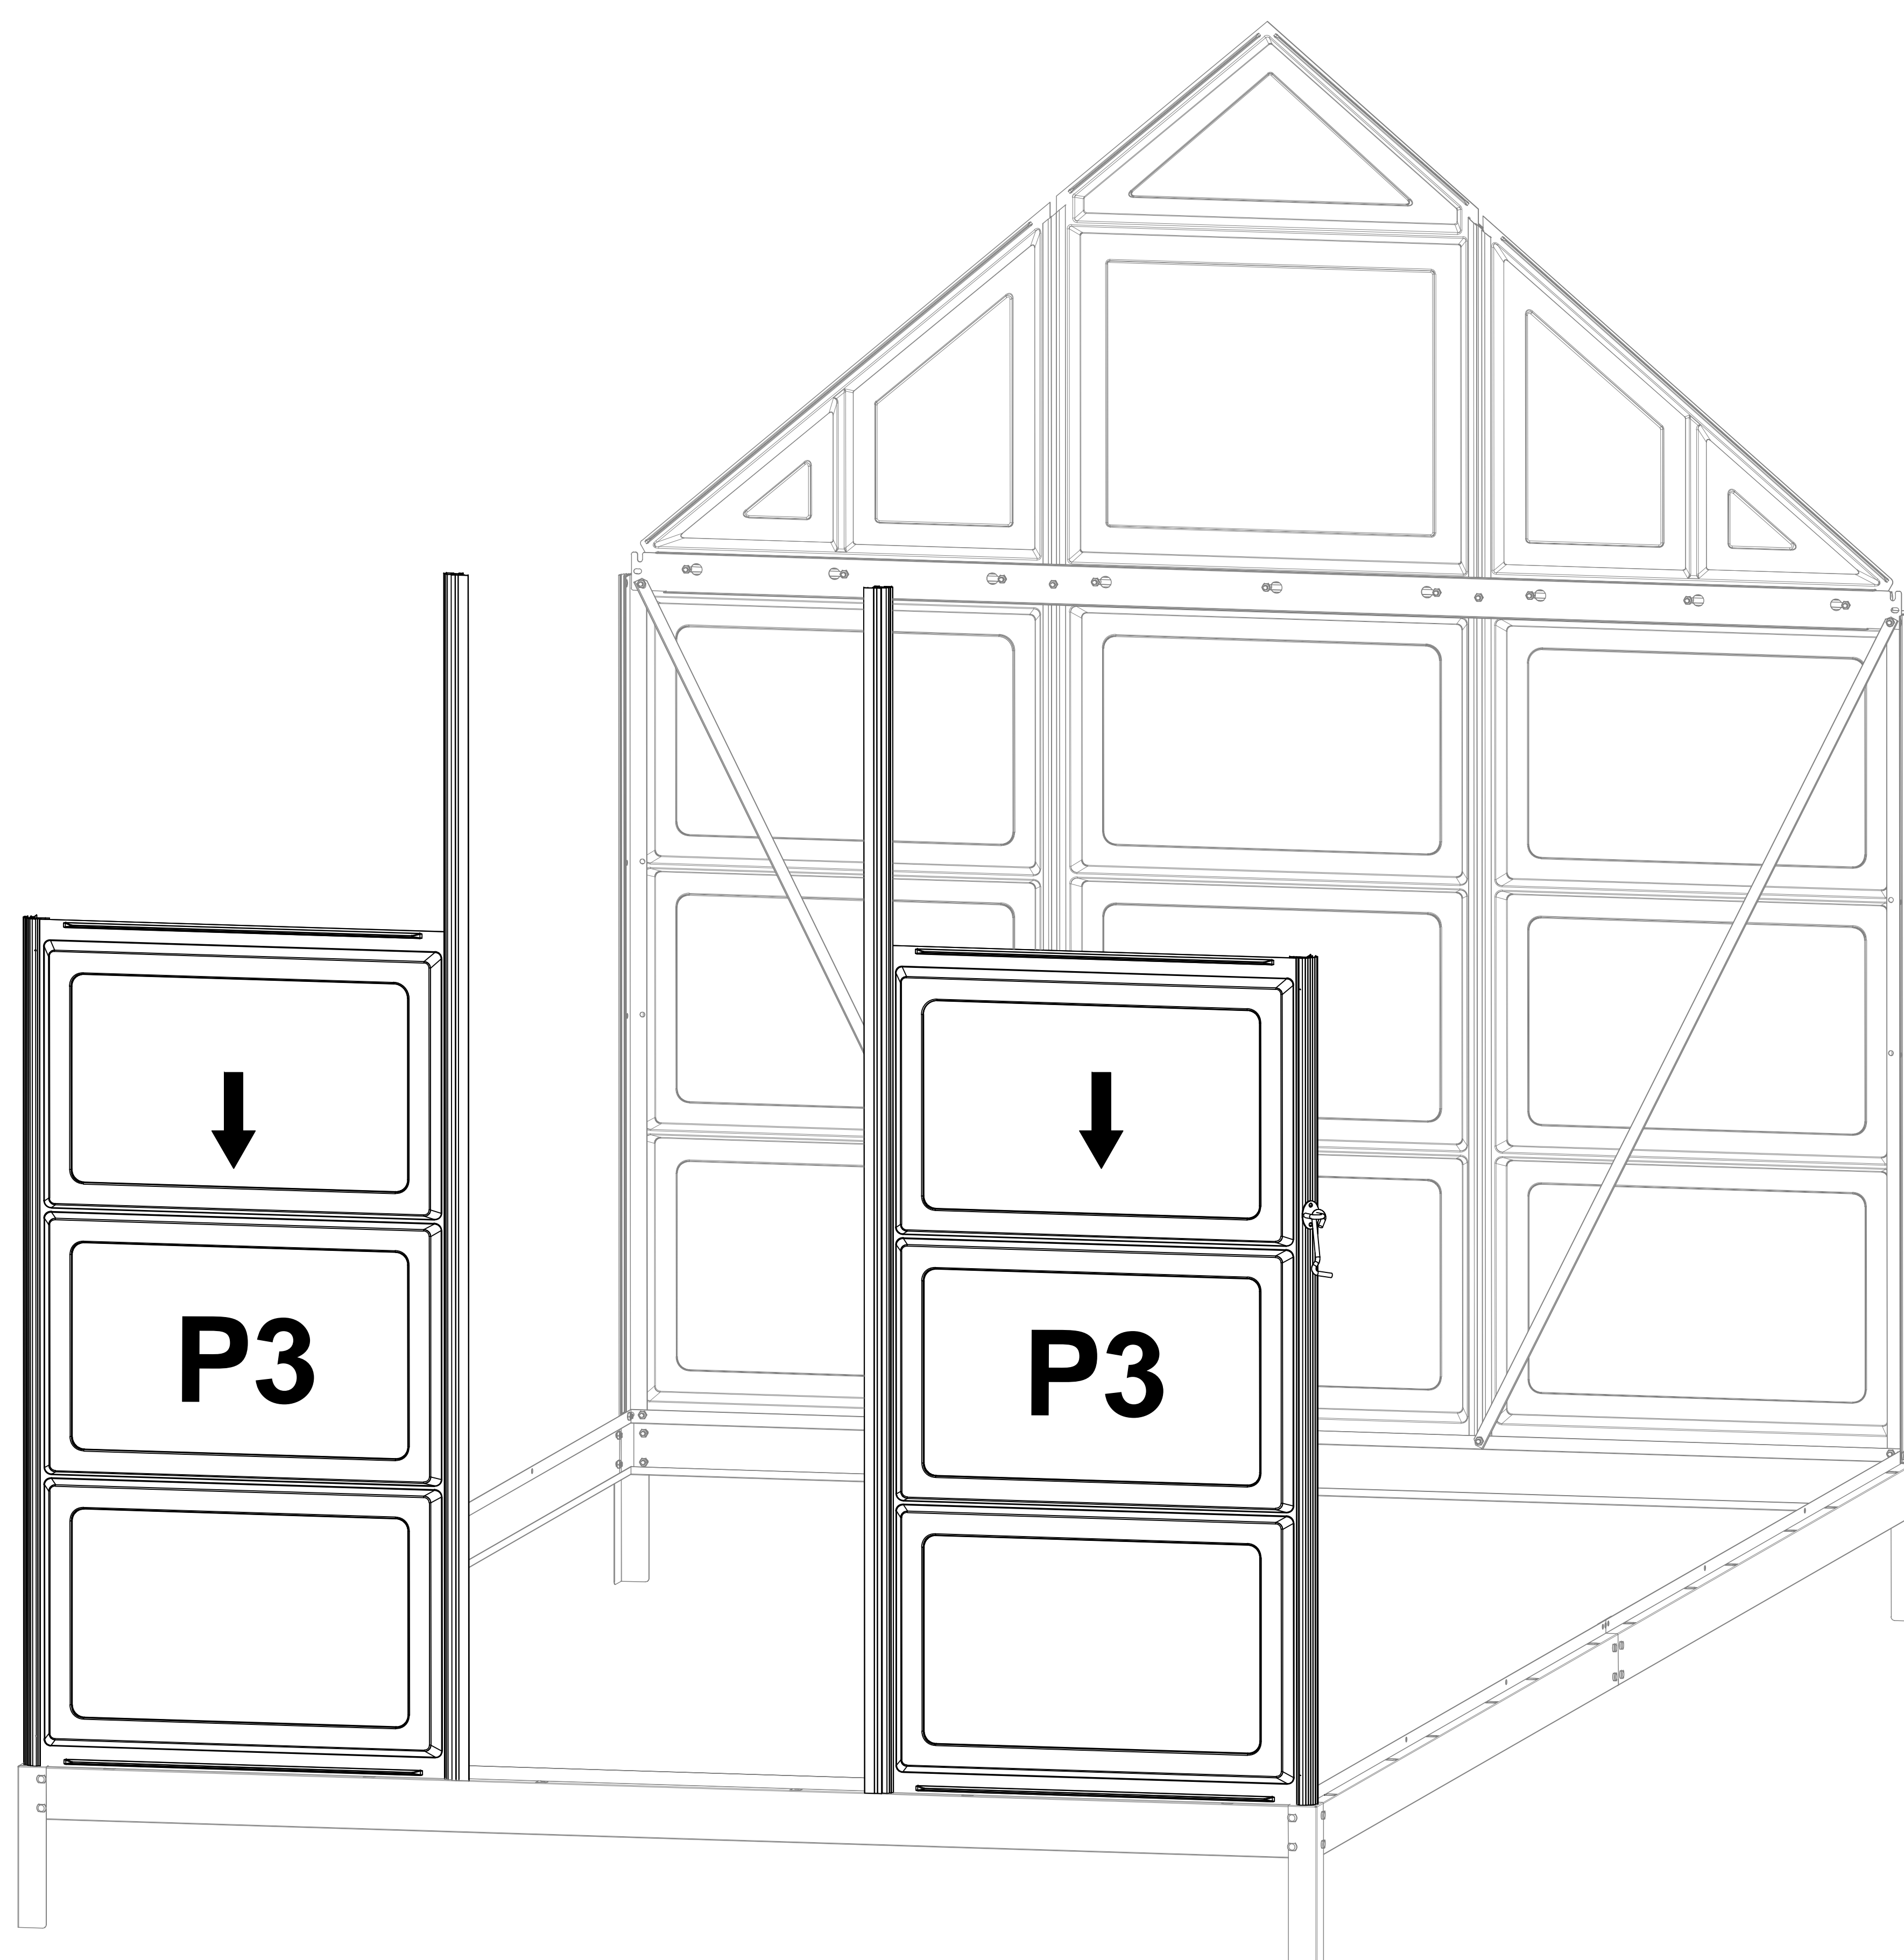





25L 1 PCS


25R 1 PCS

F5 6 PCS

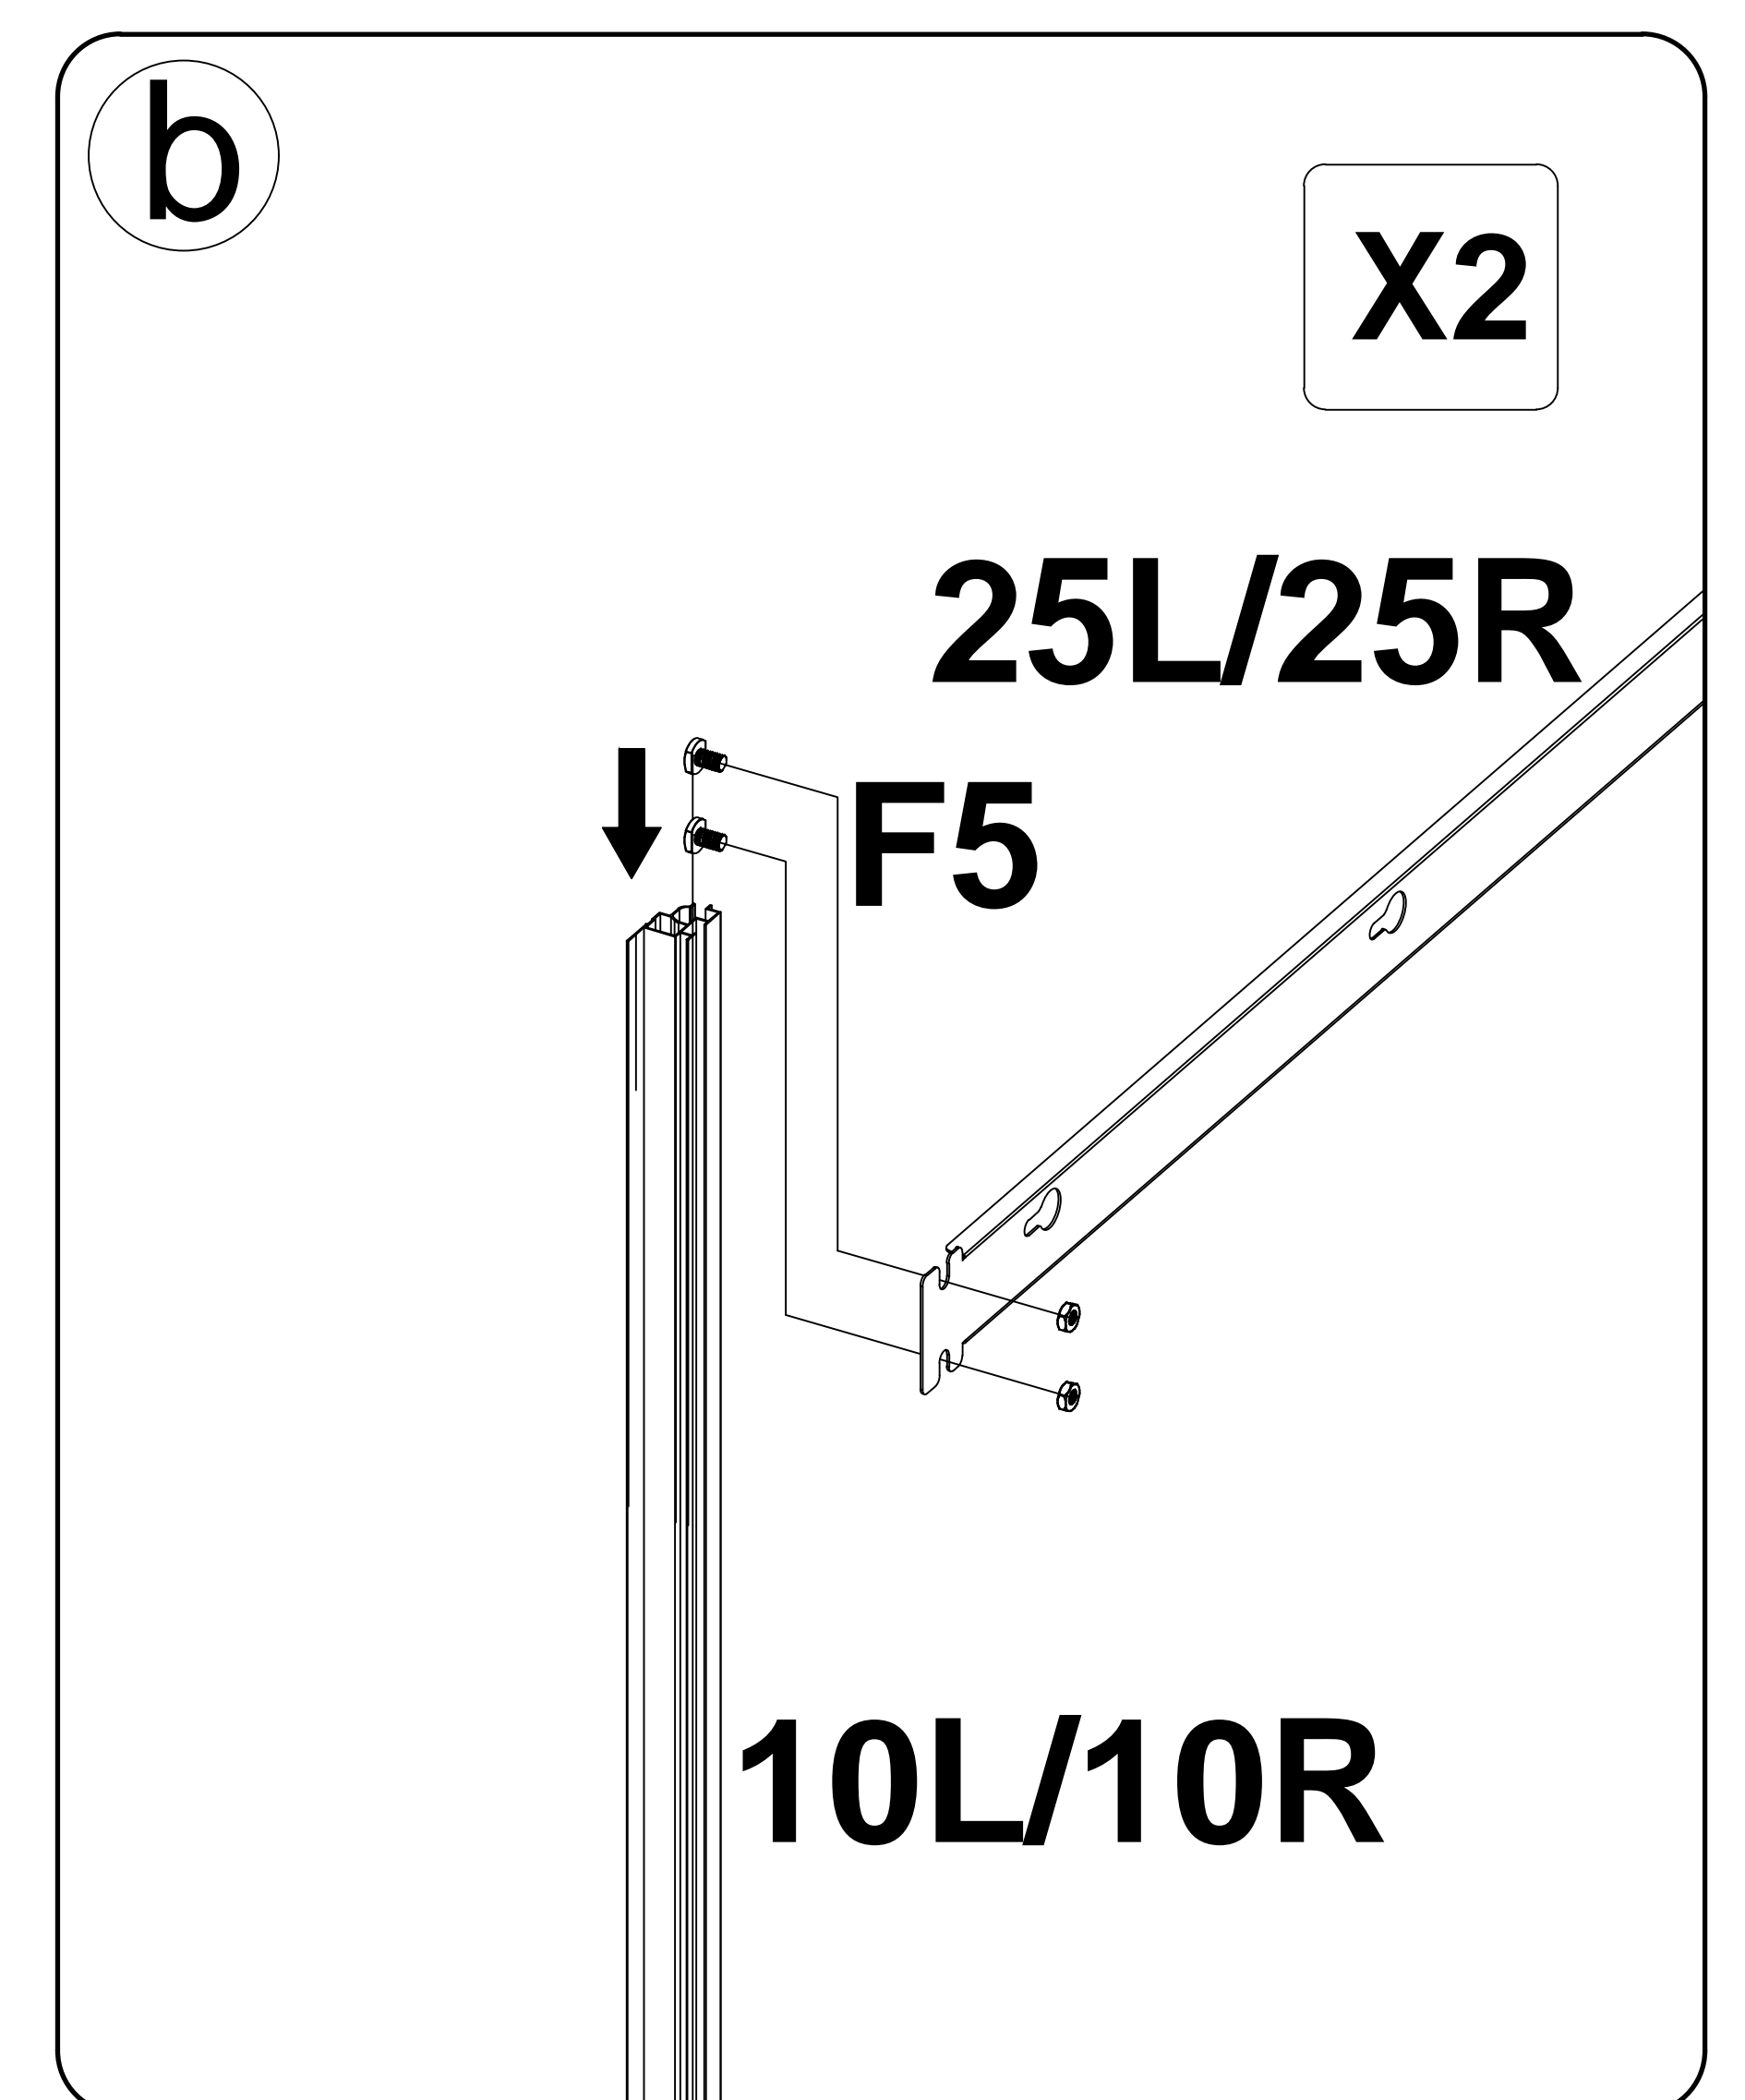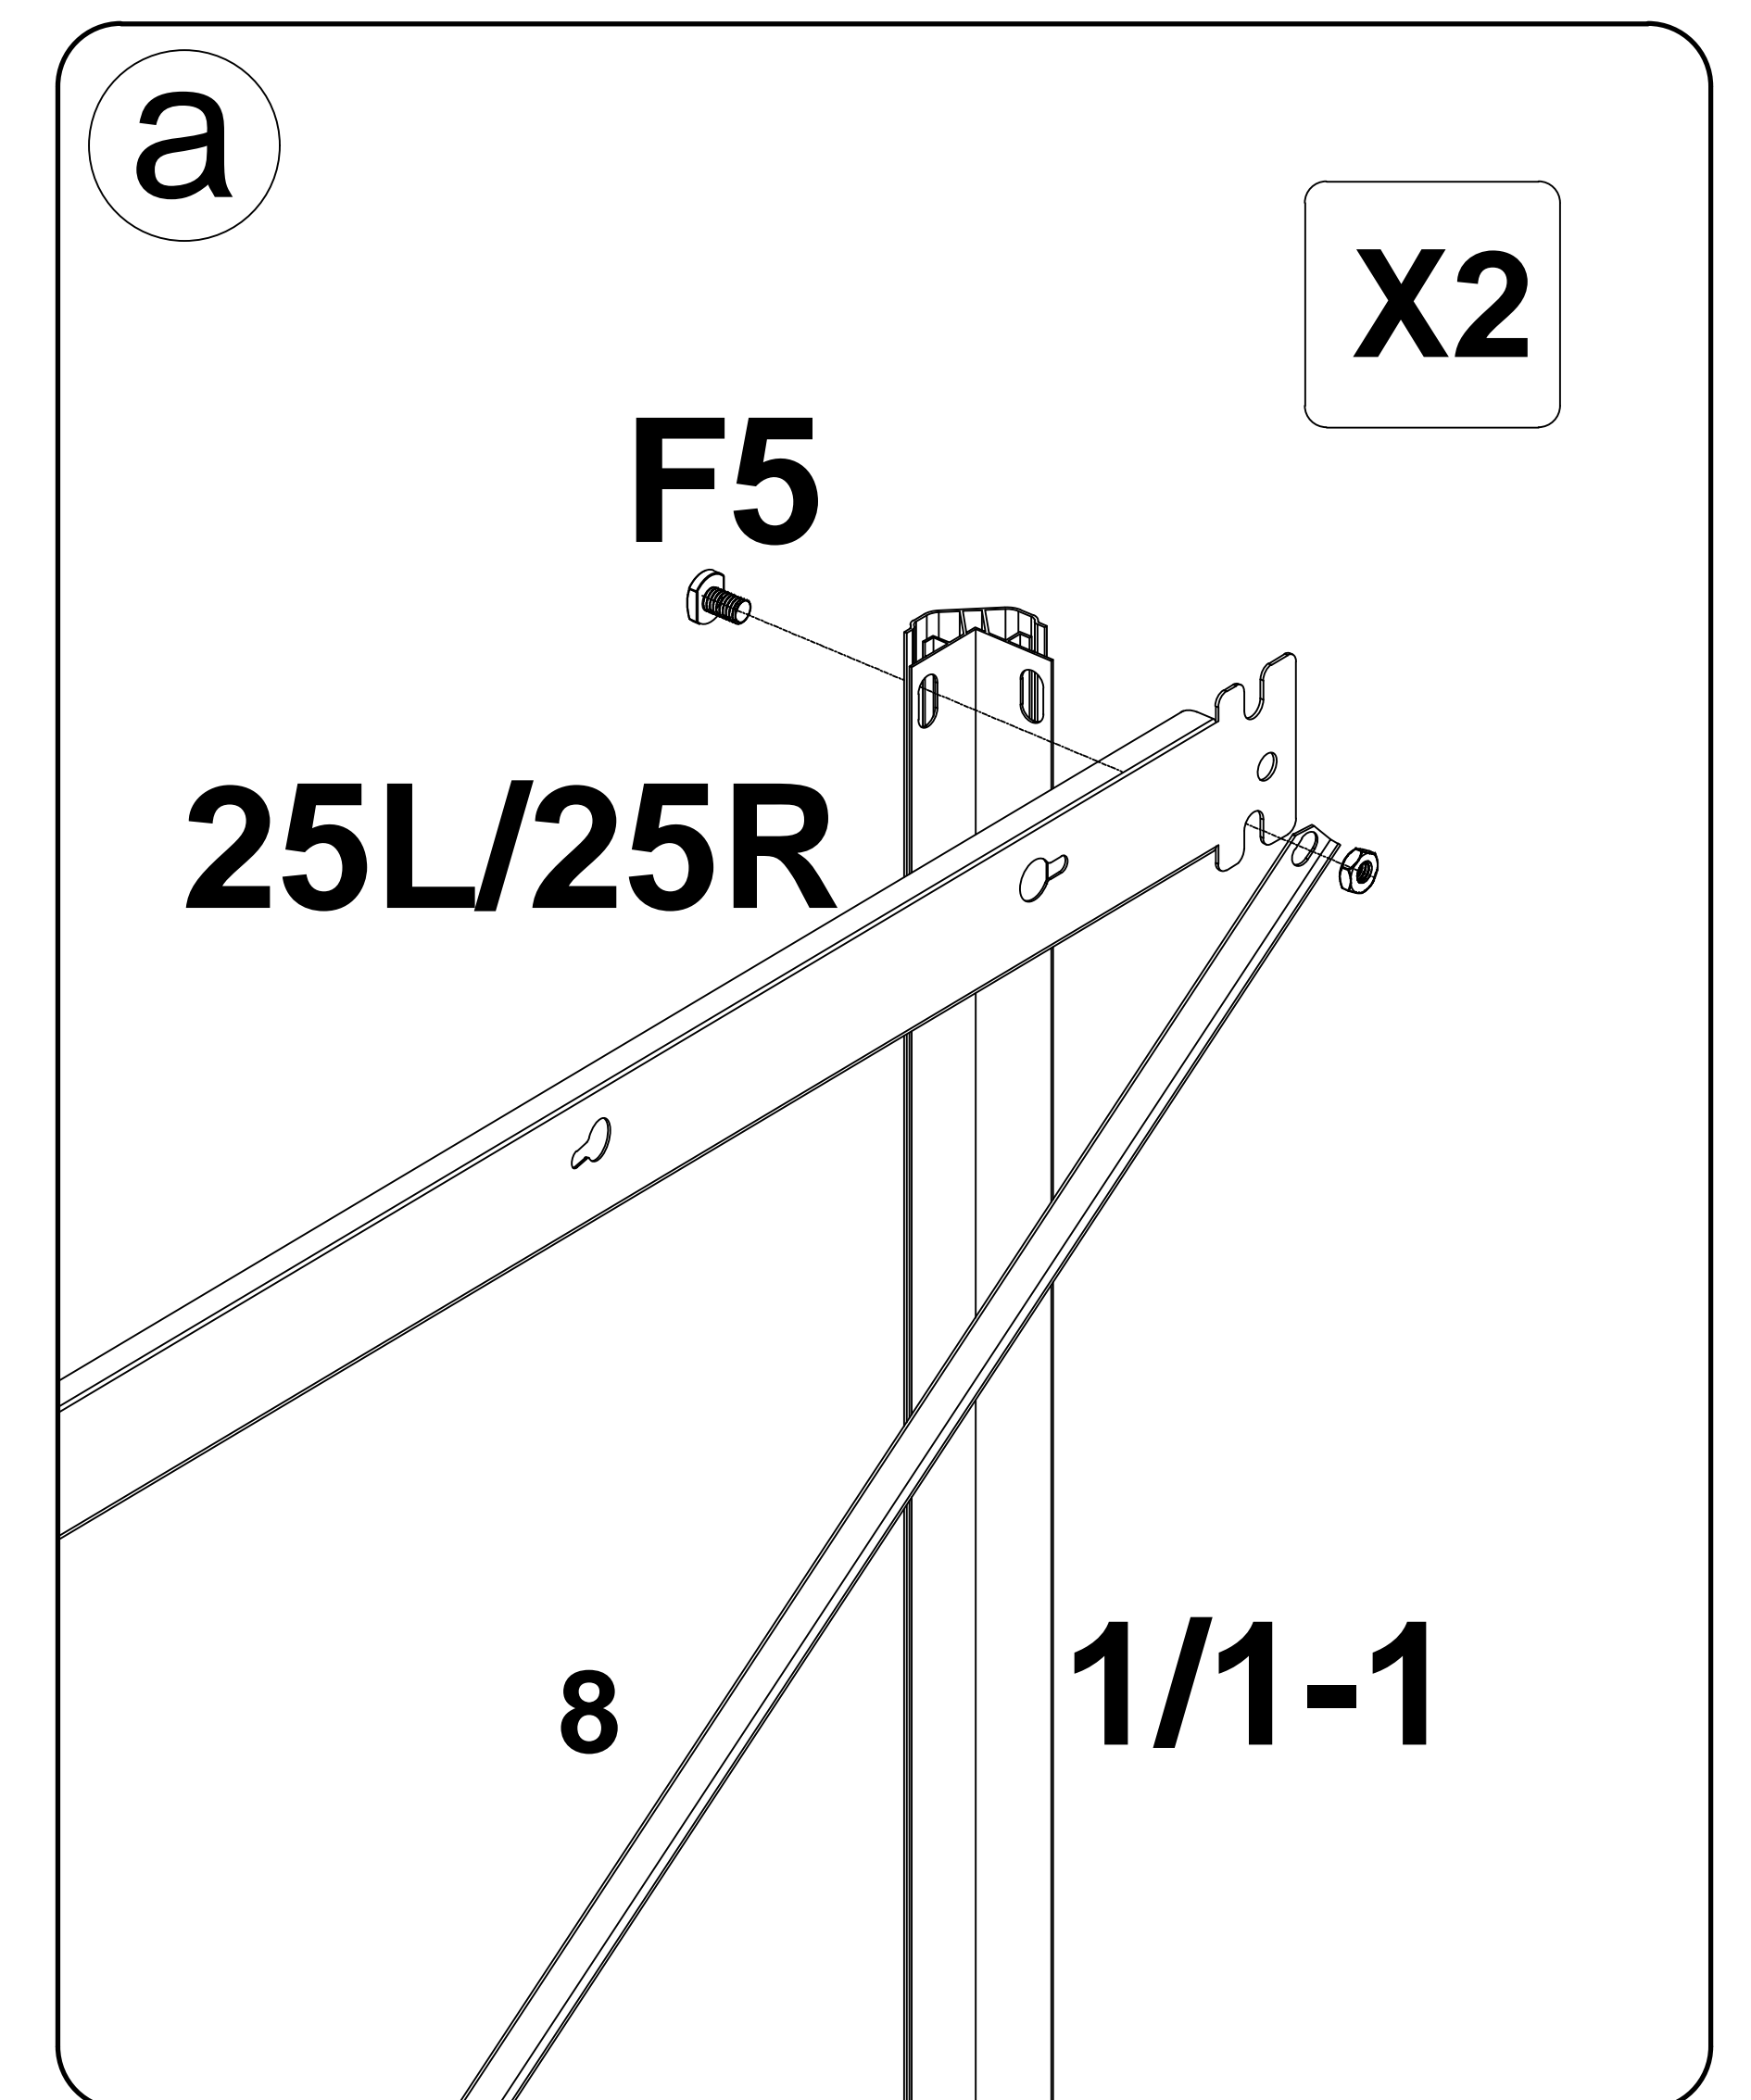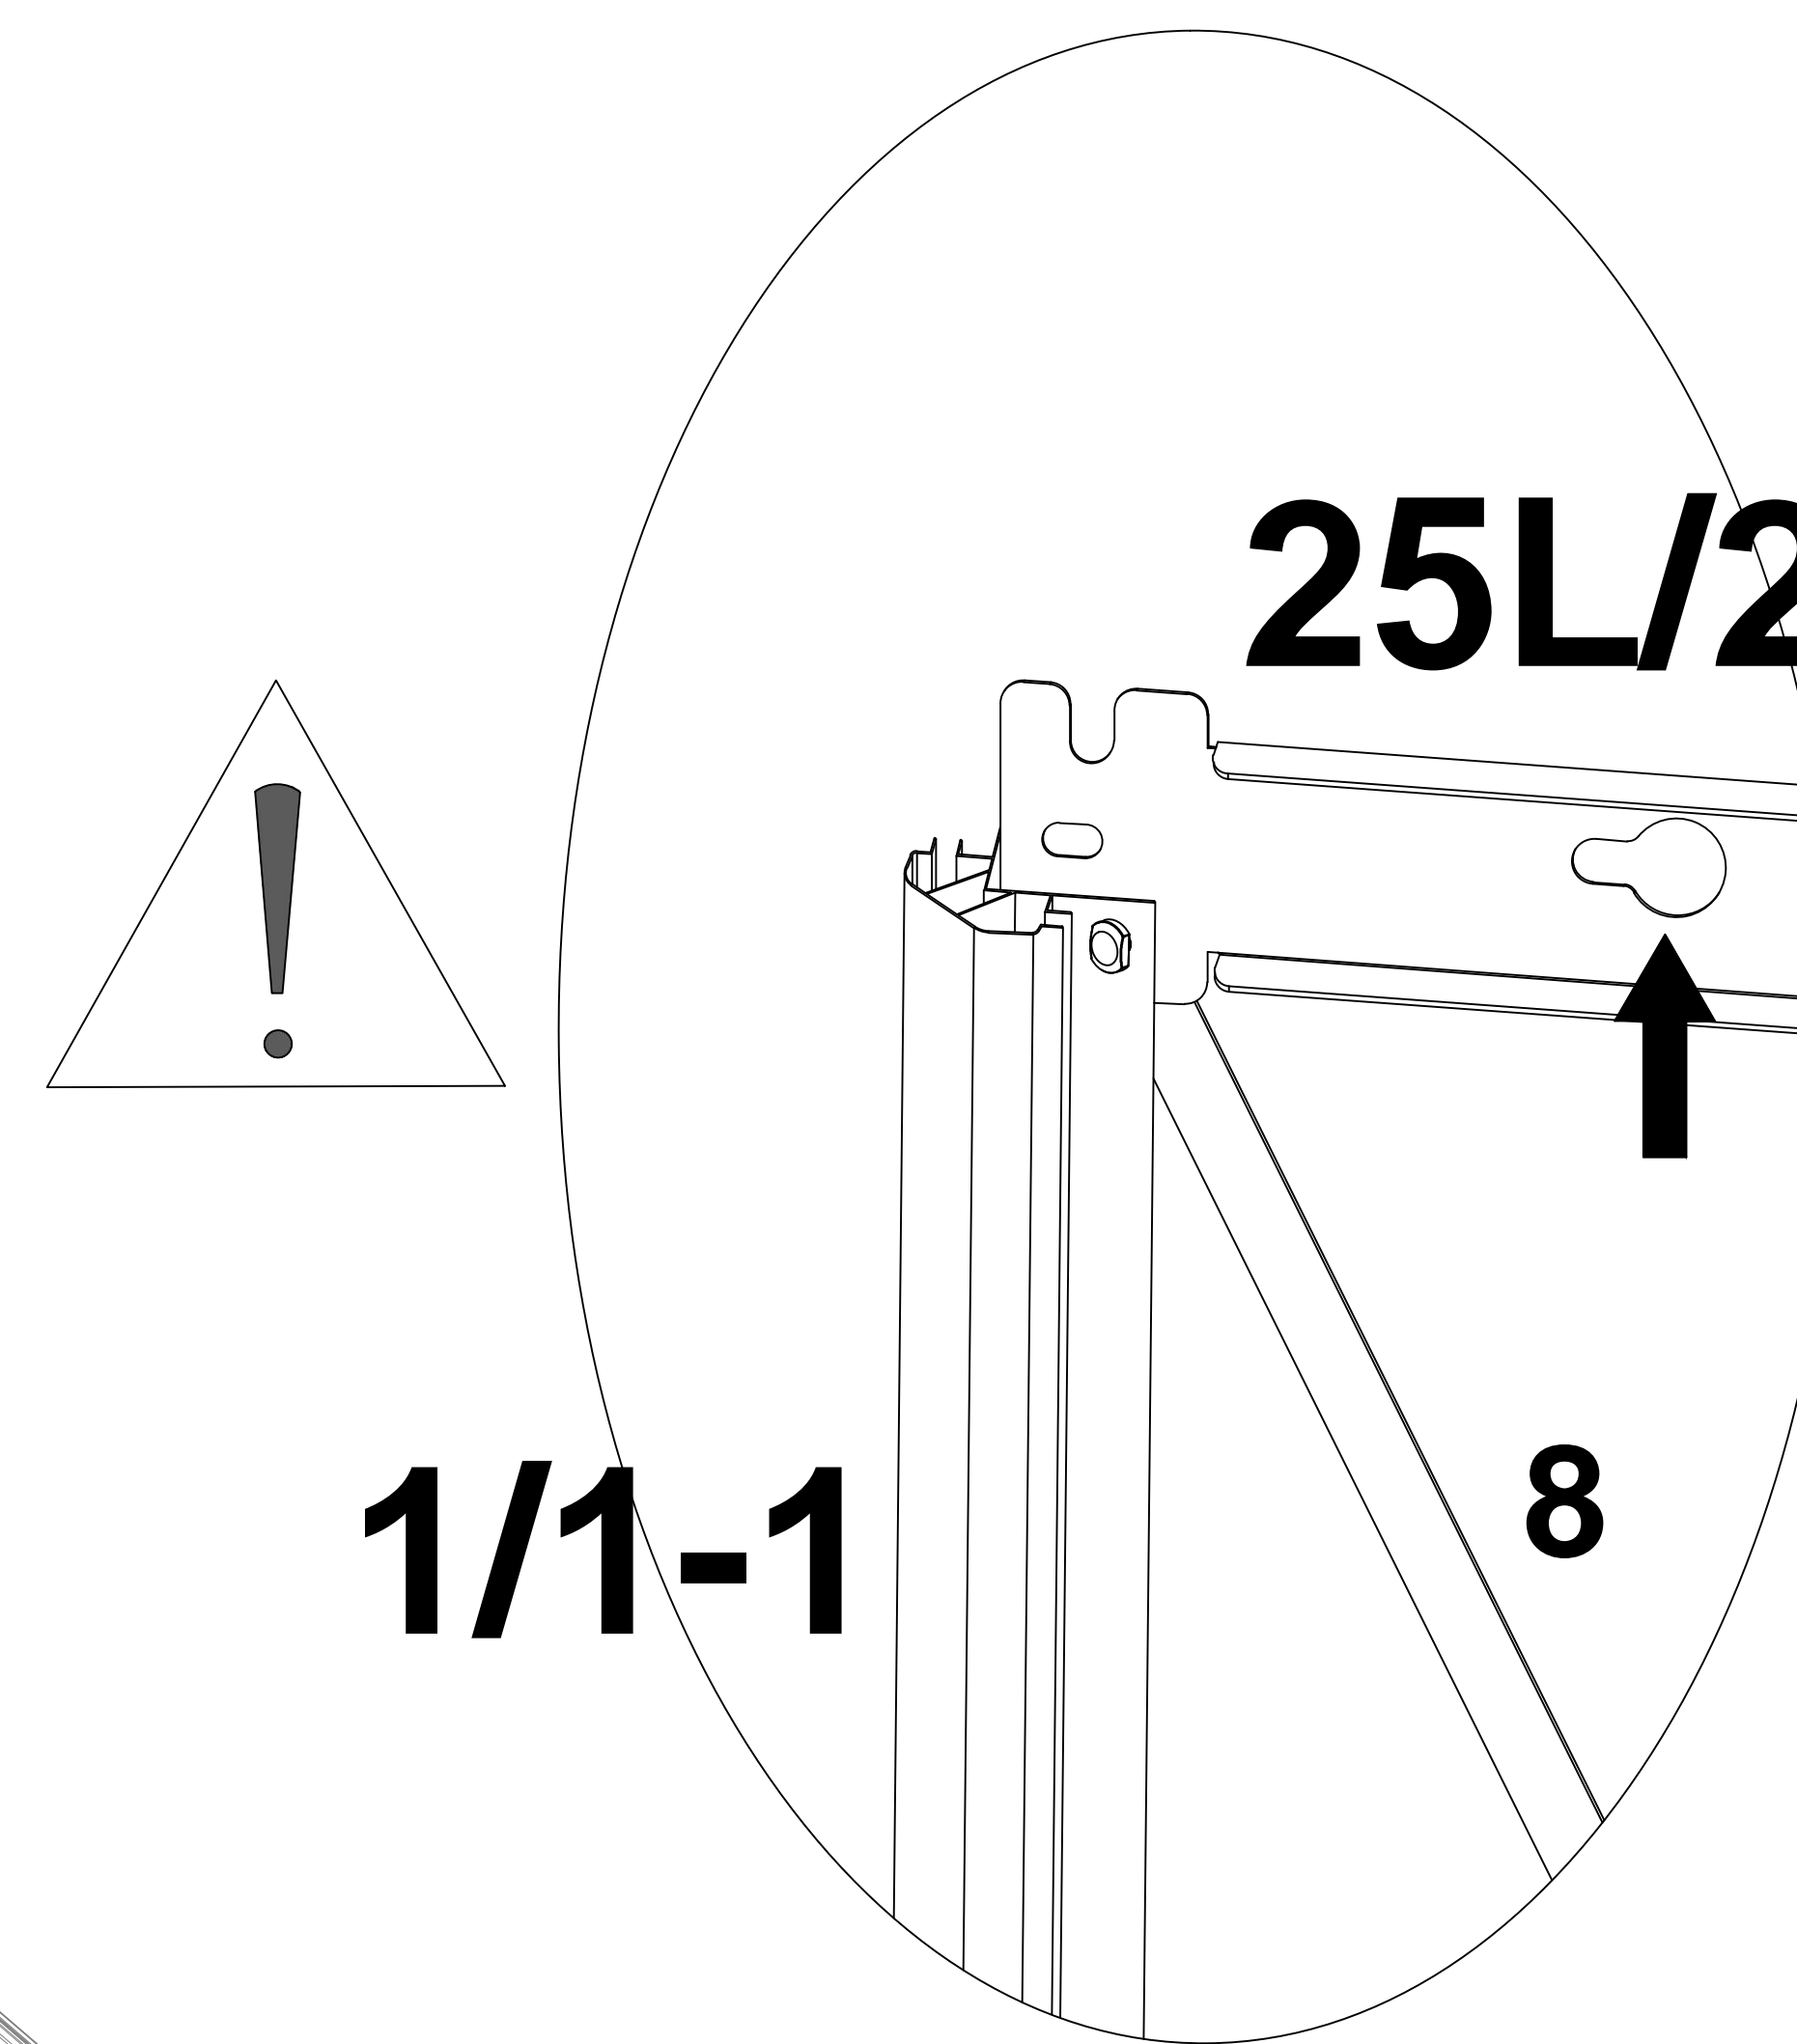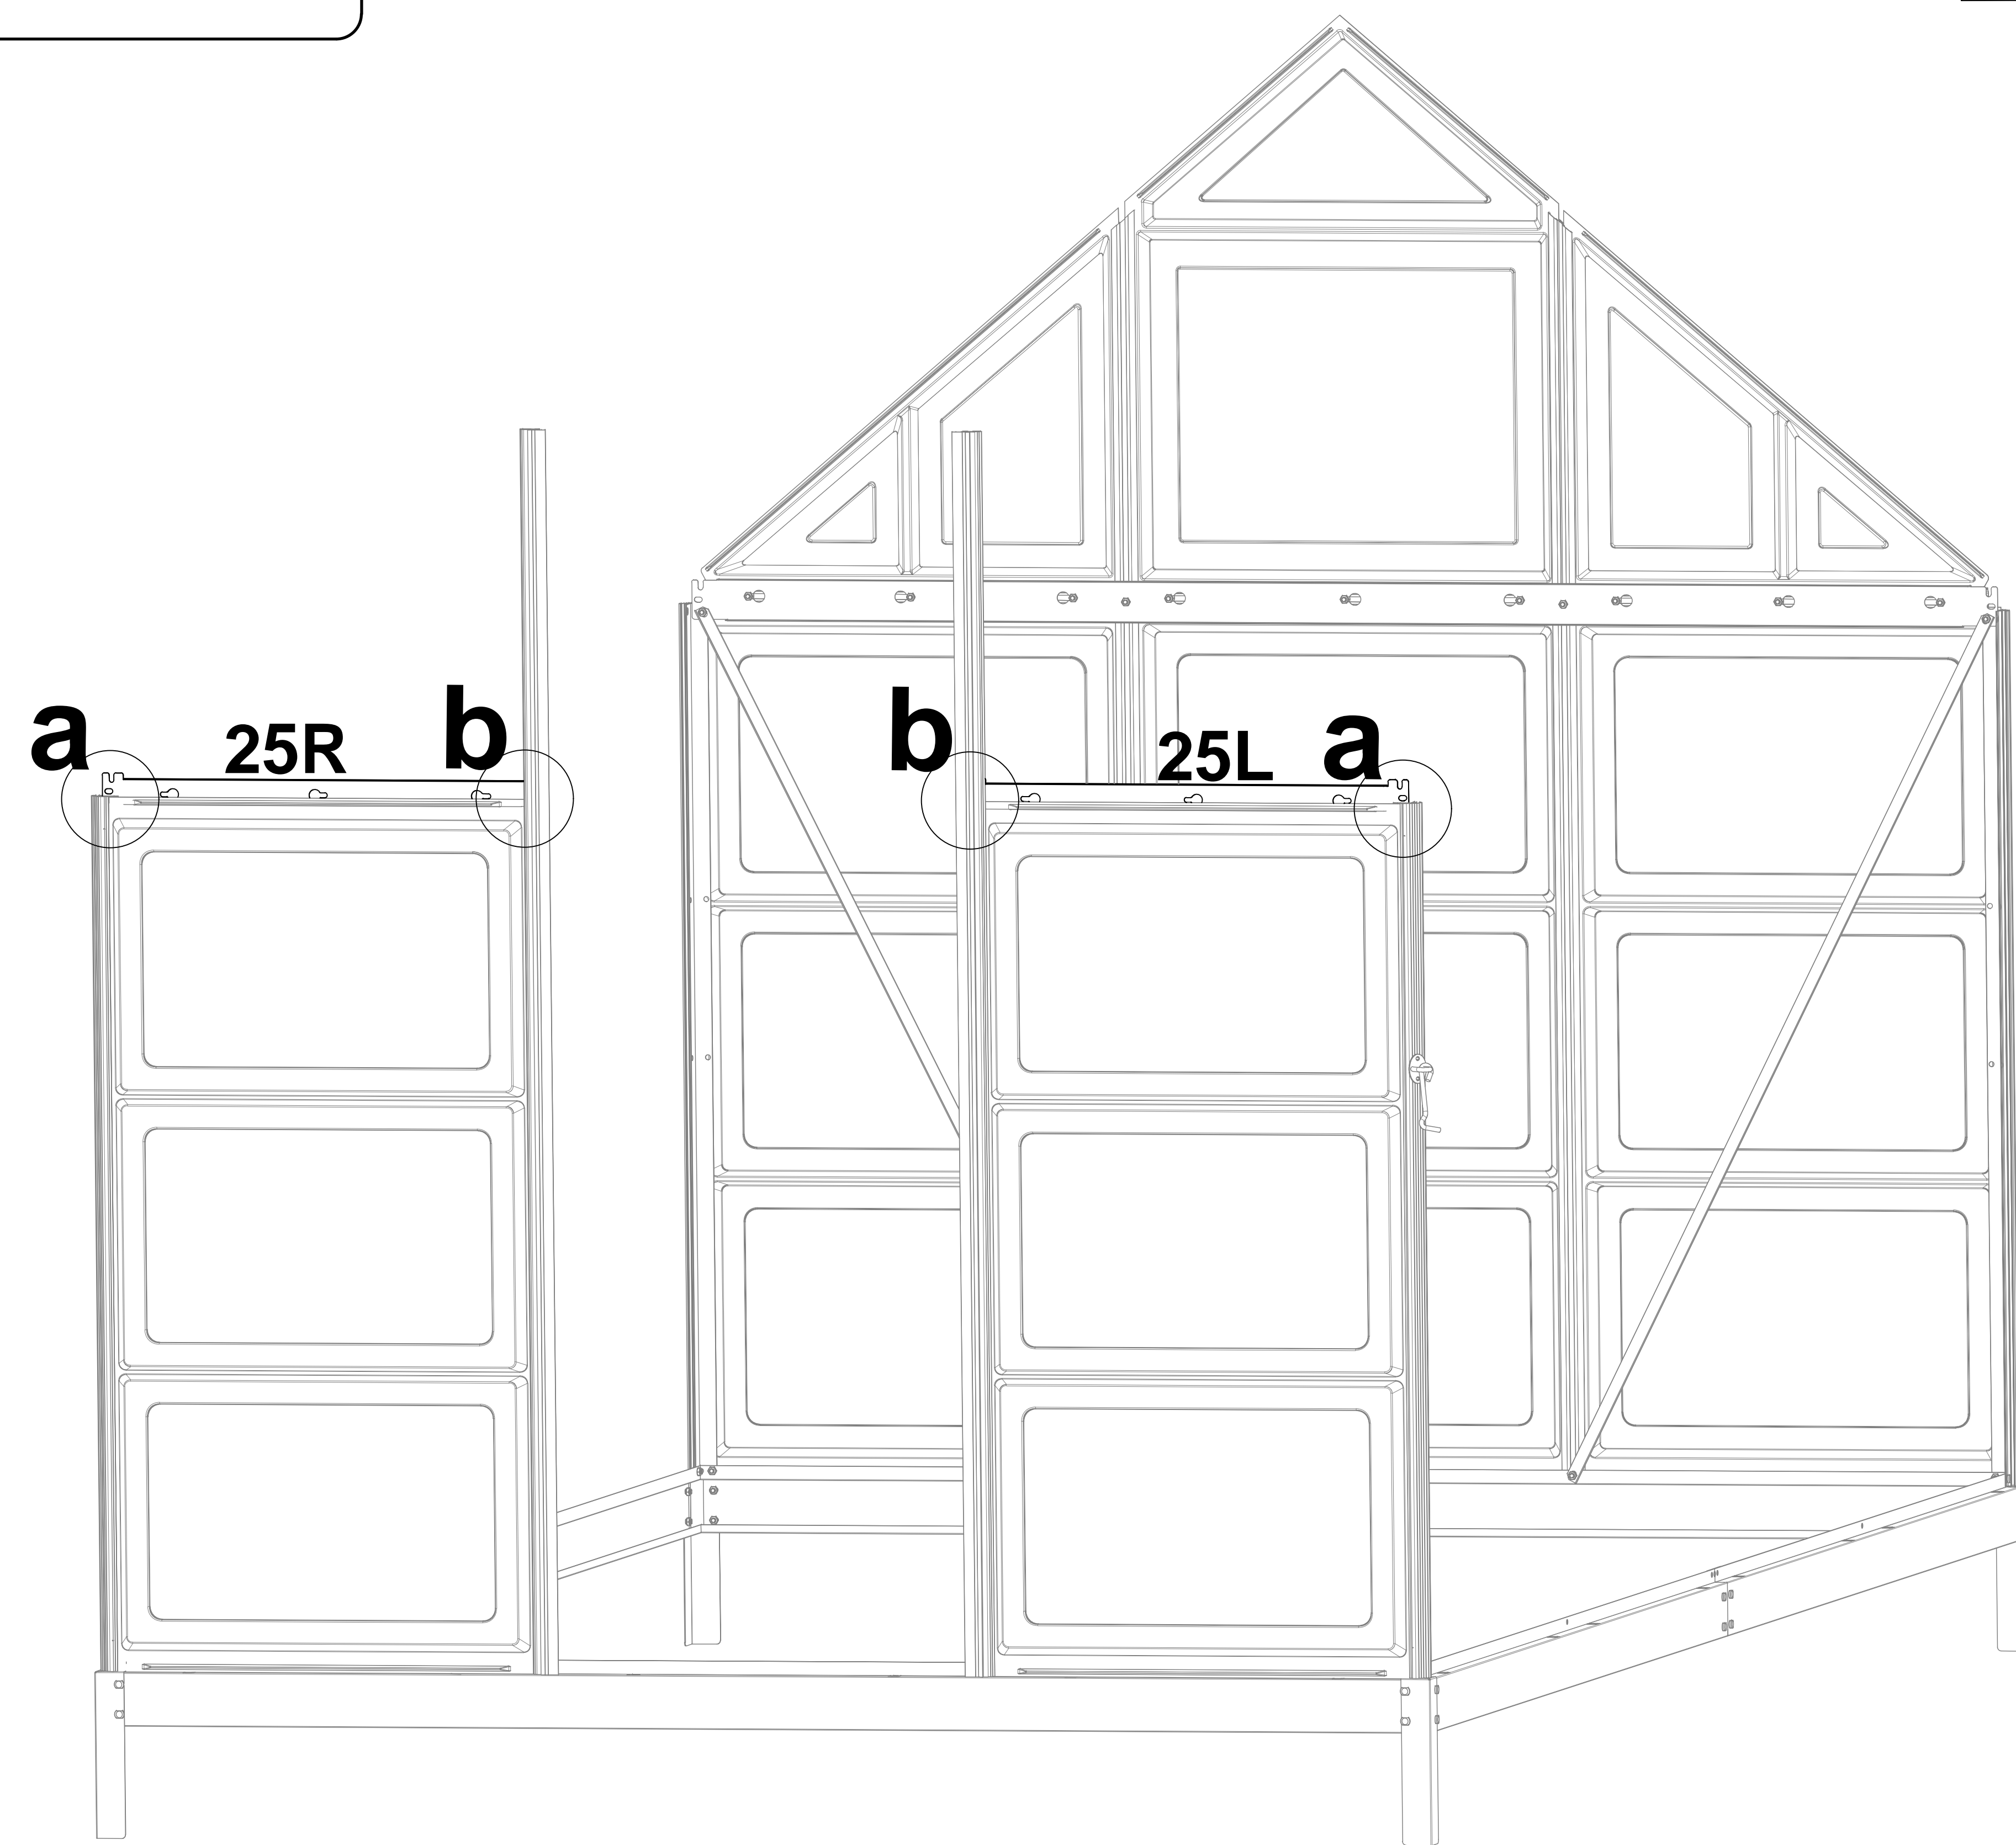


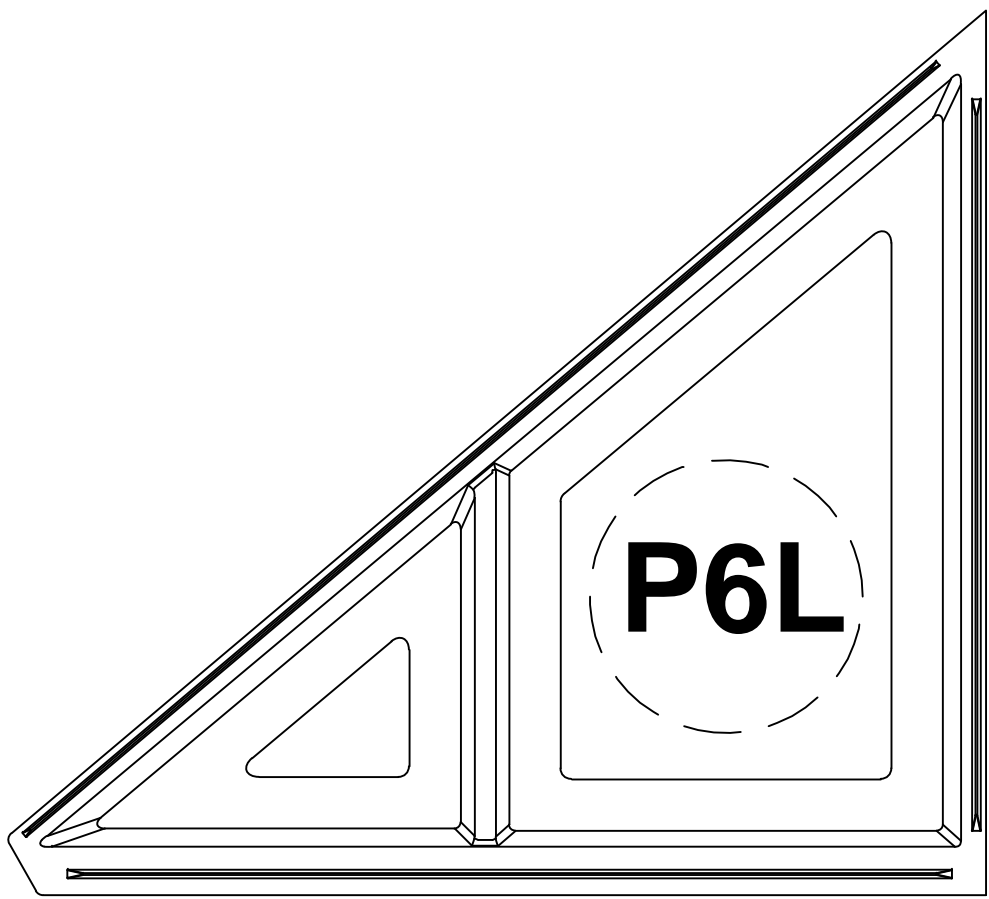


1 PCS

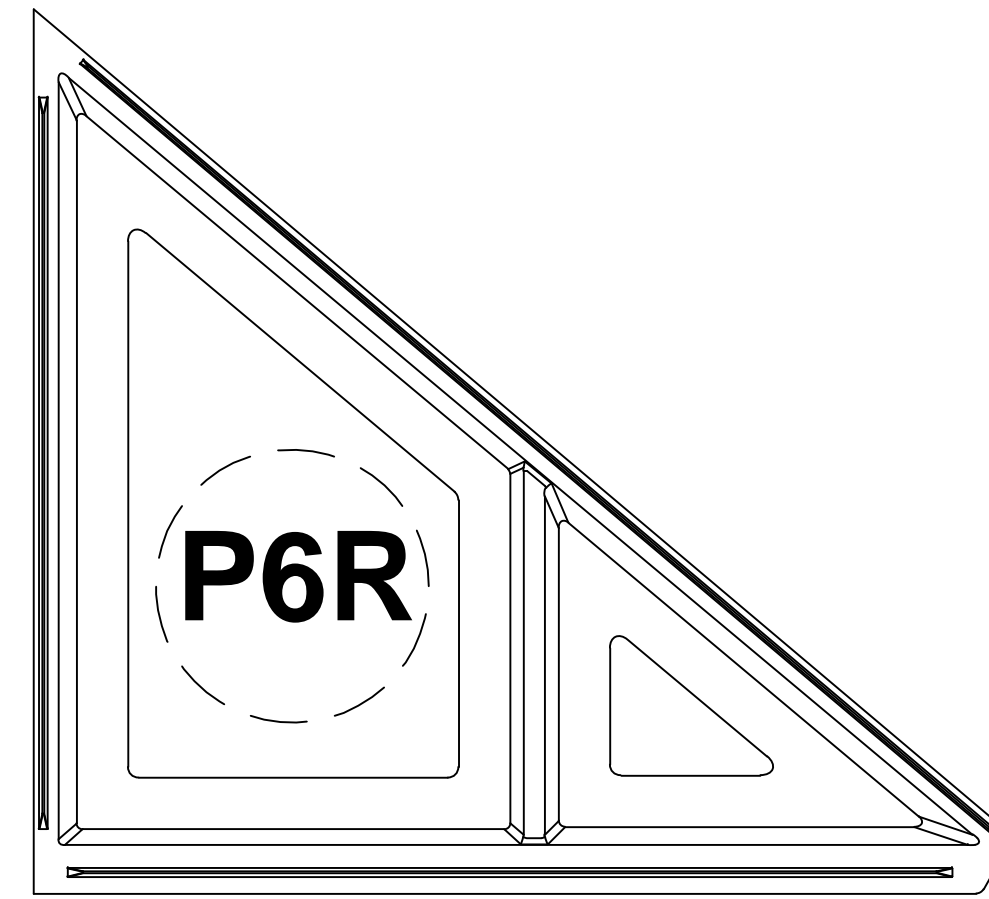

1 PCS

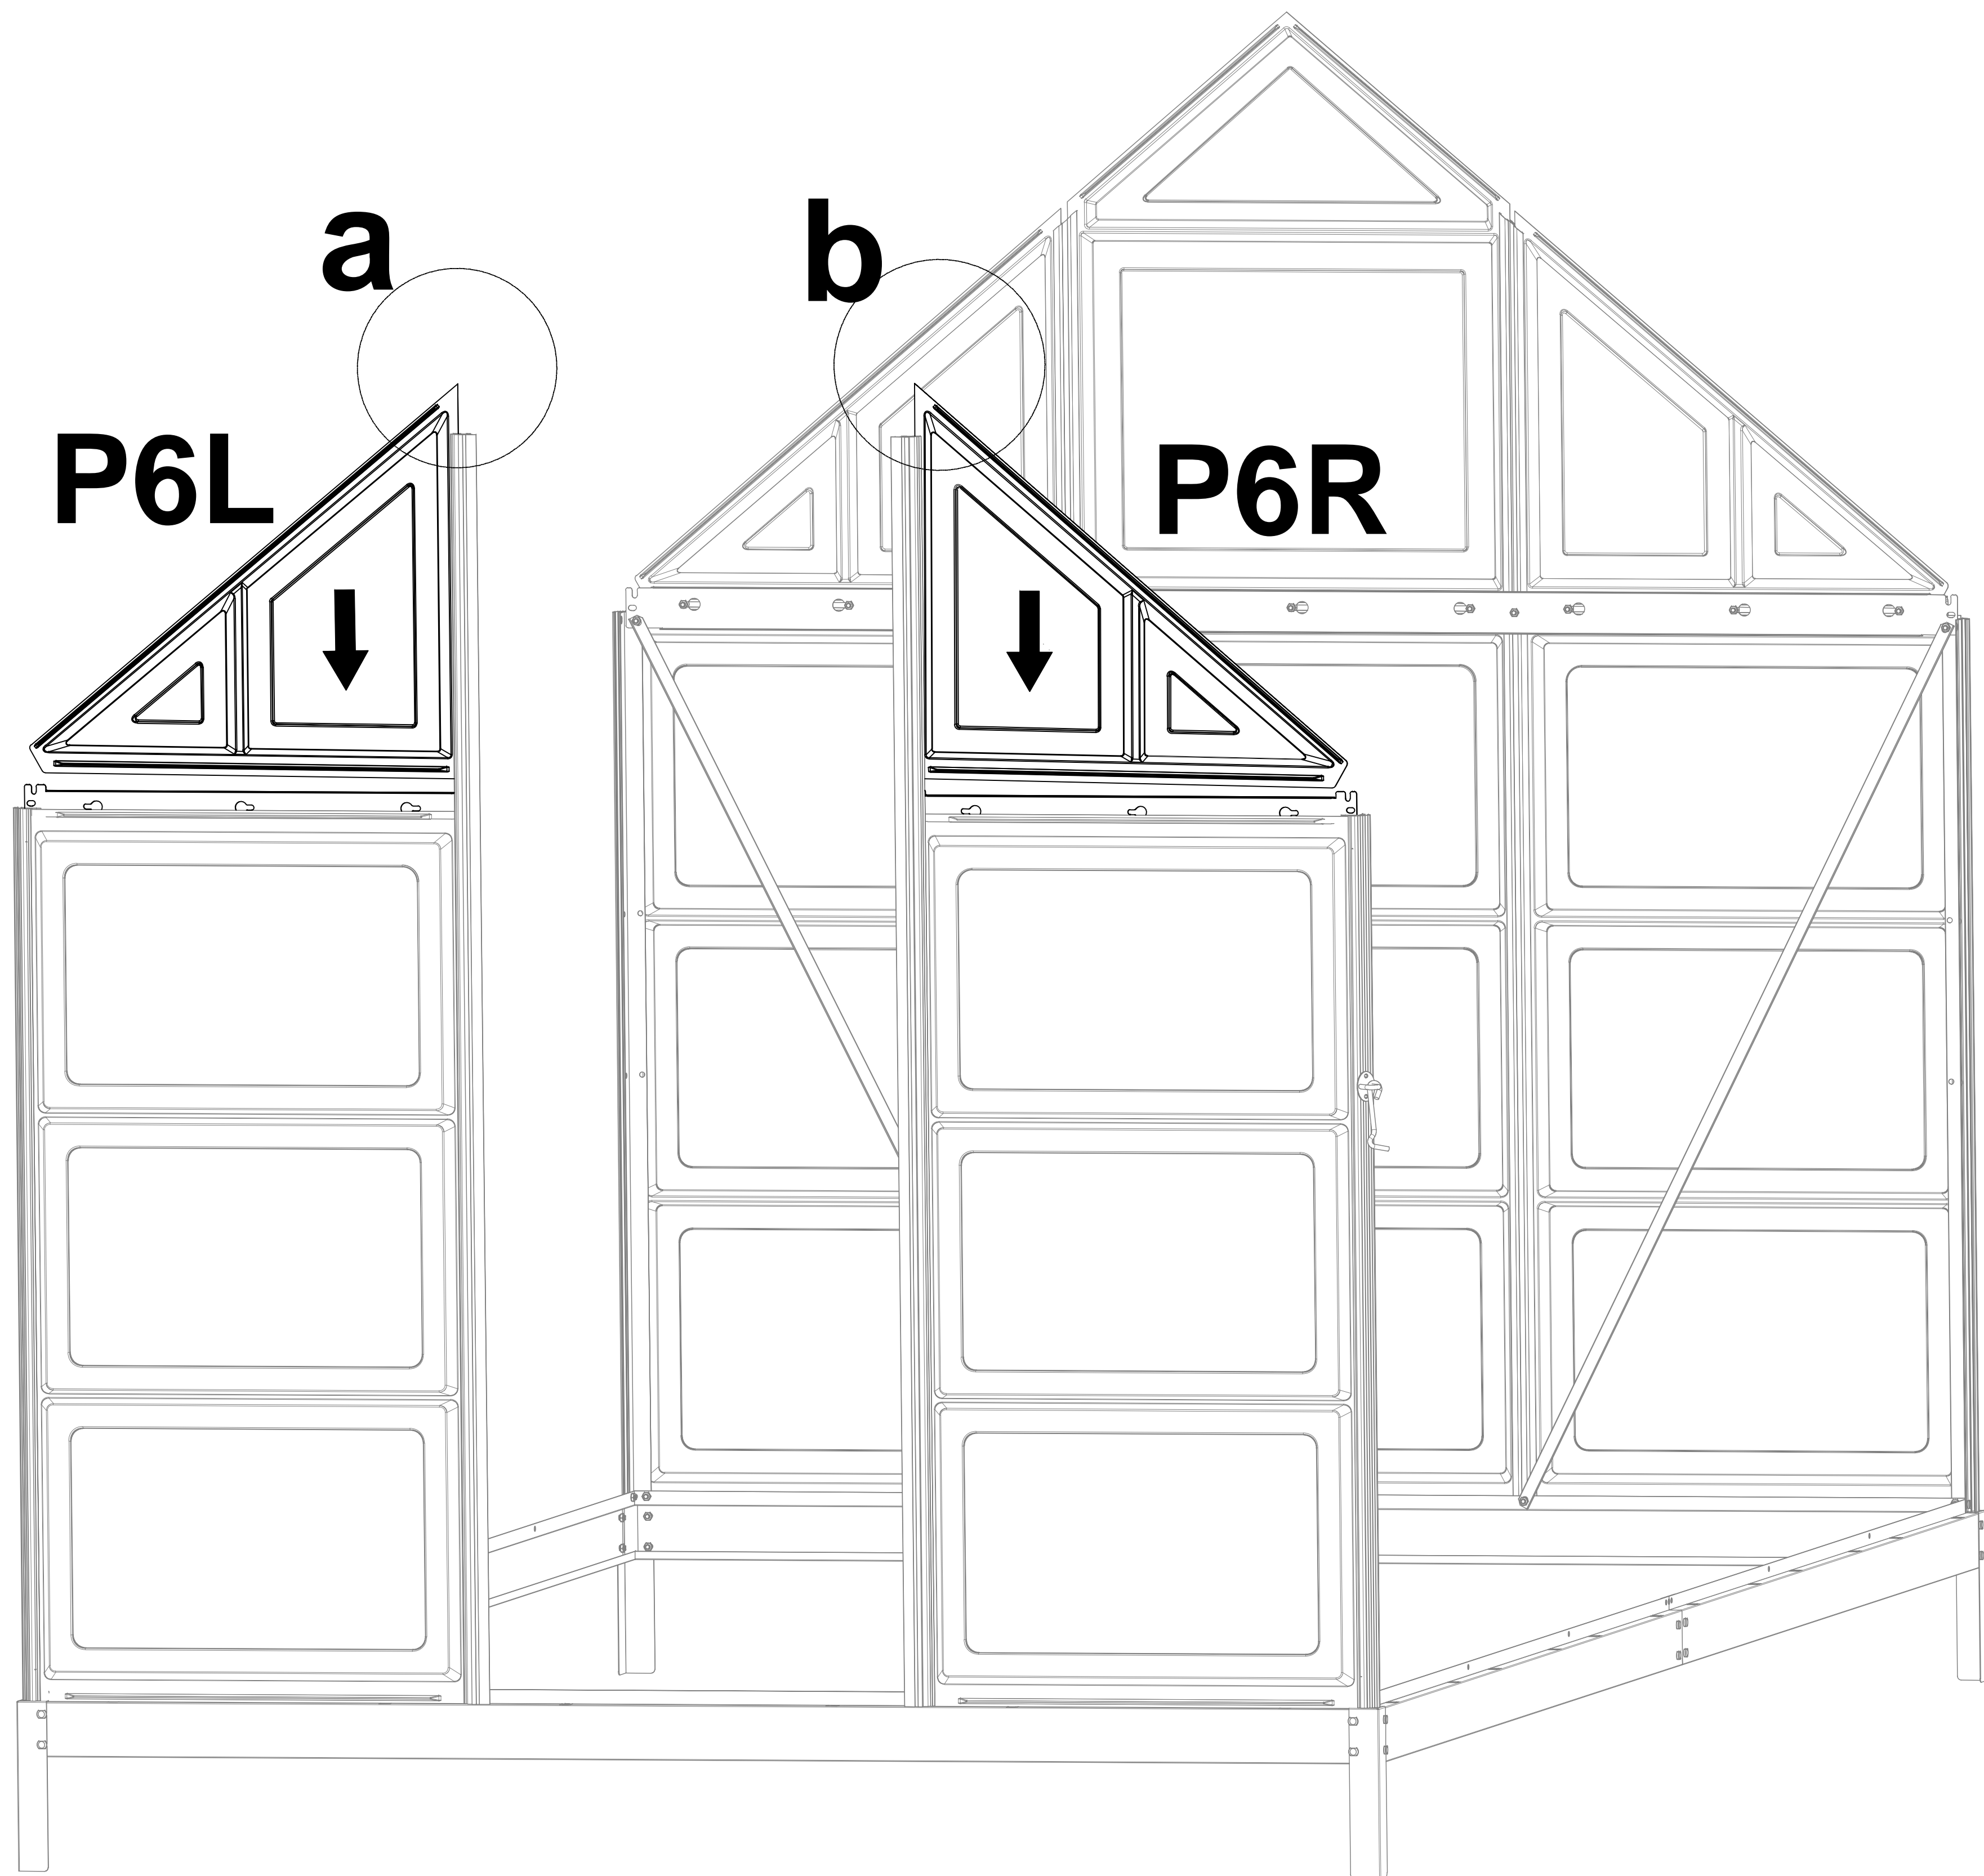


a

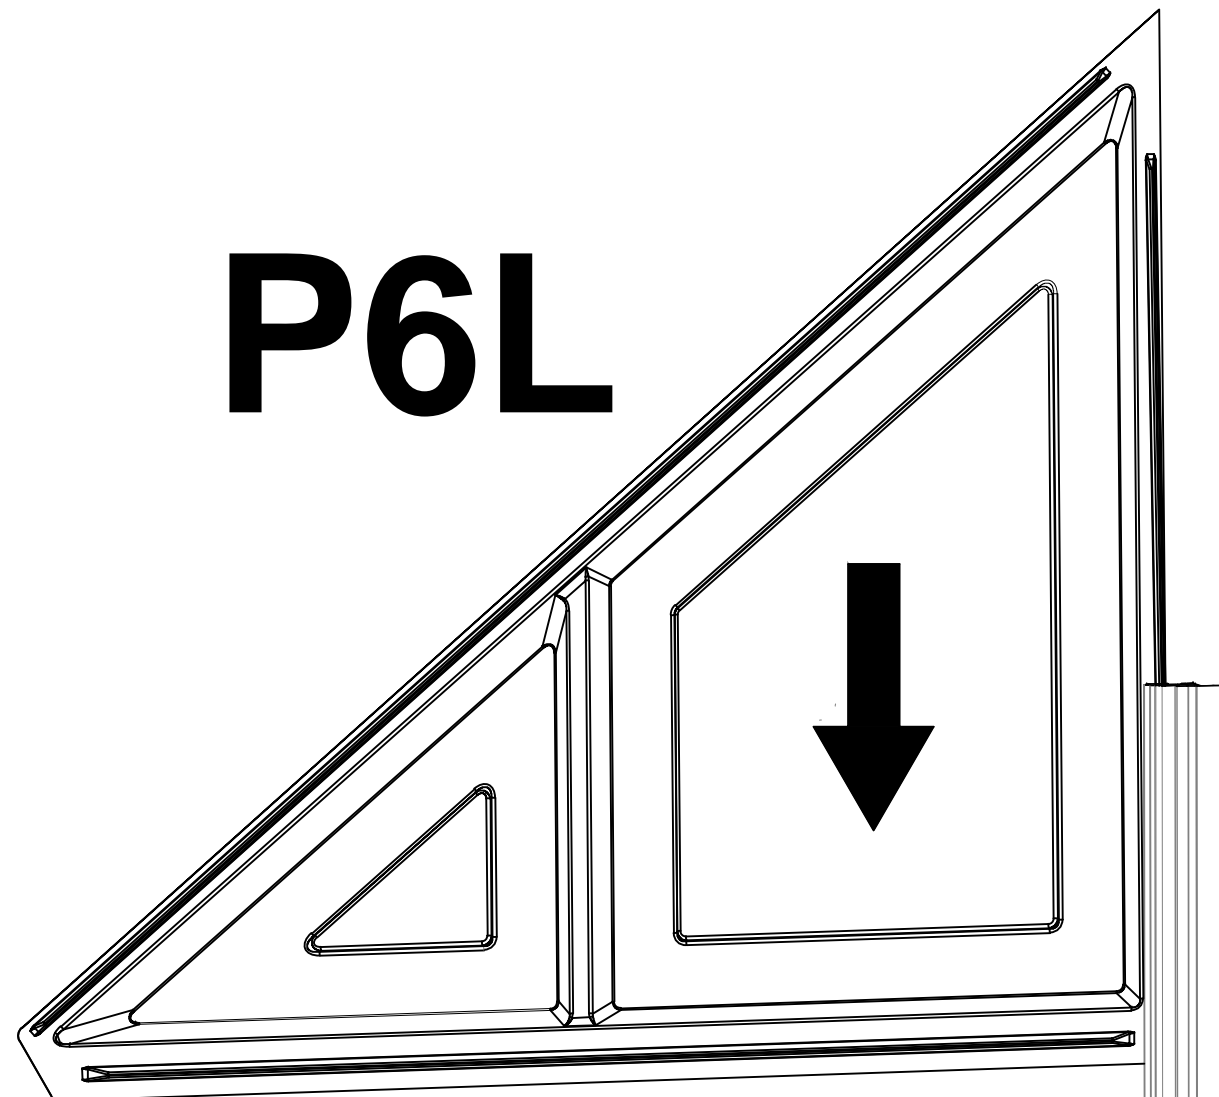


10R










b

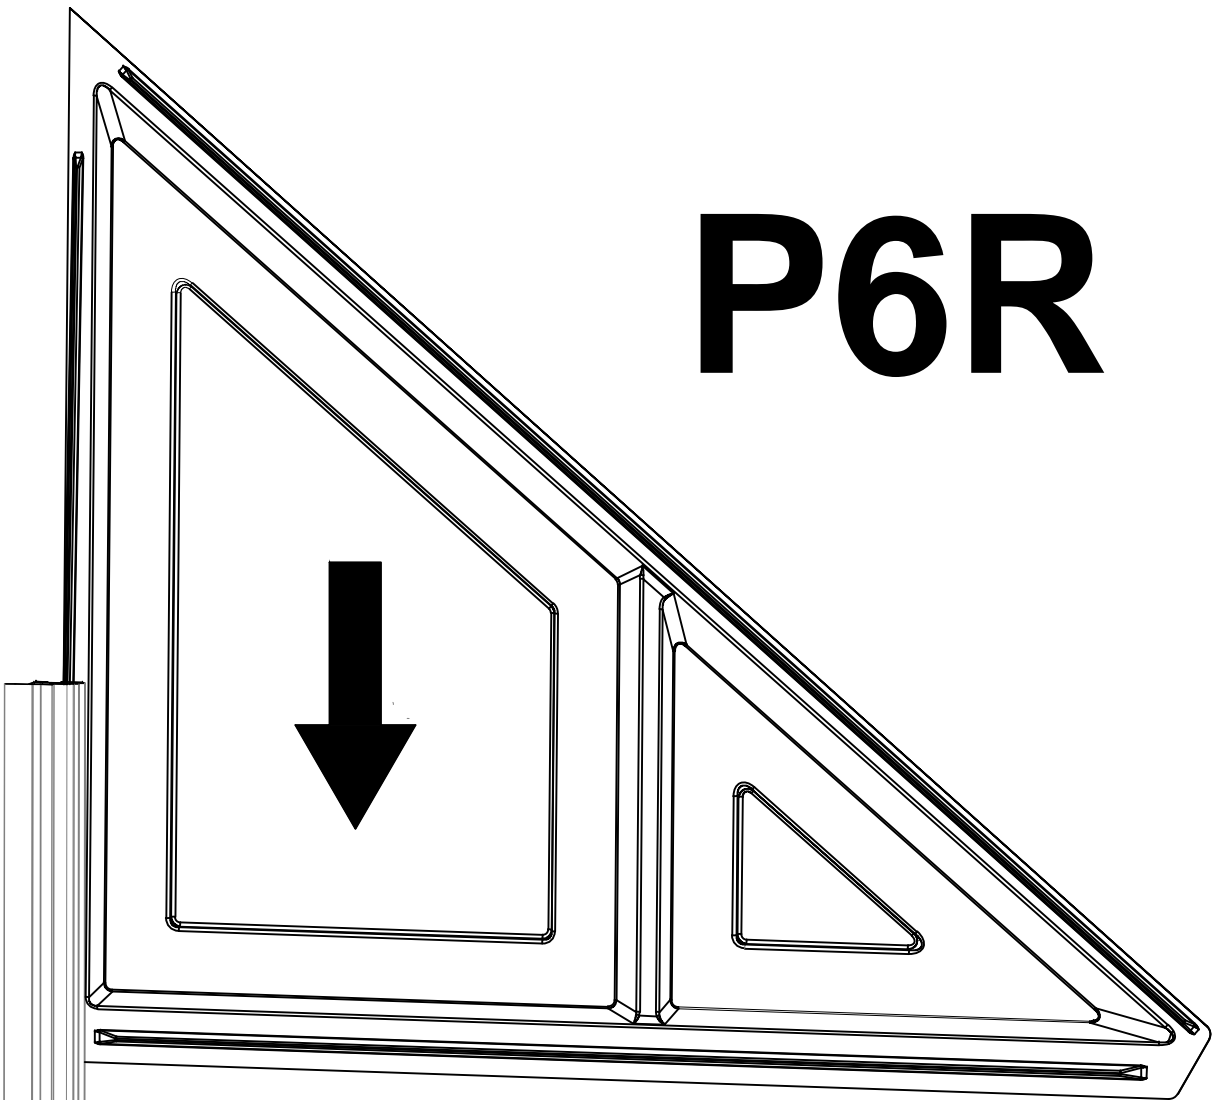

10L






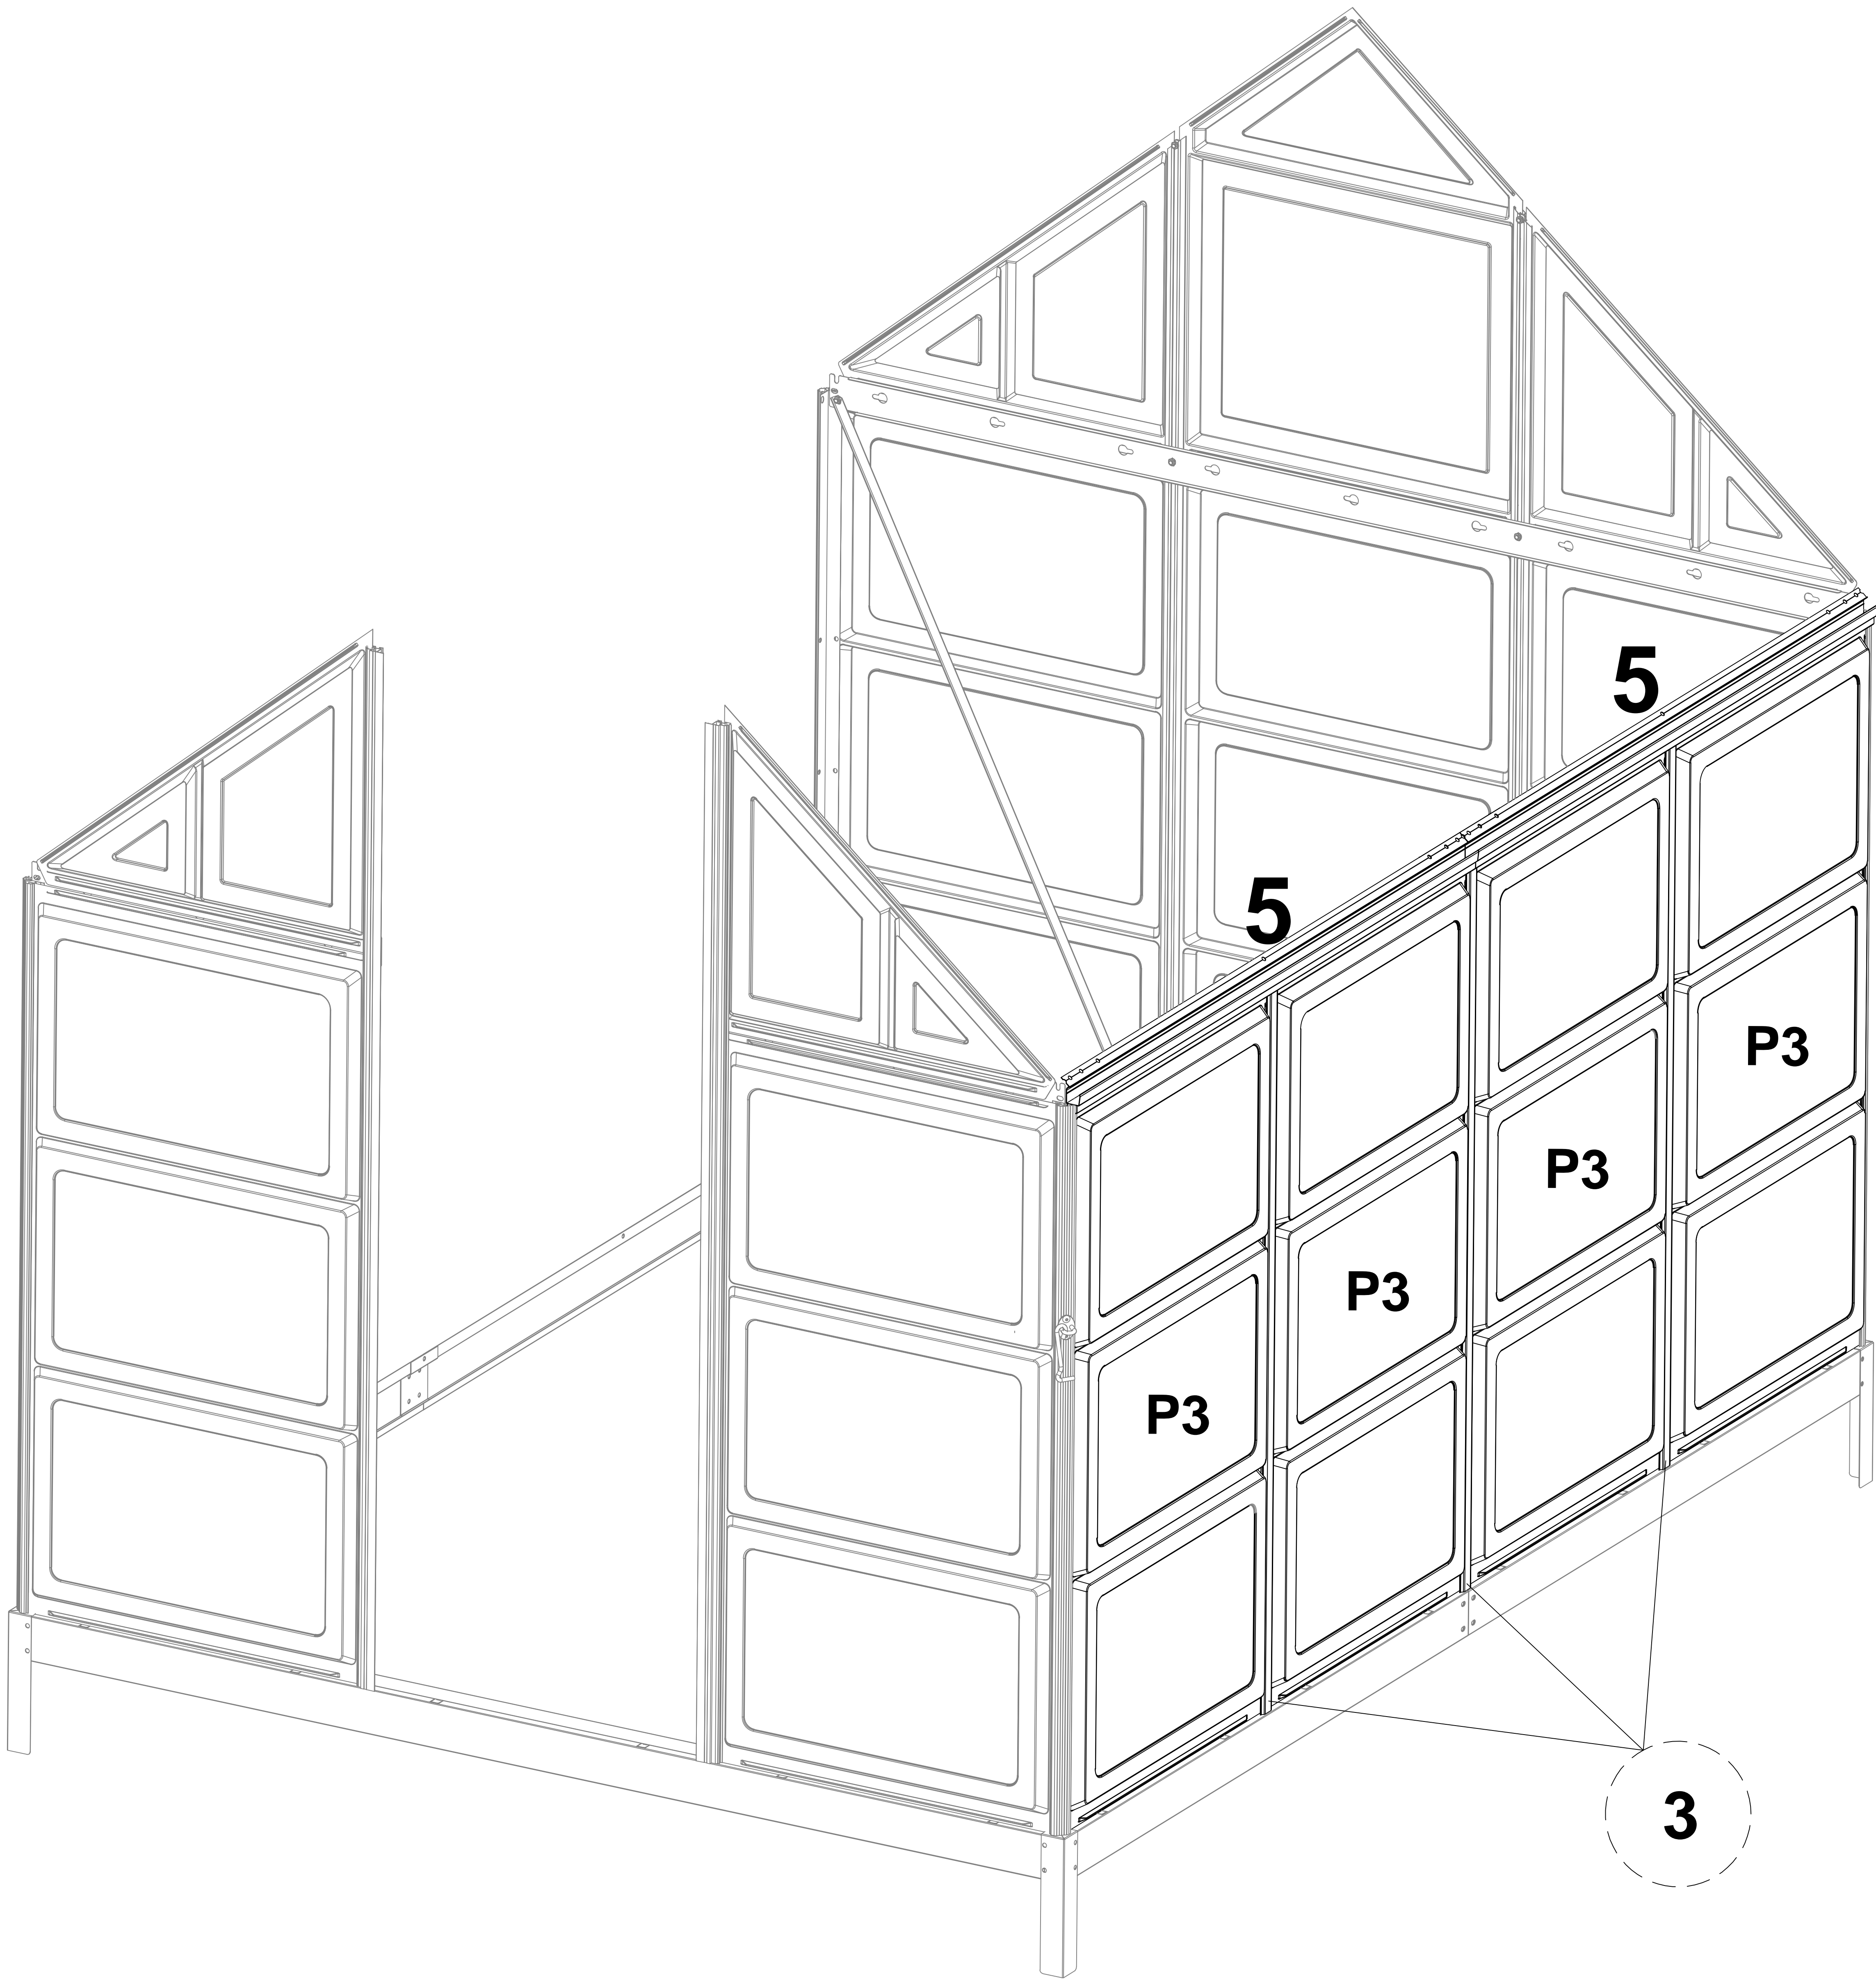


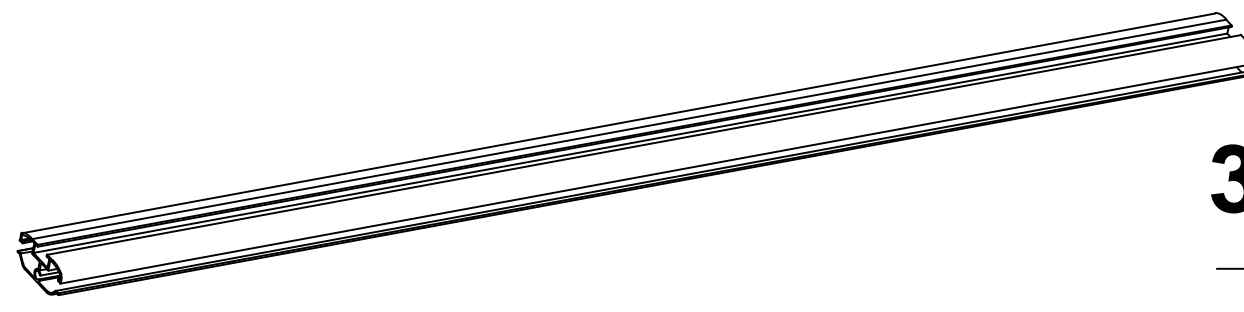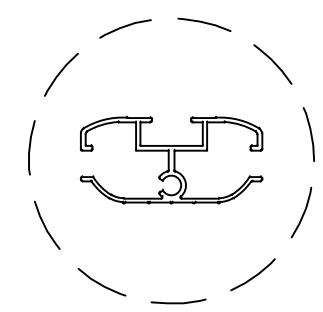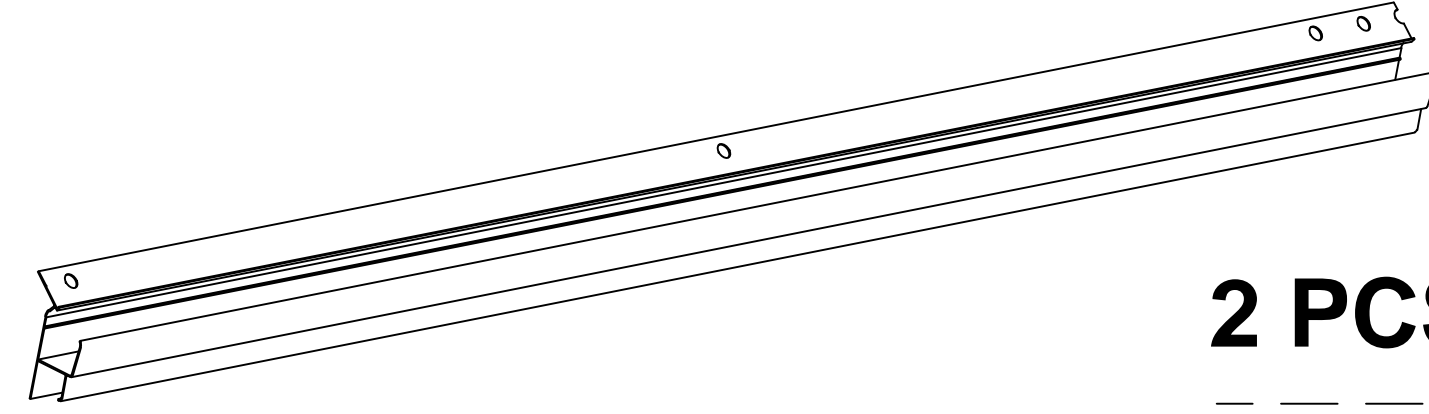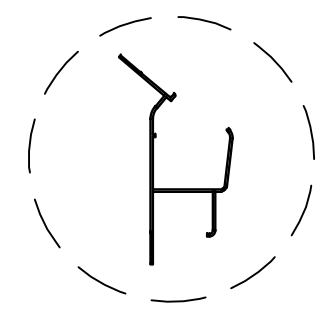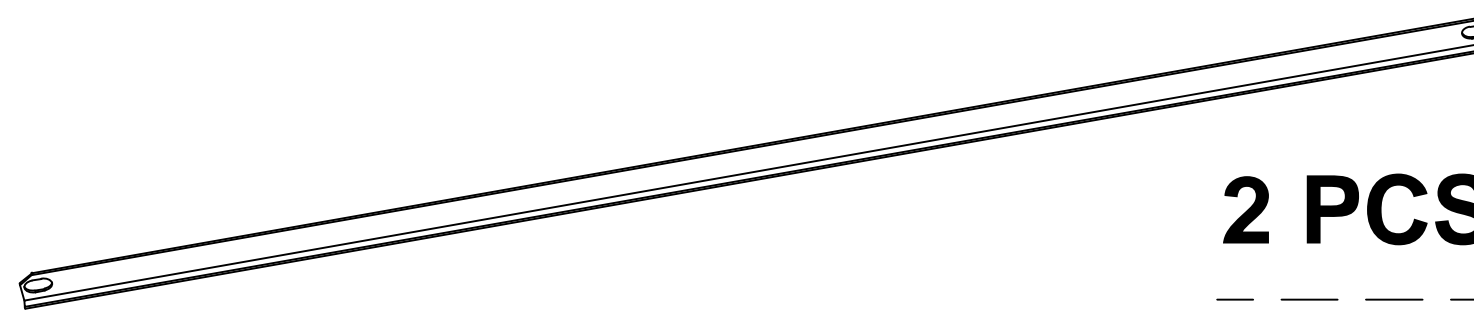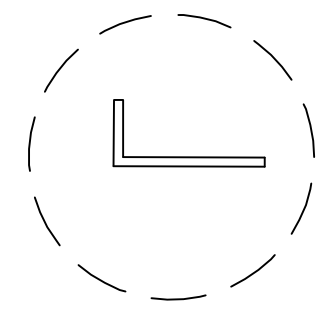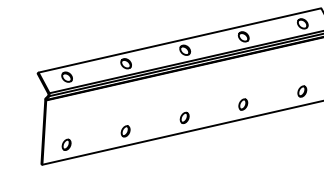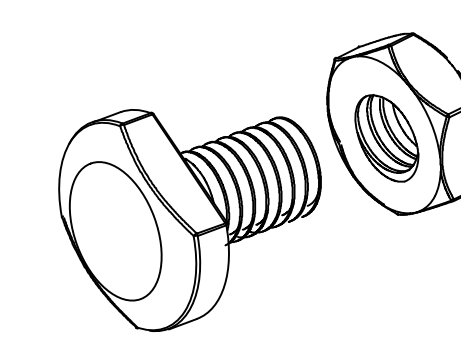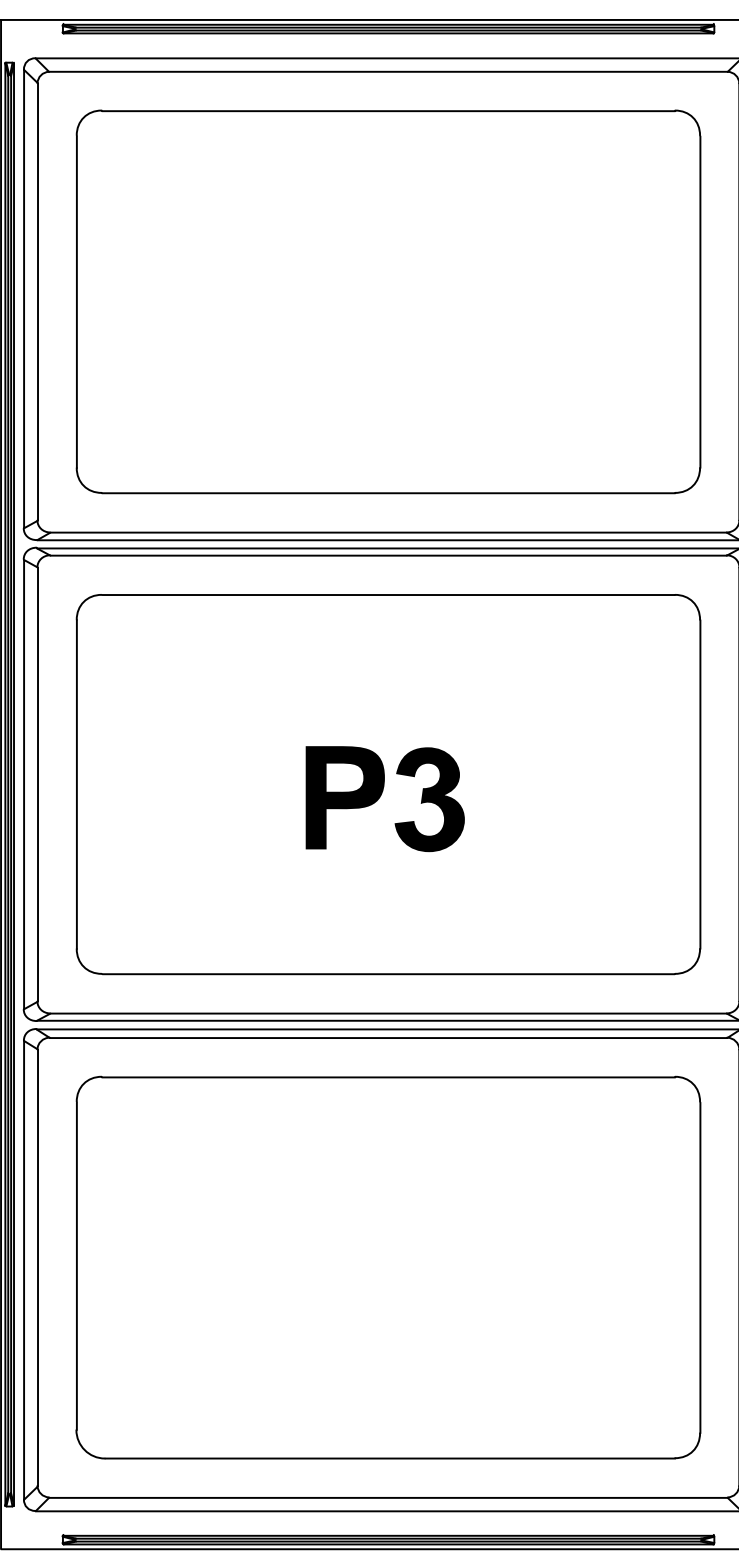			MM
3		3 PCS	 1170
5		2 PCS	 1788
8		2 PCS	 1300
28		1 PCS	
F5		16 PCS	
			x4



- 3 5 PCS
- 8 2 PCS
- F5 3 PCS

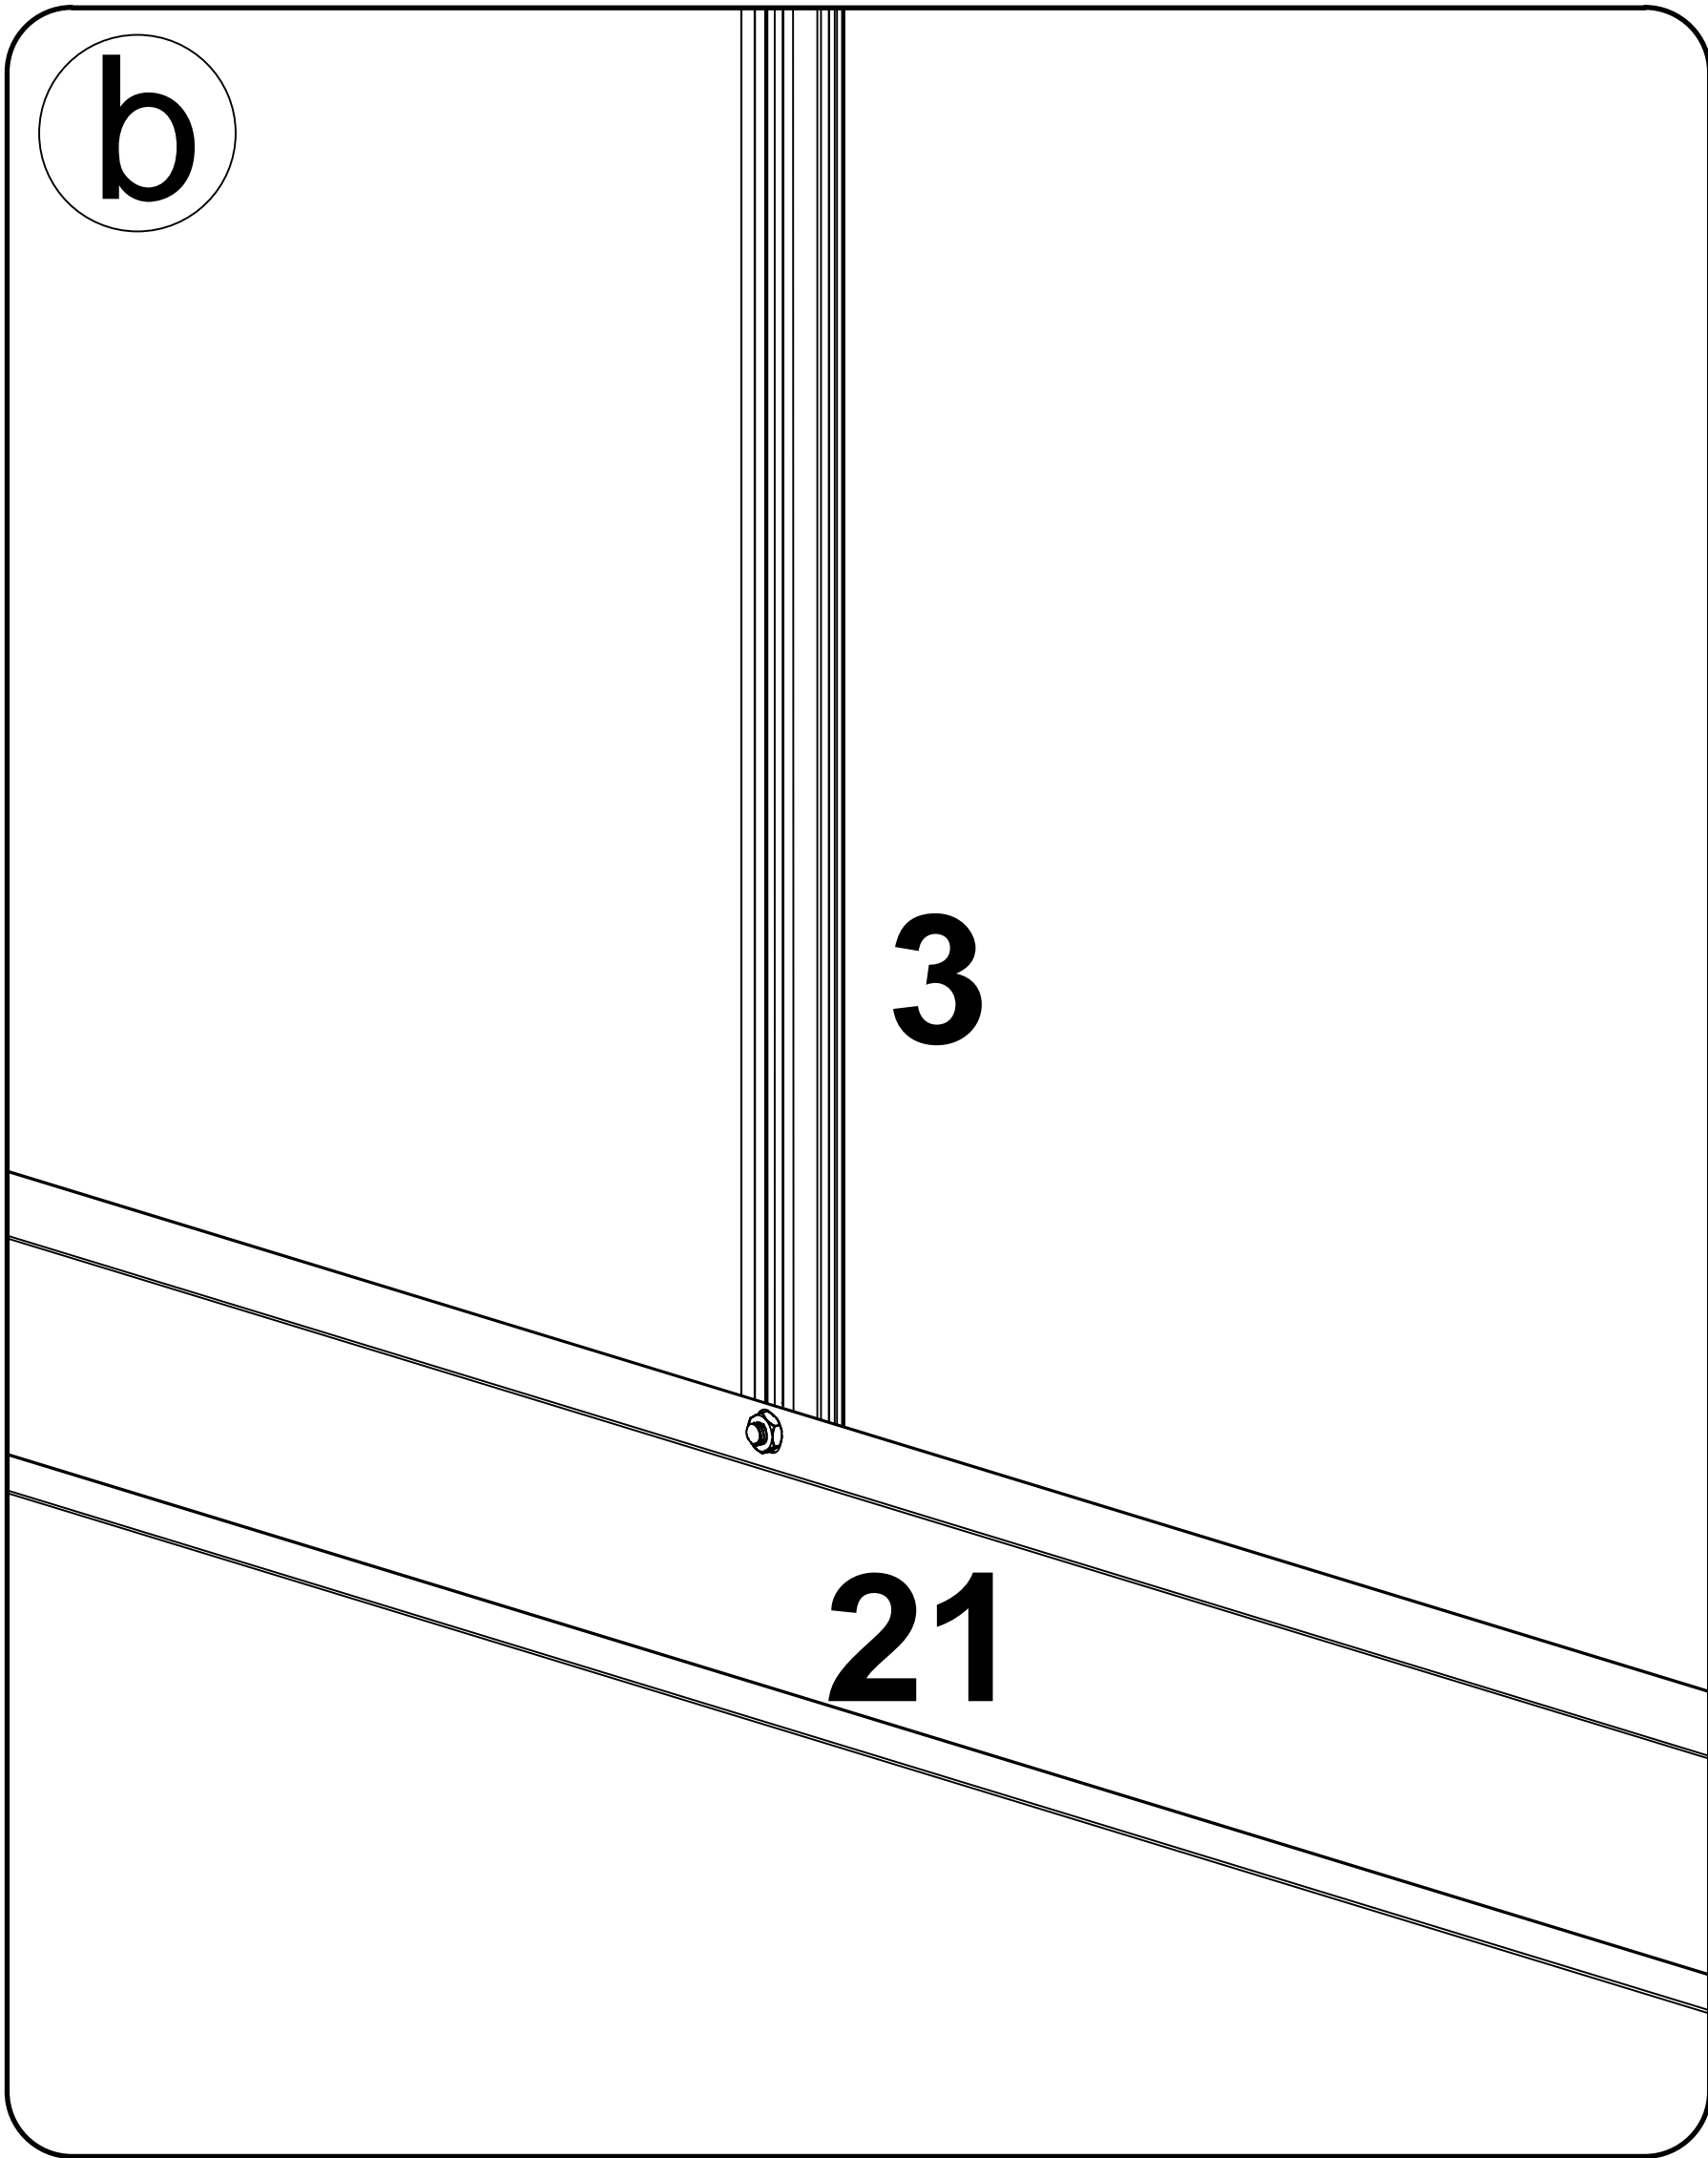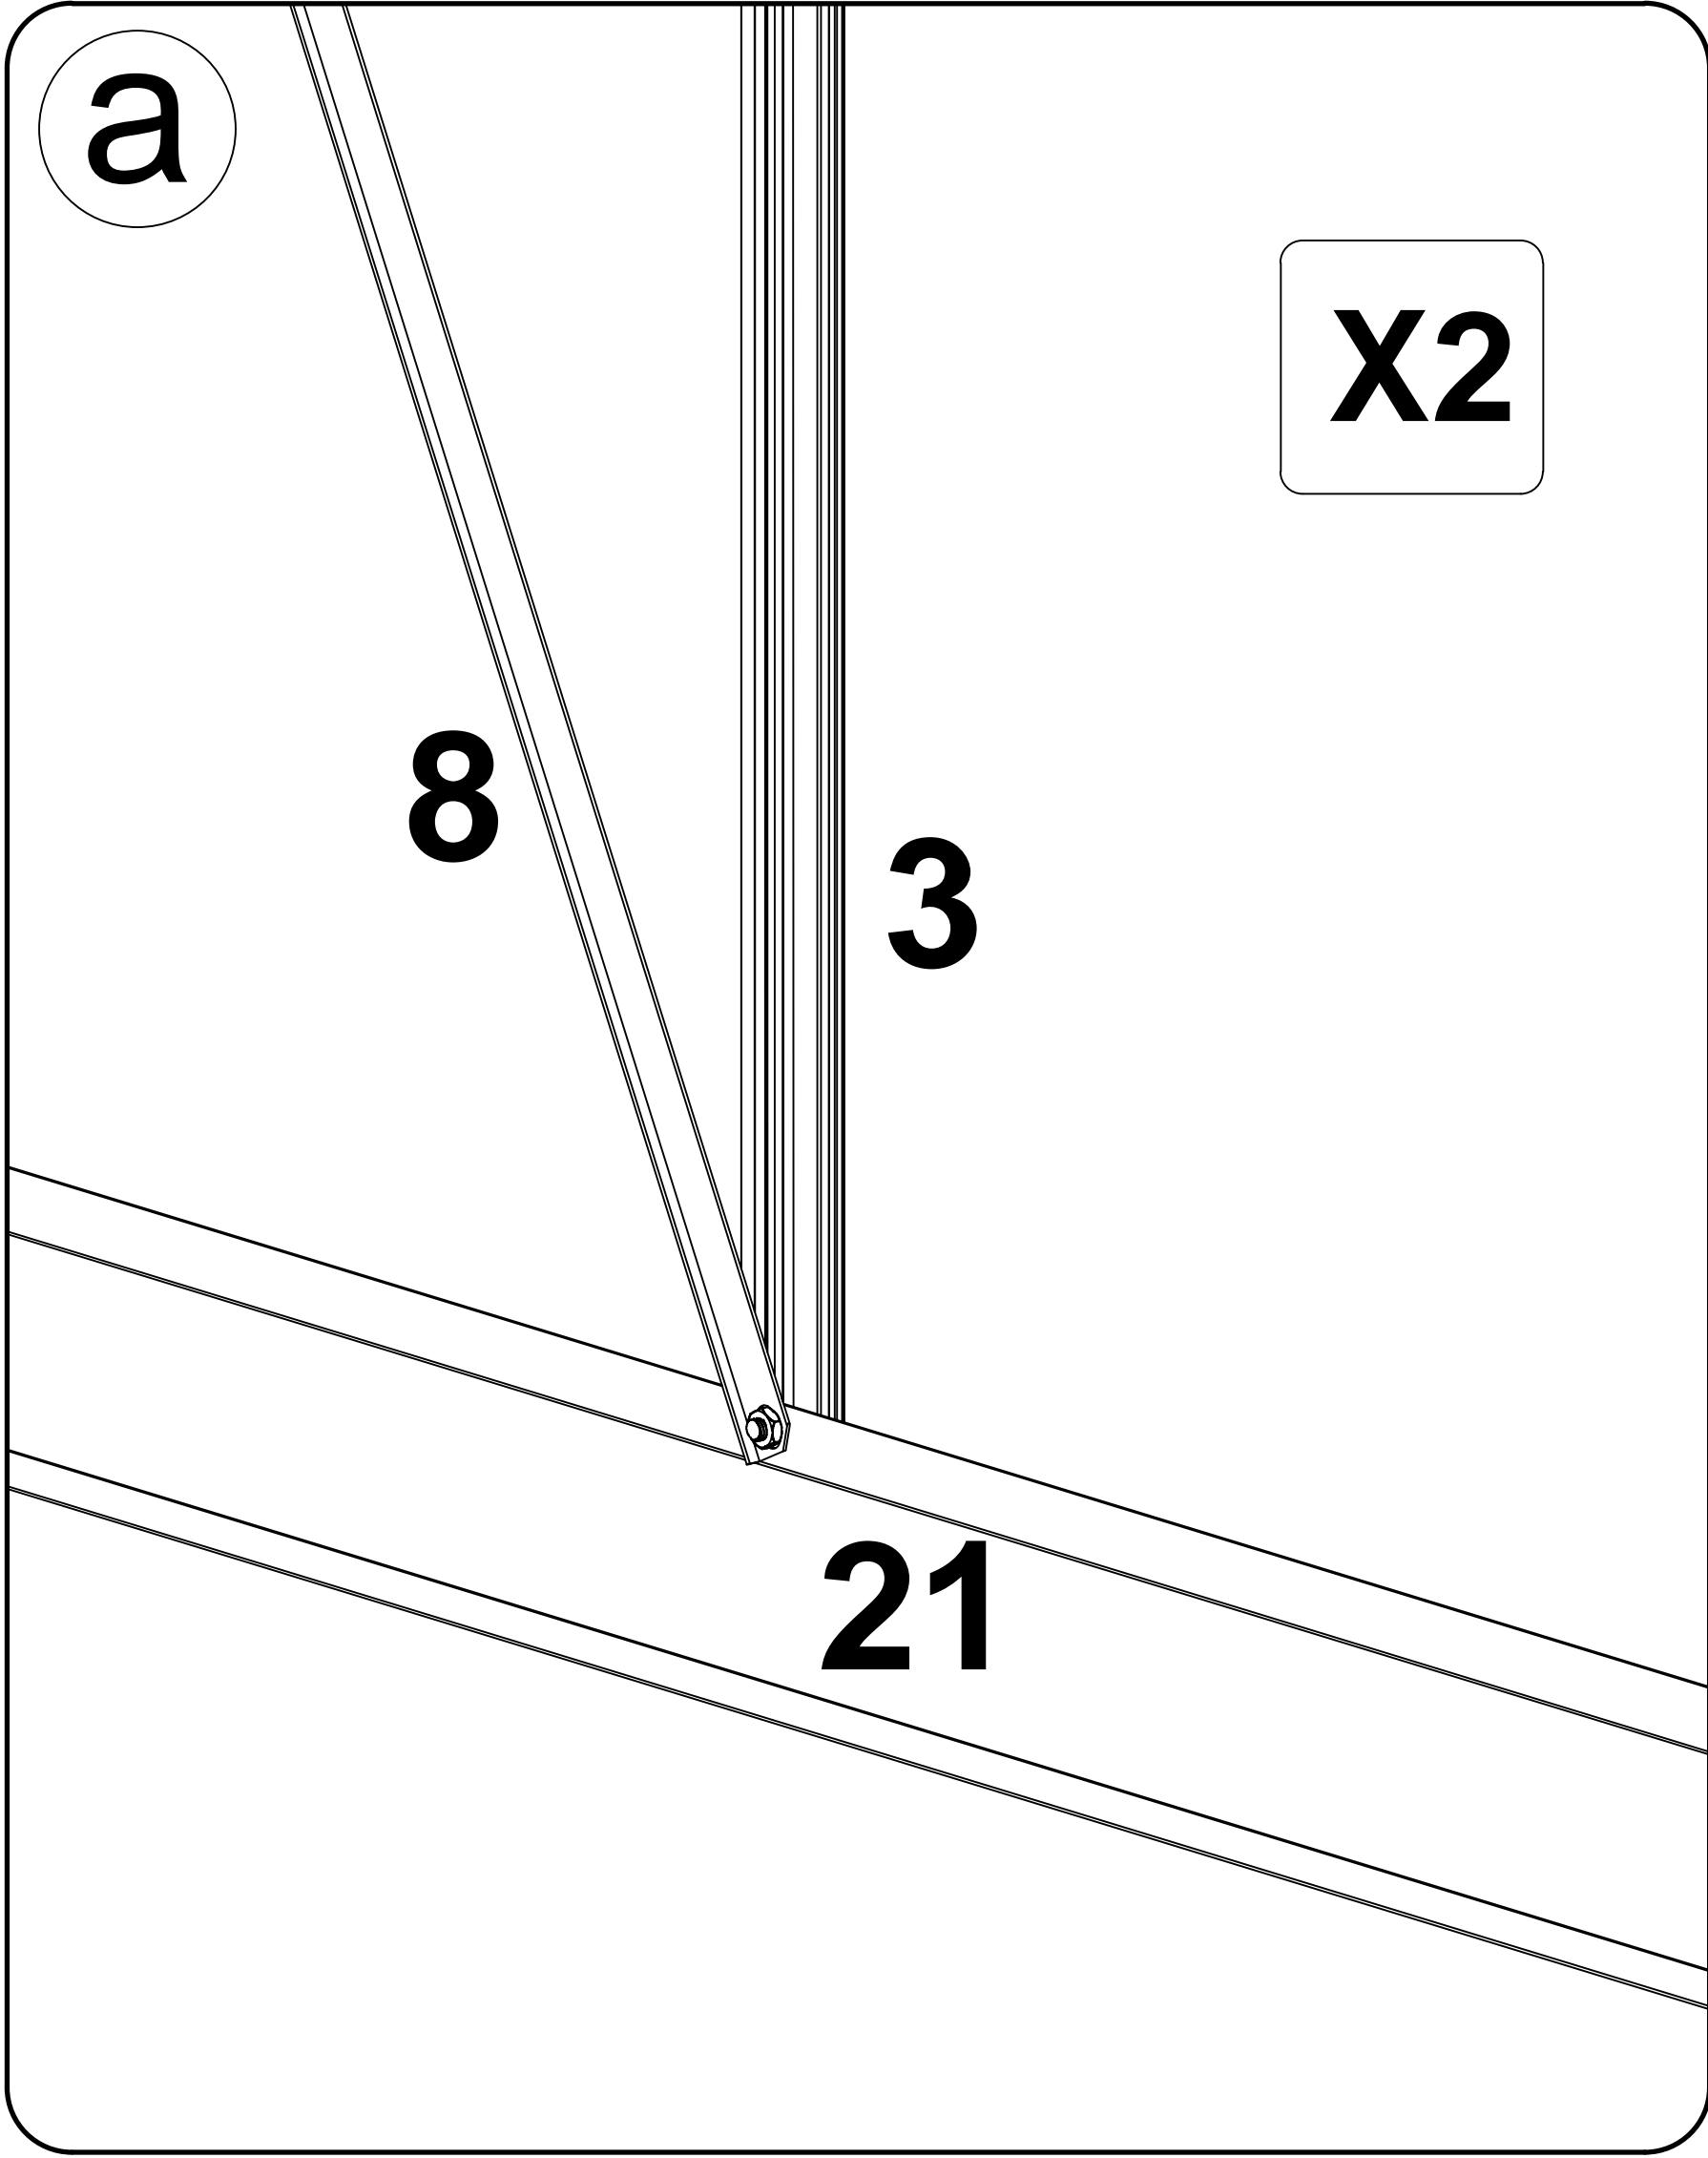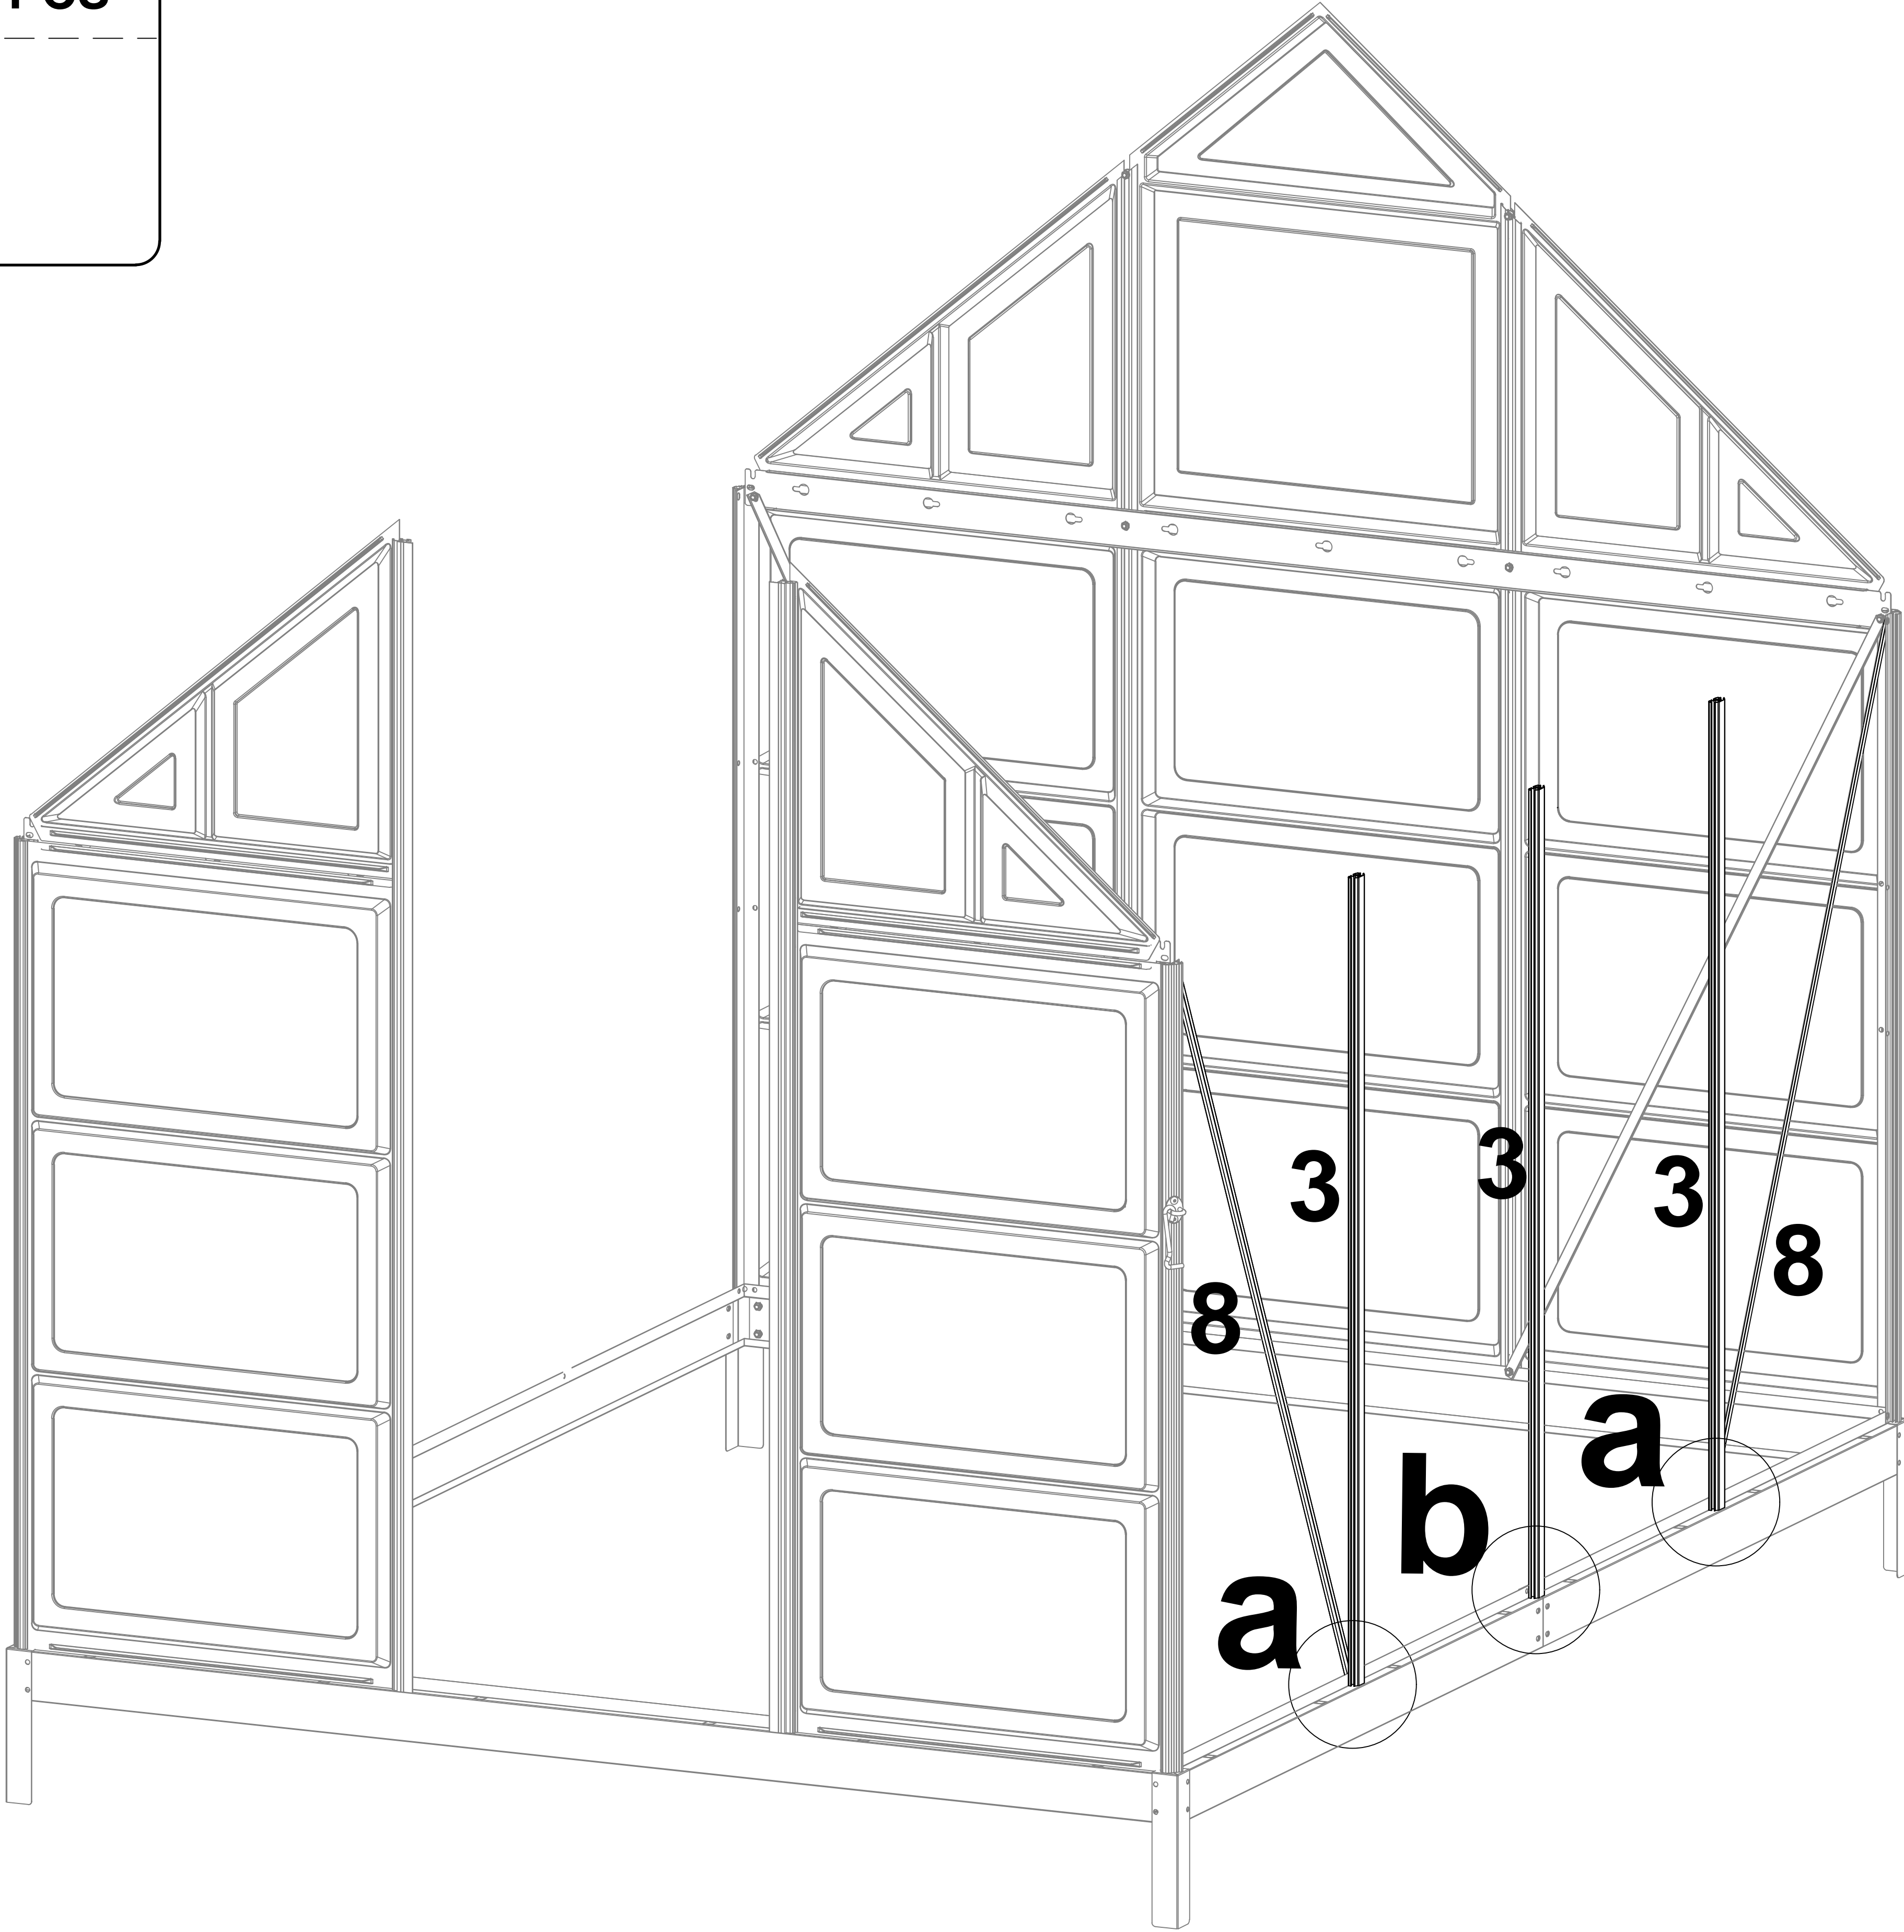


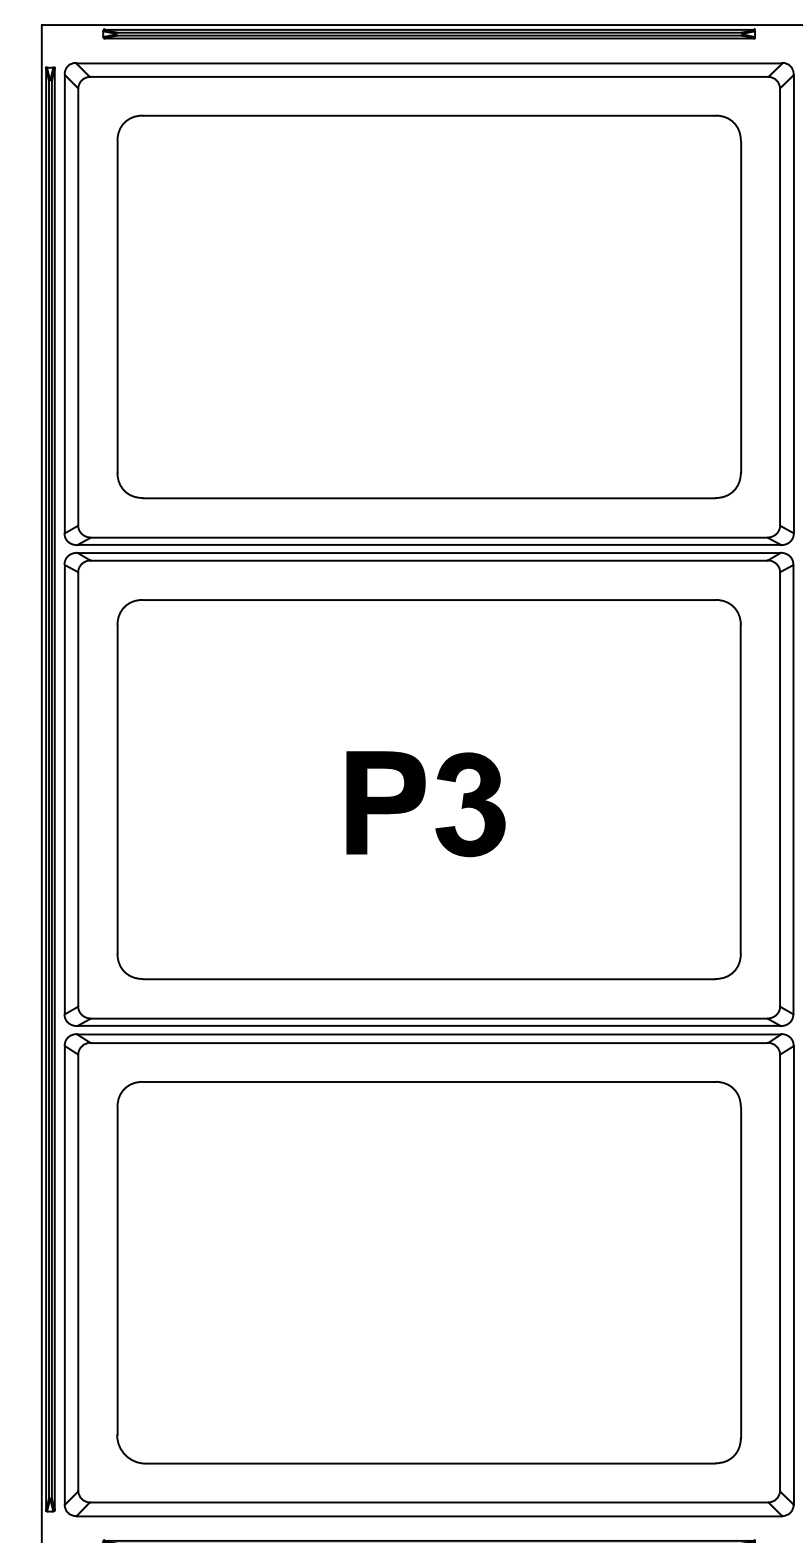


P3

x4


F5

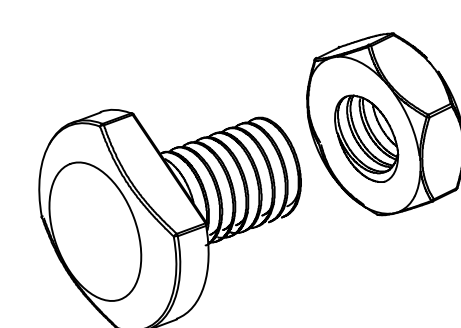

2 PCS

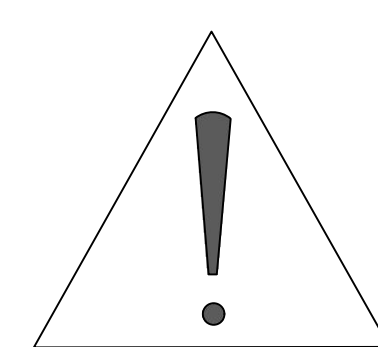

Install the screws in advance according to the instruction.

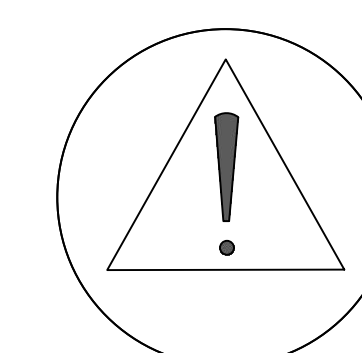

F5

3

a

P3





1/1-1

8




b



P3

P3

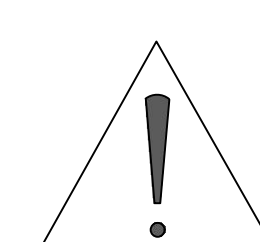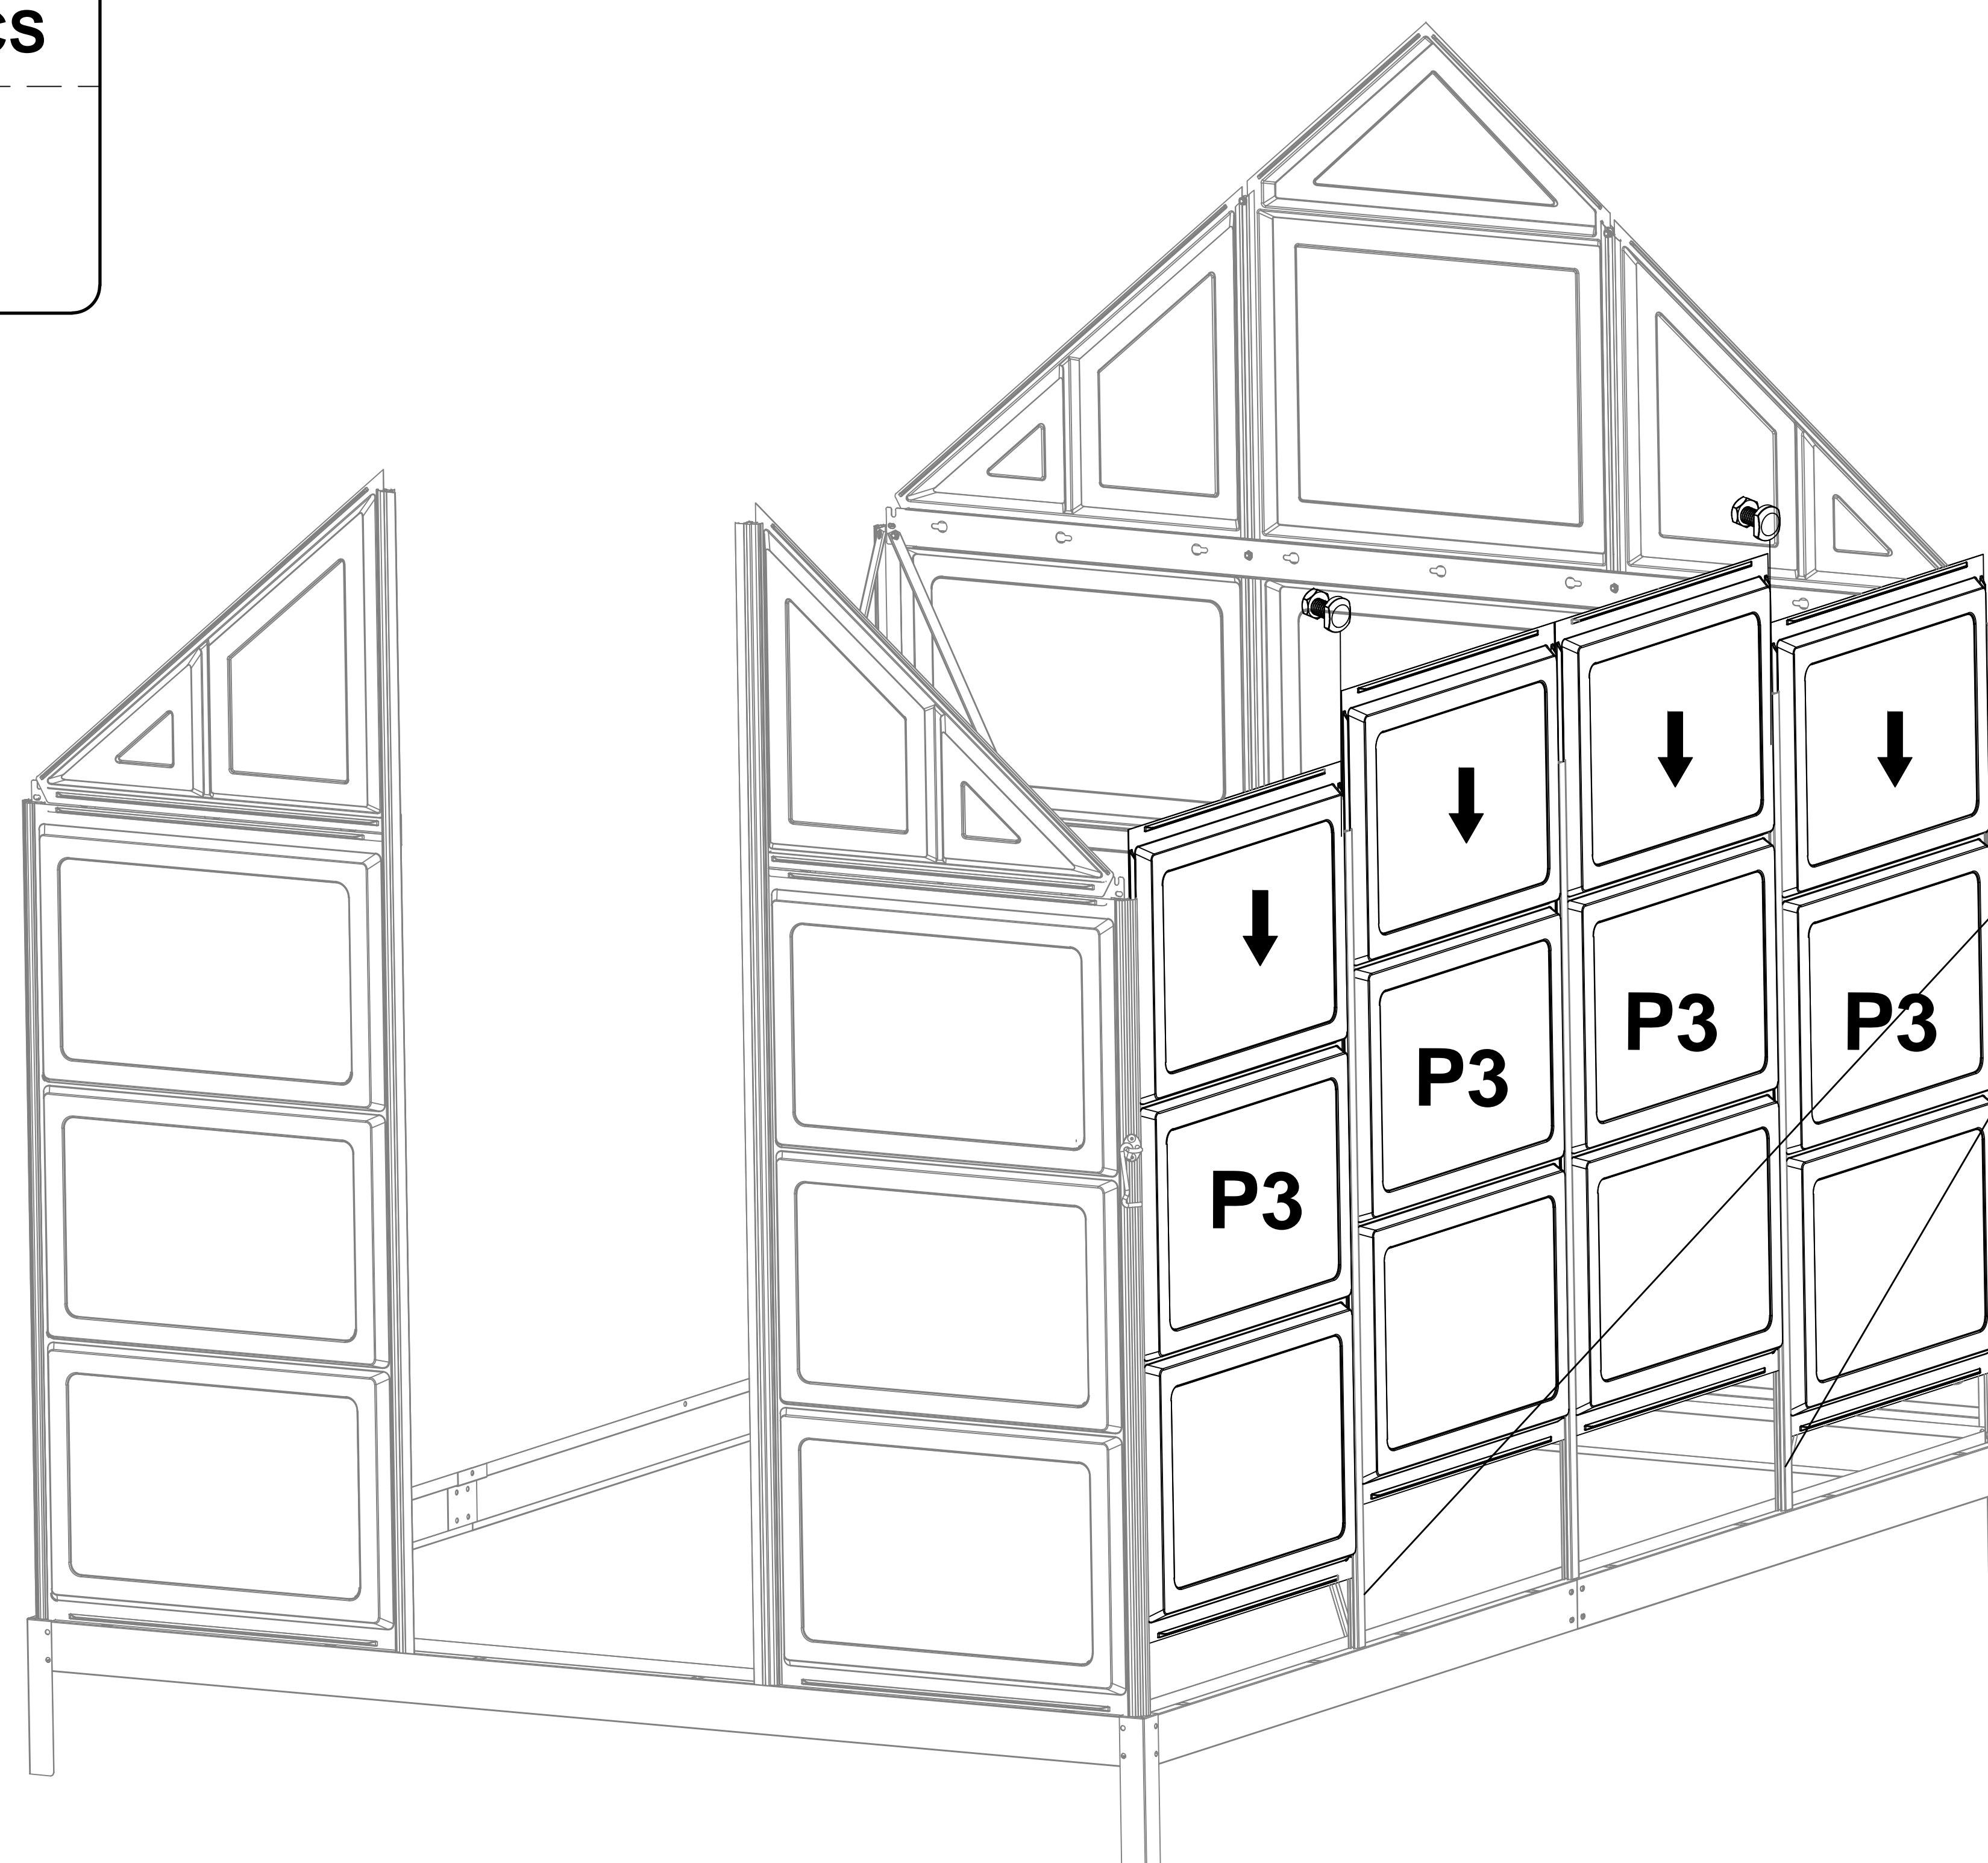


Tear off the film before inseted into the board and the side of white film needs faced out.

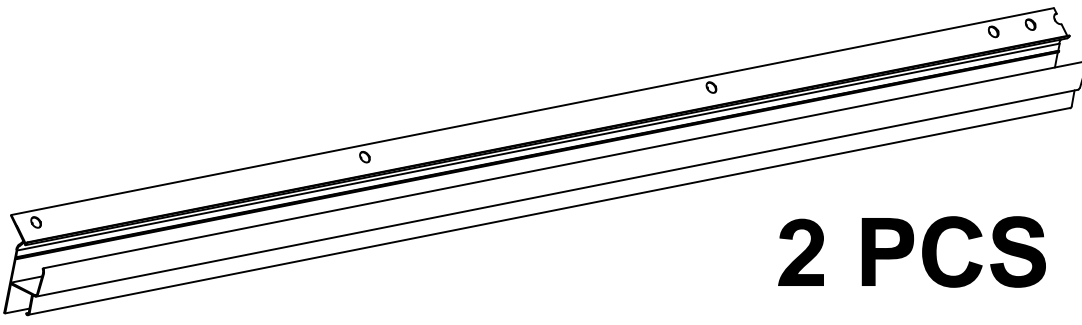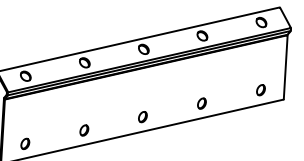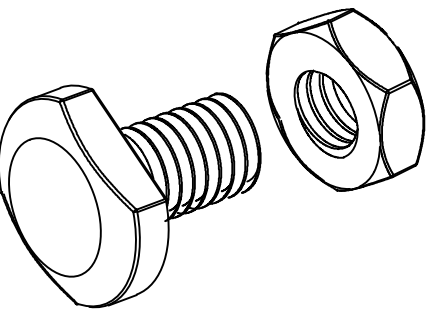5		2 PCS
28		1 PCS
F5		9 PCS

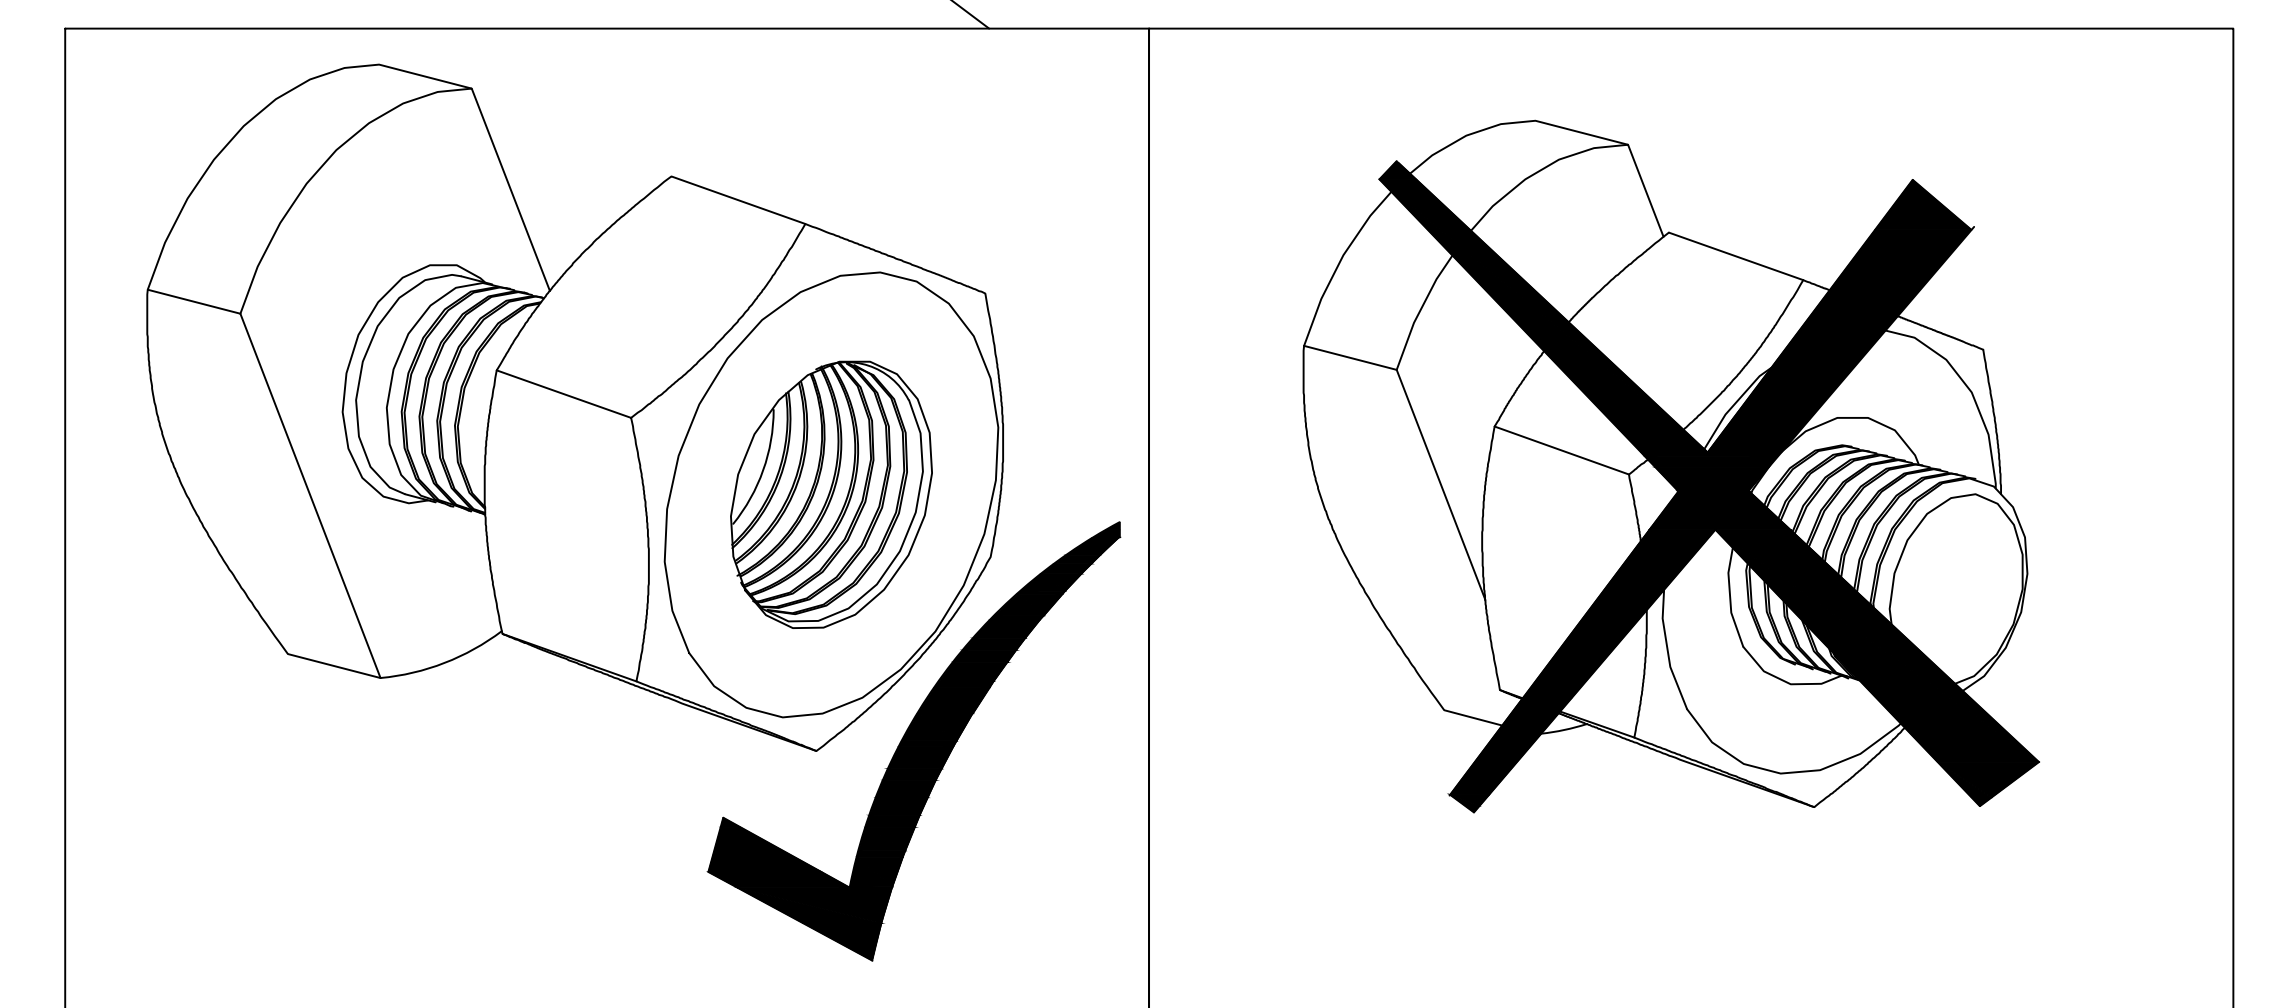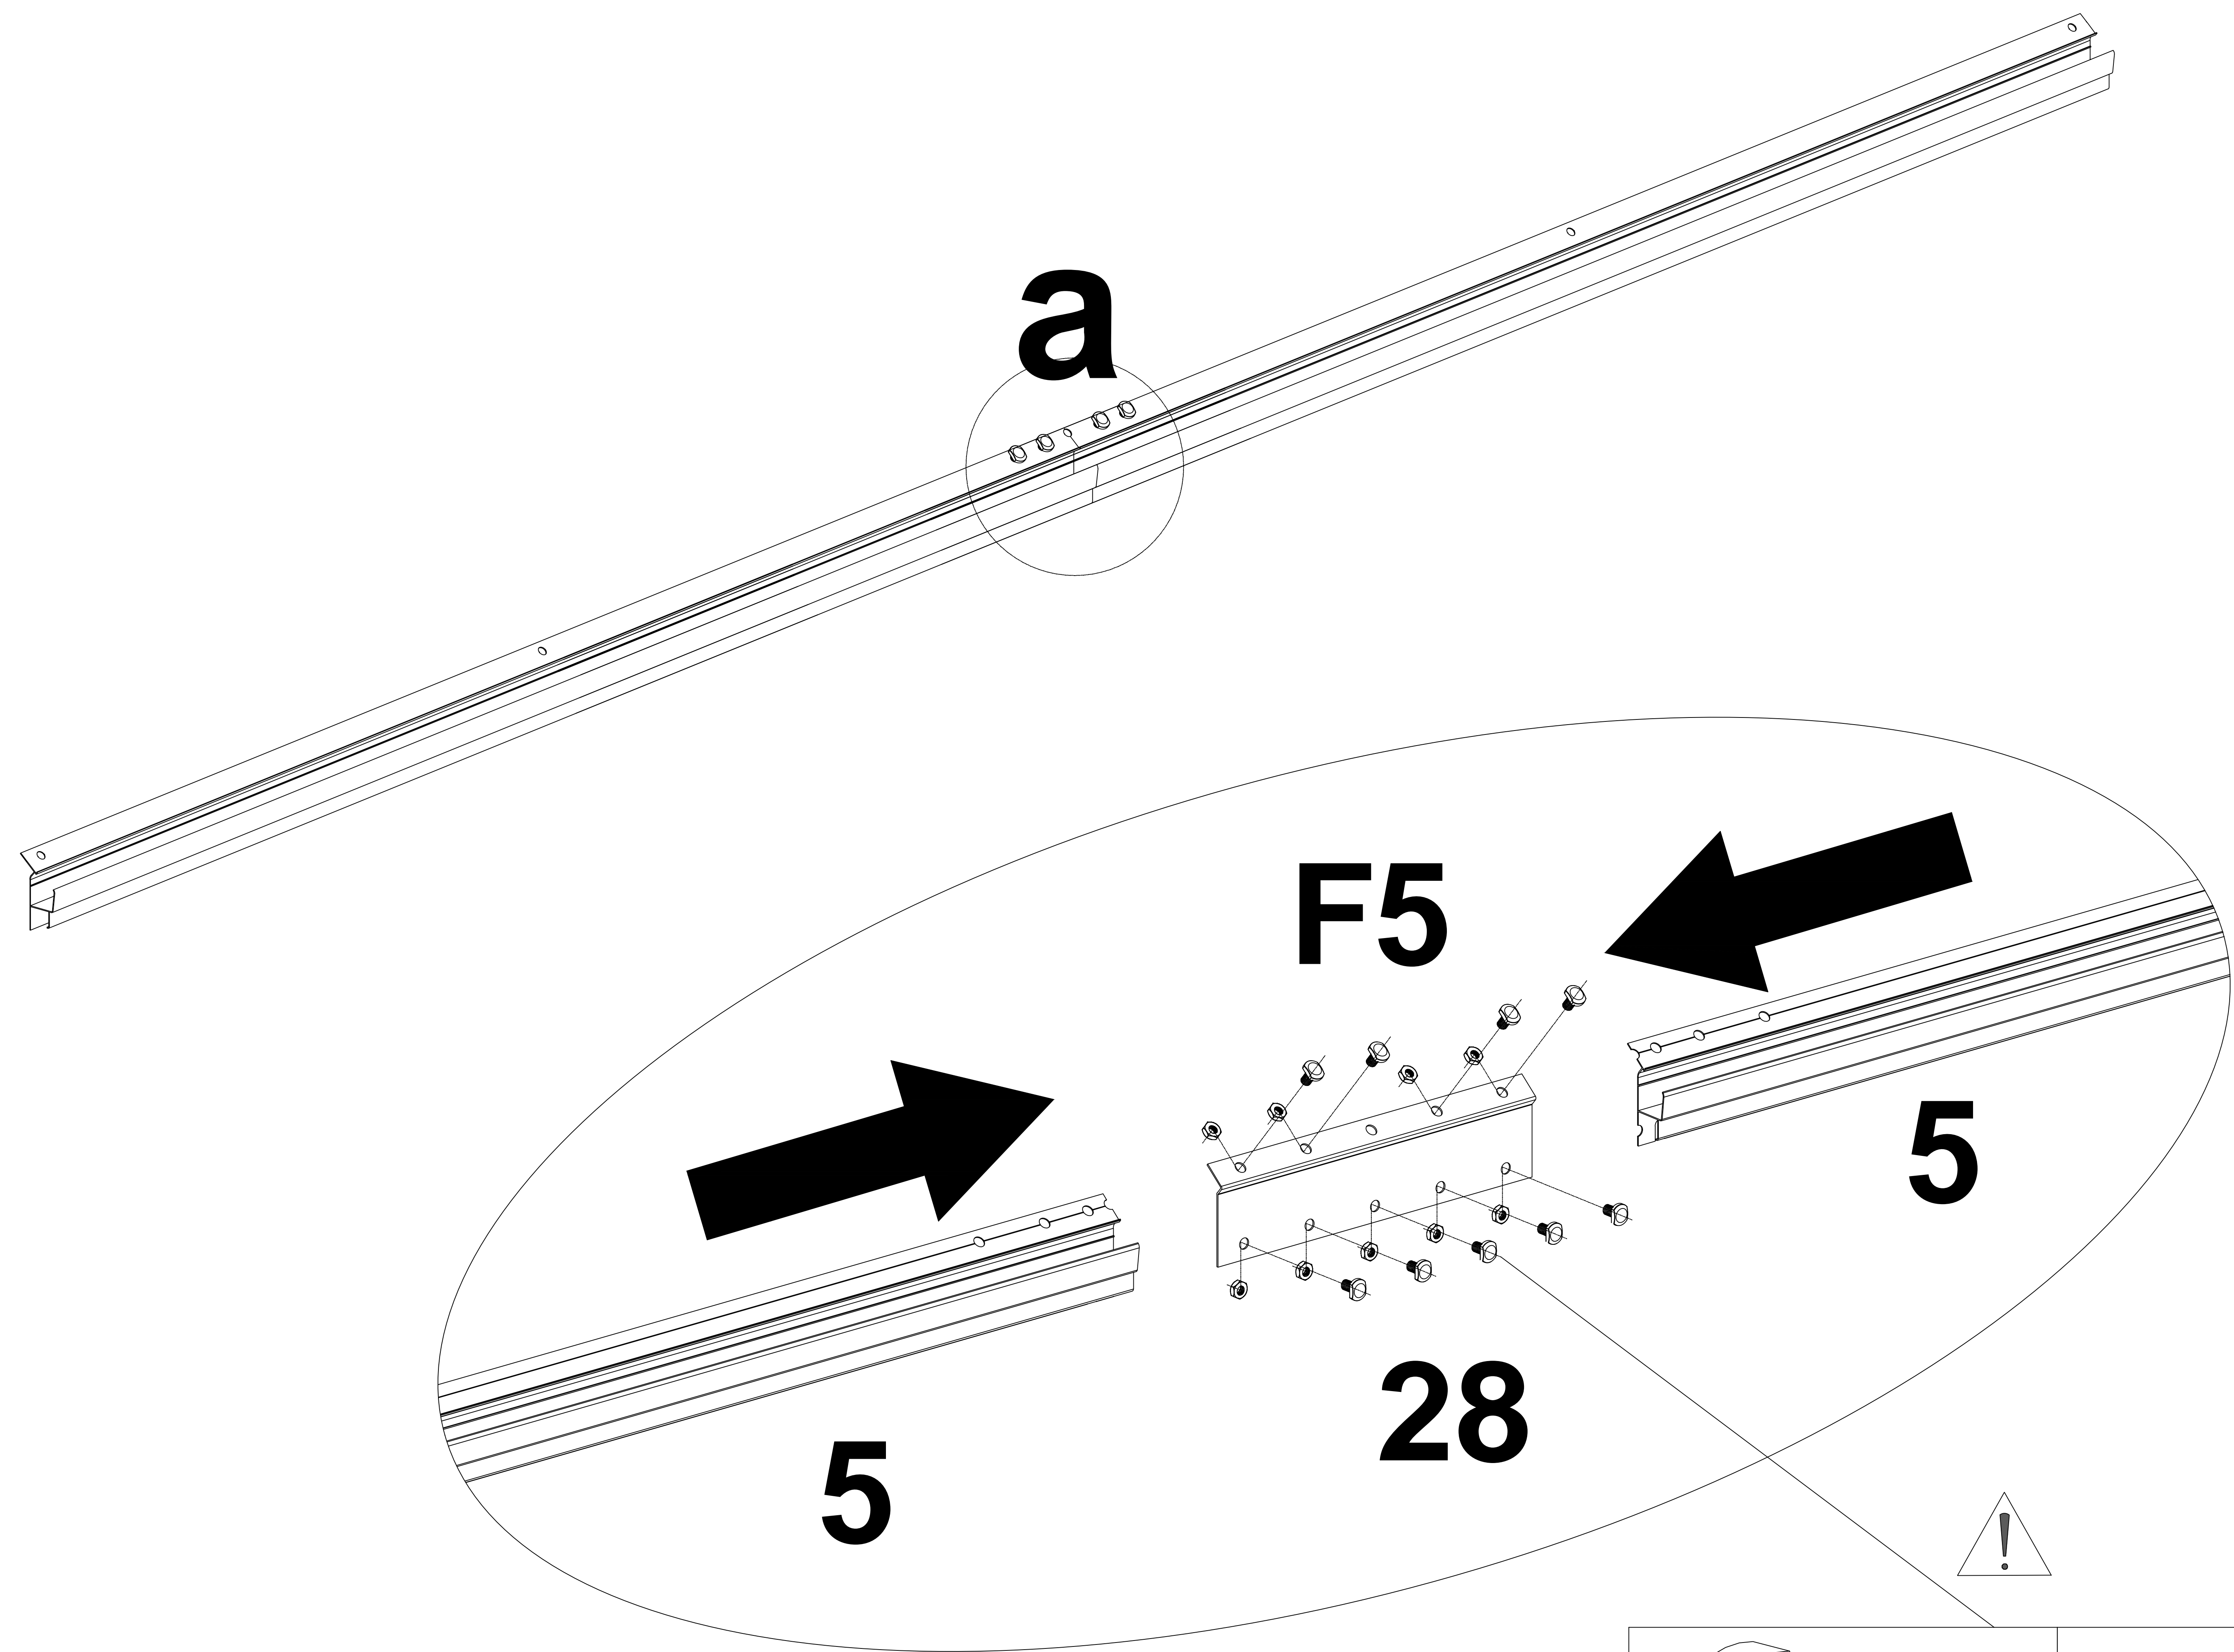





F5

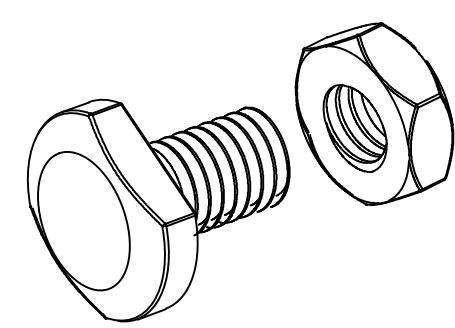

2 PCS

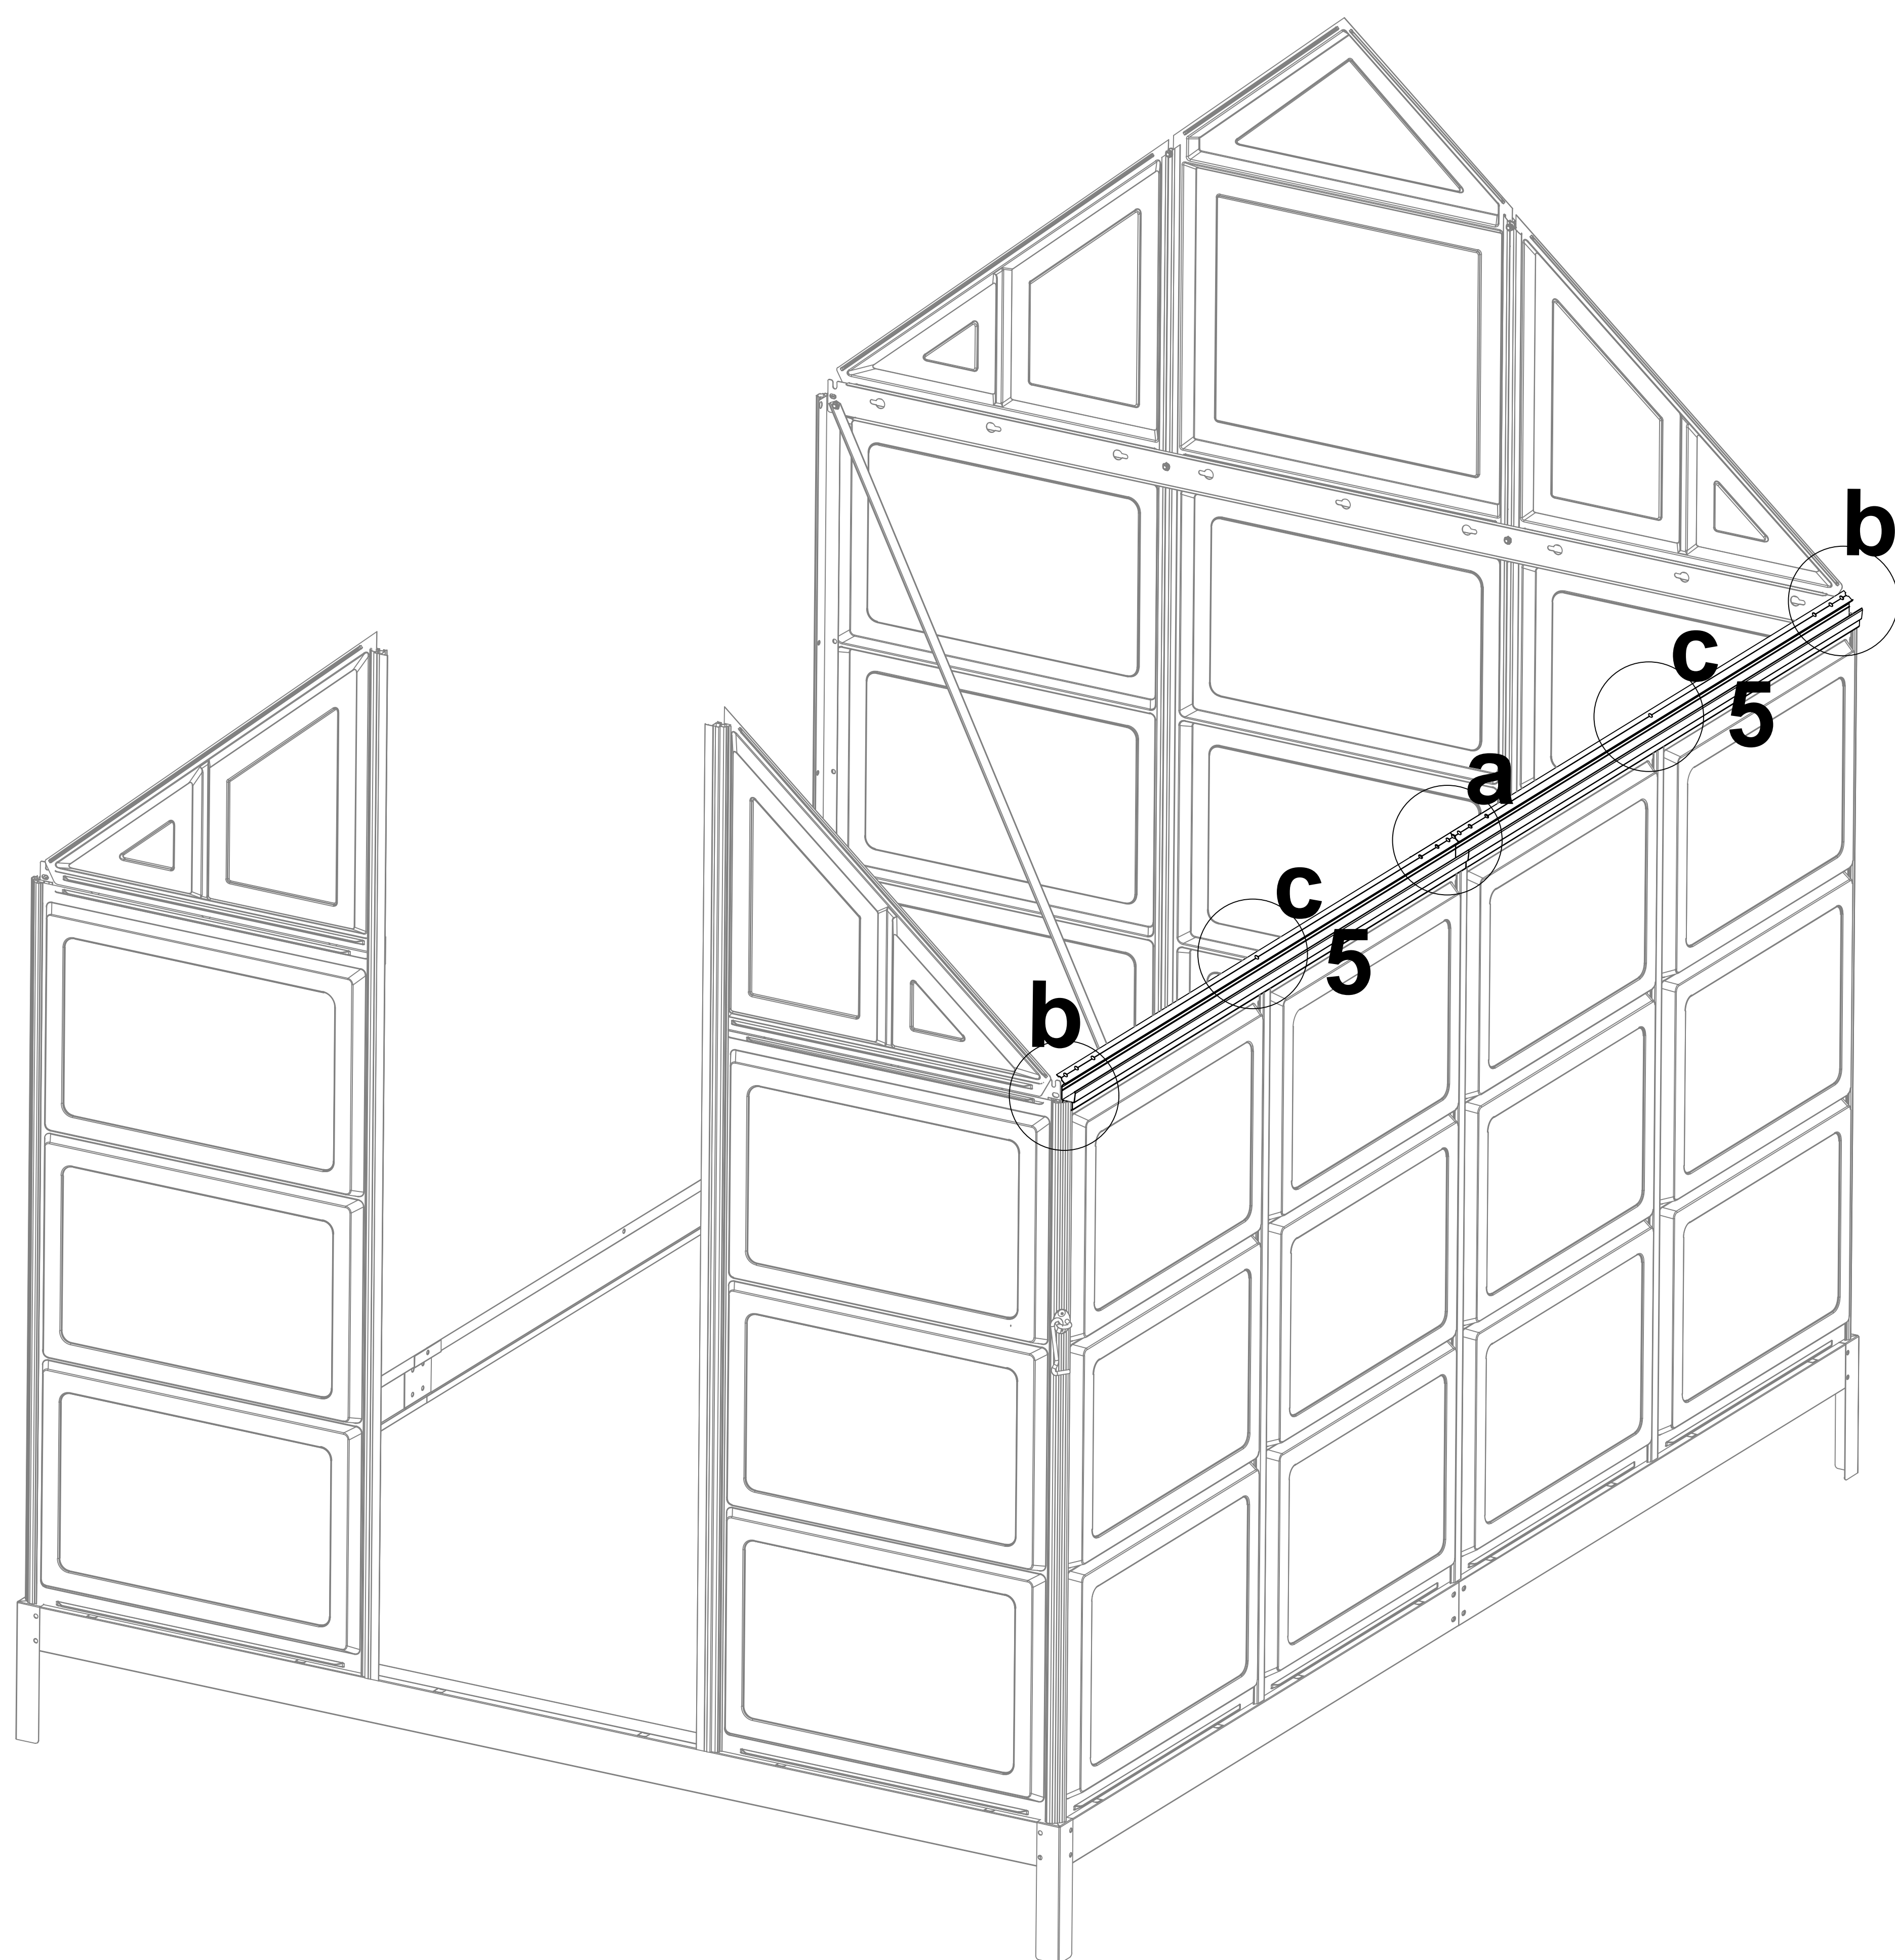


a

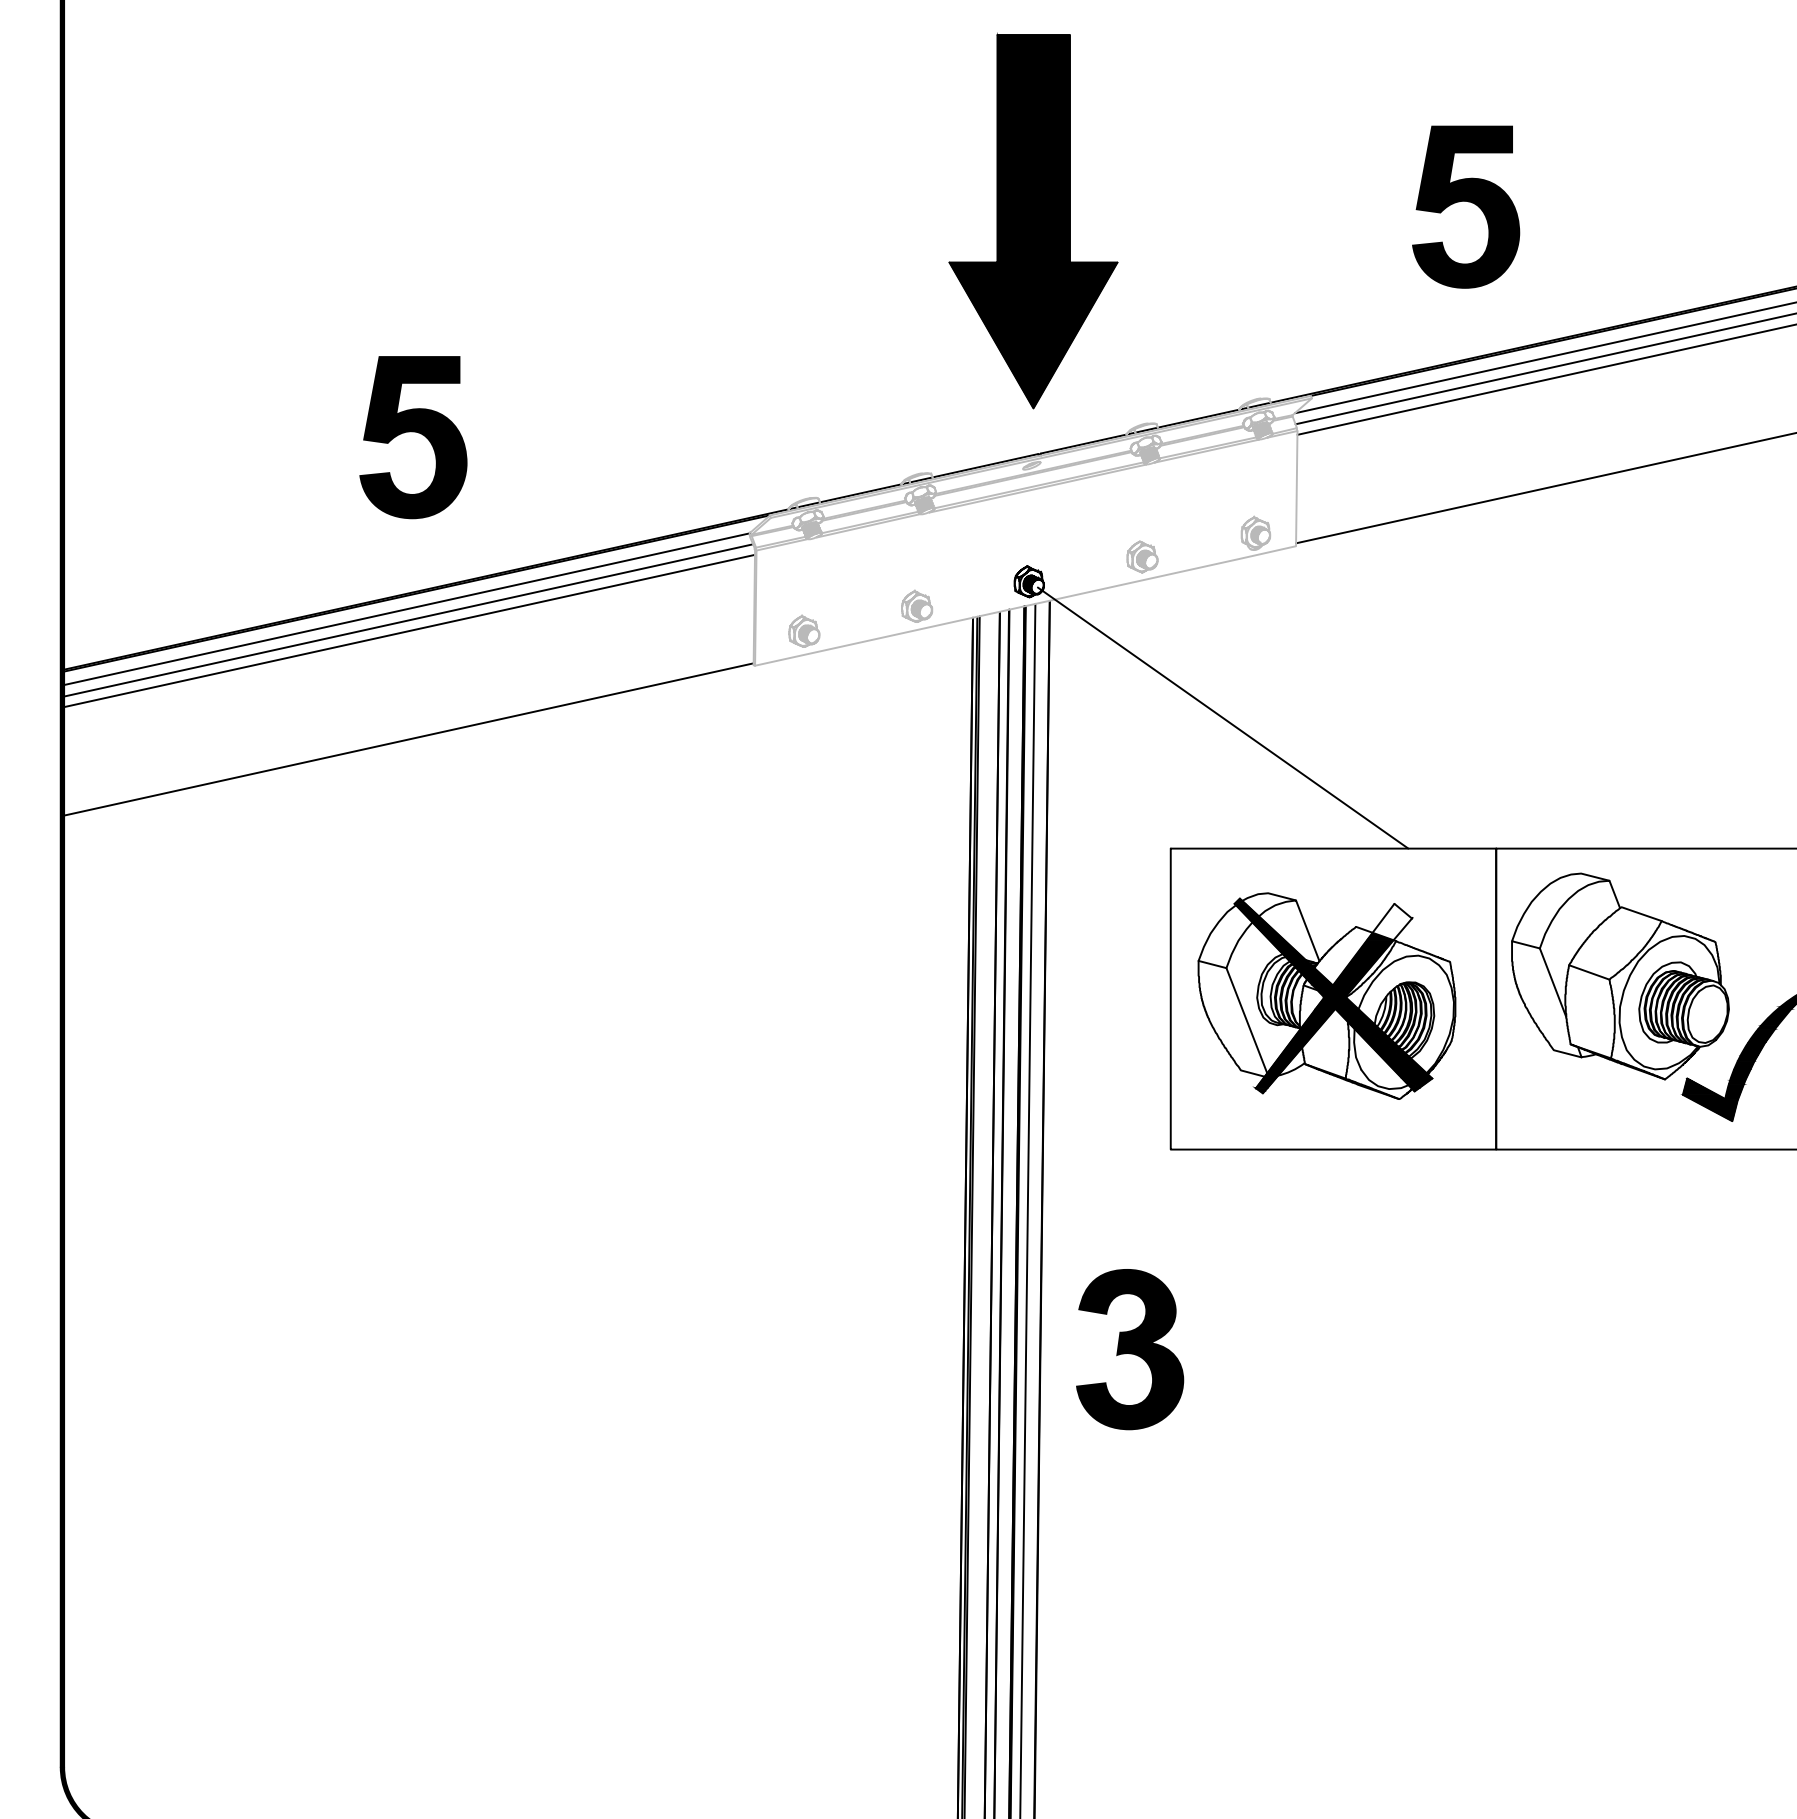


c


X2









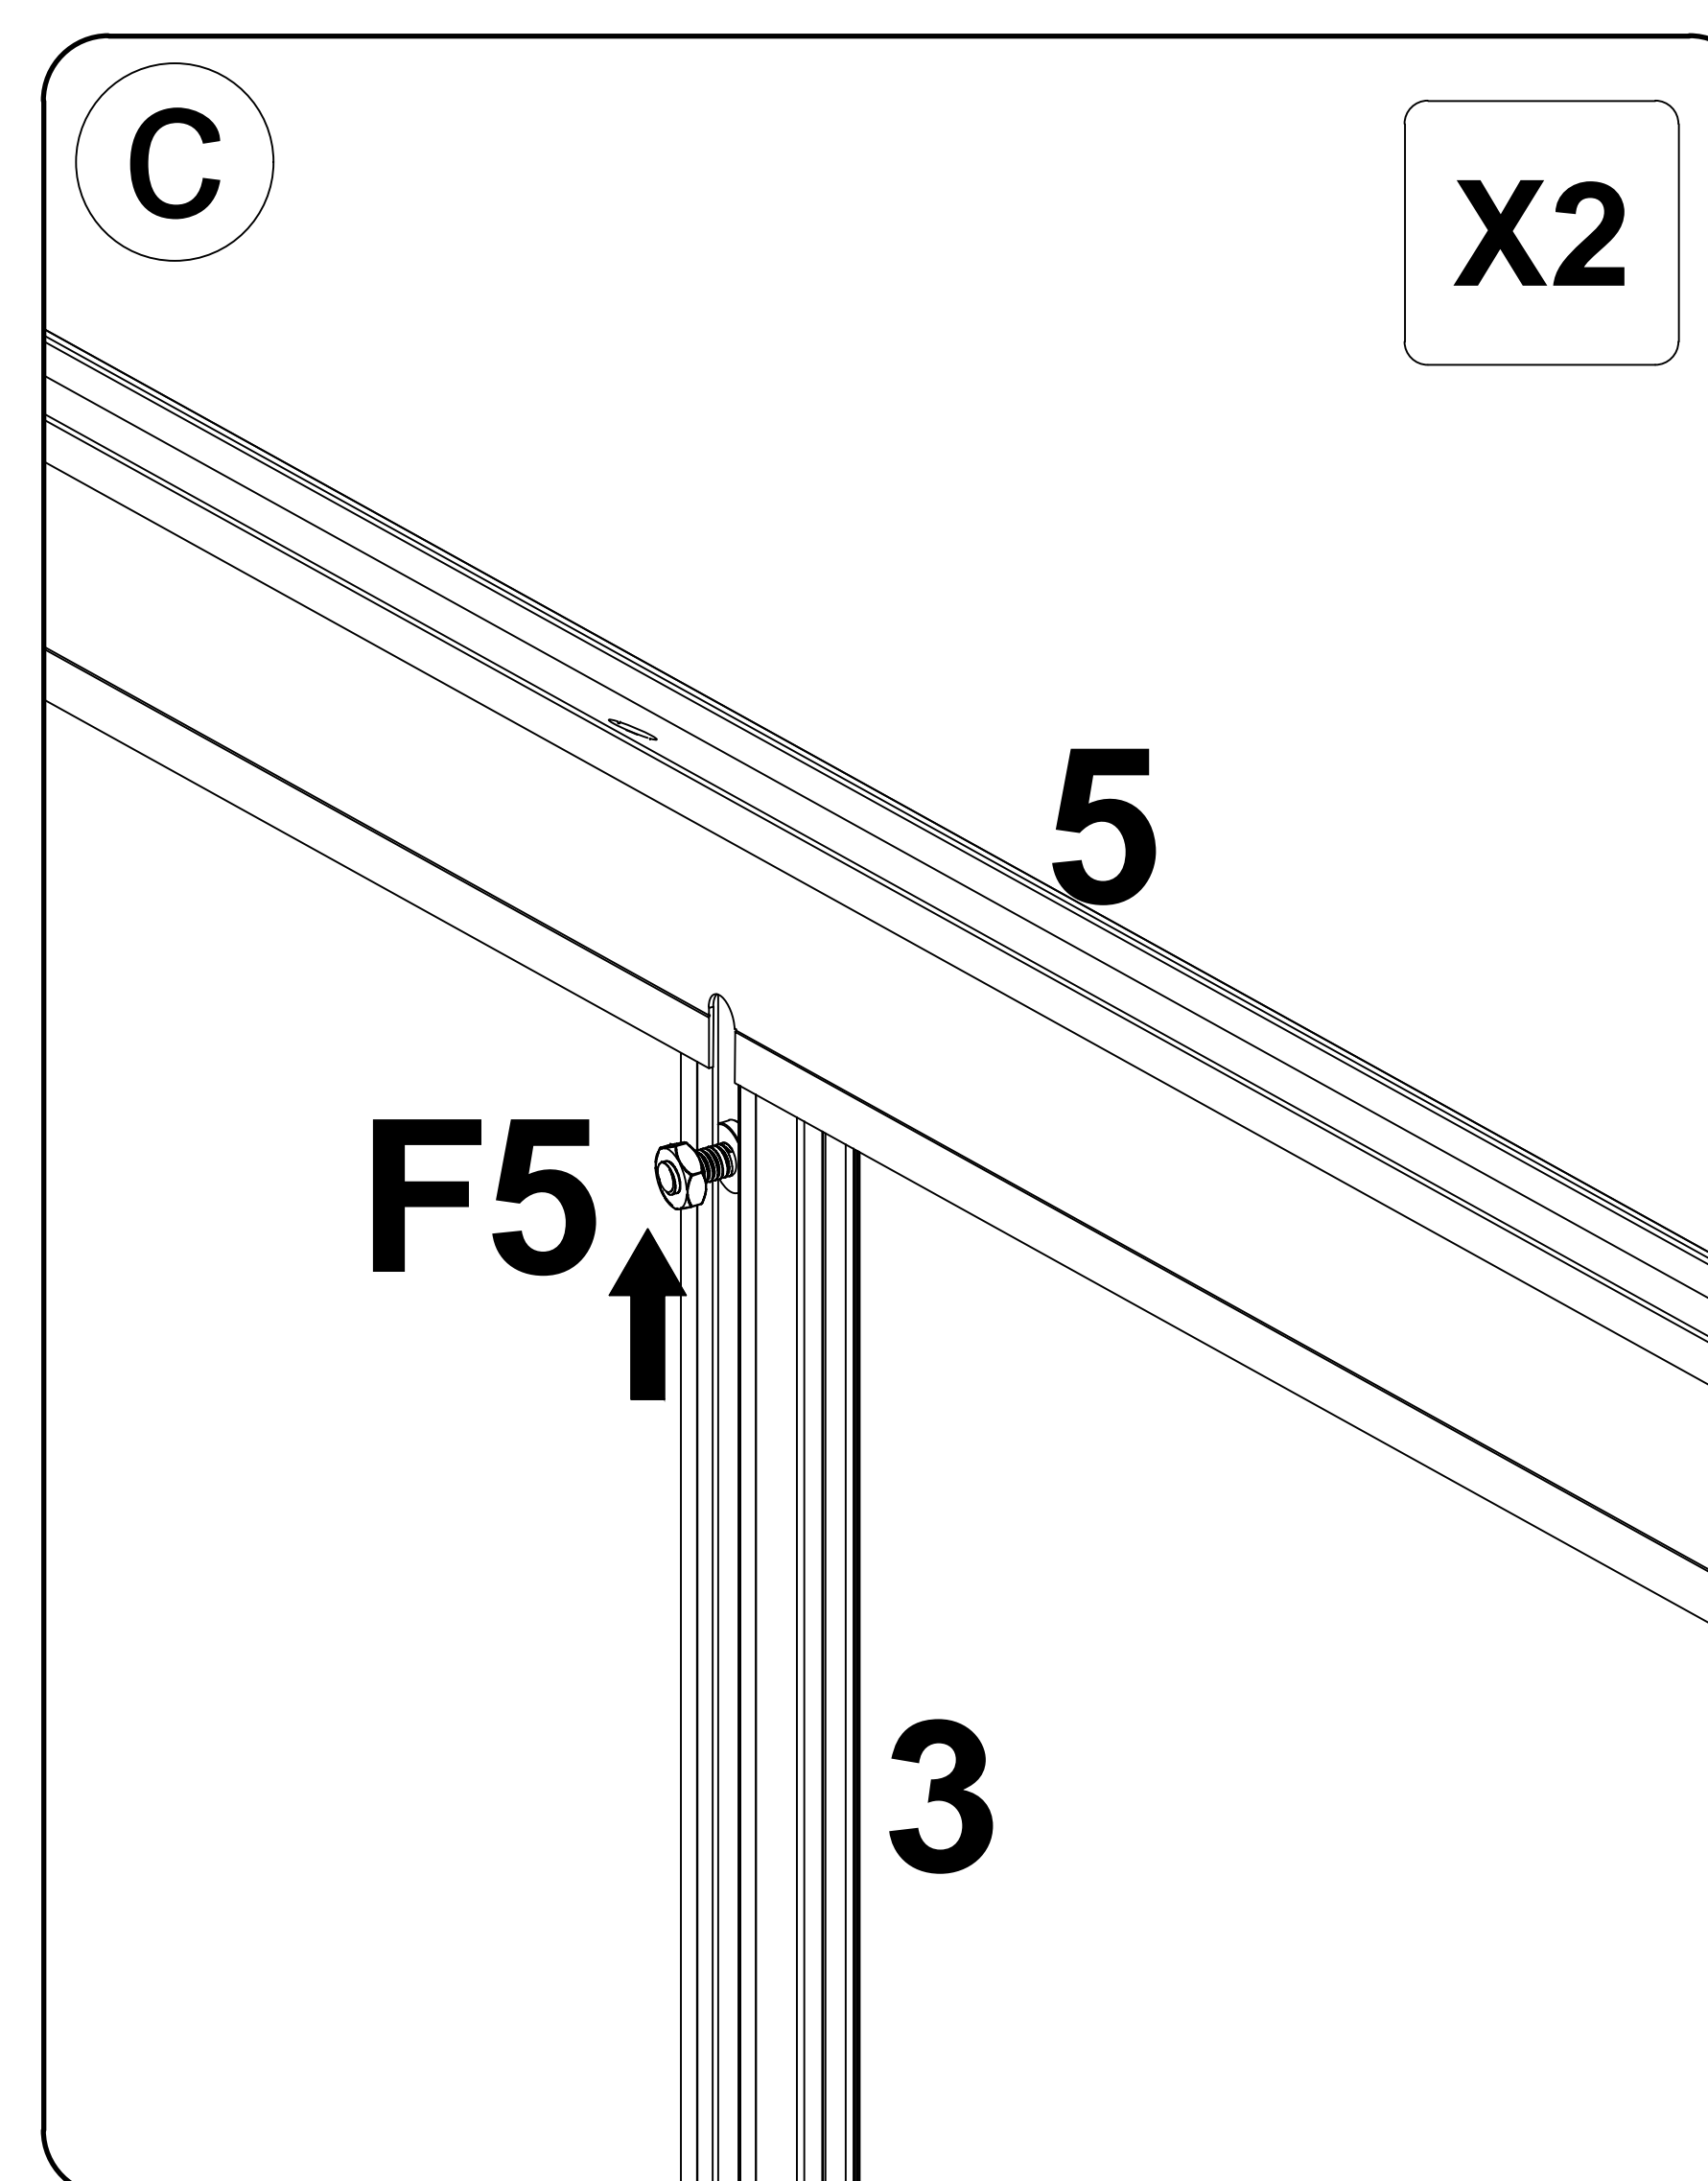


b





X2

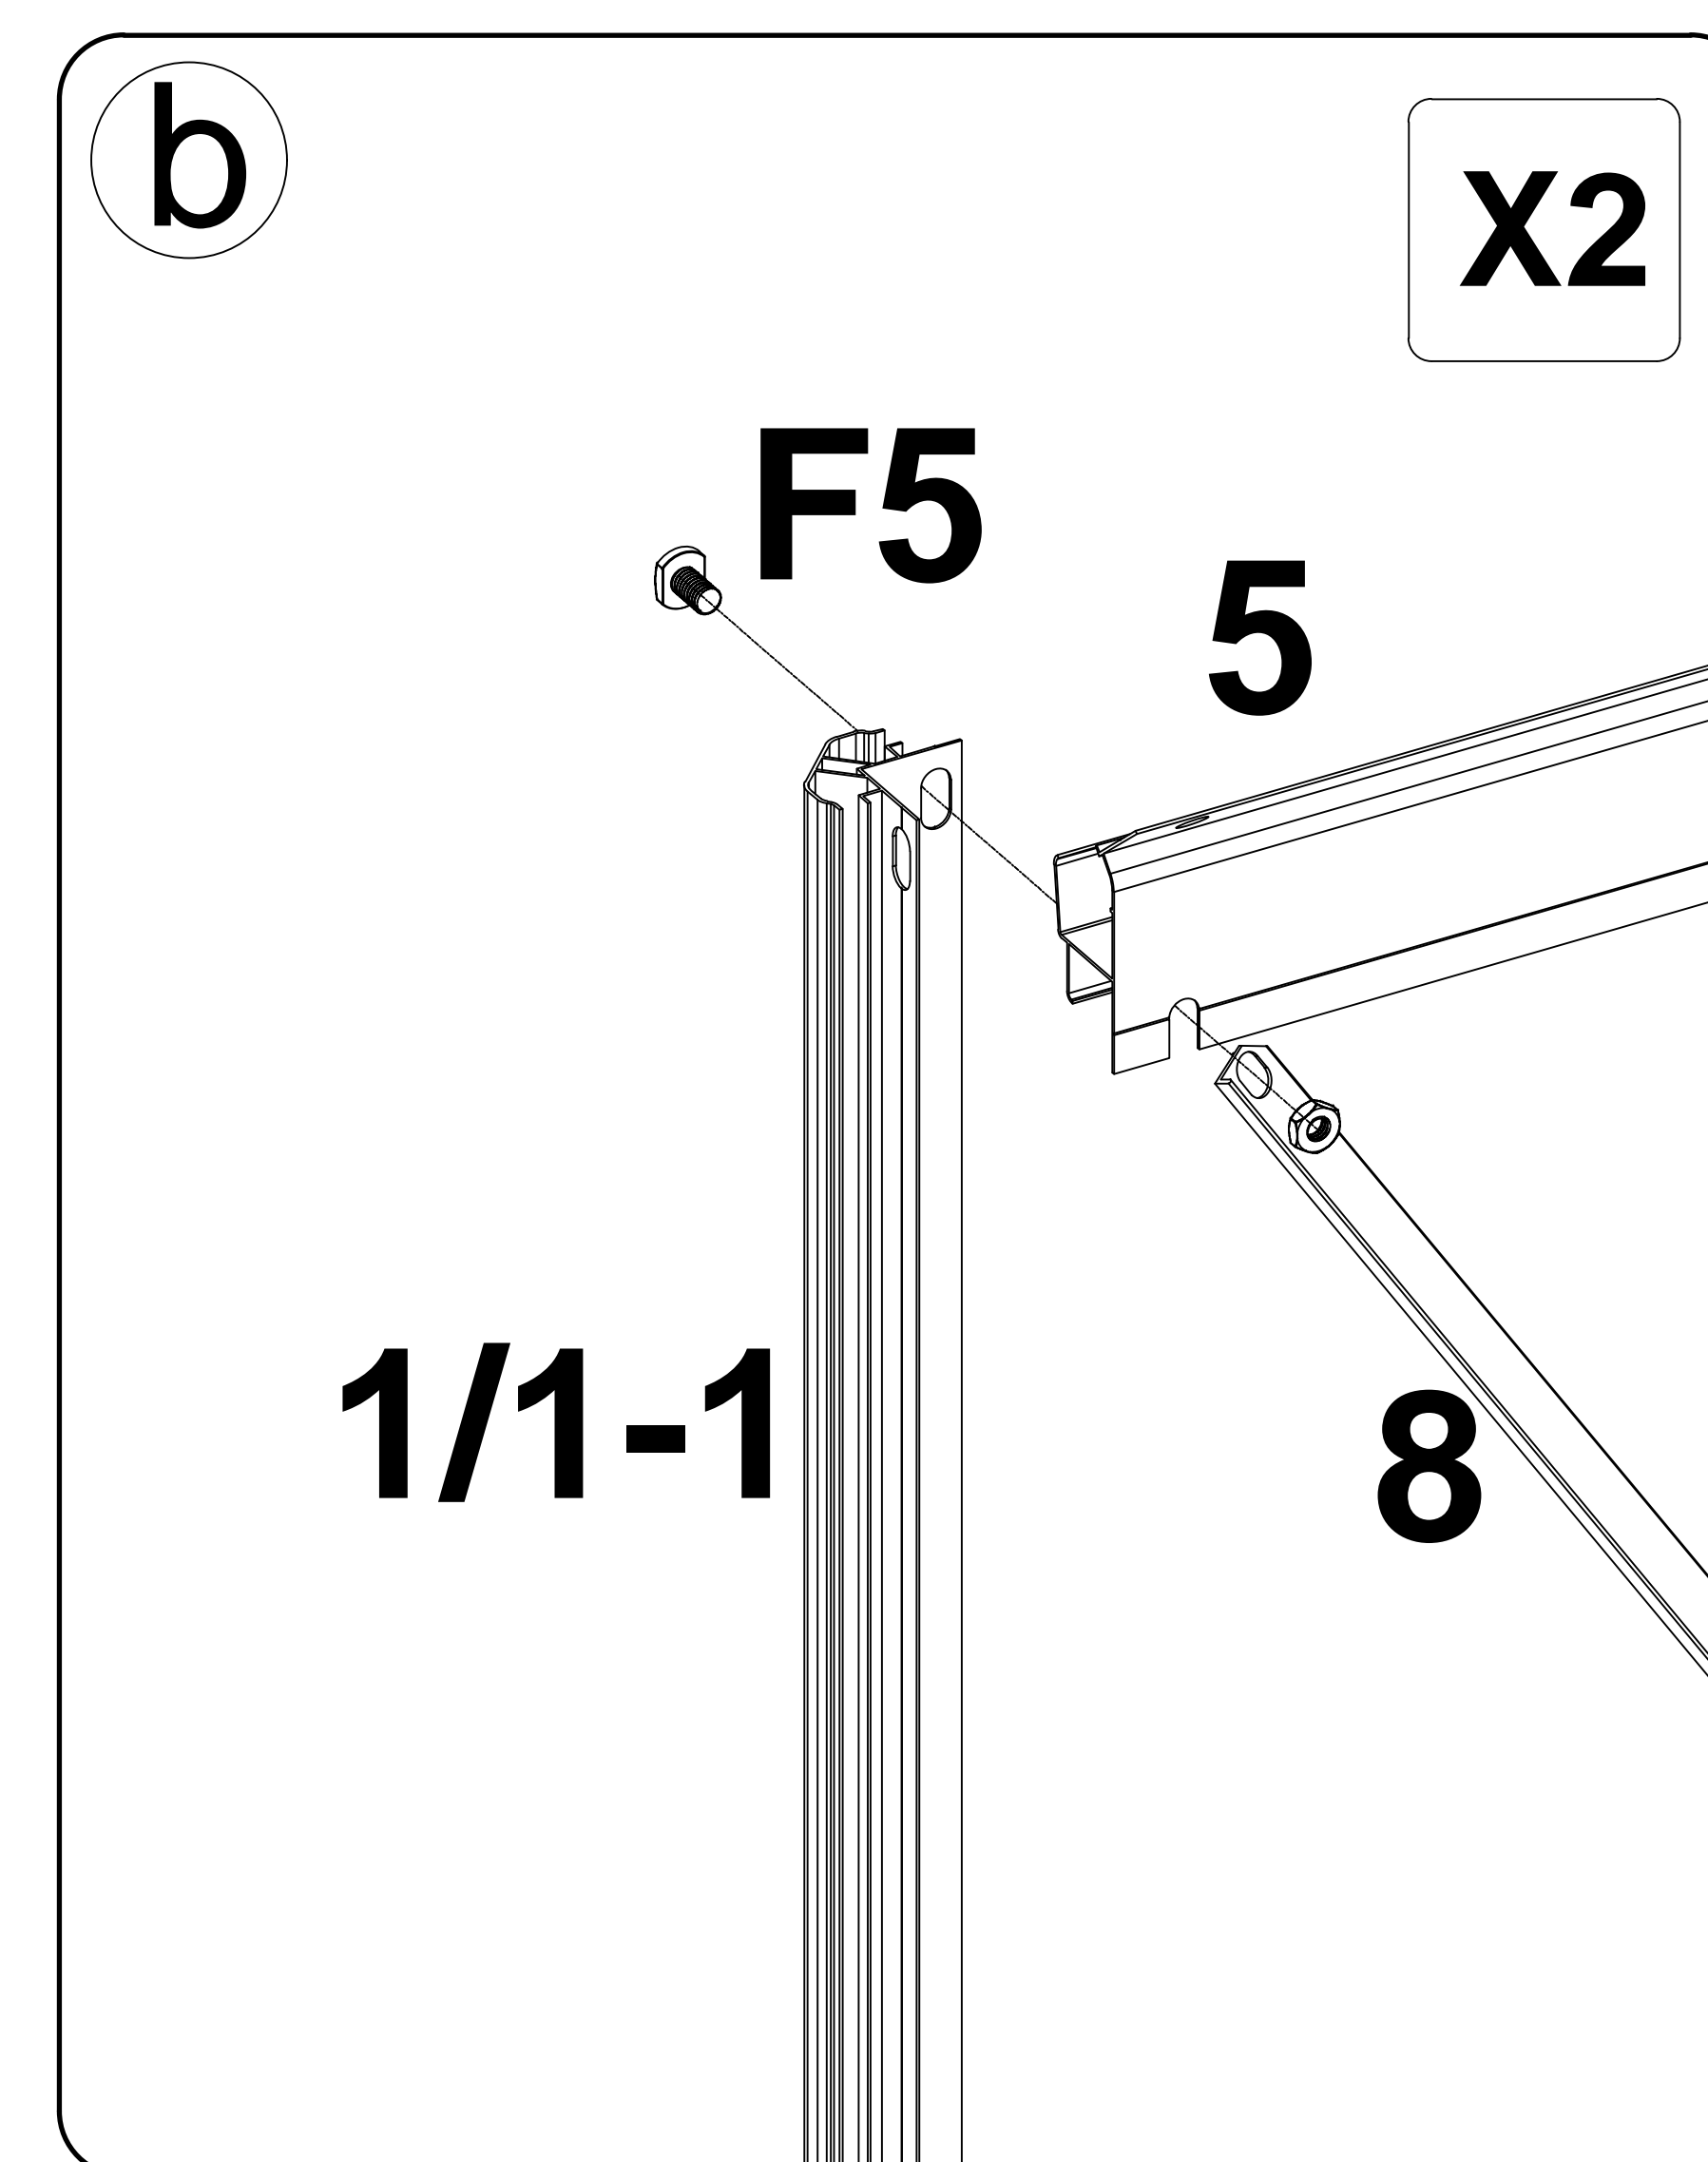

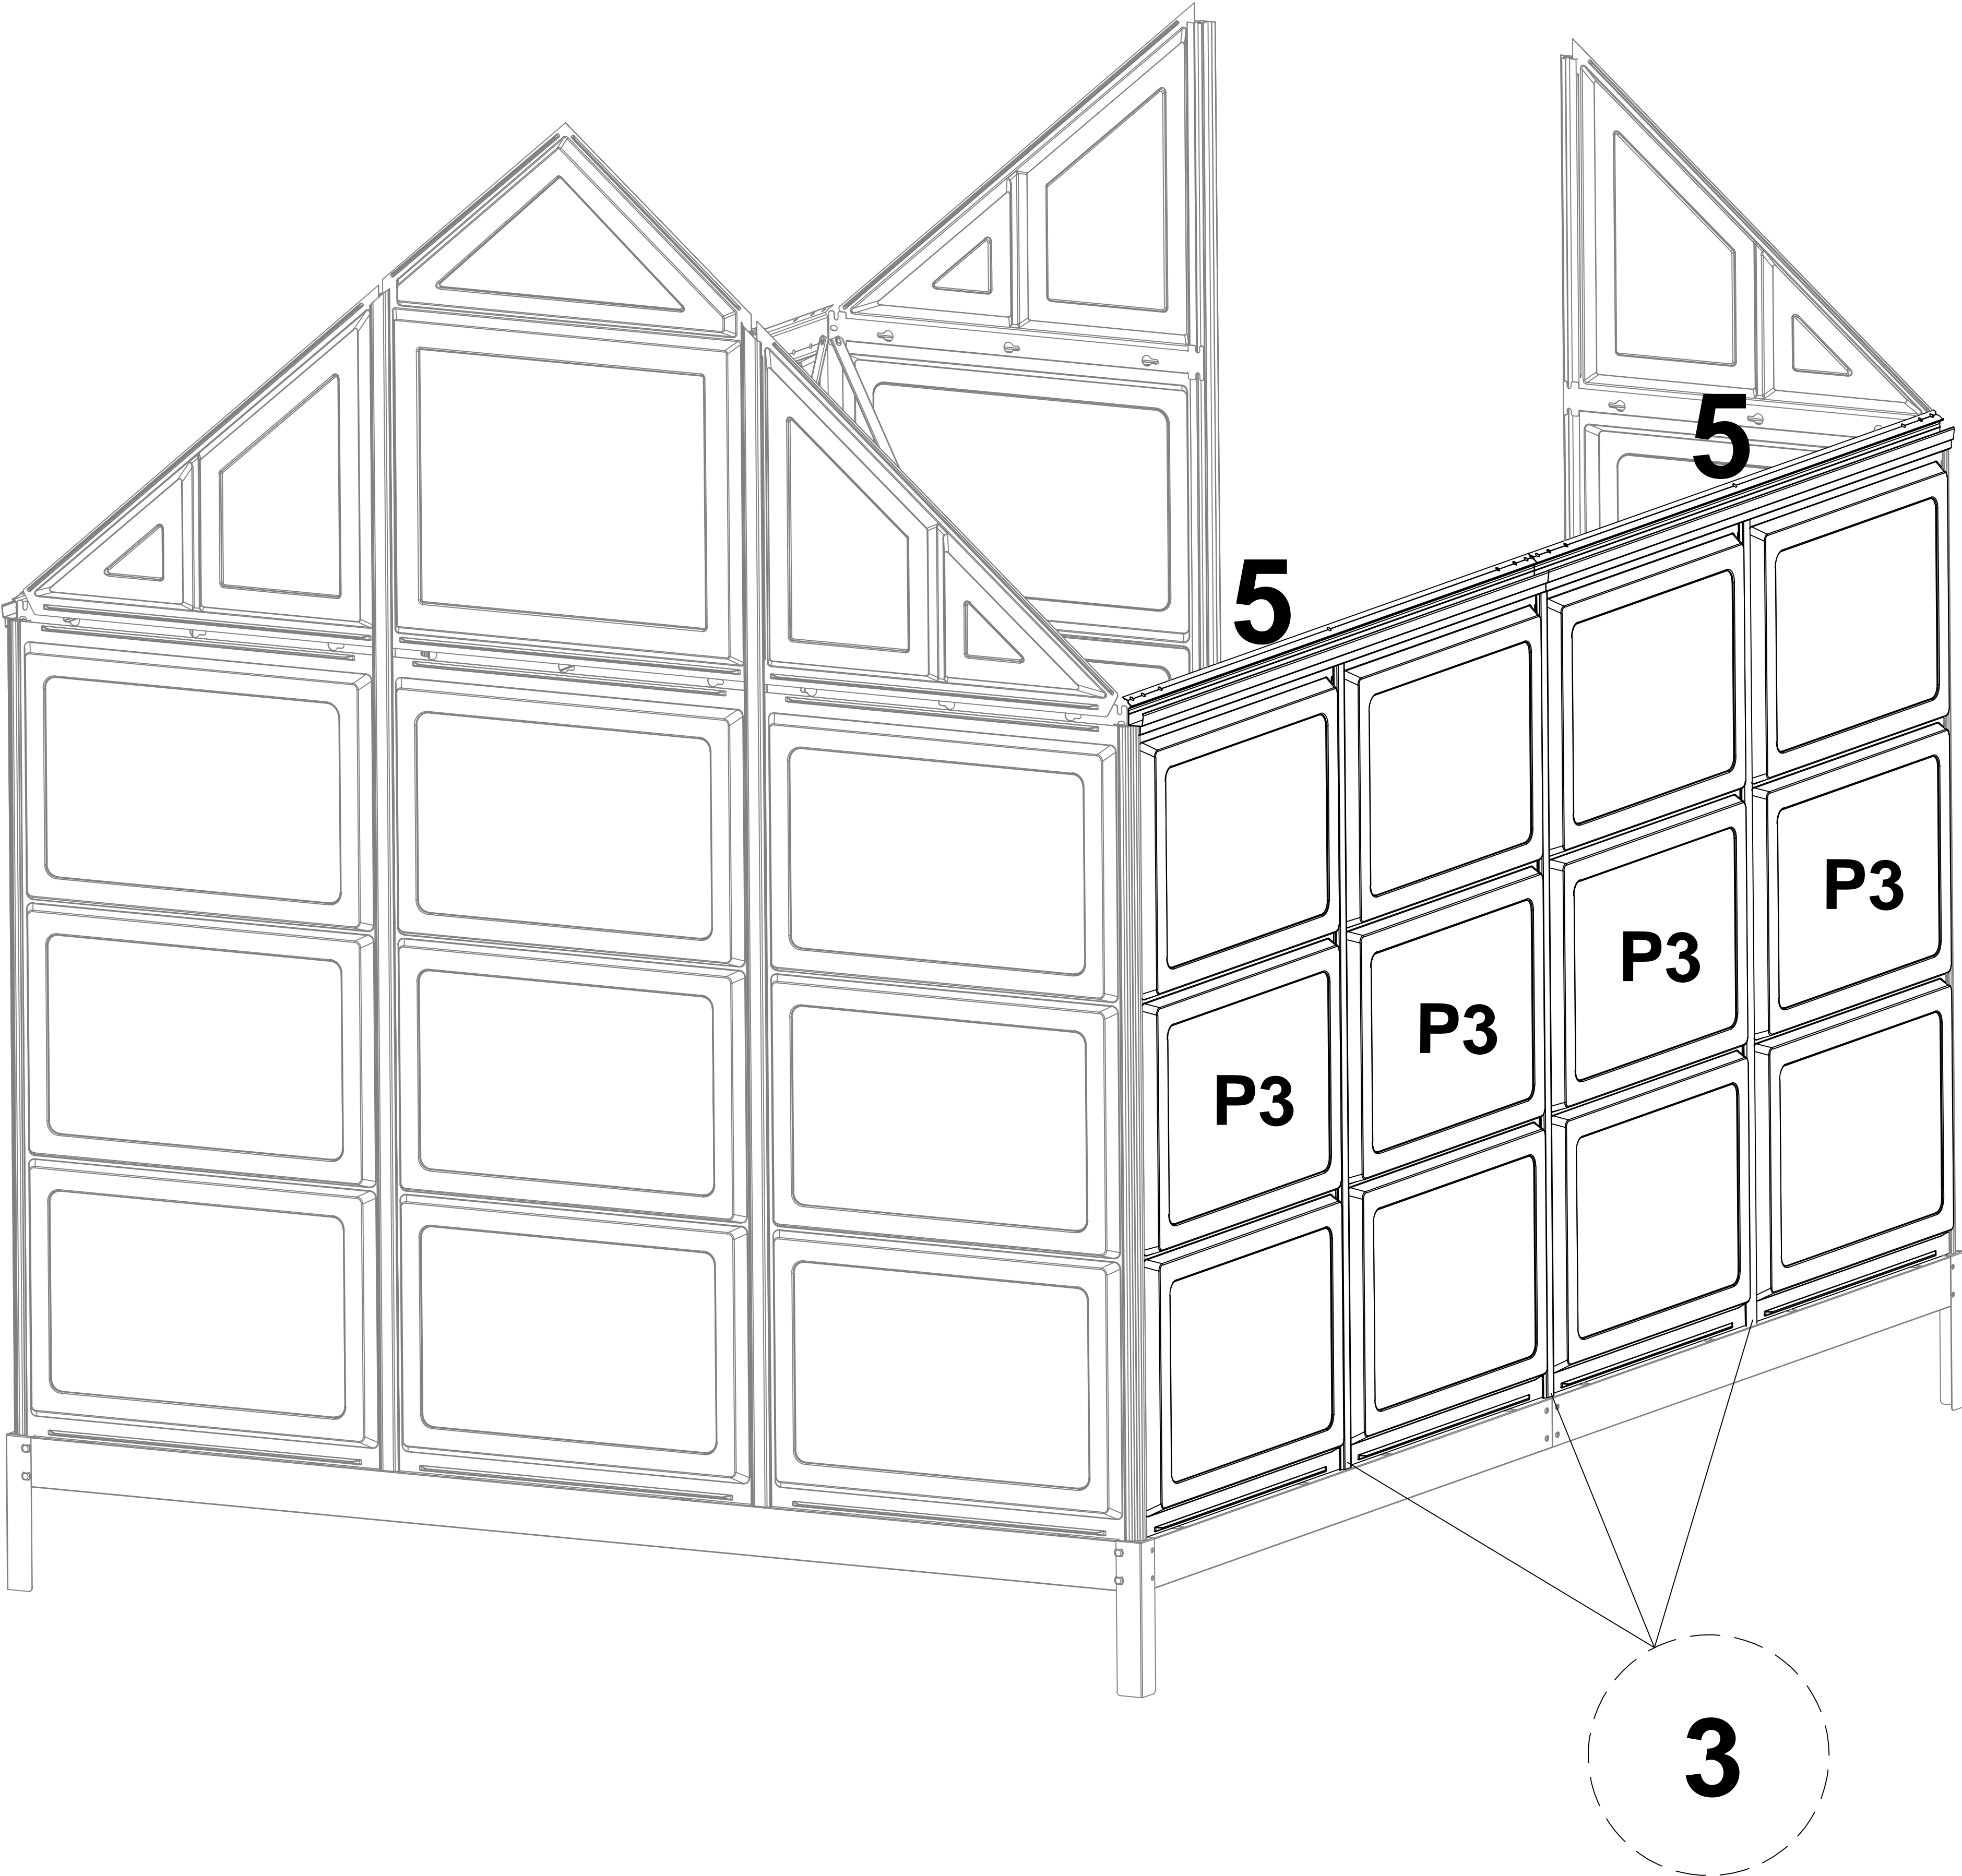


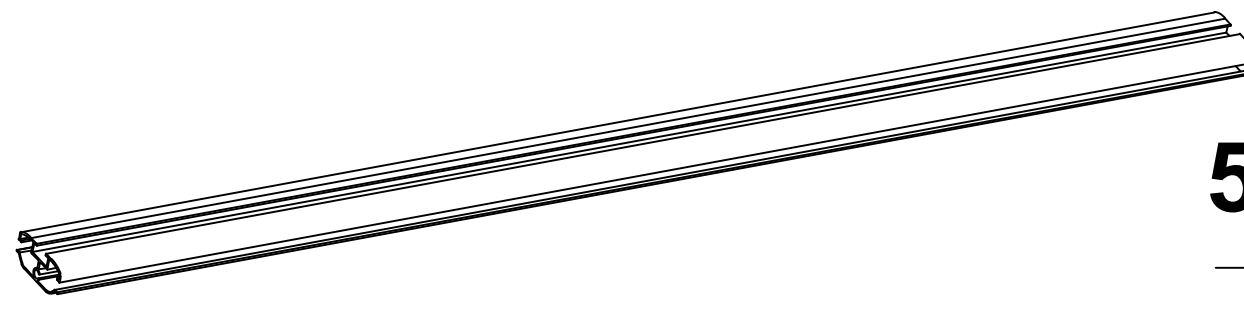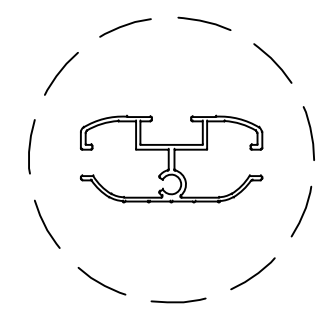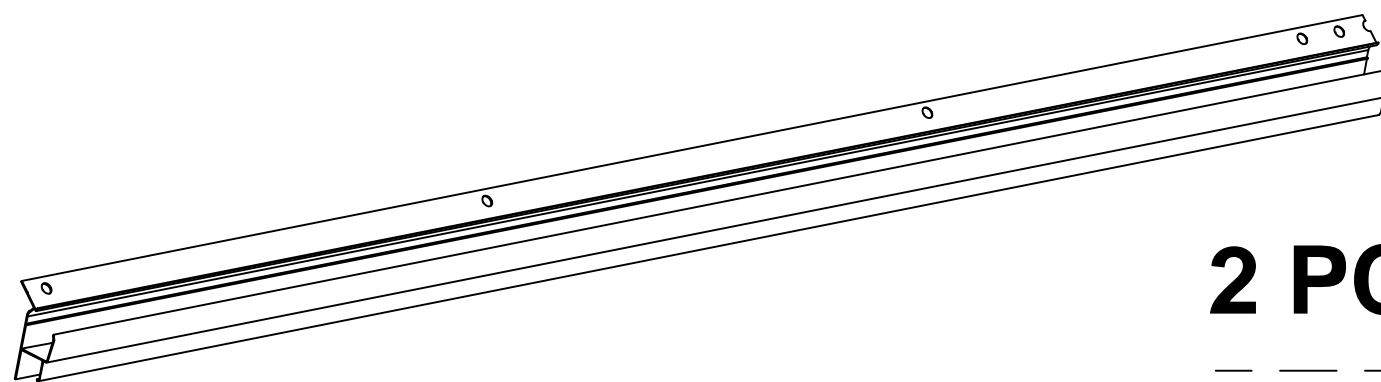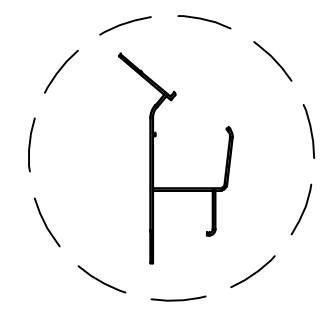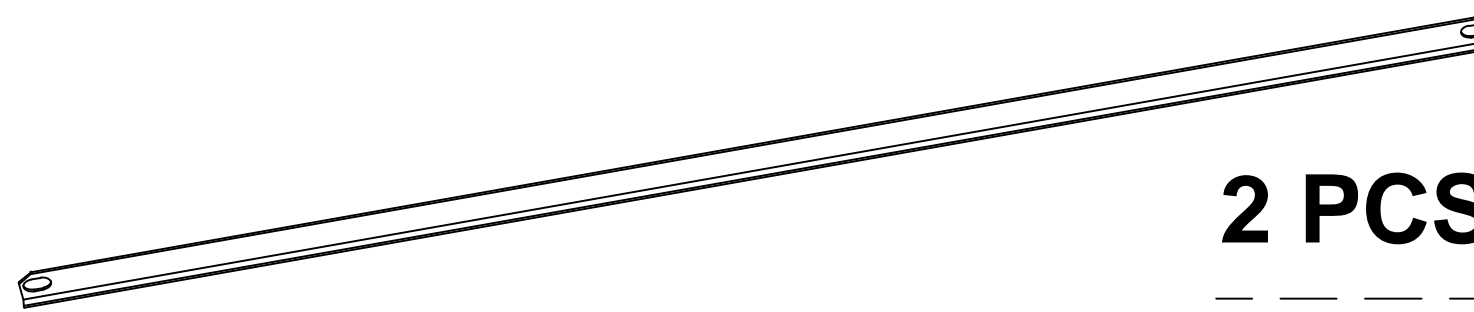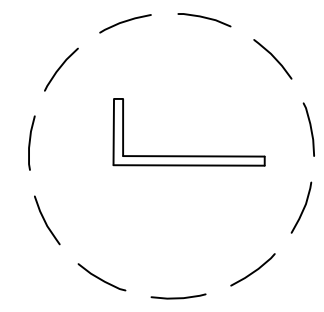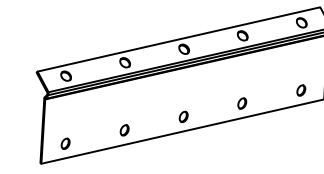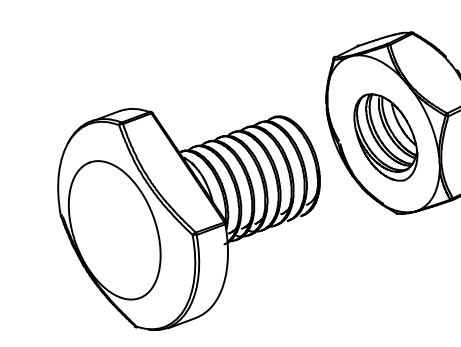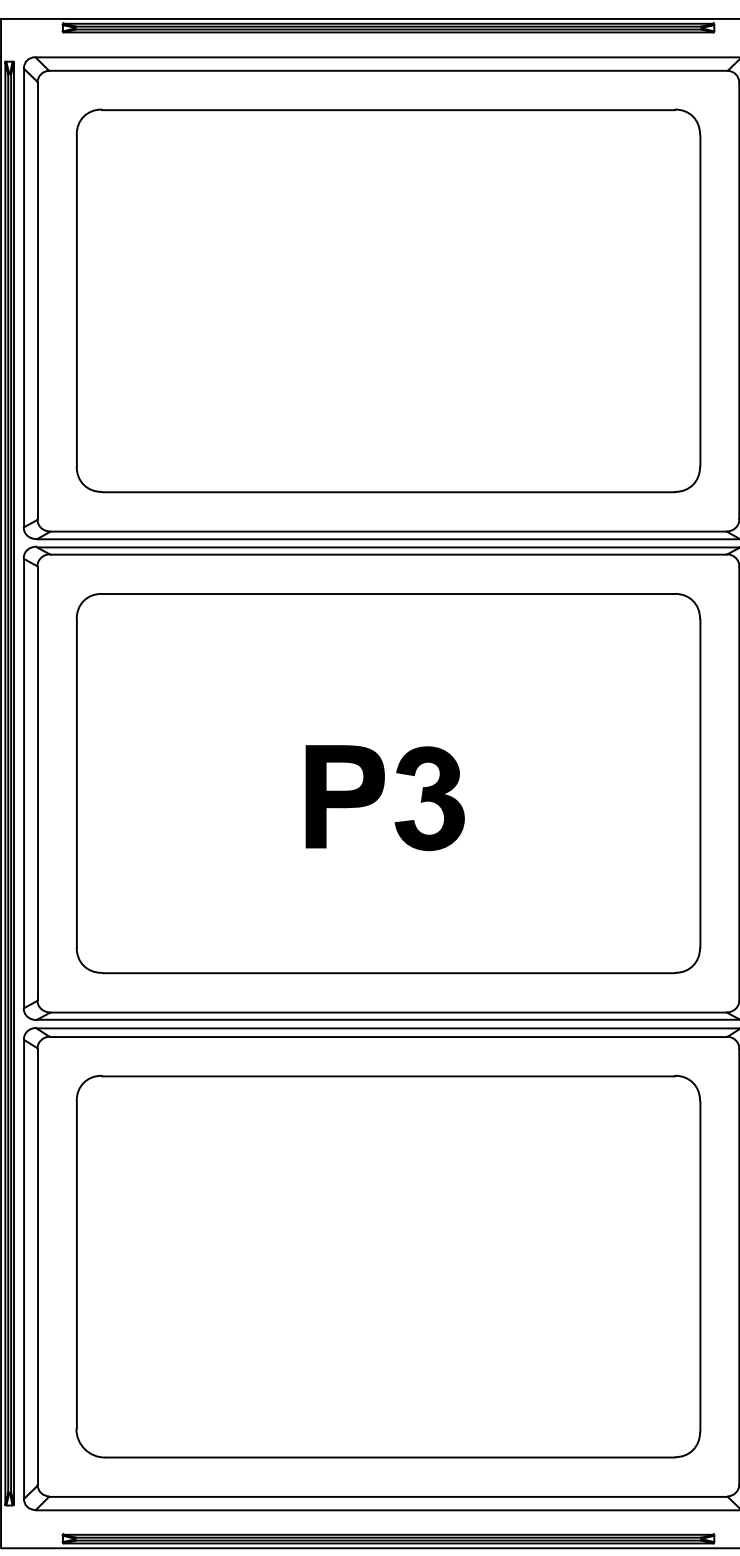			MM
3		5 PCS	 1170
5-1		2 PCS	 1788
8		2 PCS	 1300
28		1 PCS	
F5		16 PCS	
			x4



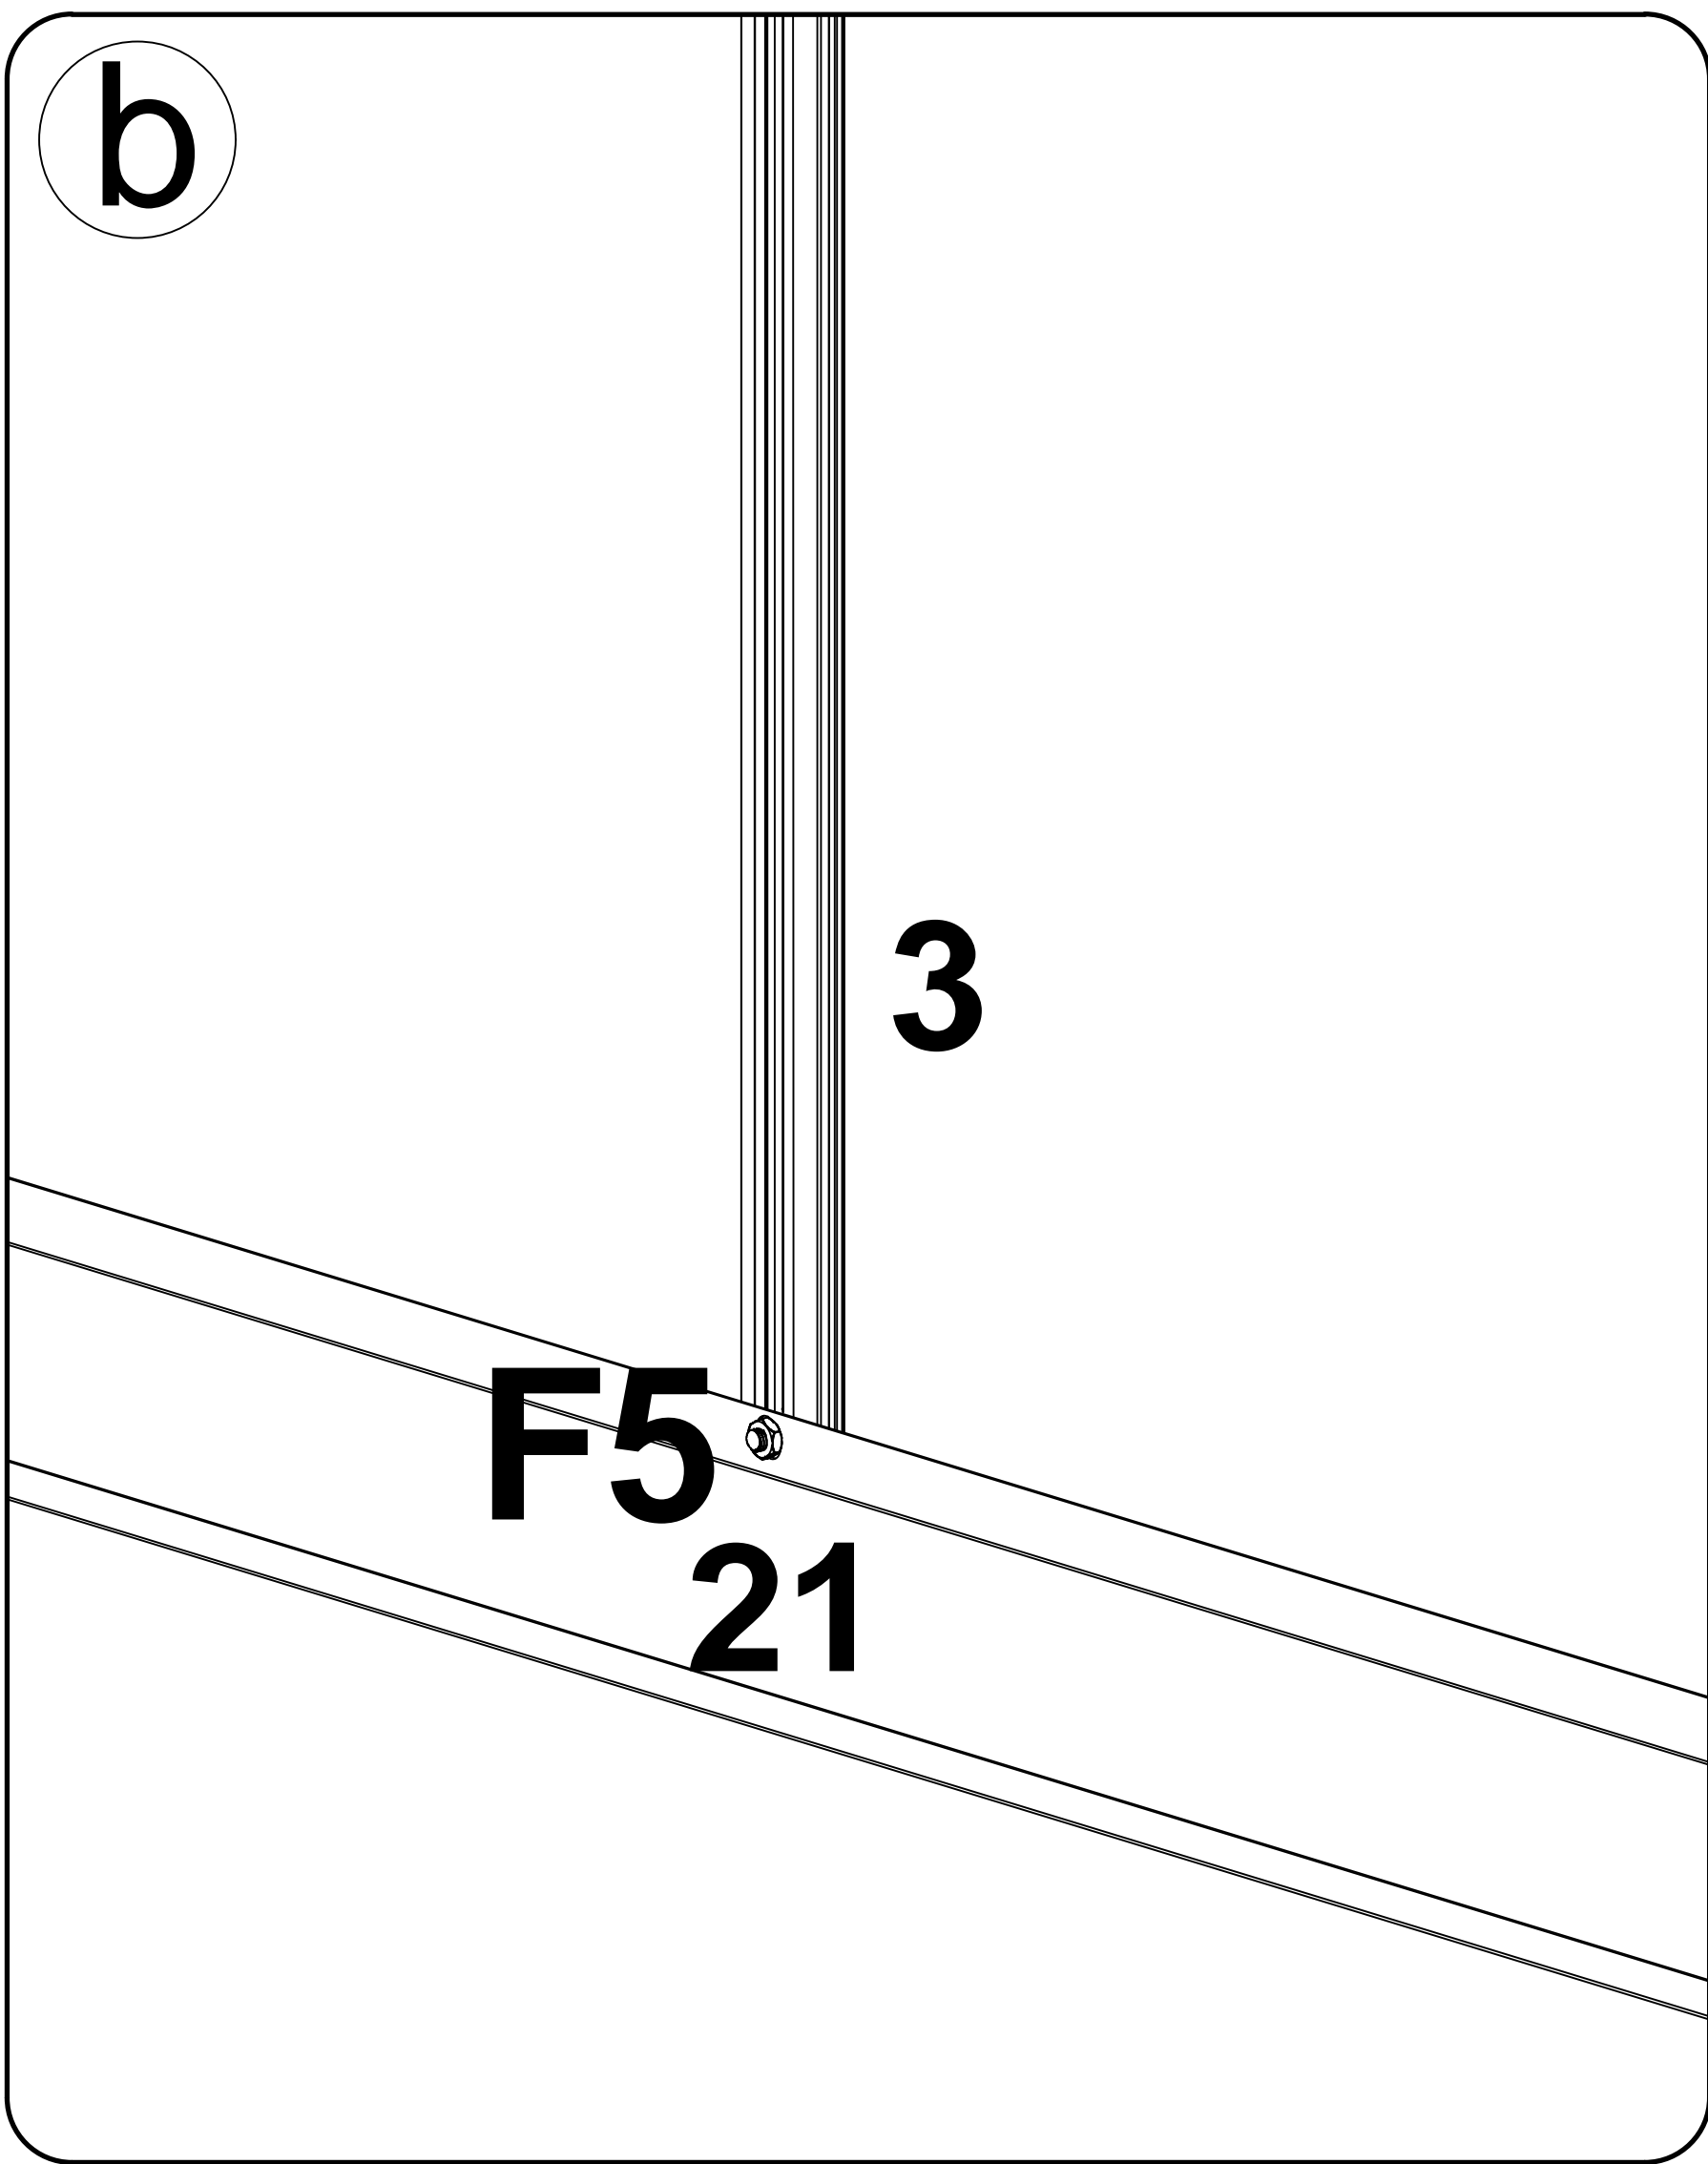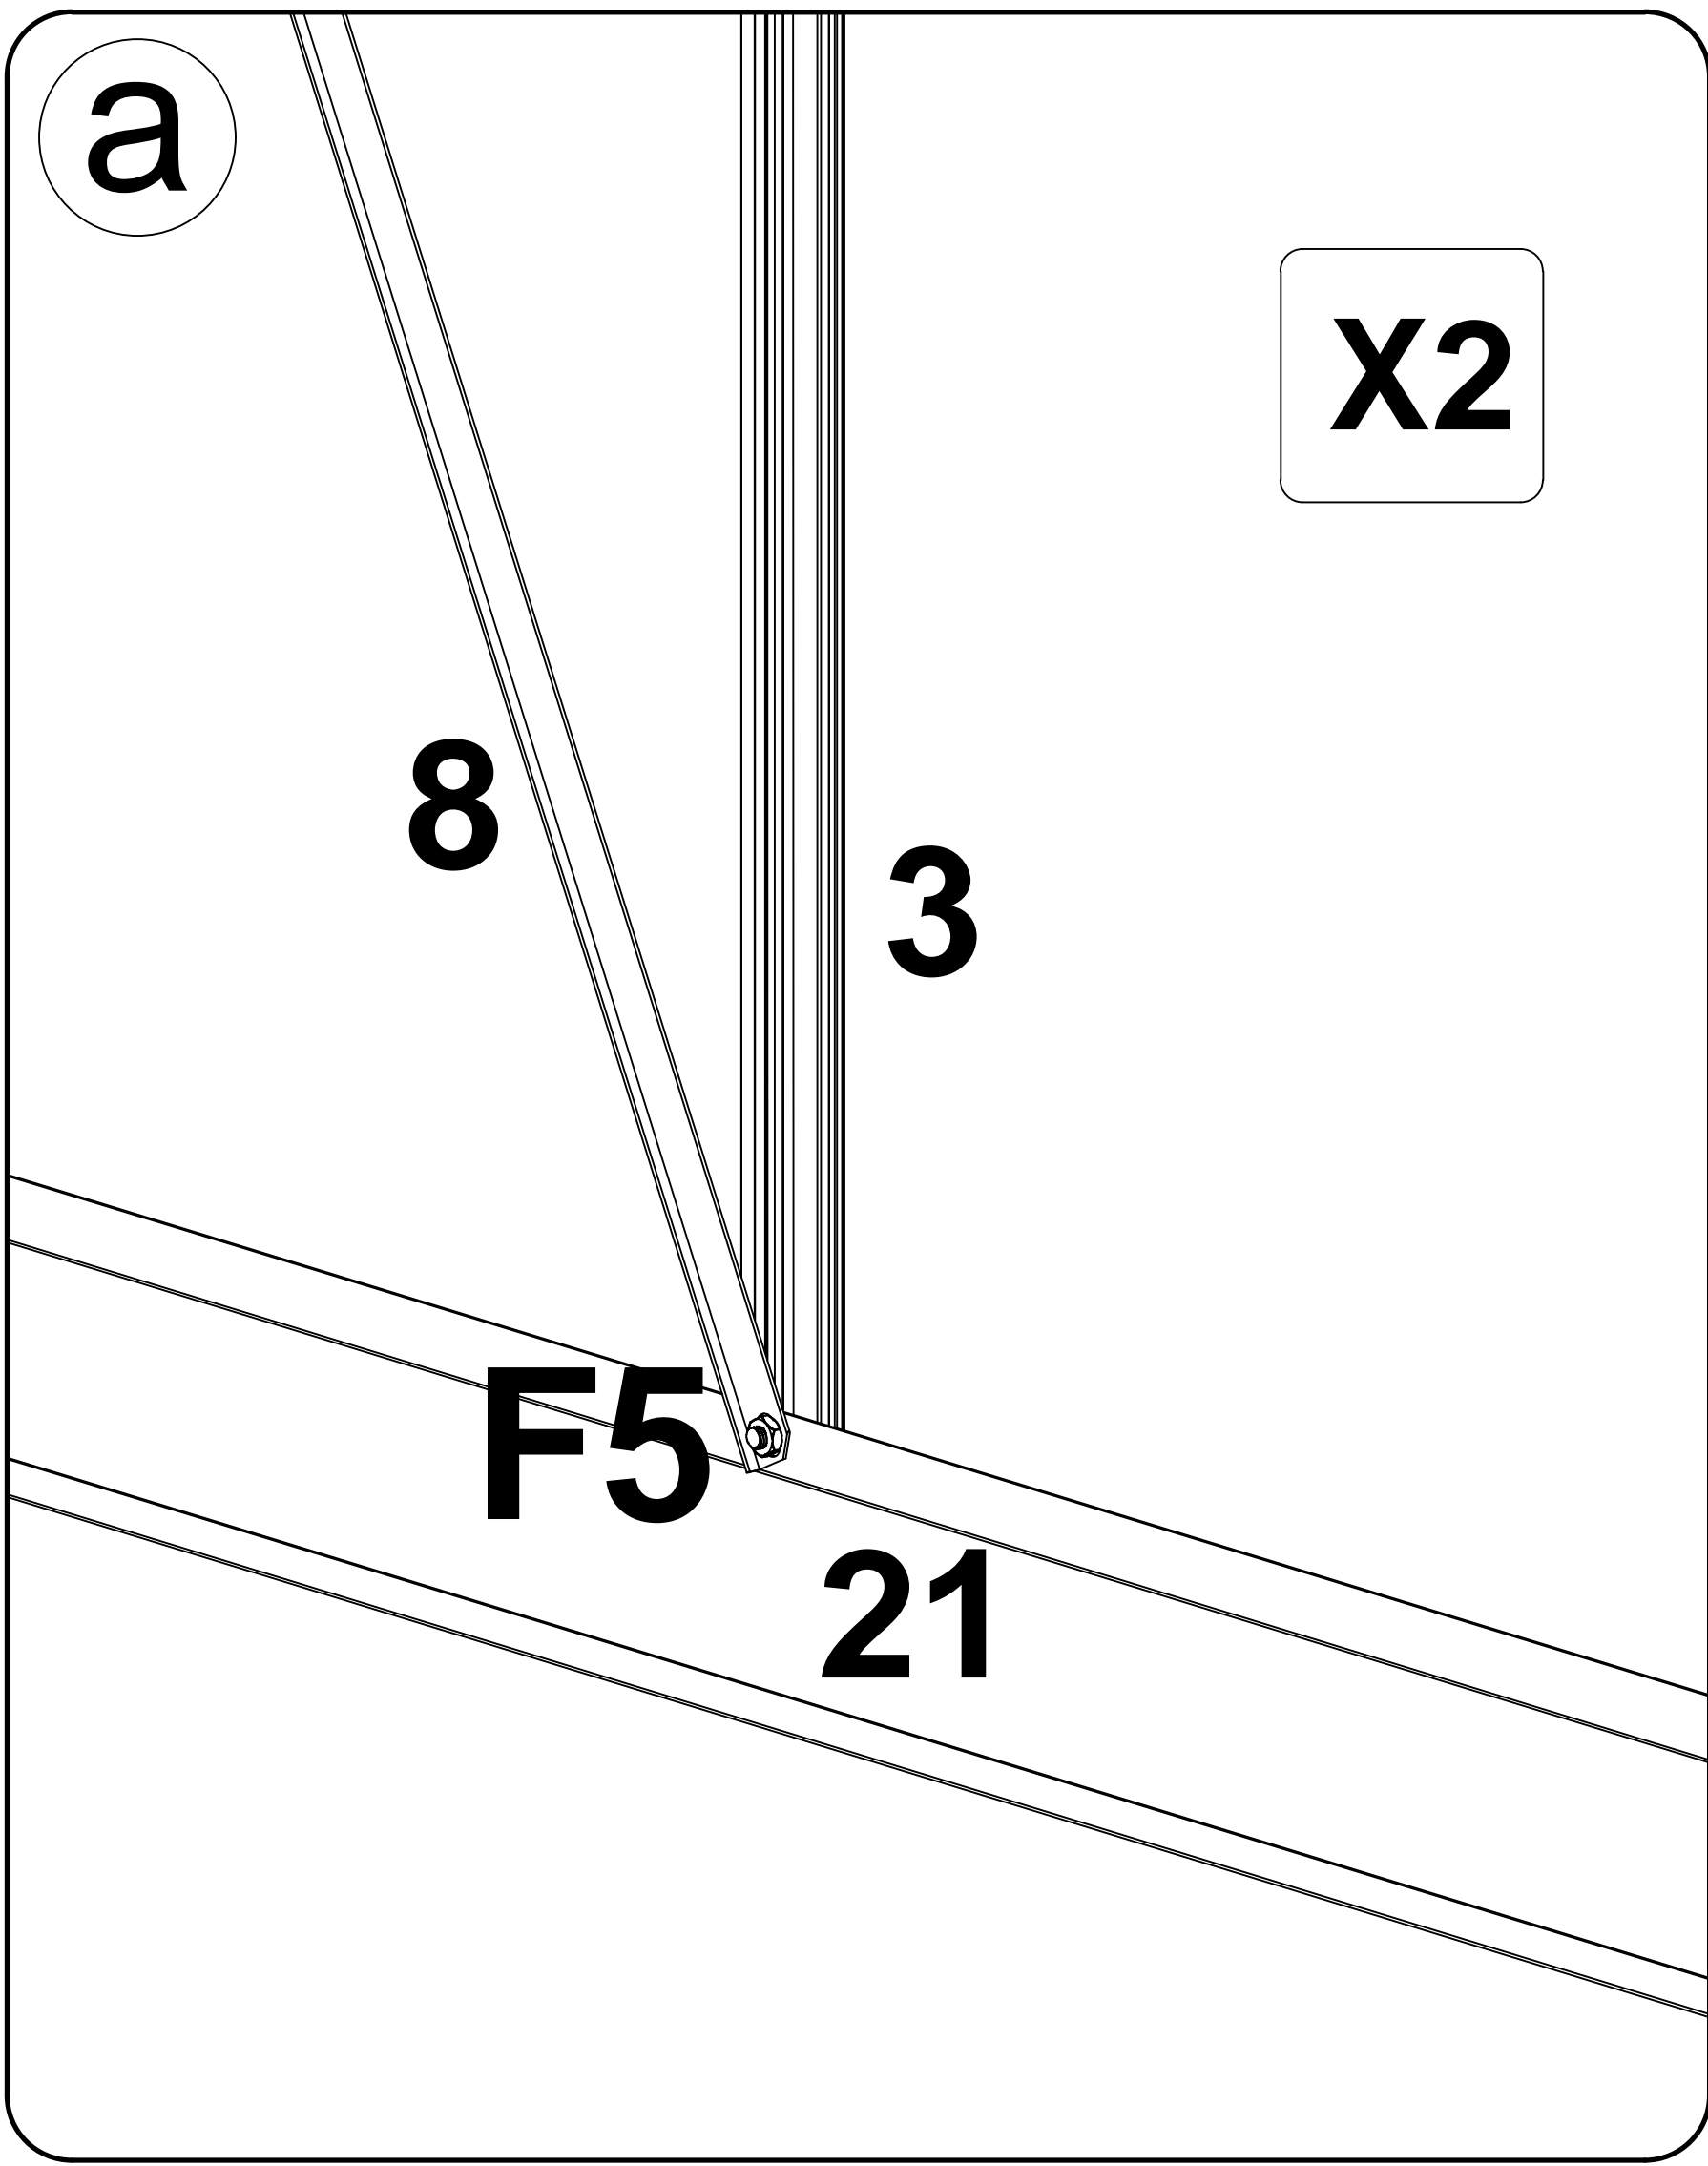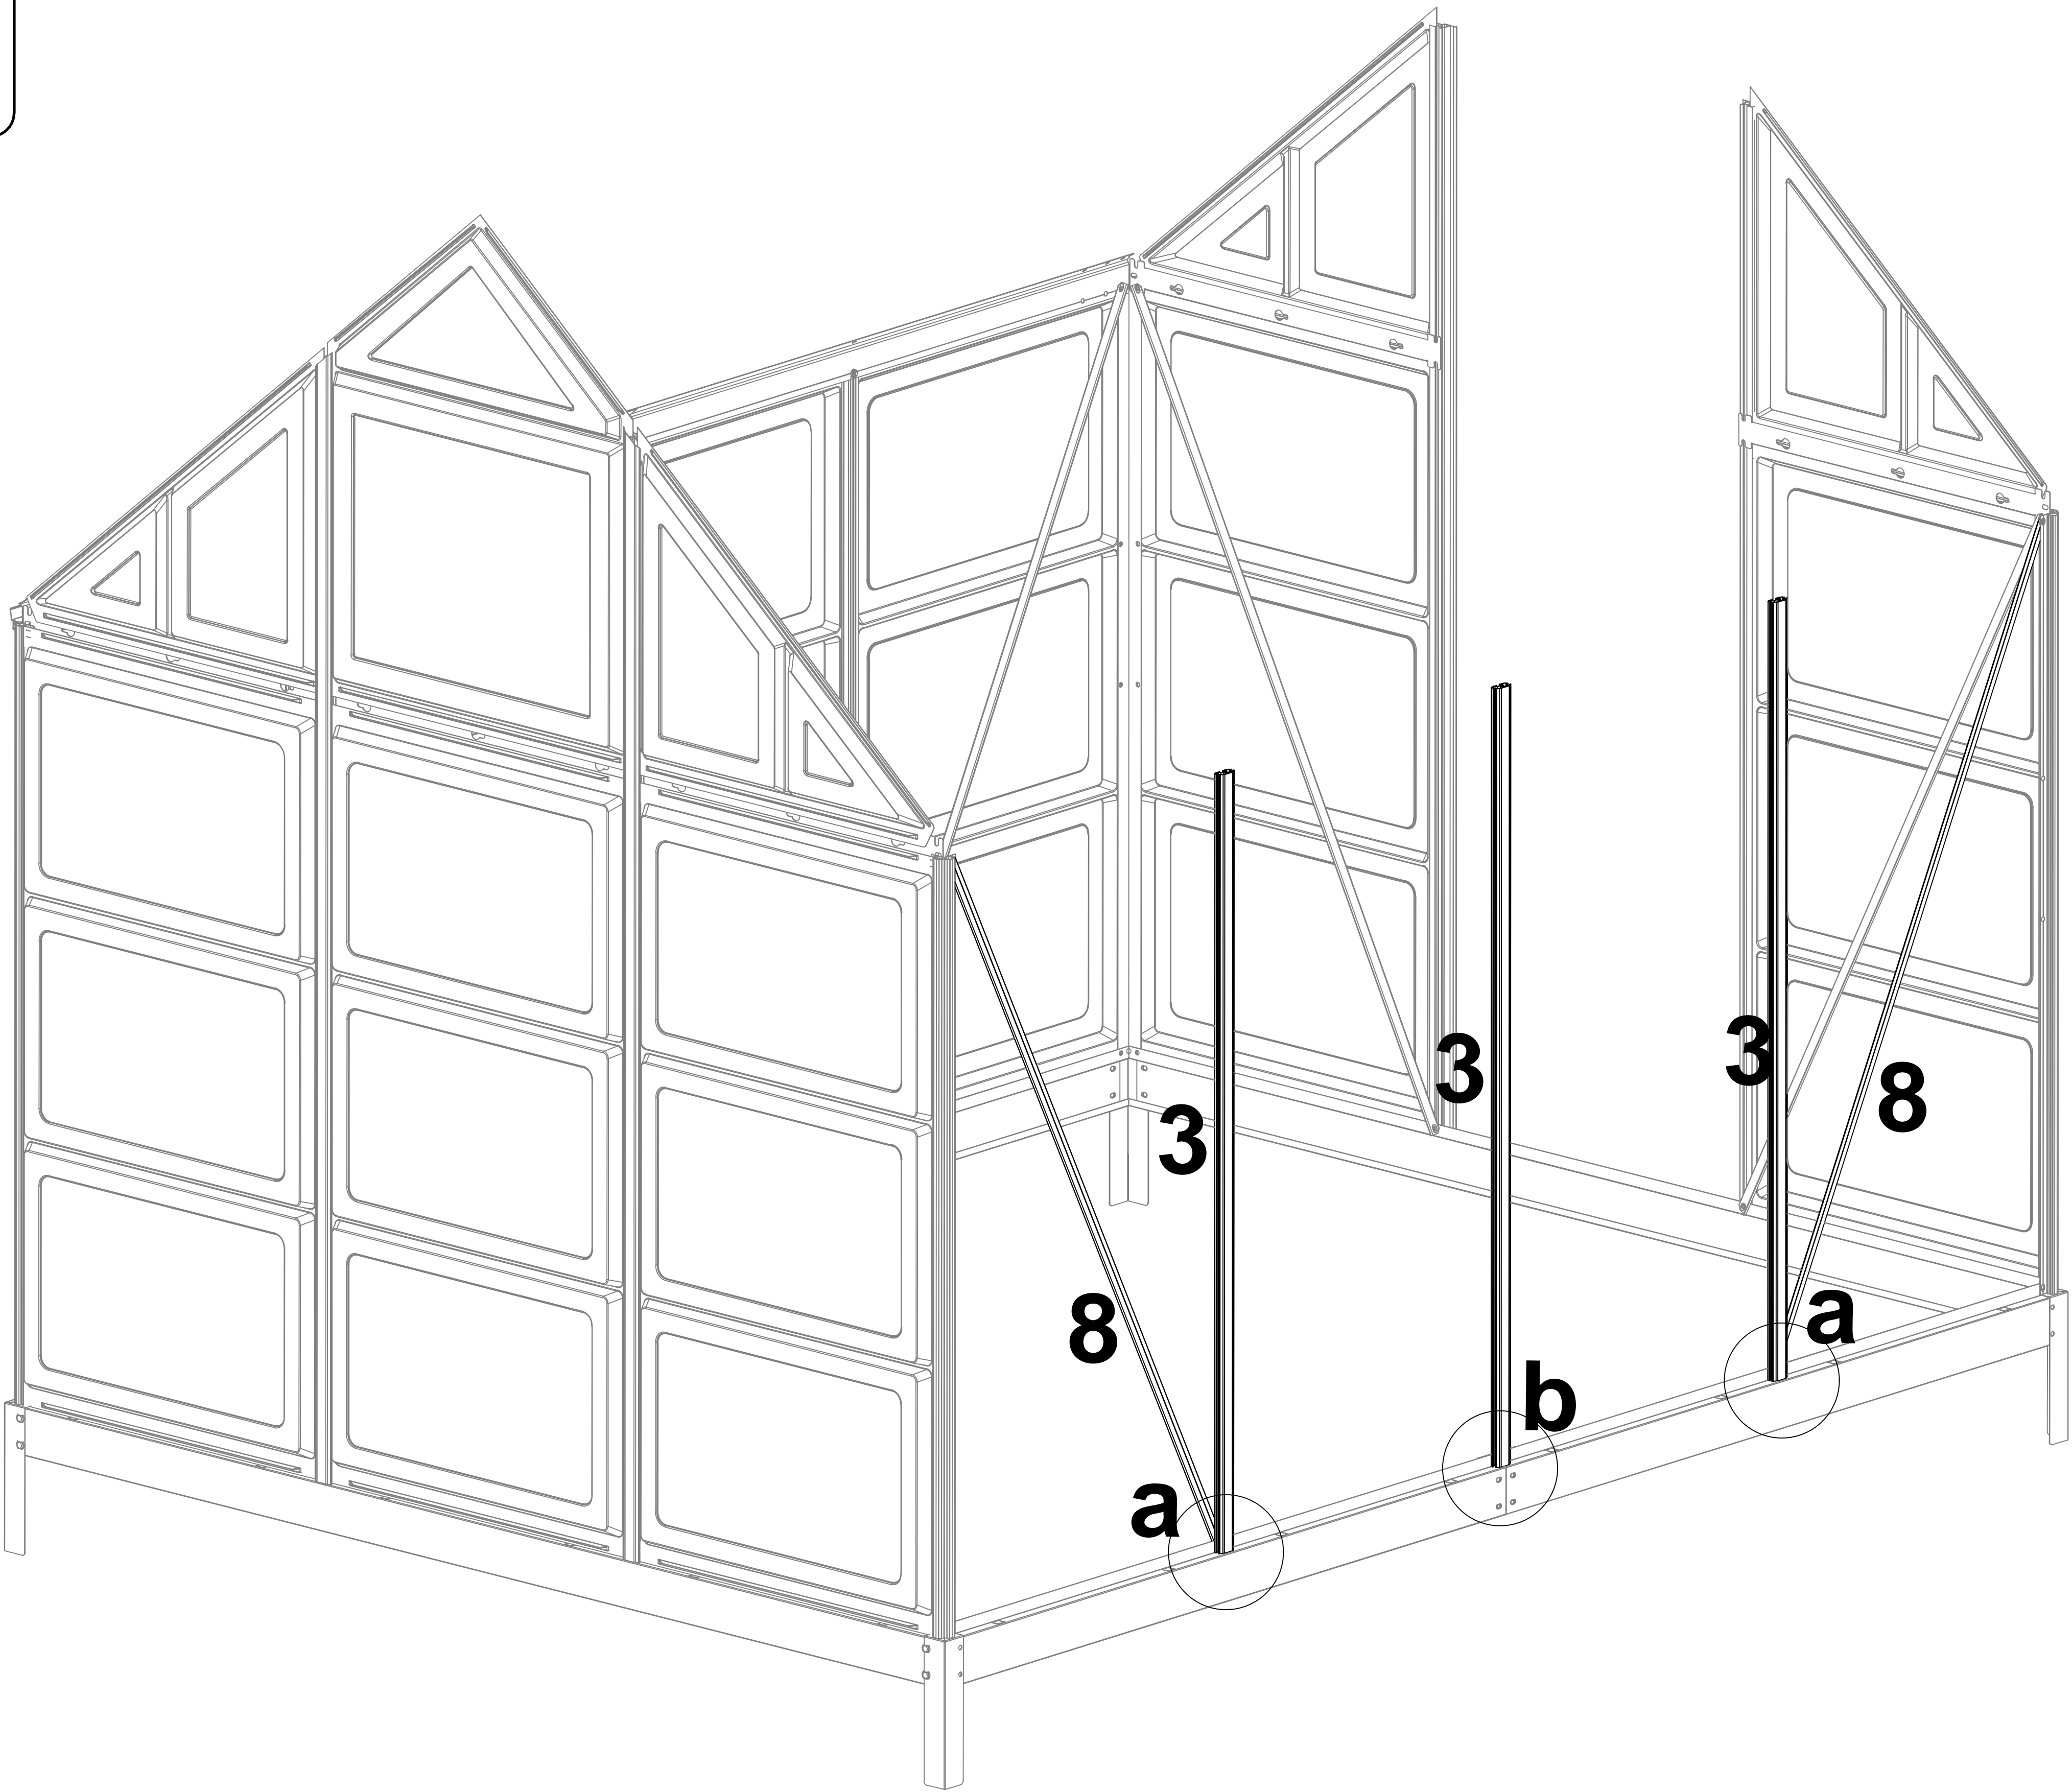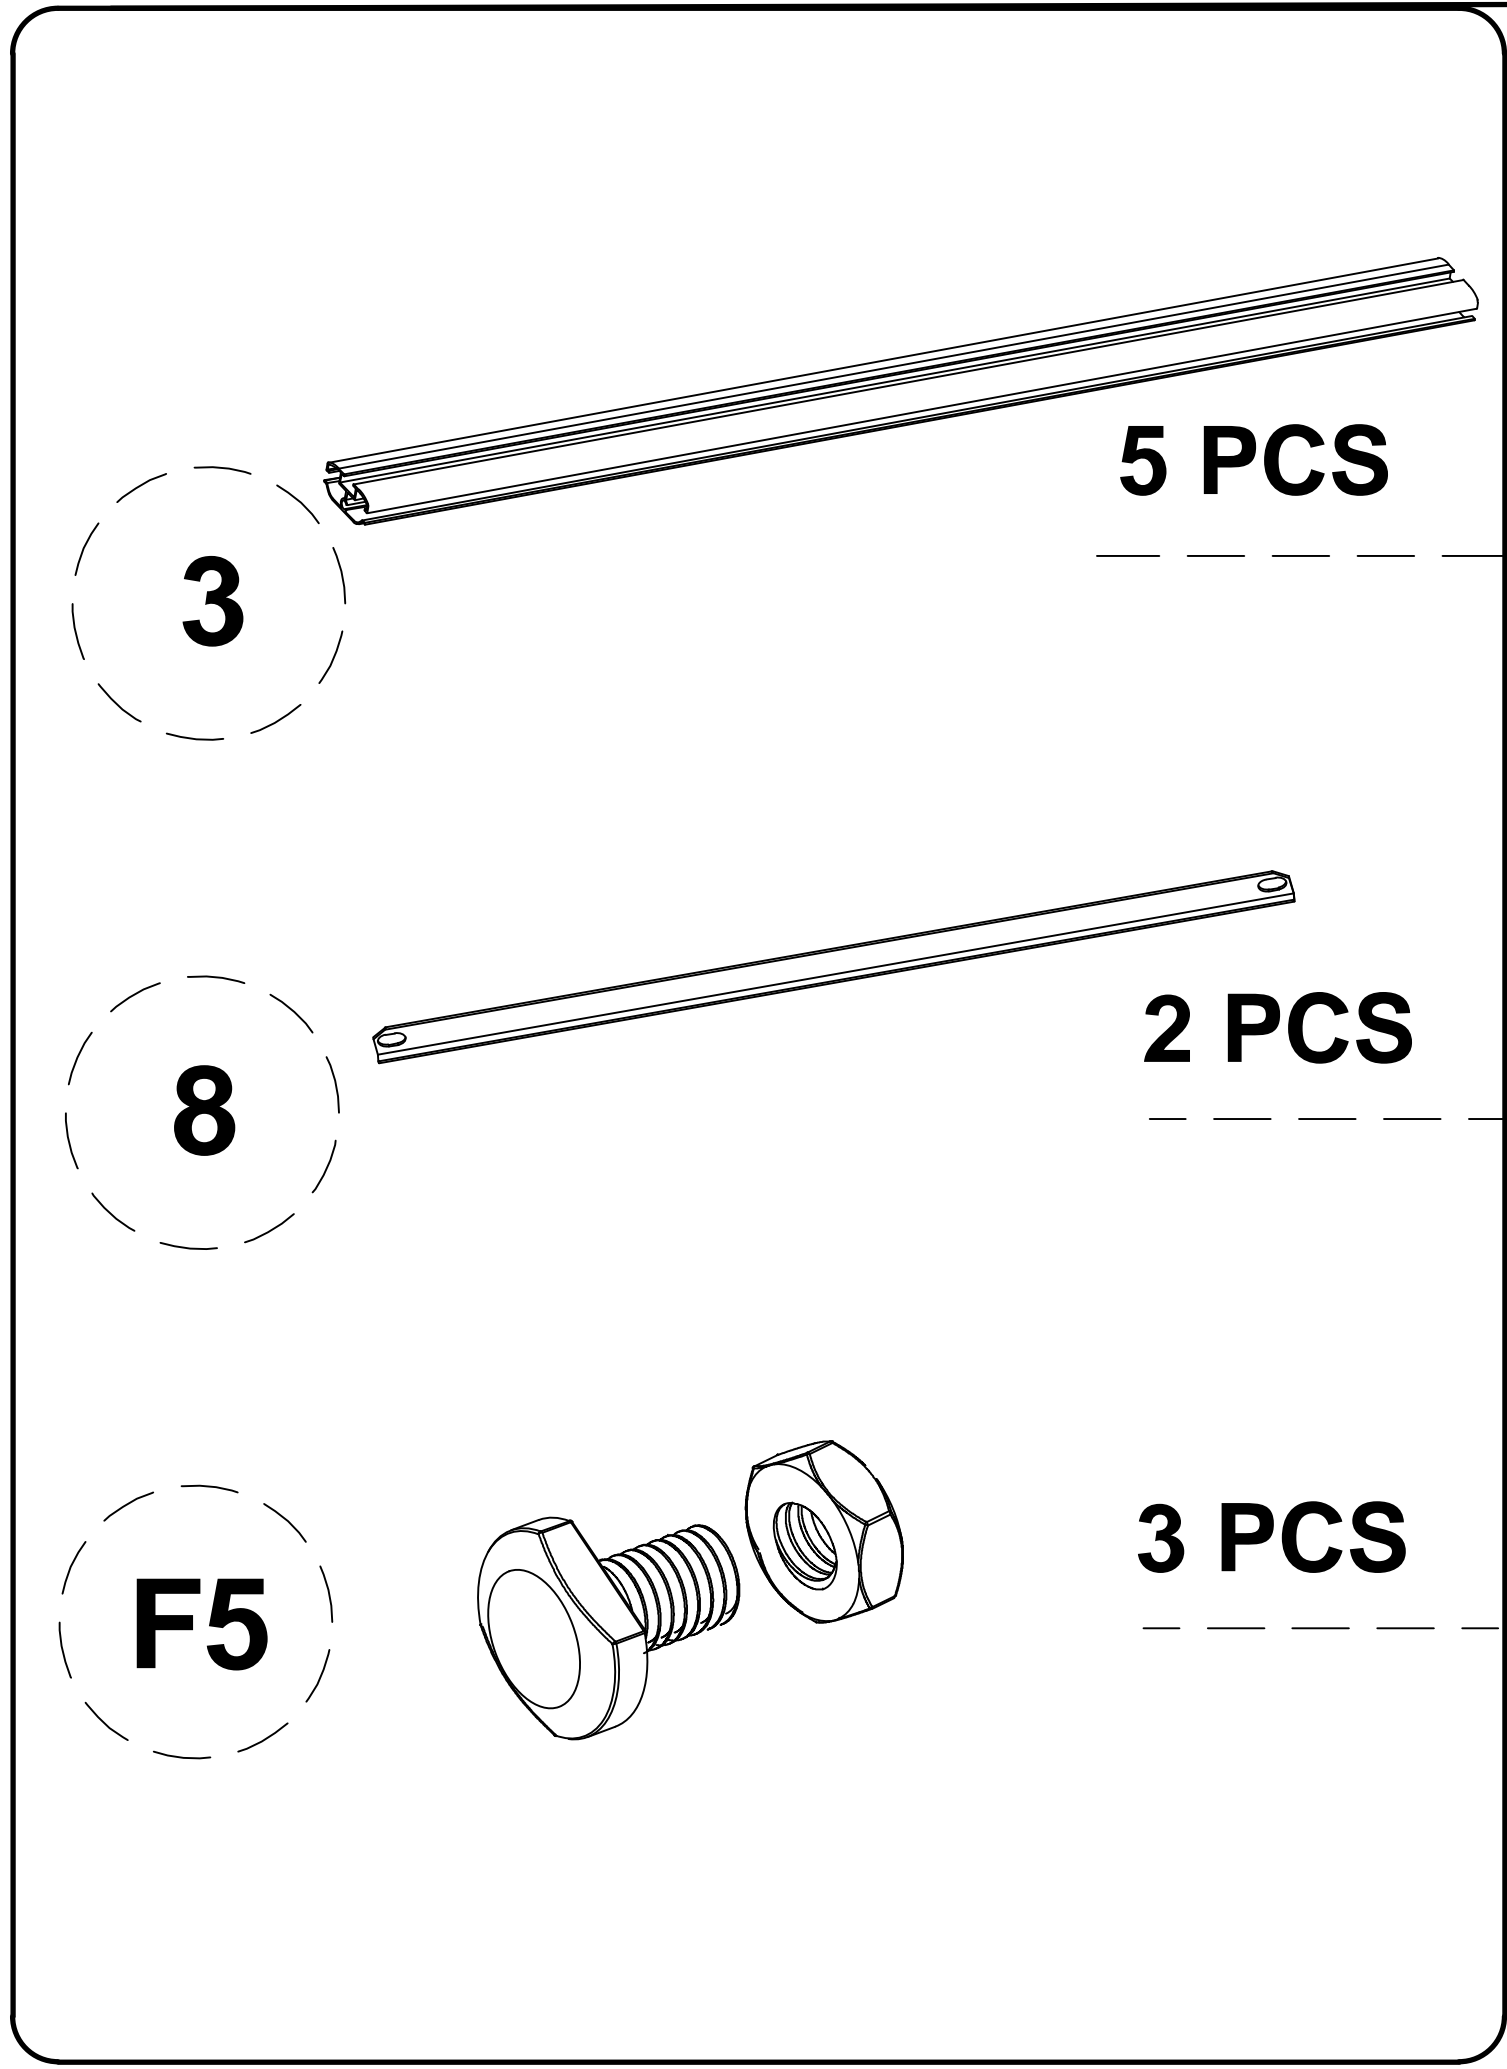




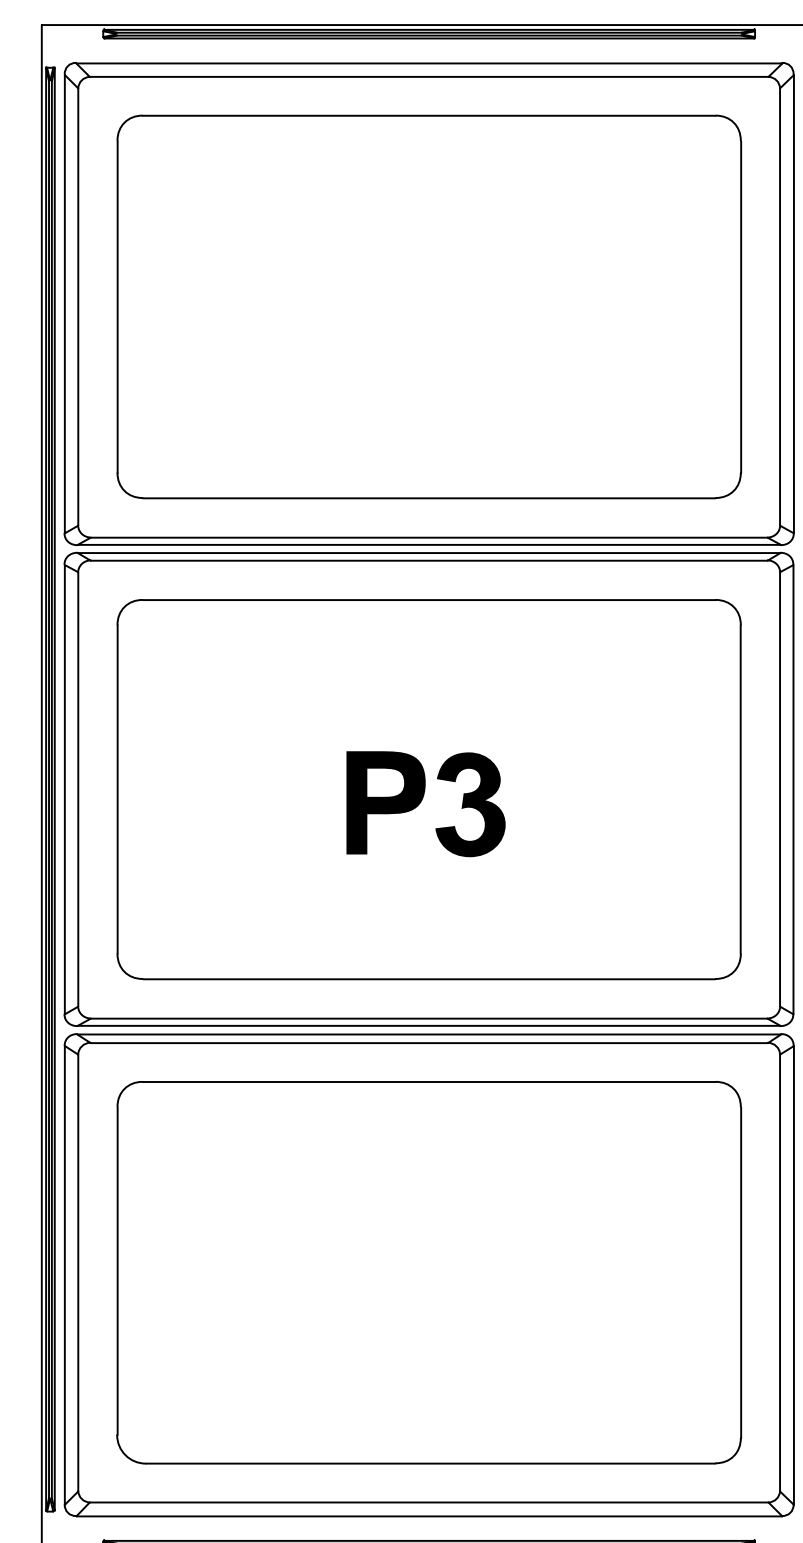


P3

x4




F5

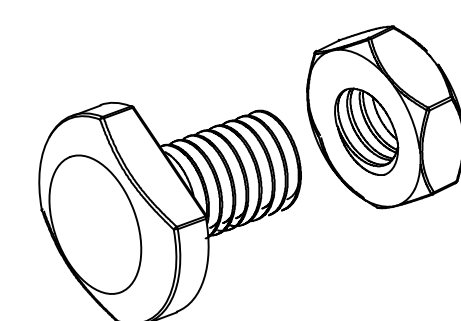

2 PCS



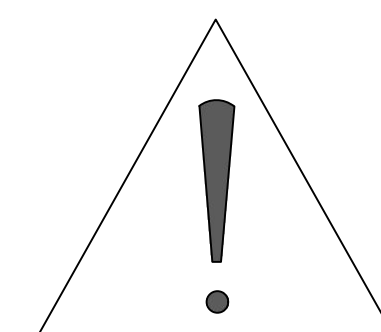


Install the screws in advance according to the instruction.

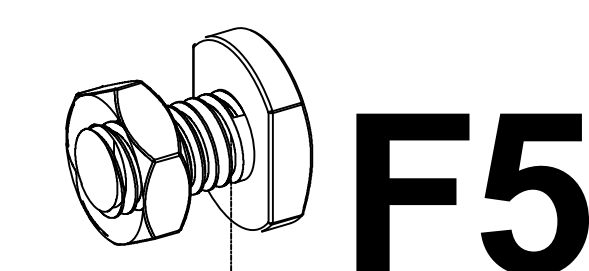
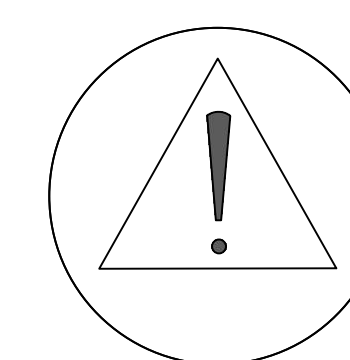
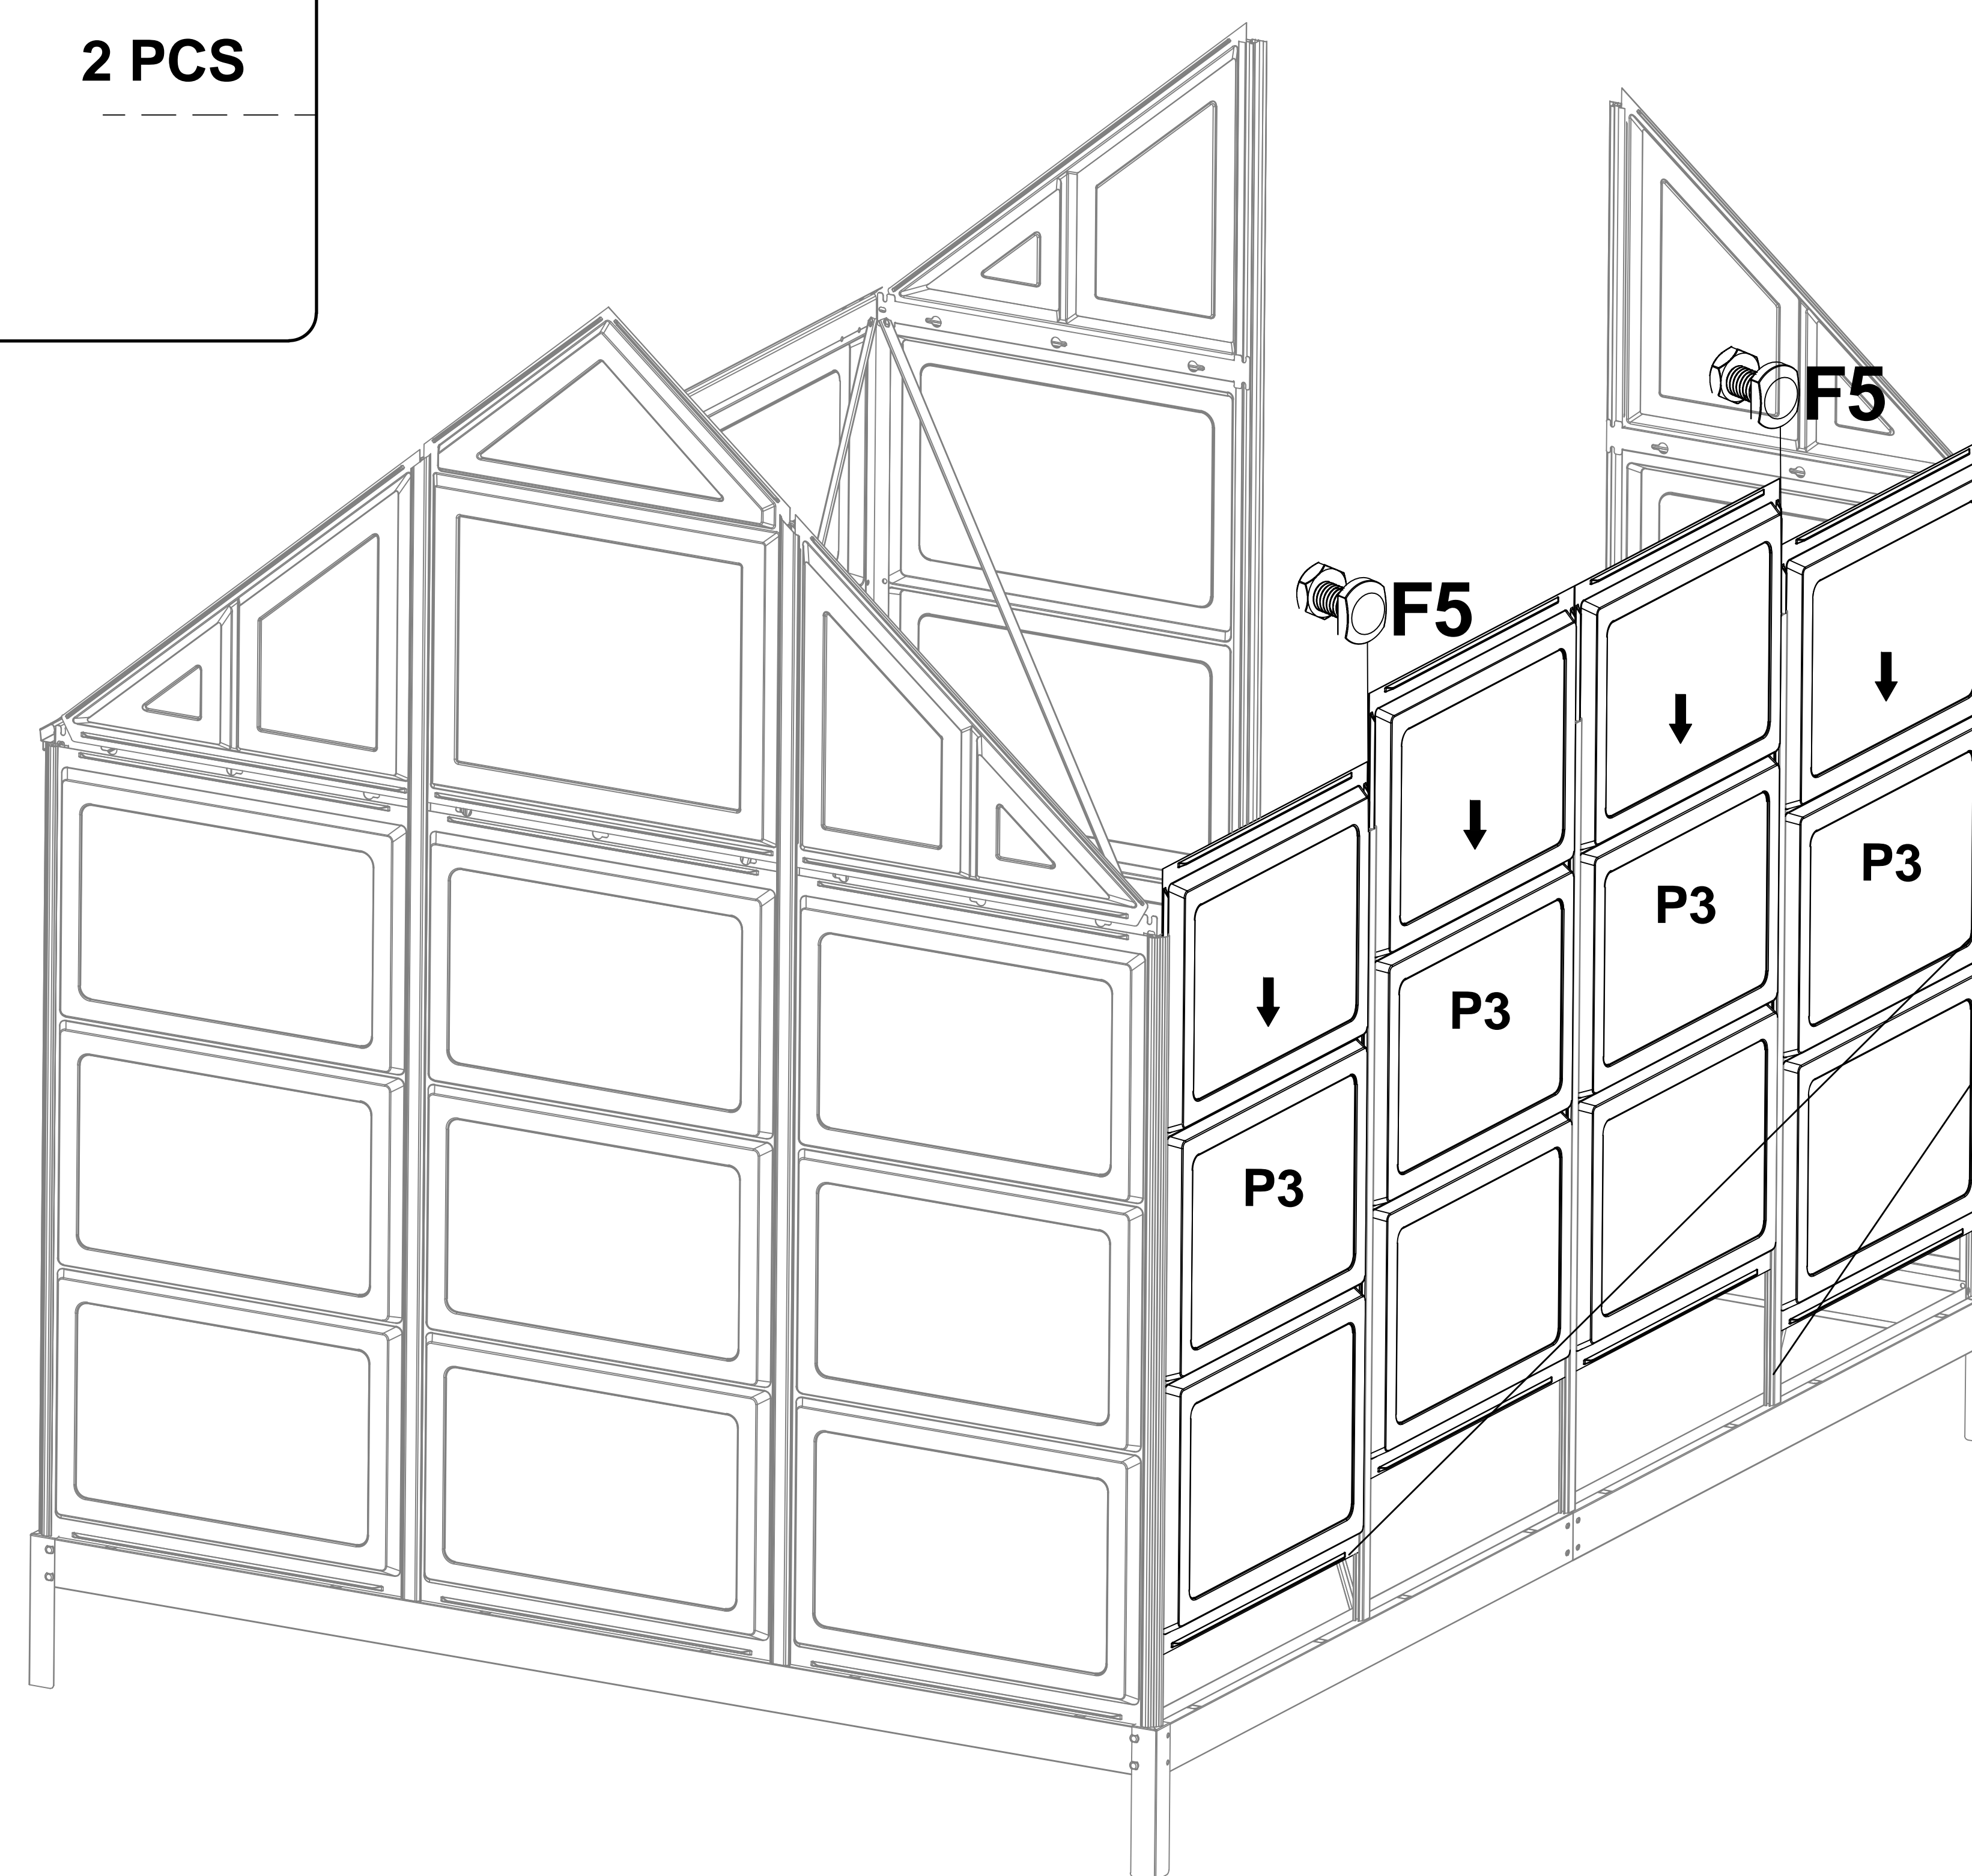




F5

3

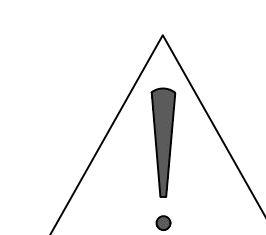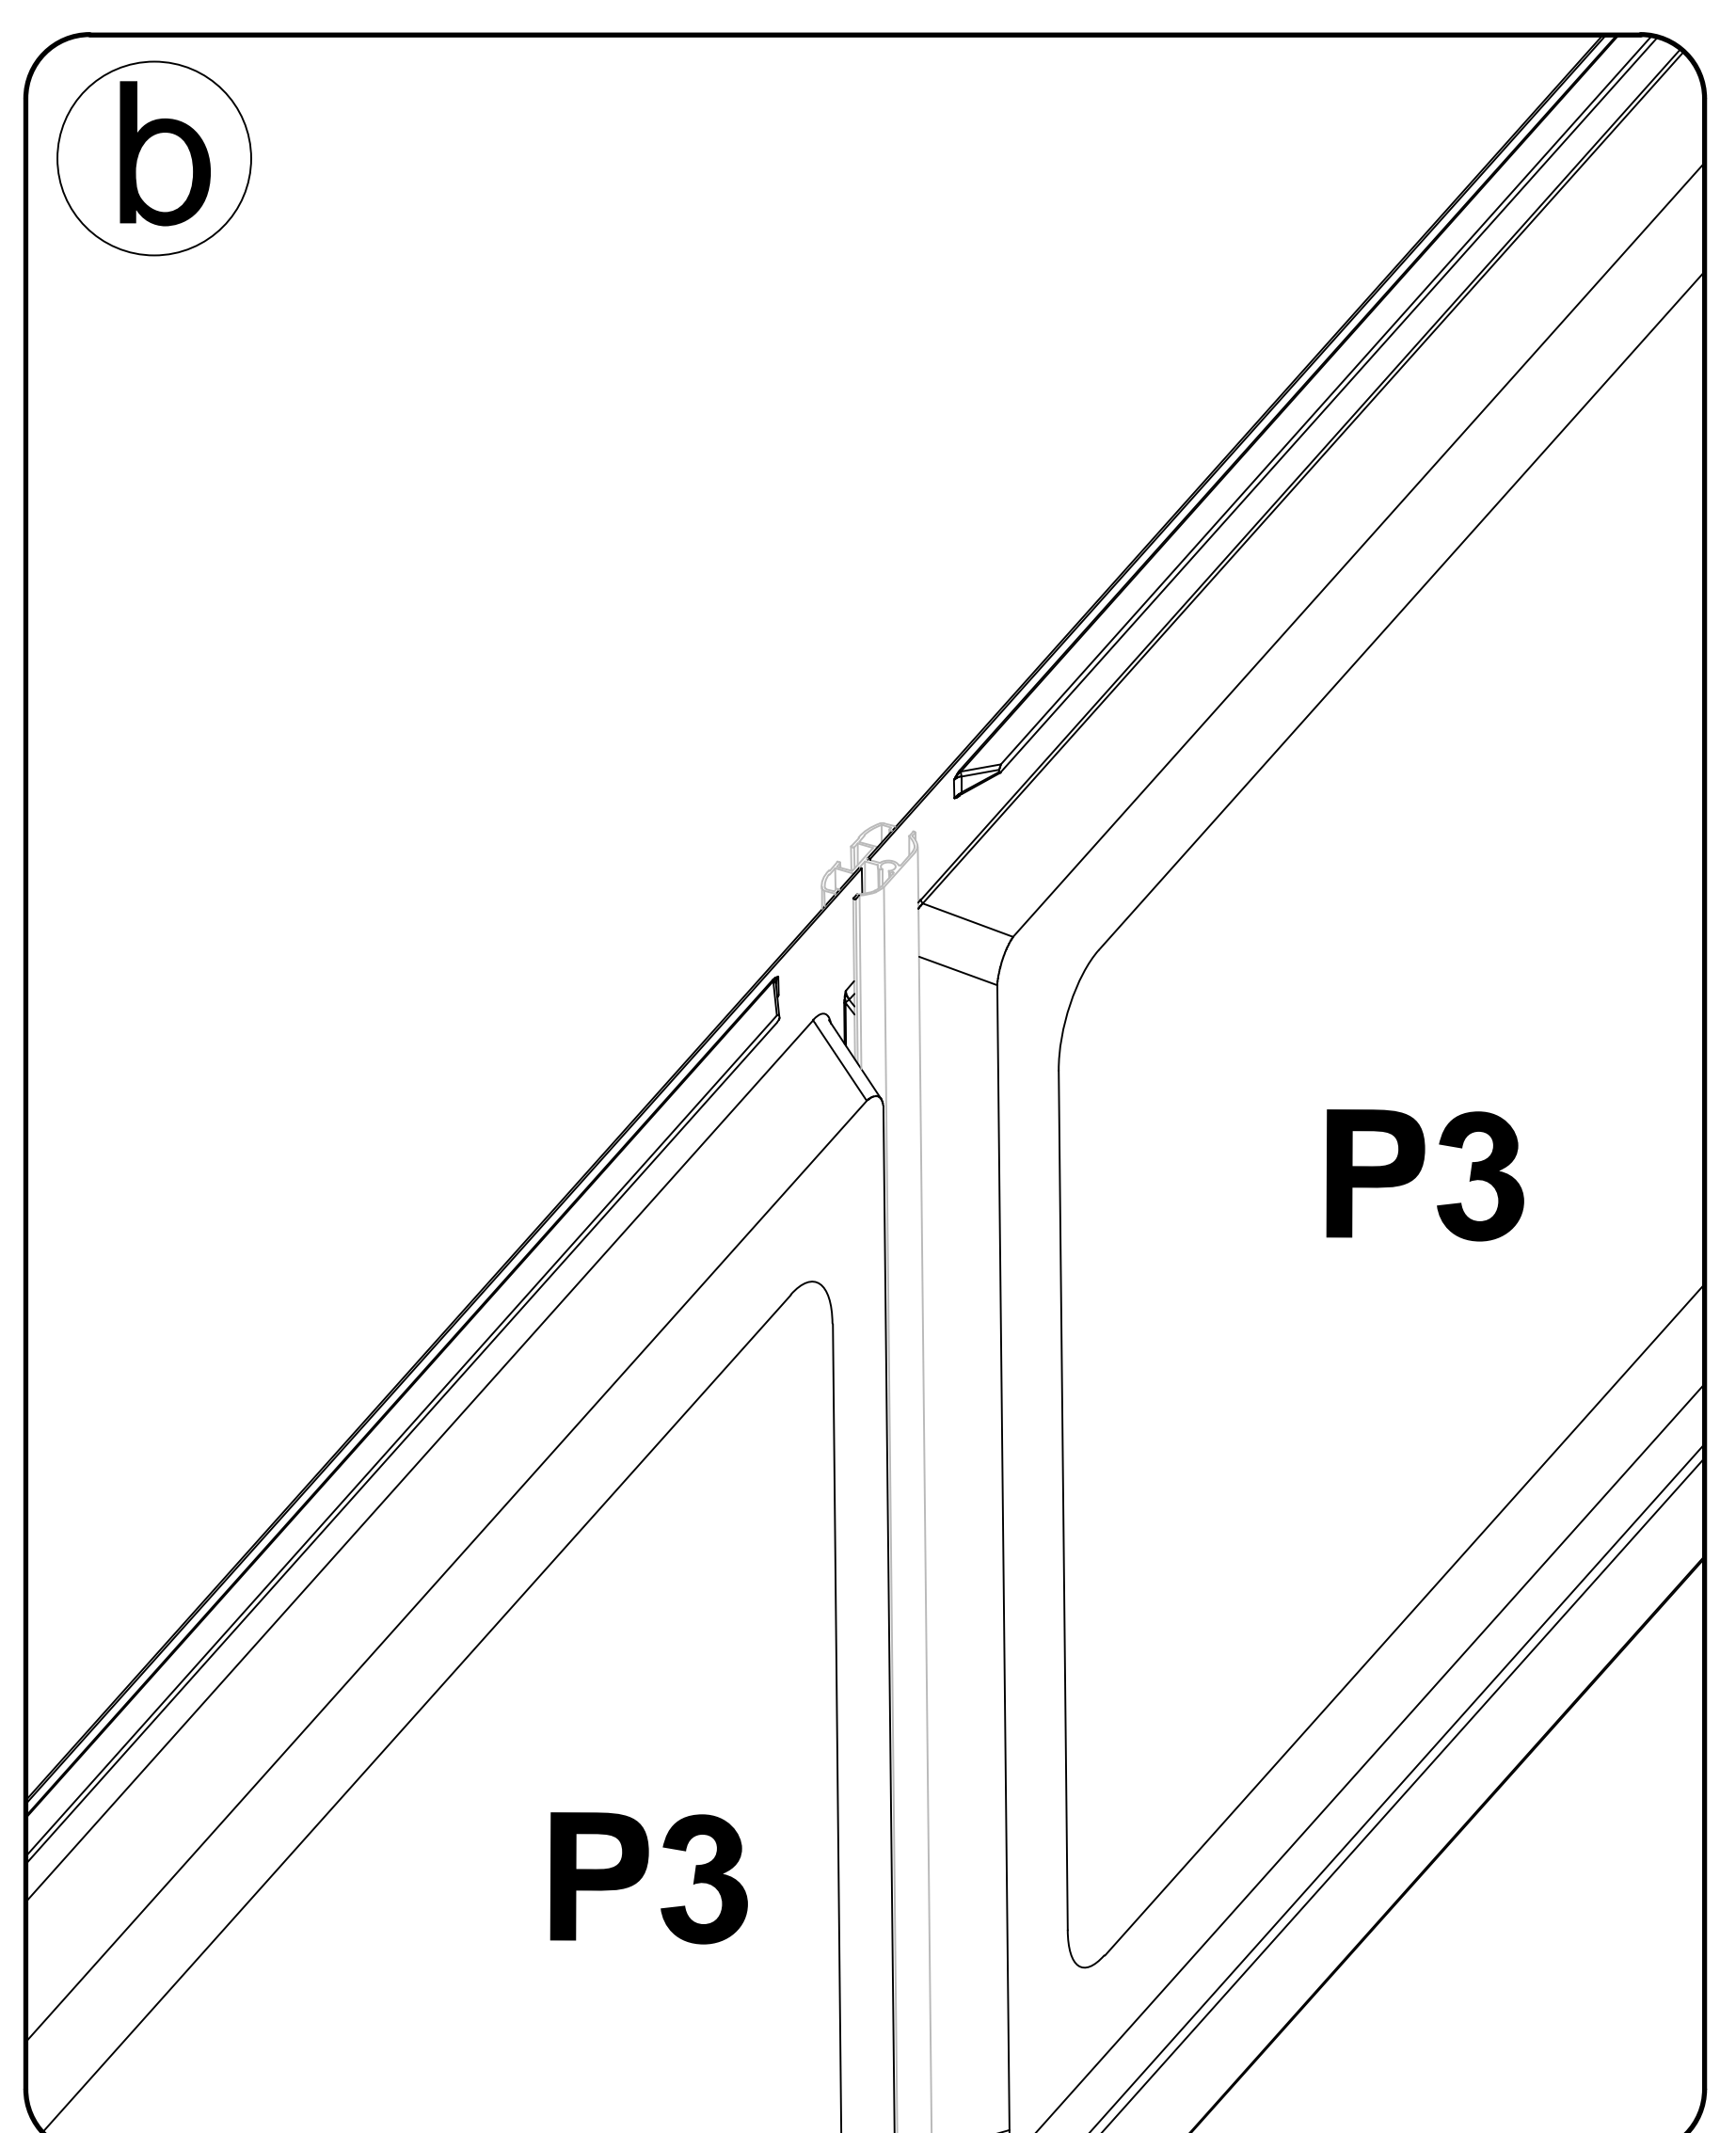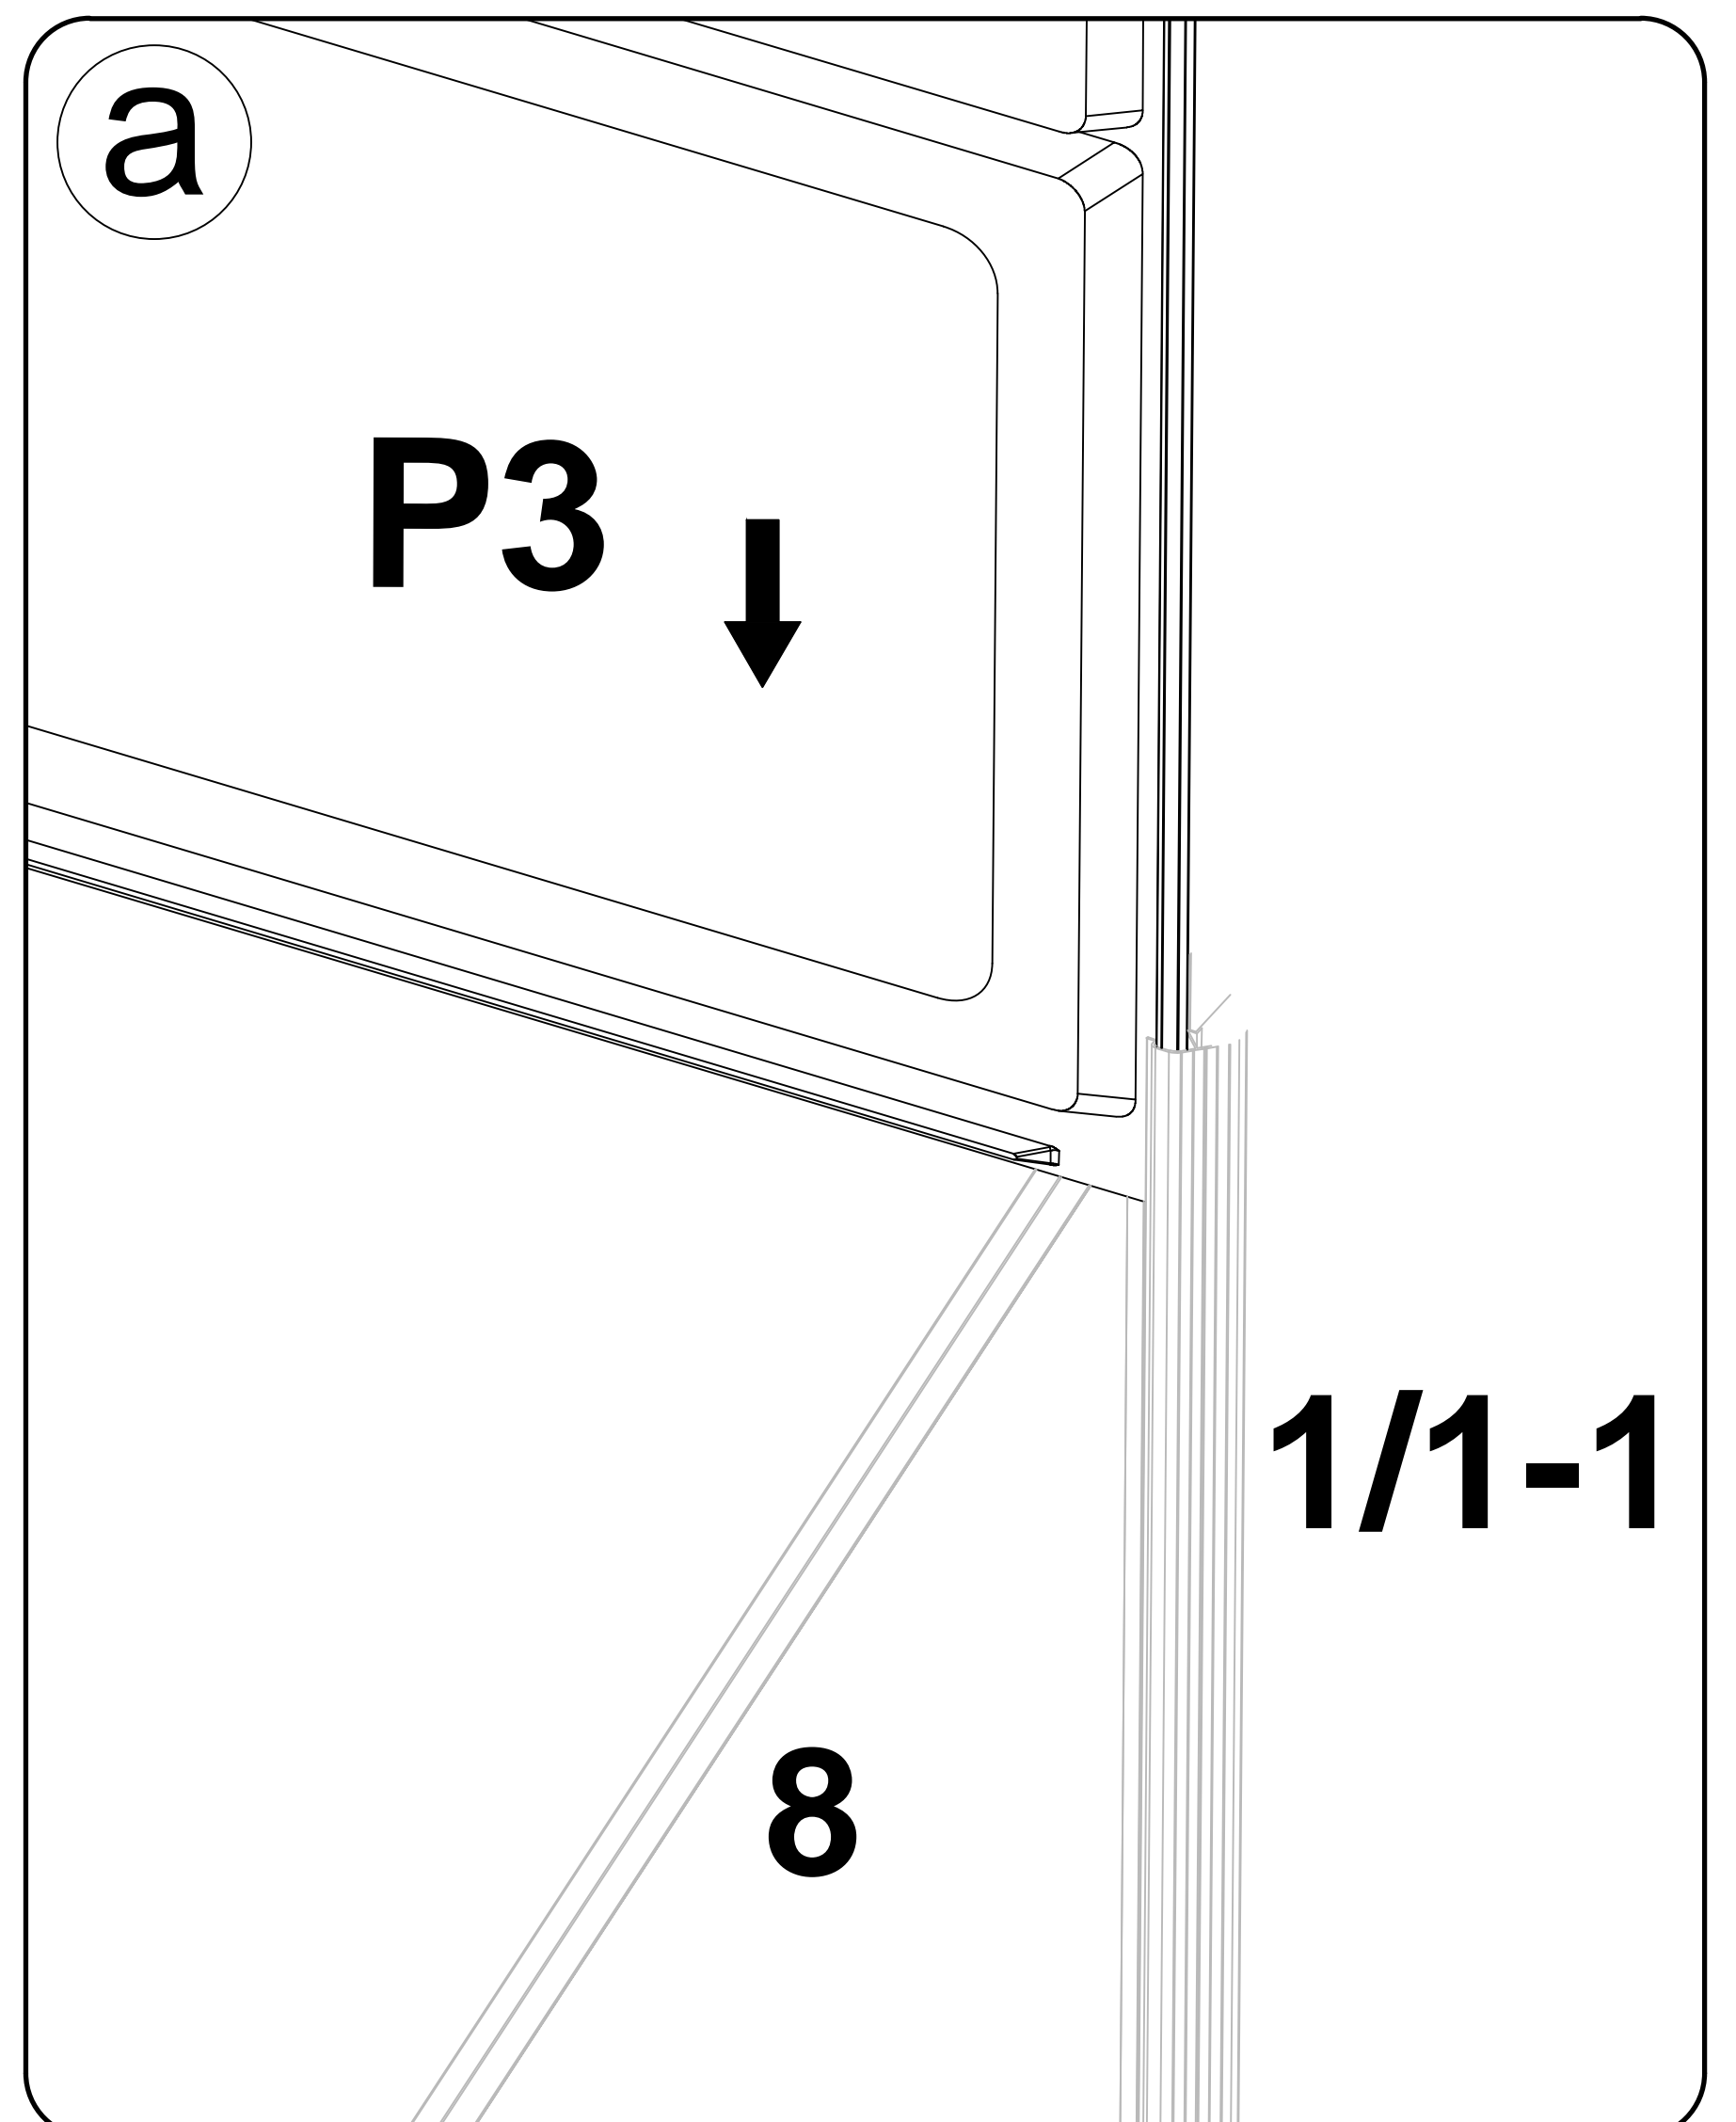


Tear off the film before inseted into the board and the side of white film needs faced out.

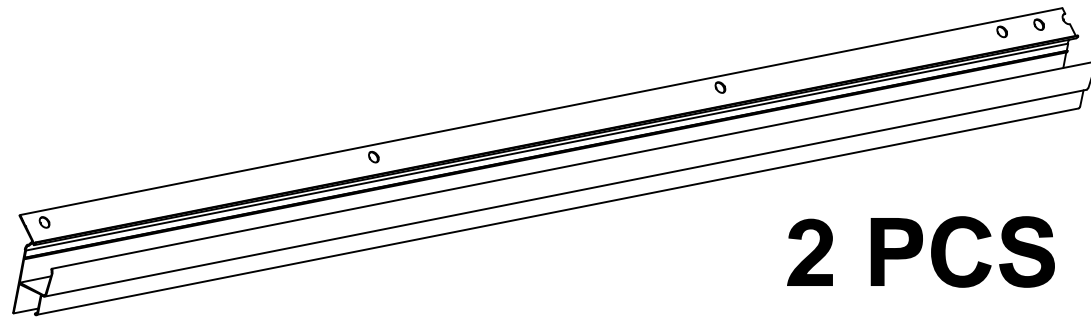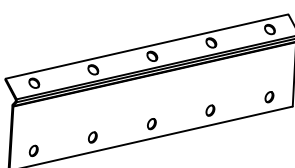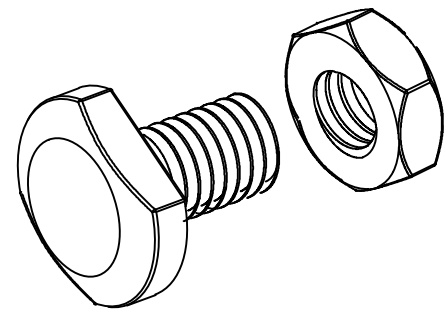
5-1		2 PCS
28		1 PCS
F5		9 PCS

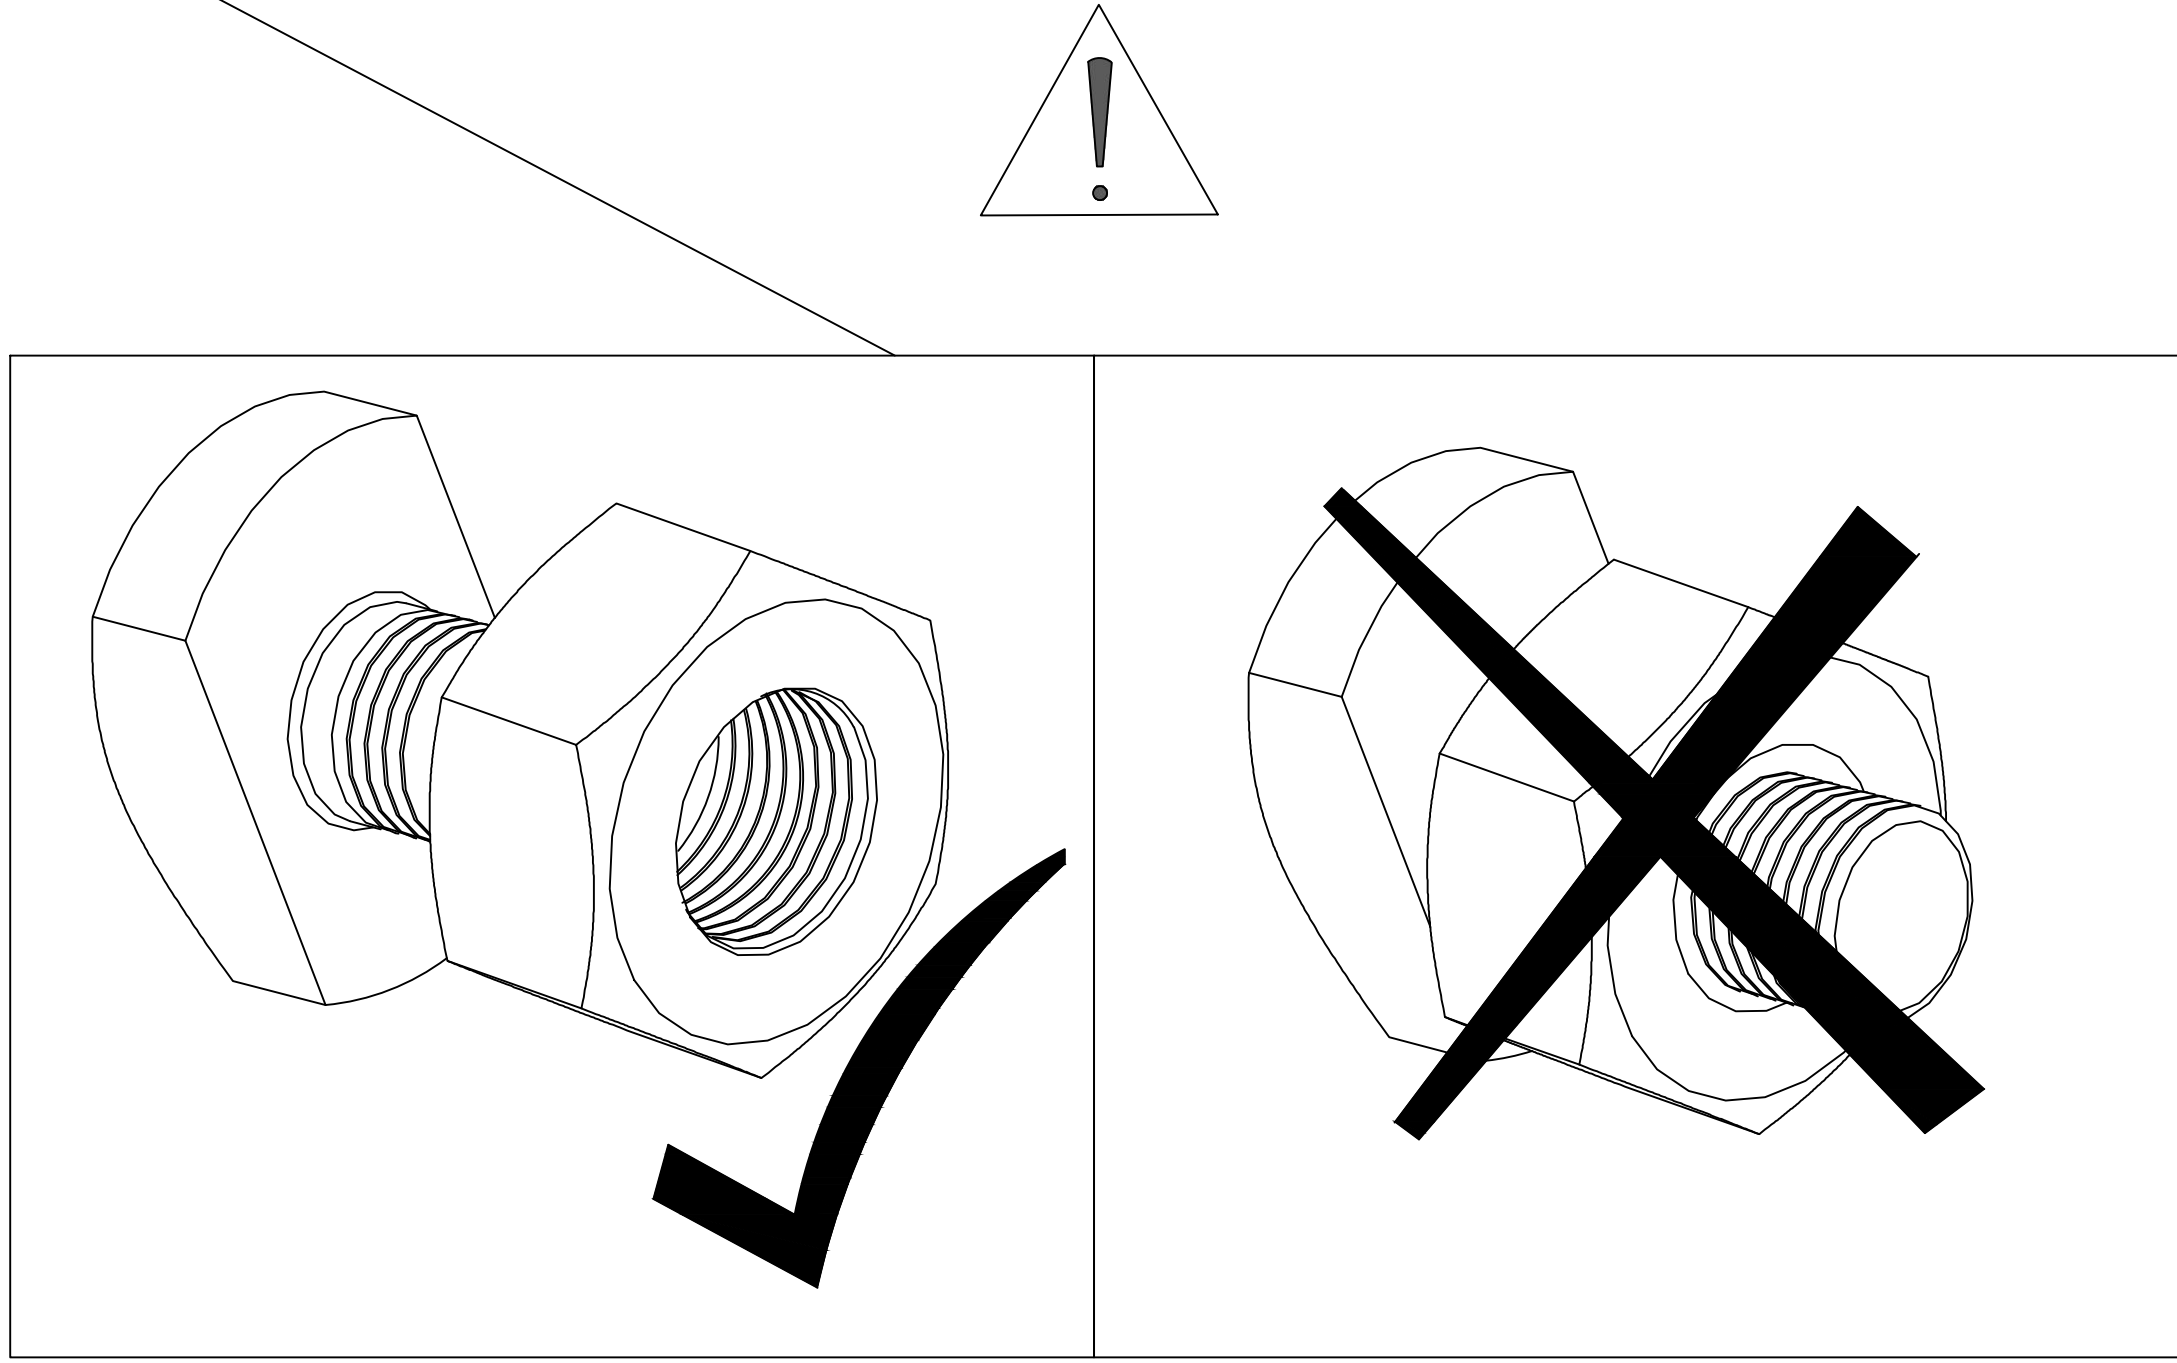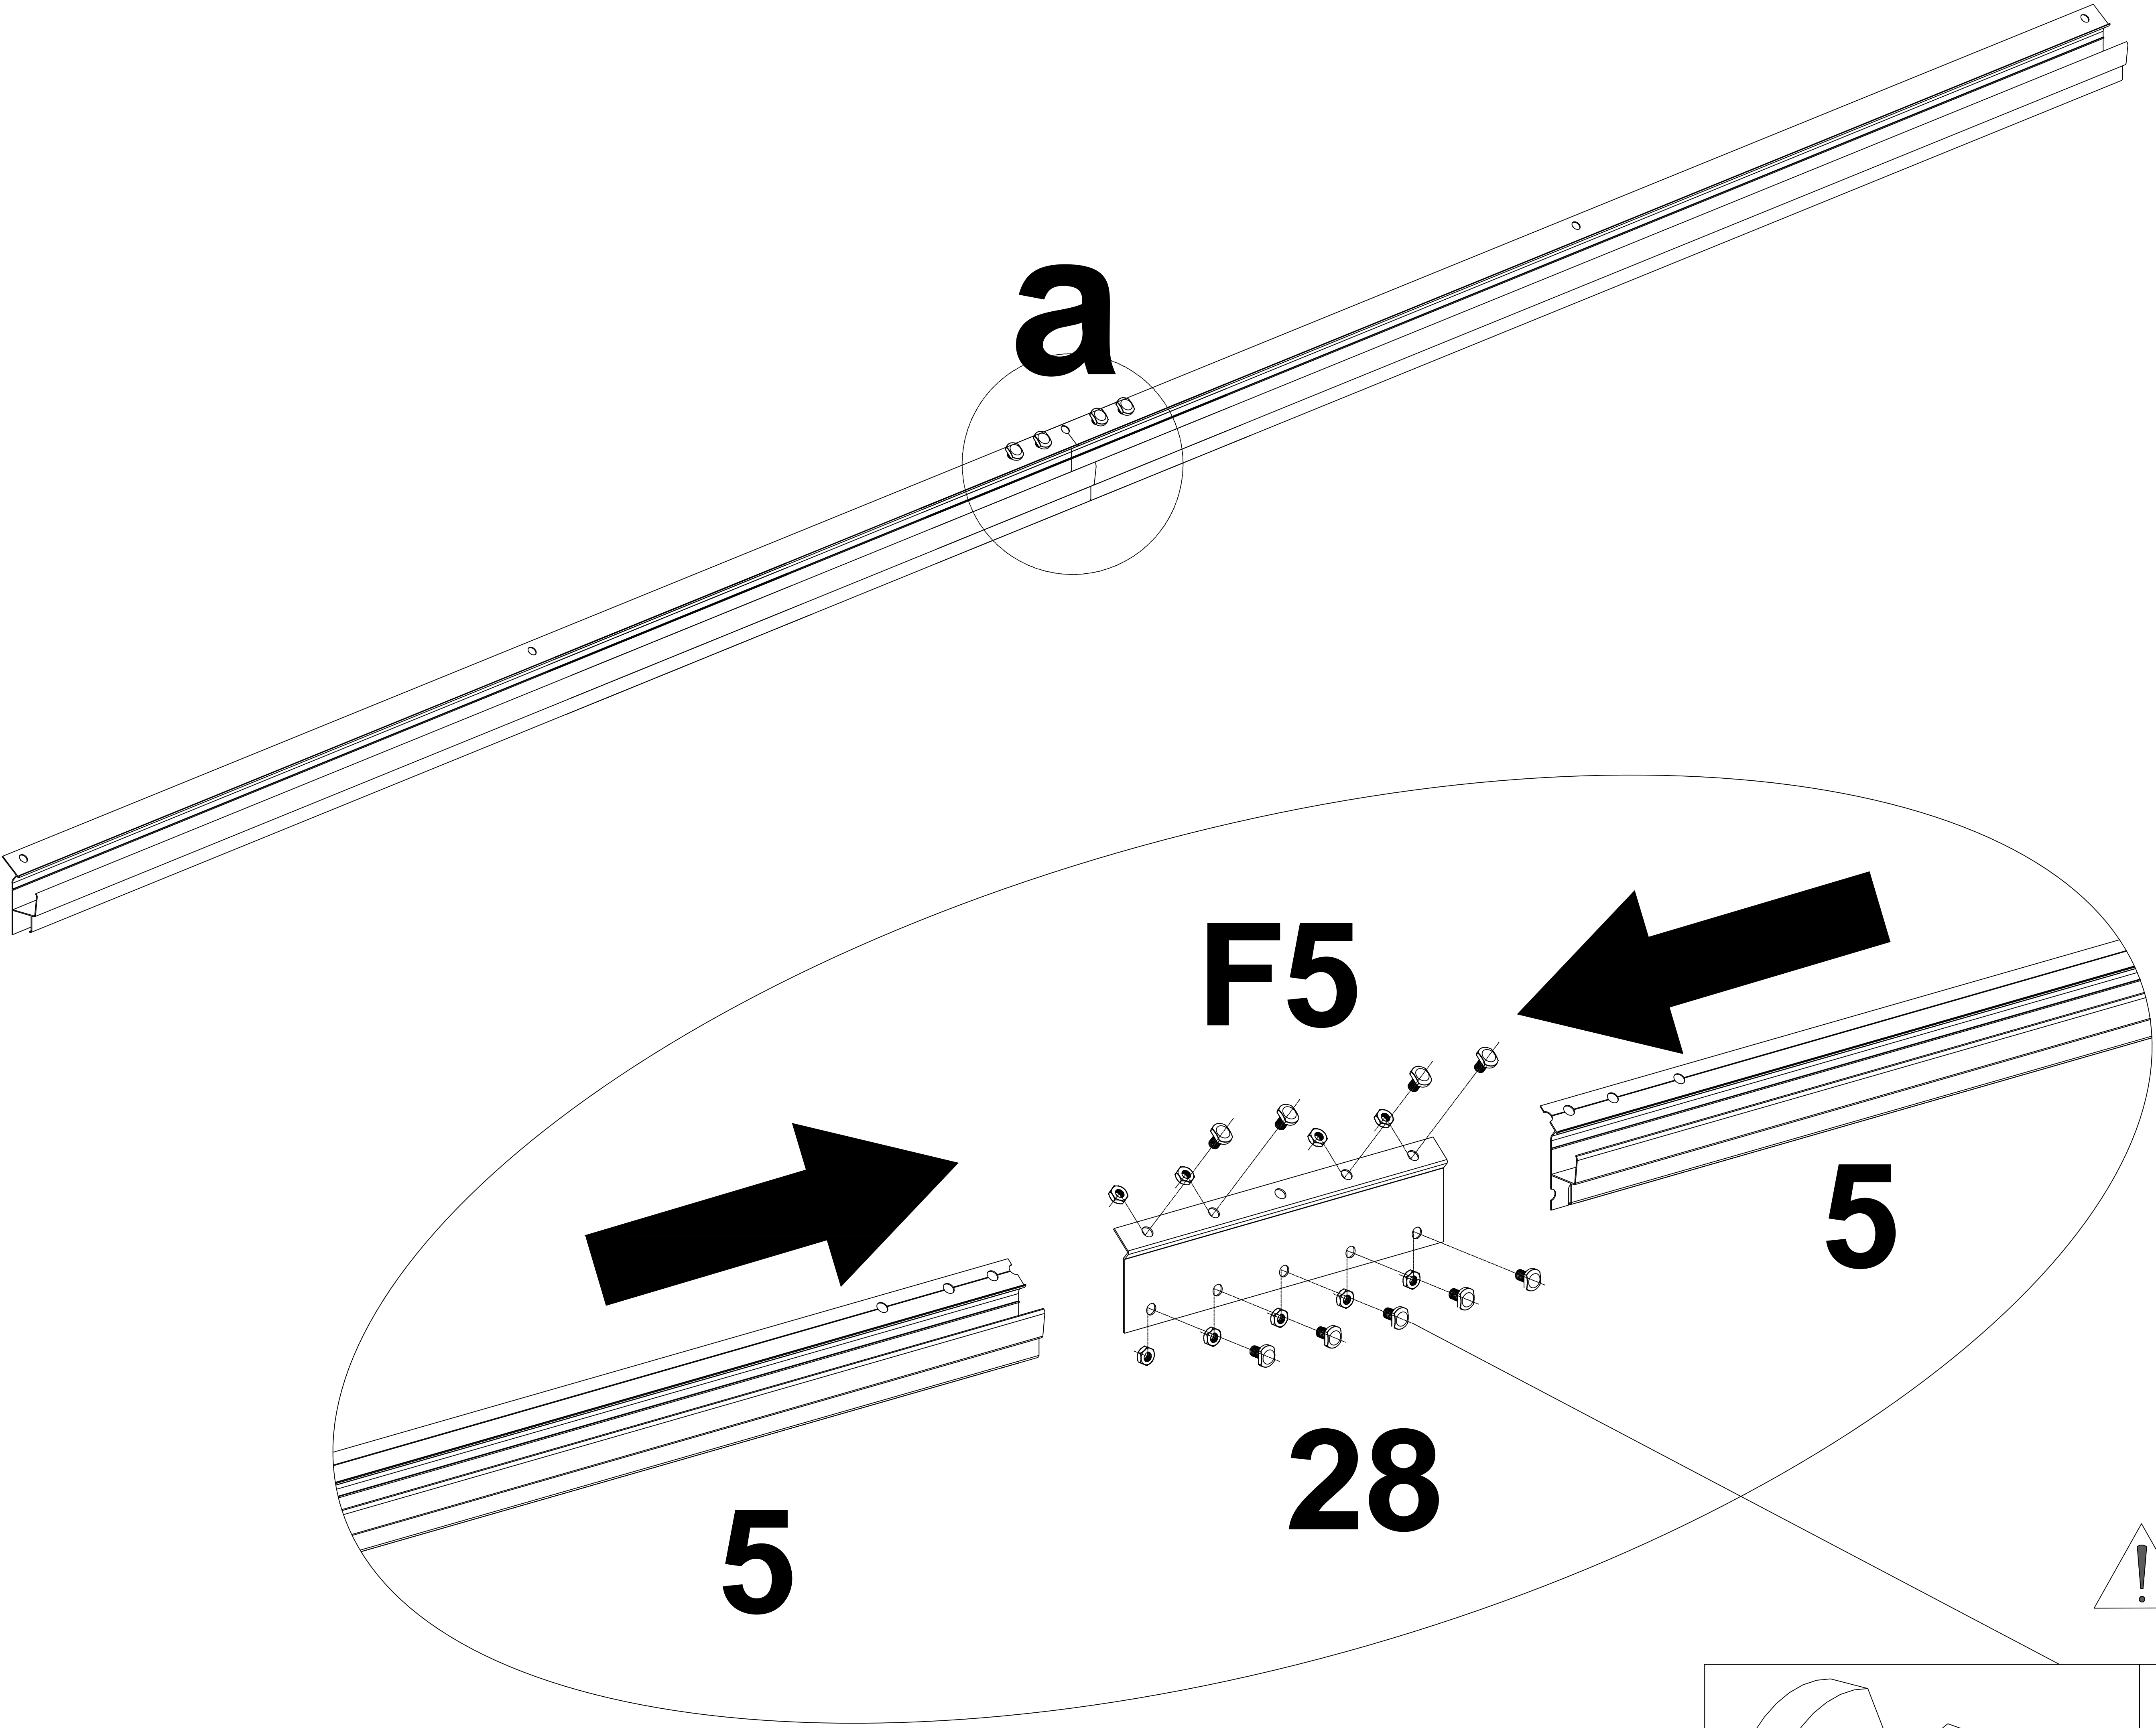


F5

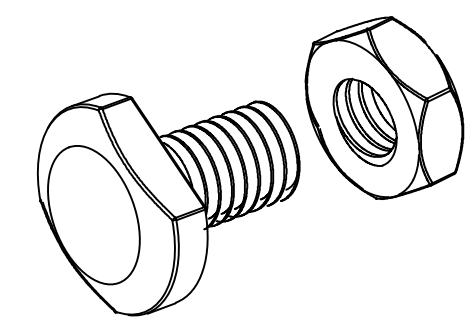

2 PCS

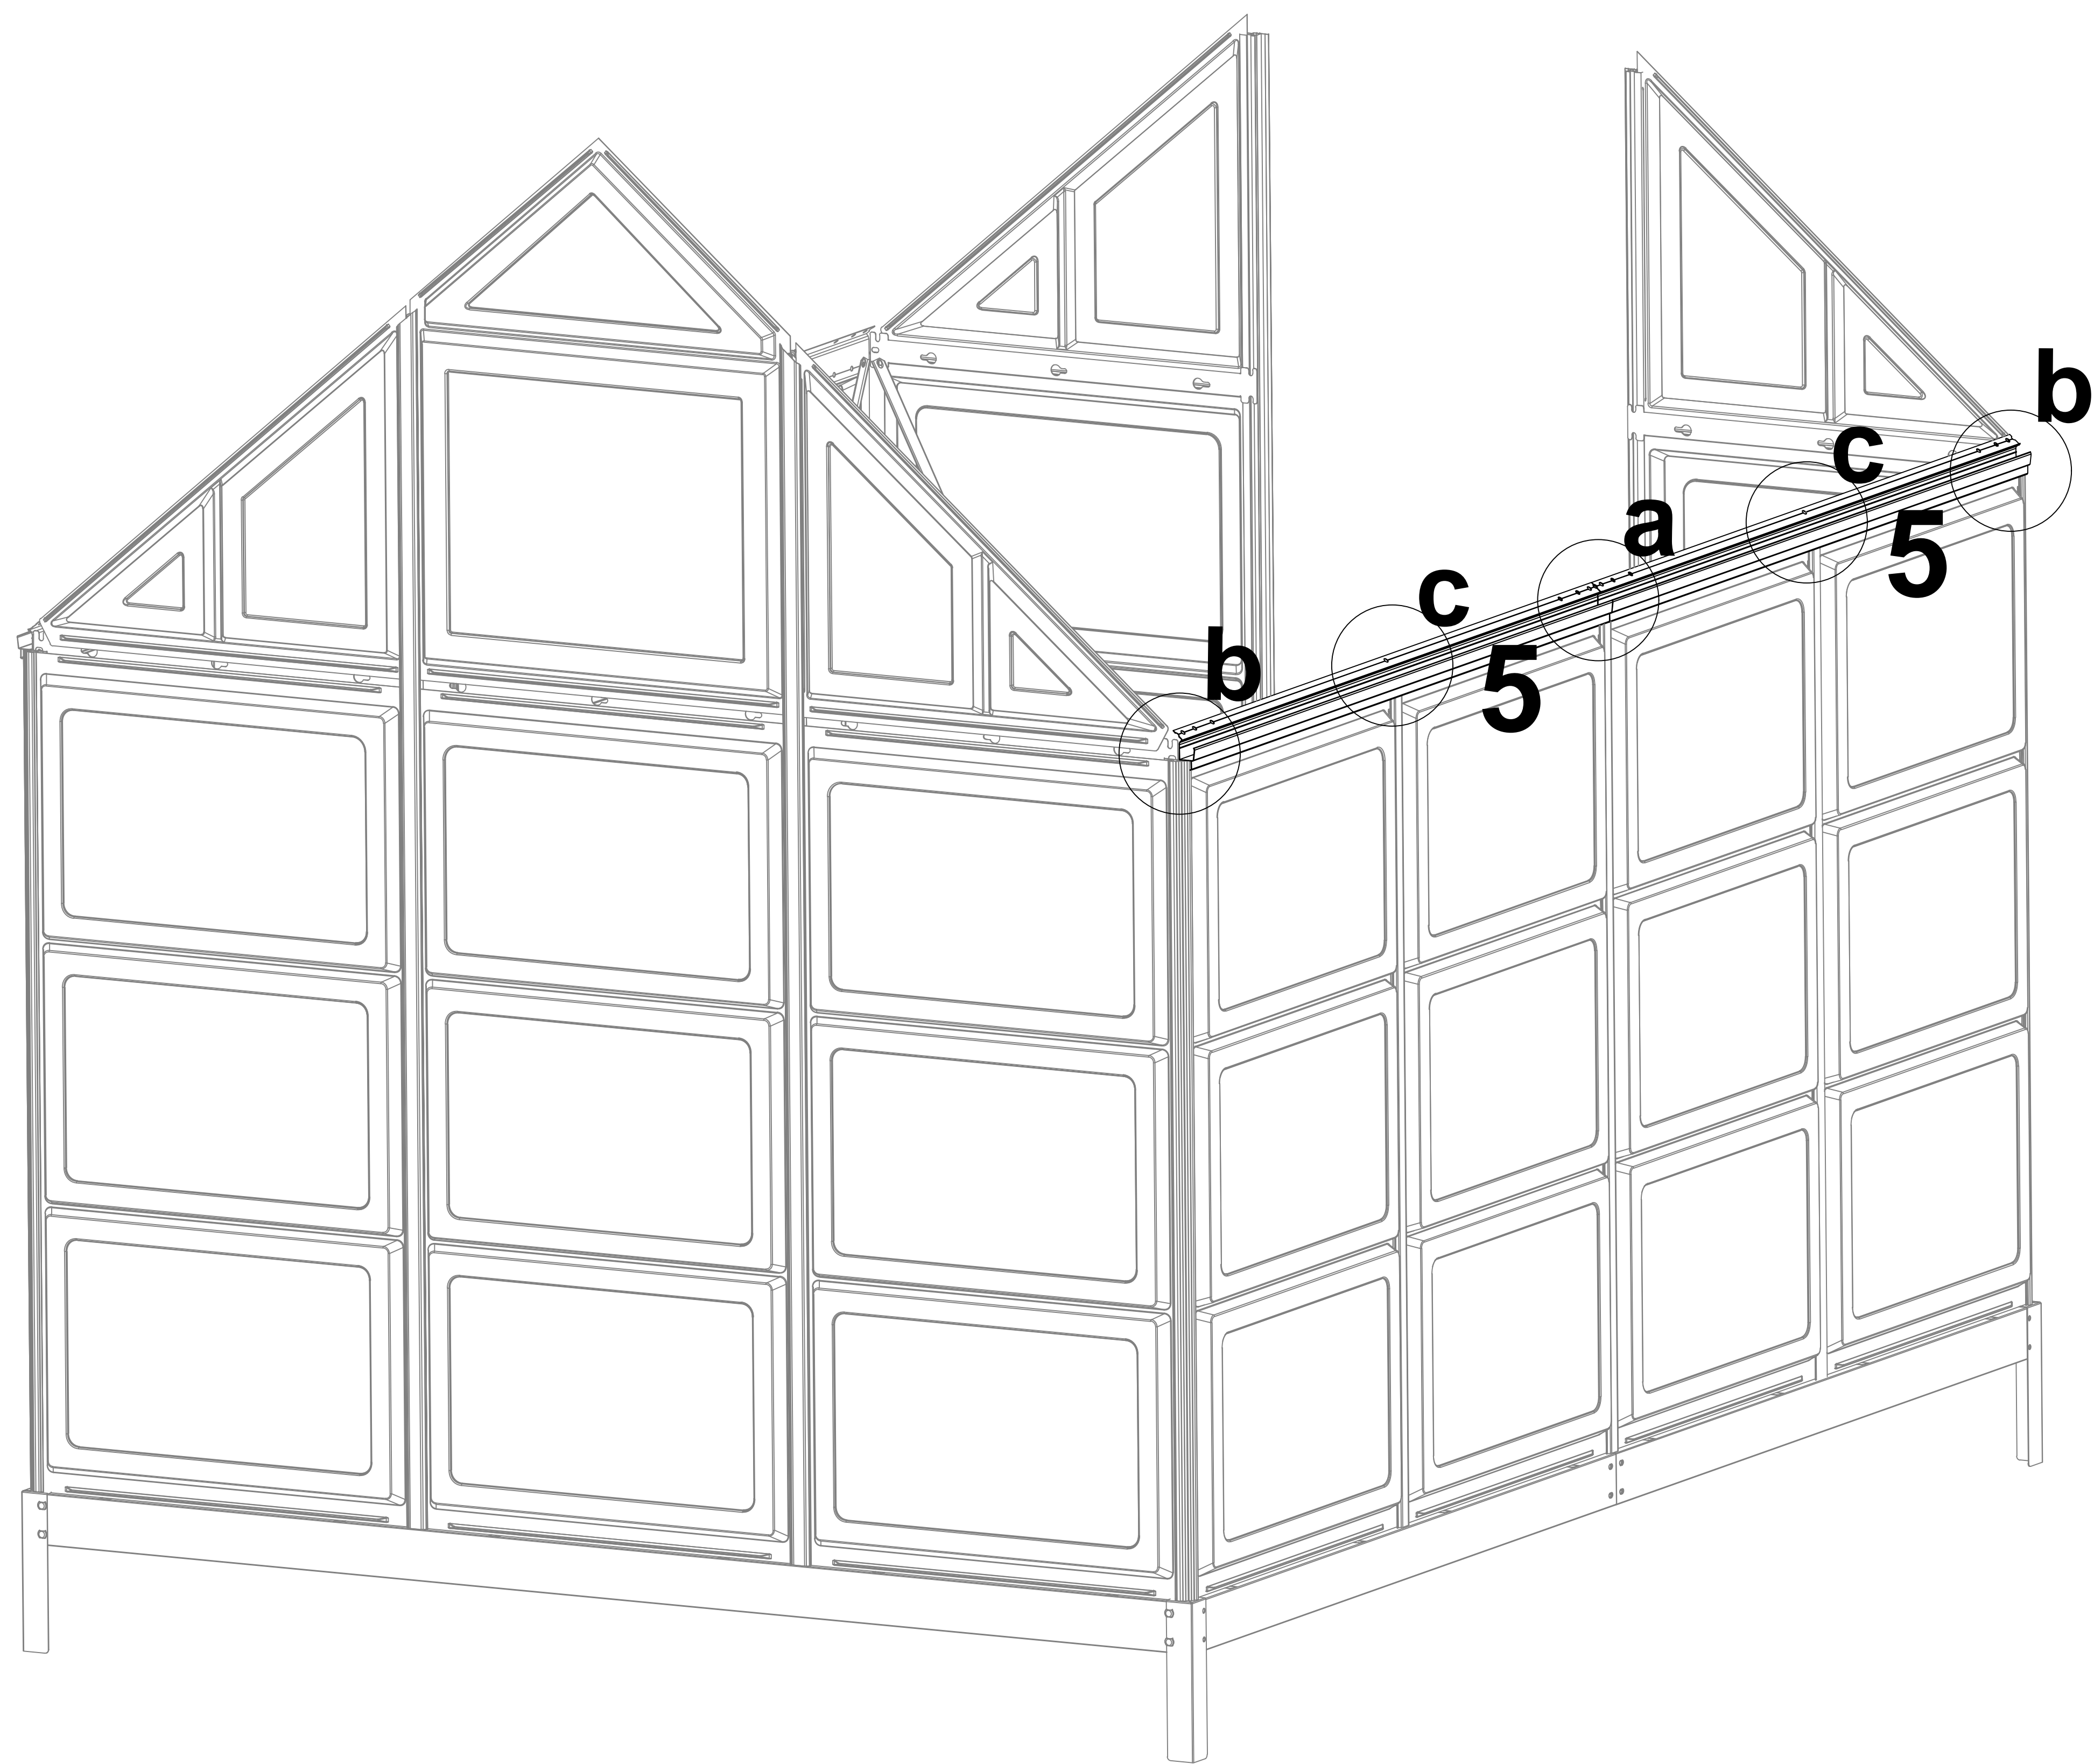


a

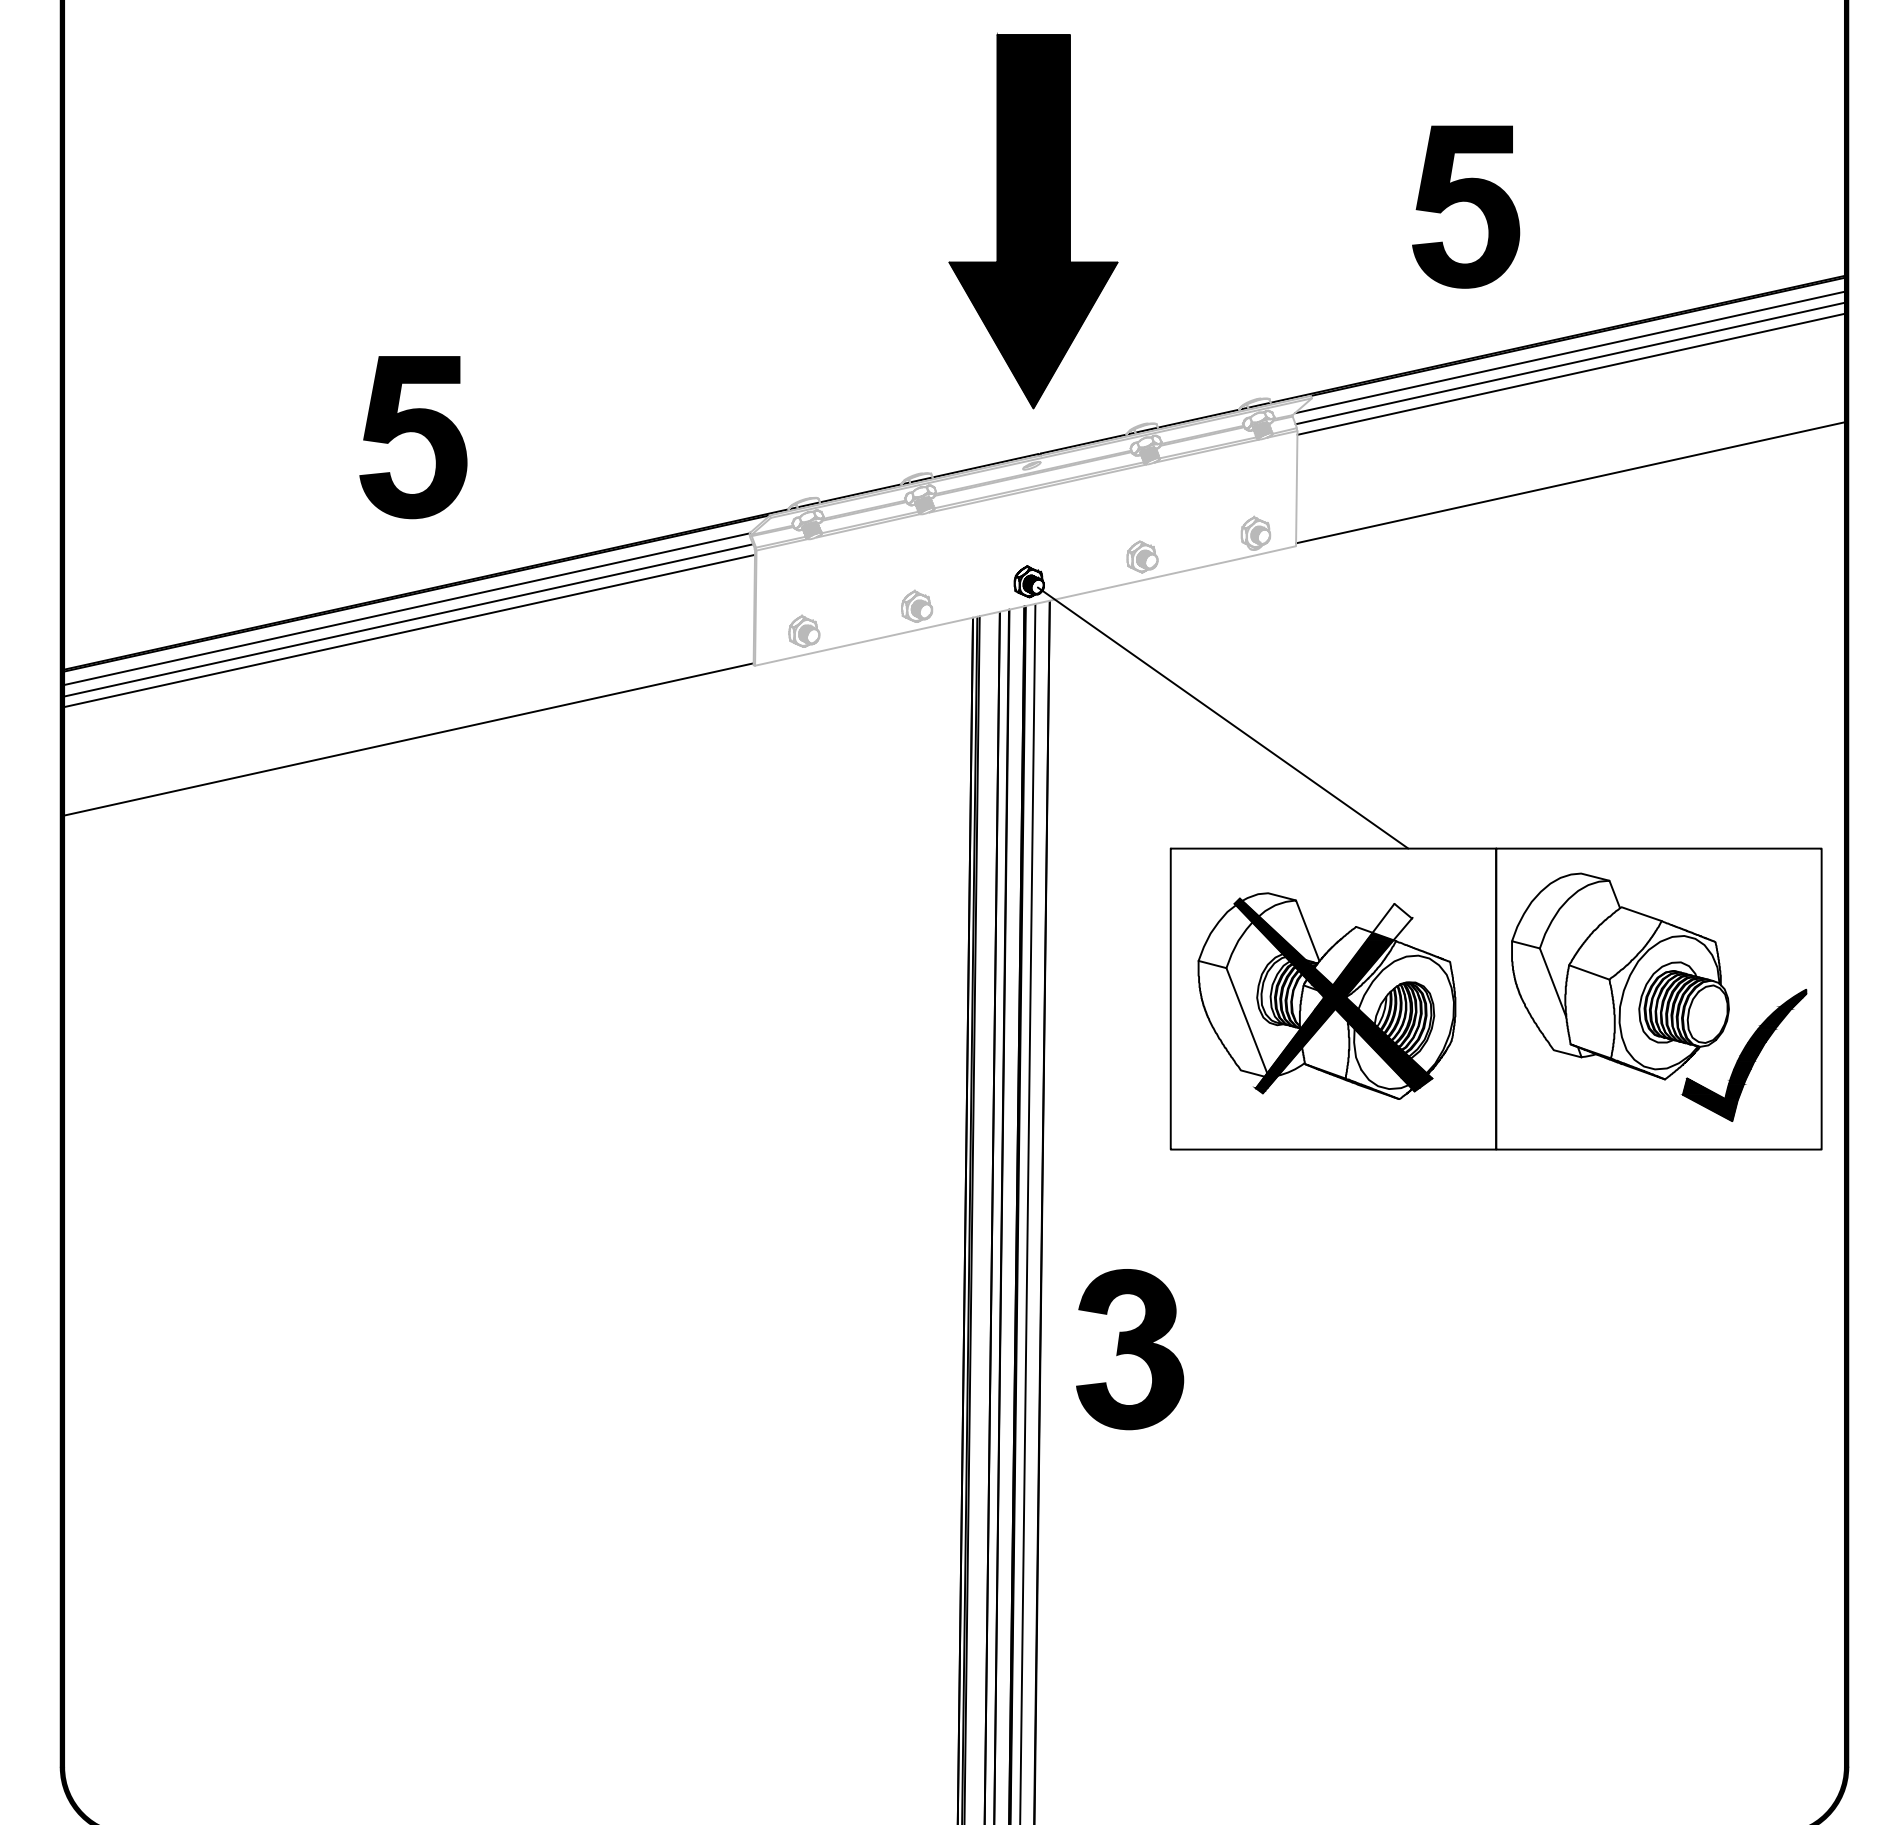


c

X2

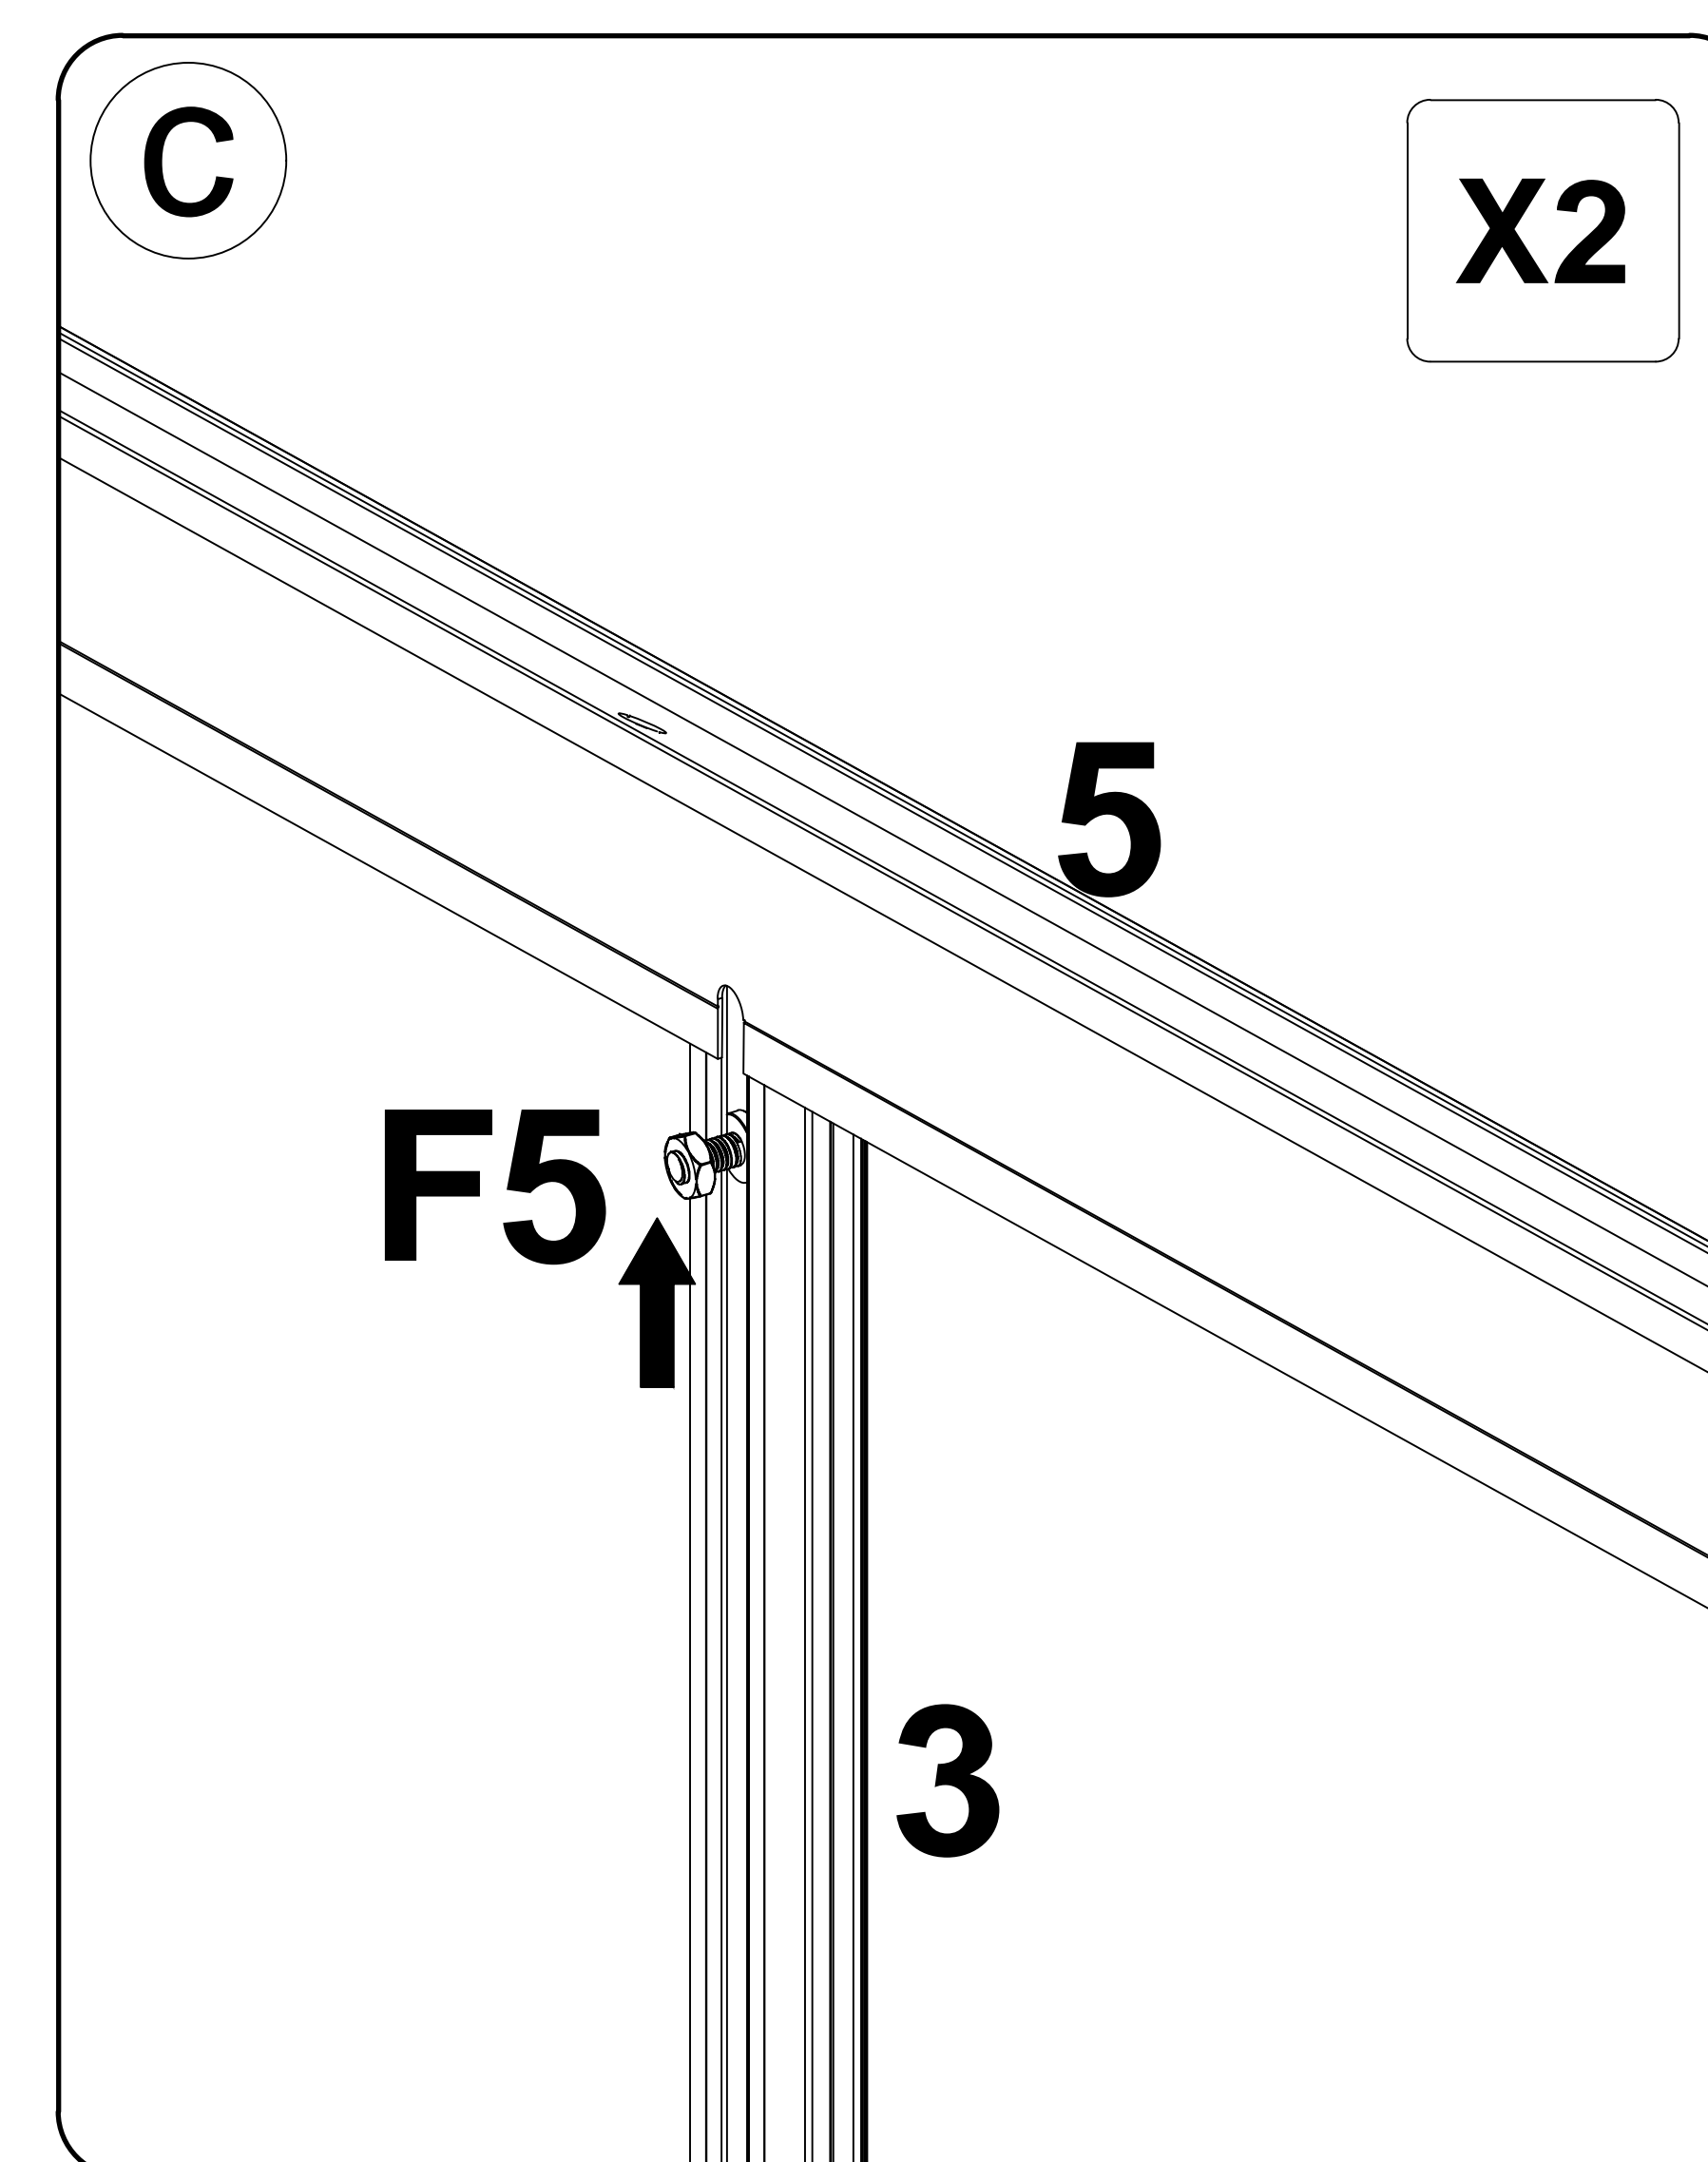










b





X2

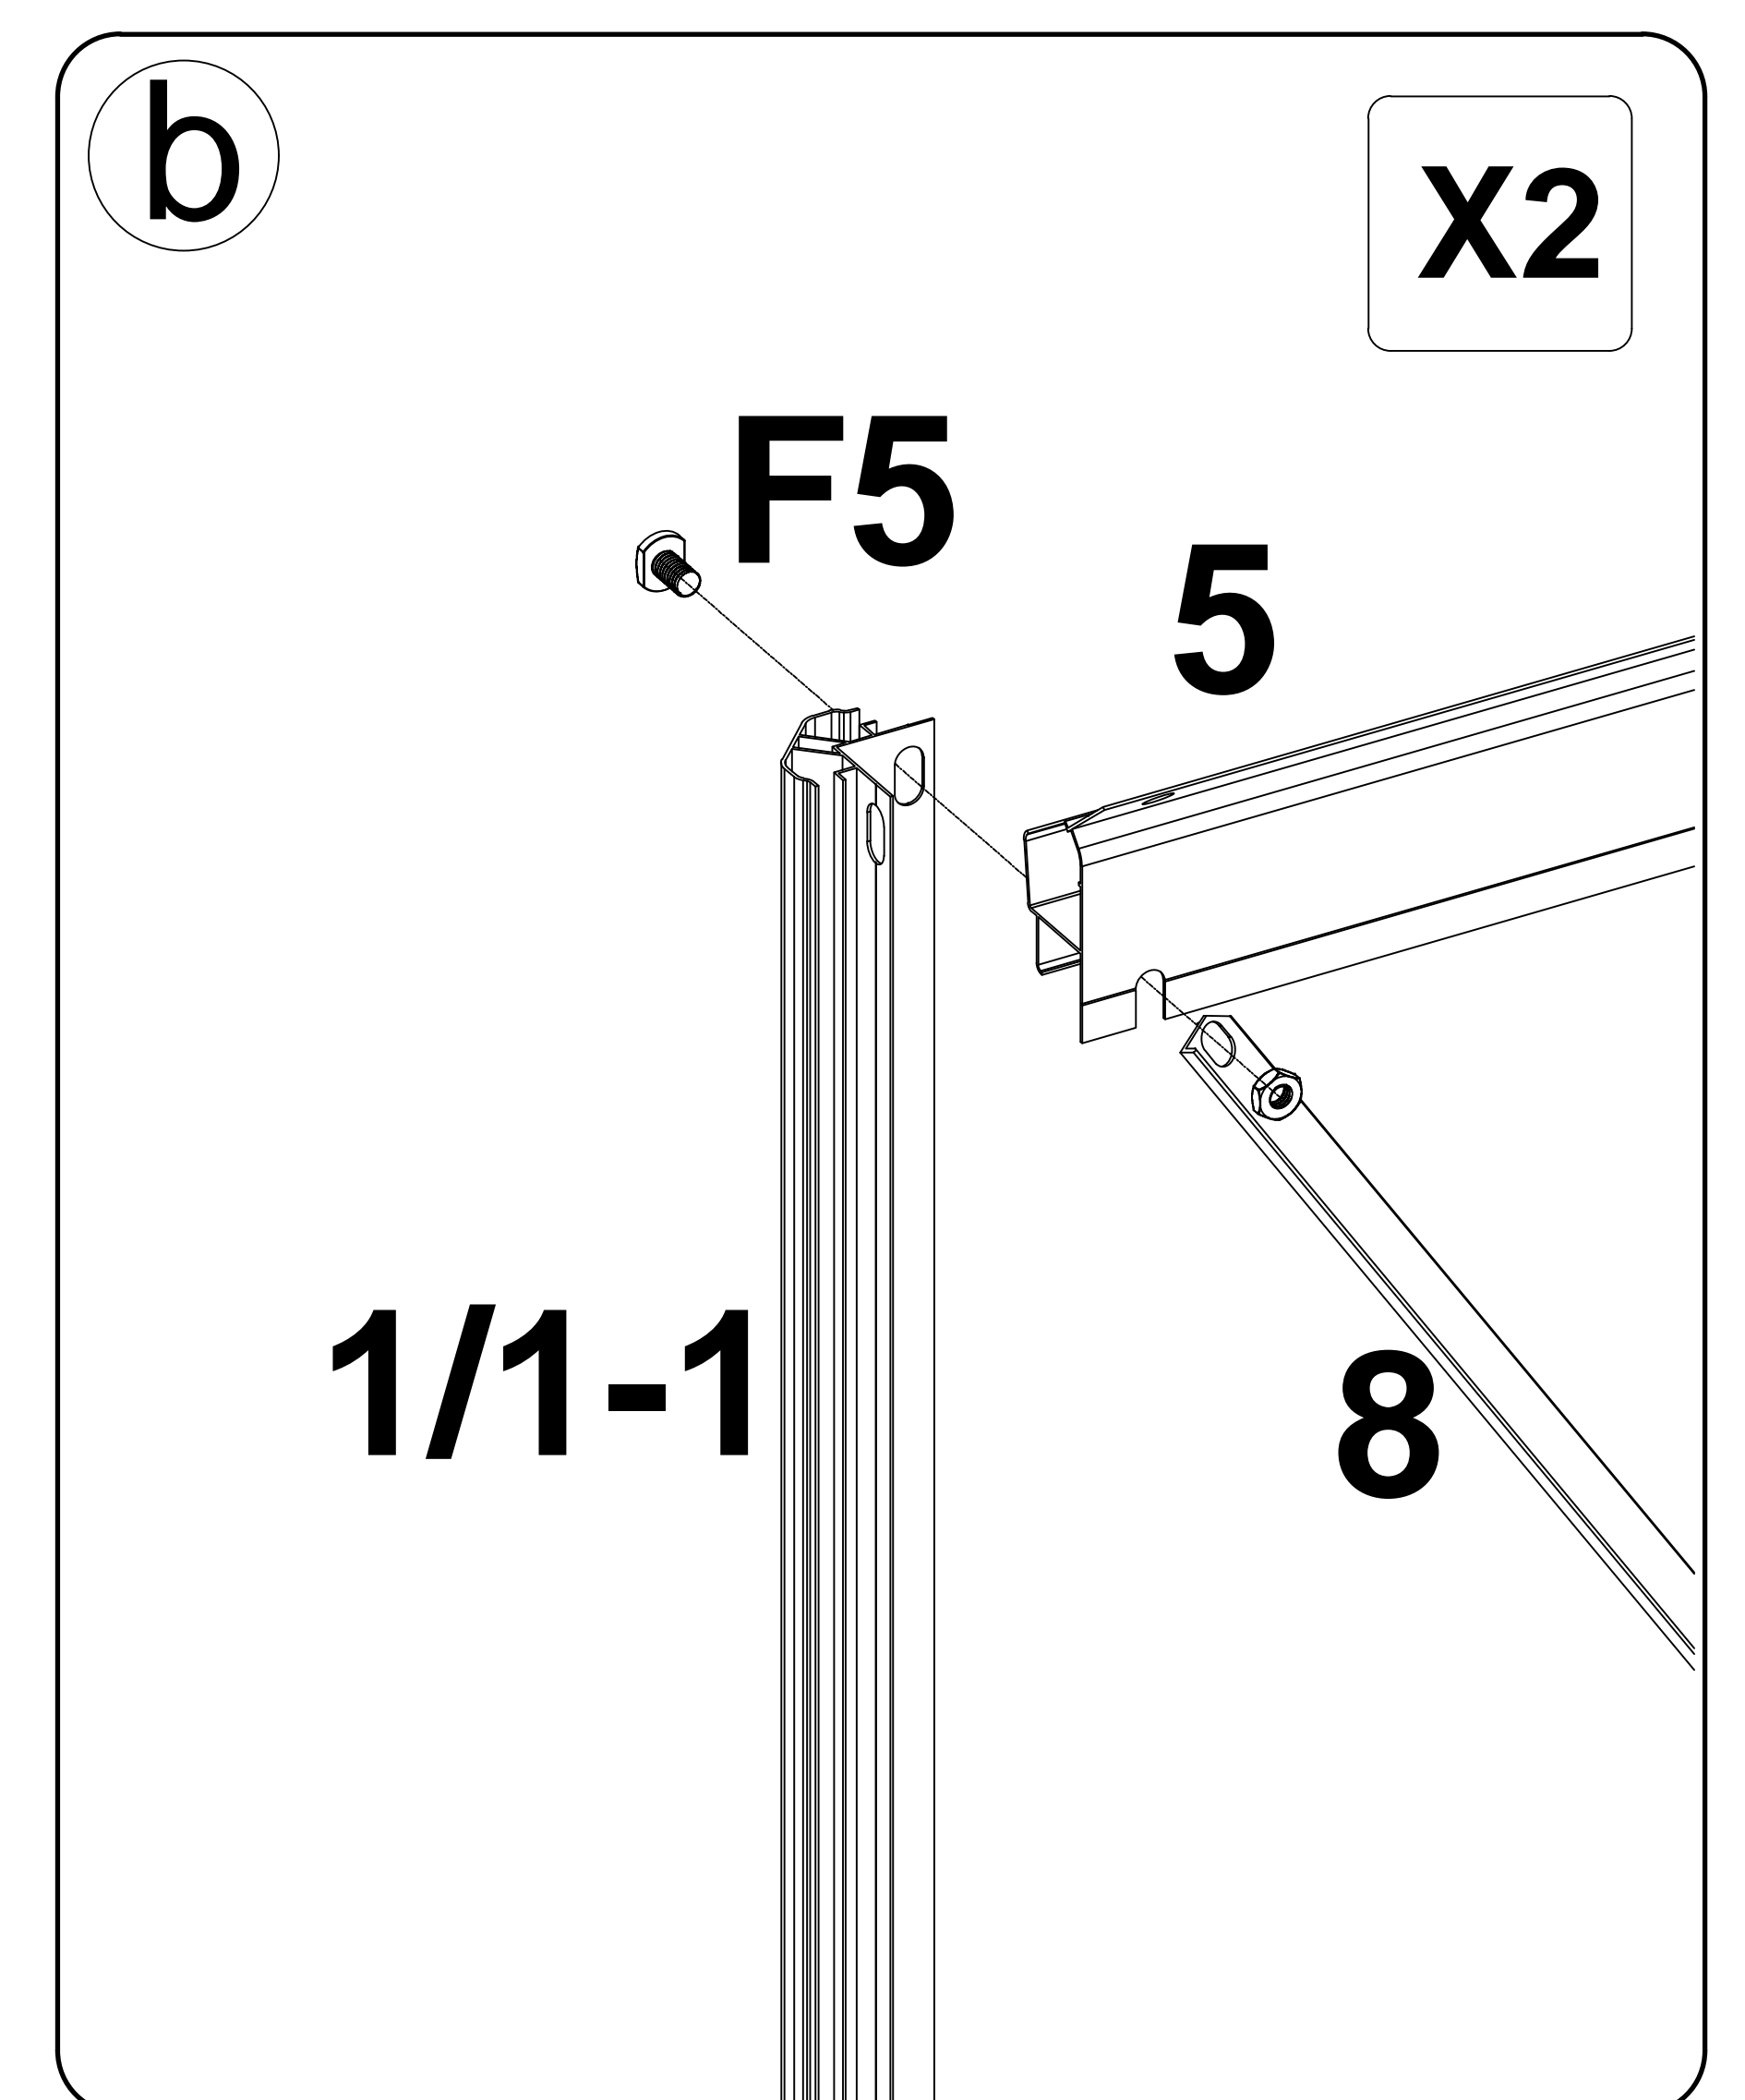



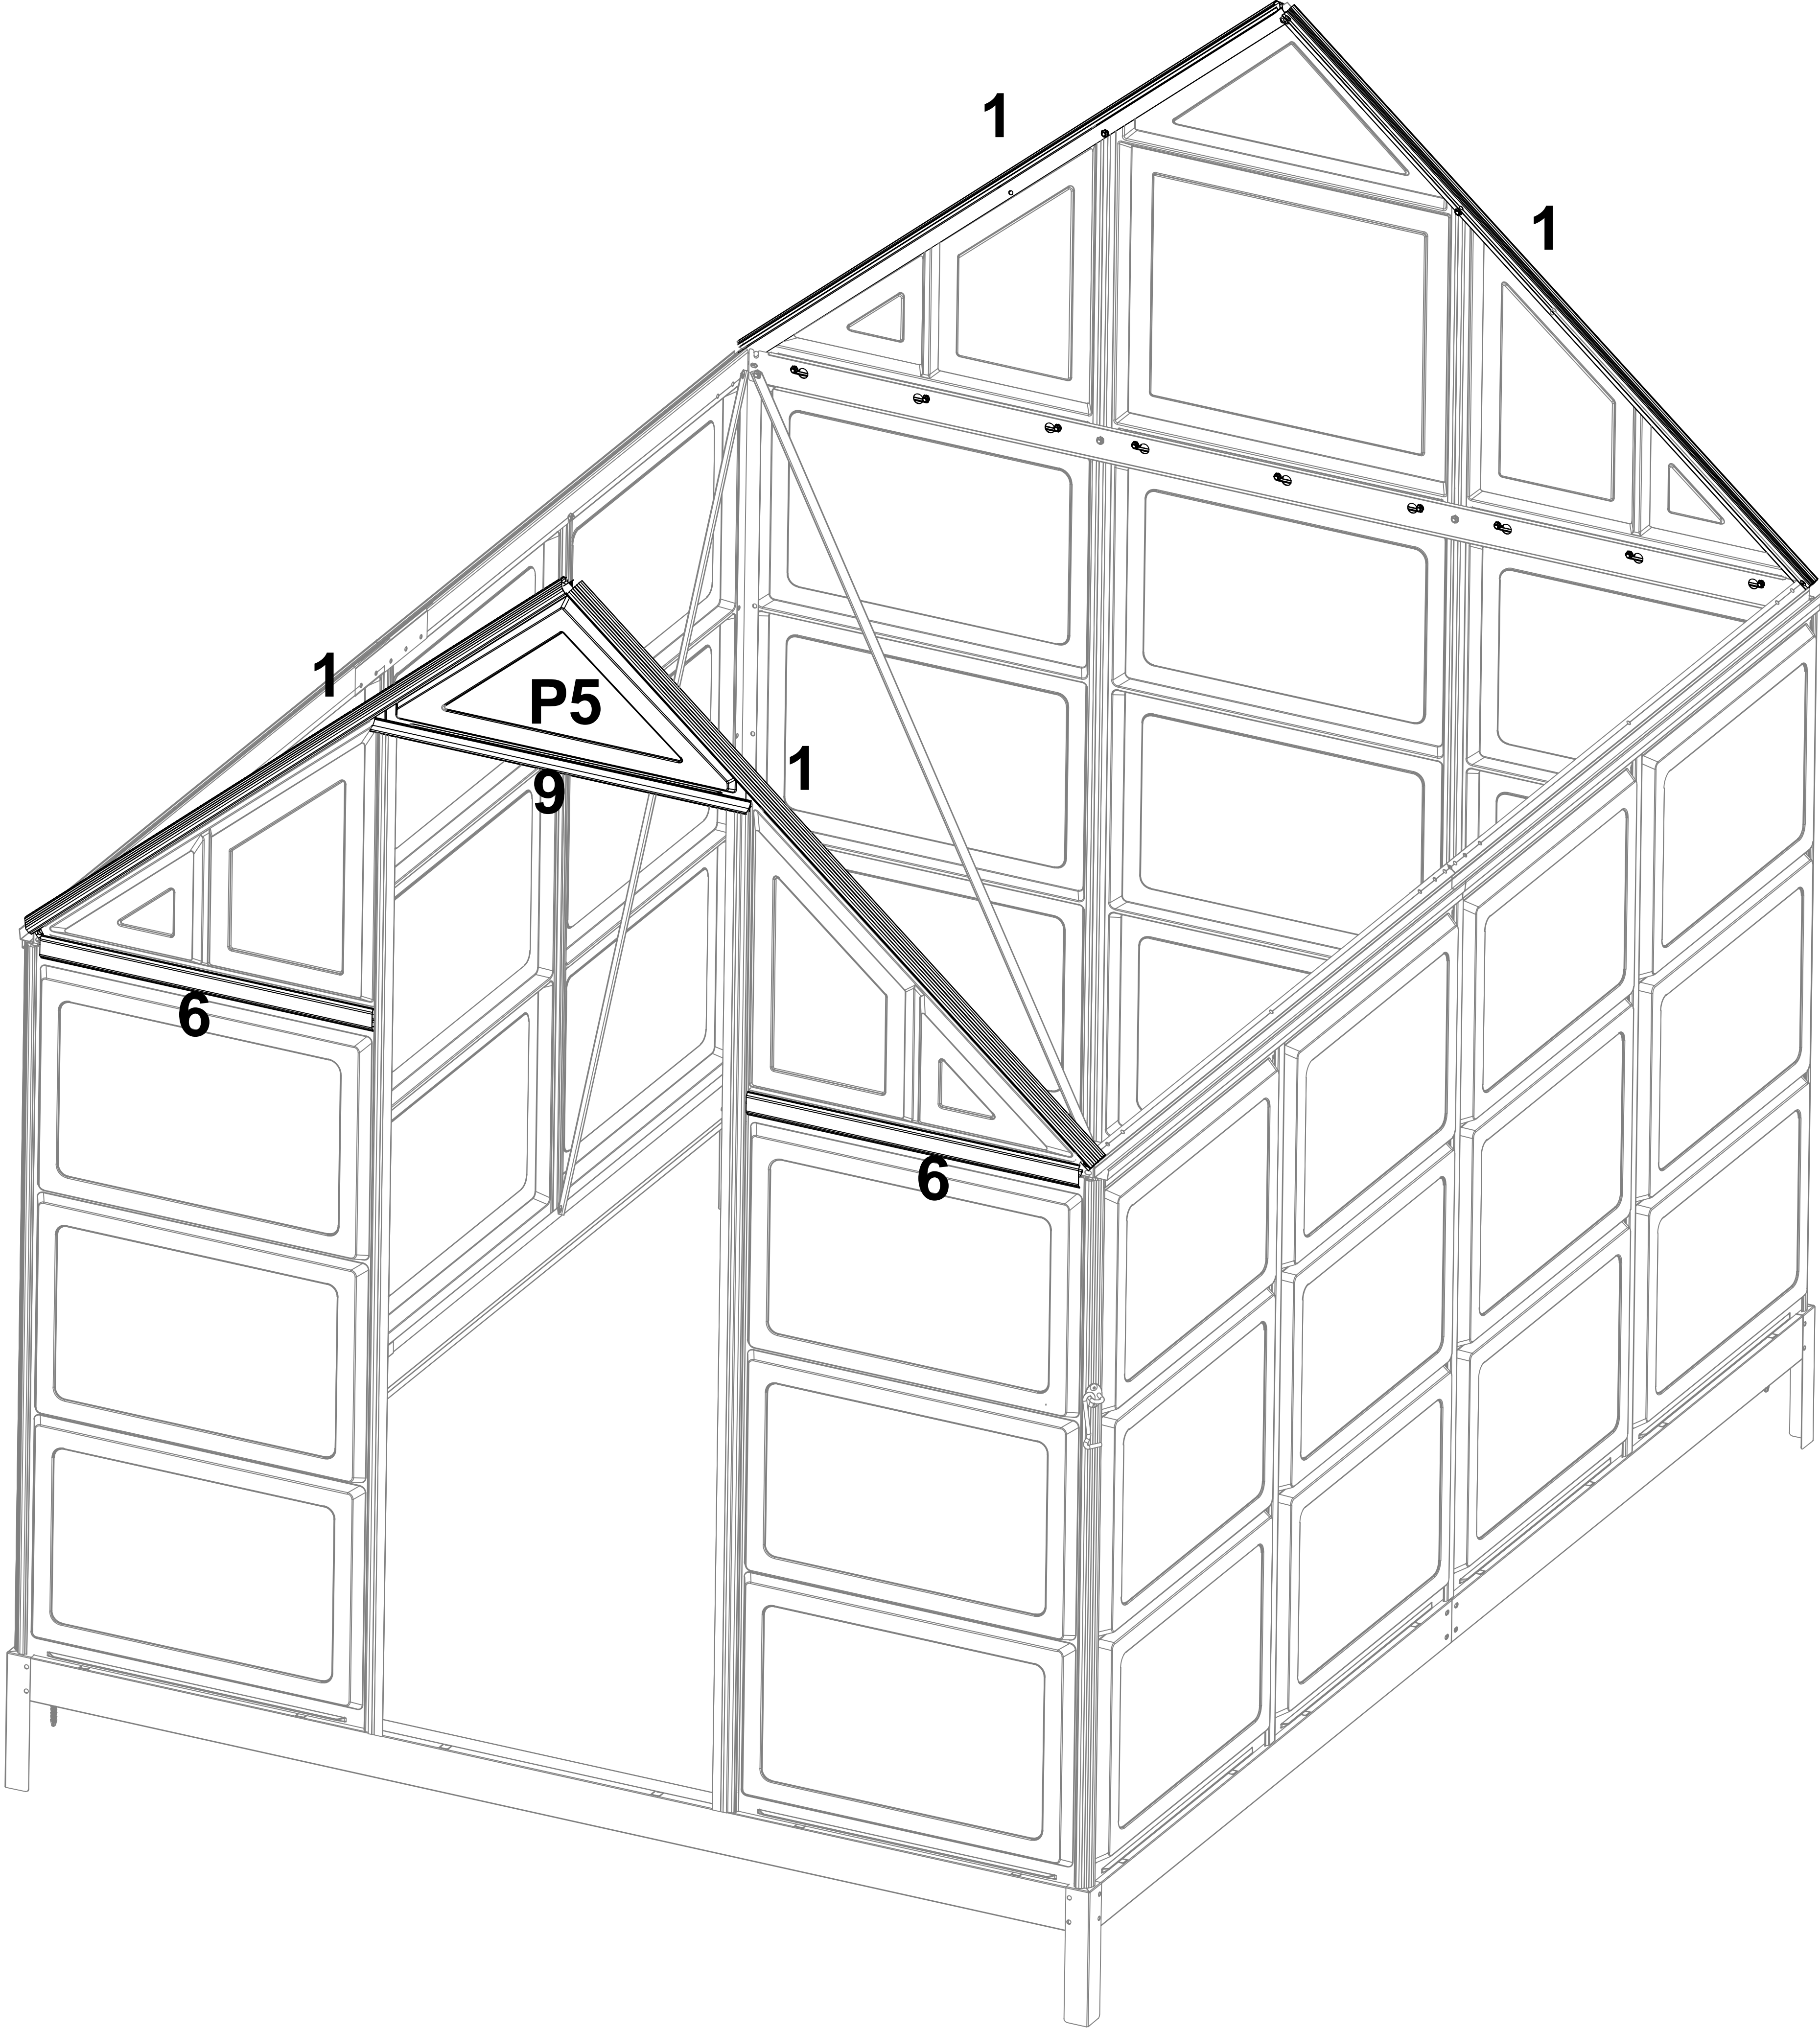


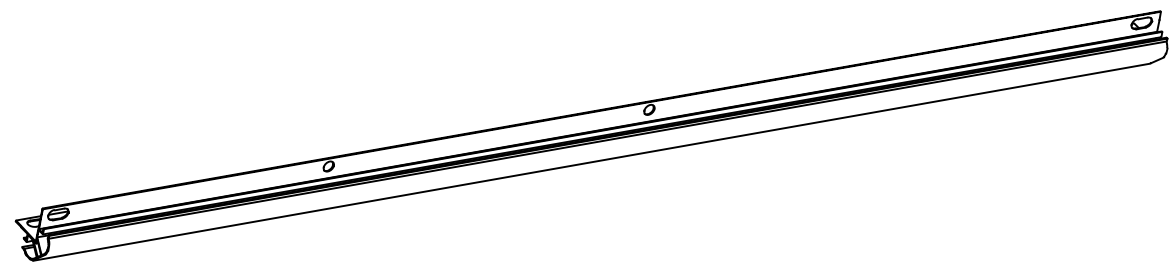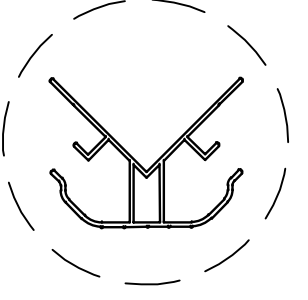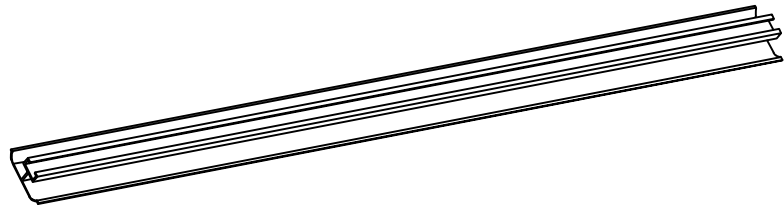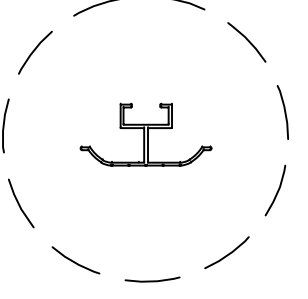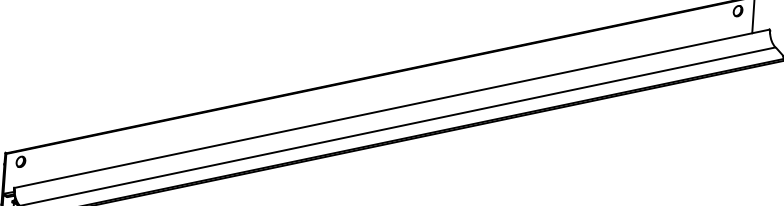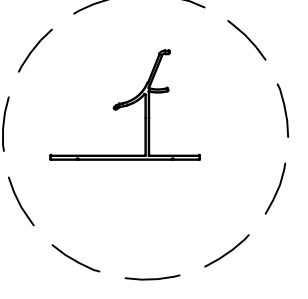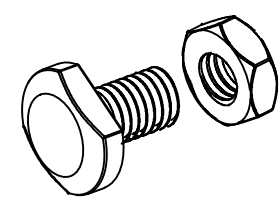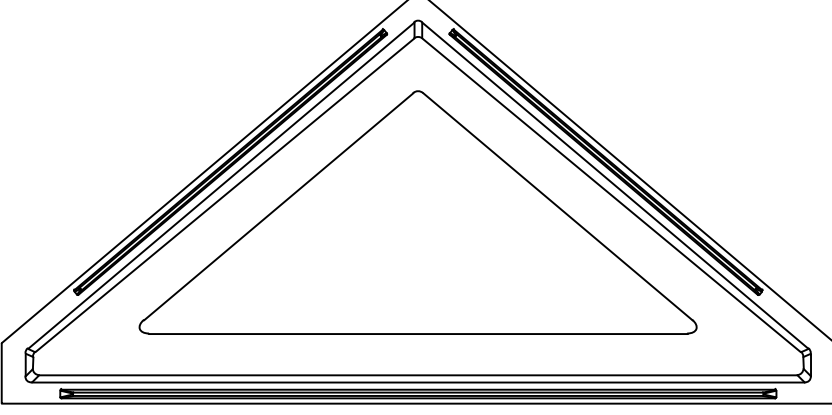				MM
1		4 PCS		1170
6		5 PCS		560
9		1 PCS		628
F5		29 PCS		
P5		1 PCS		

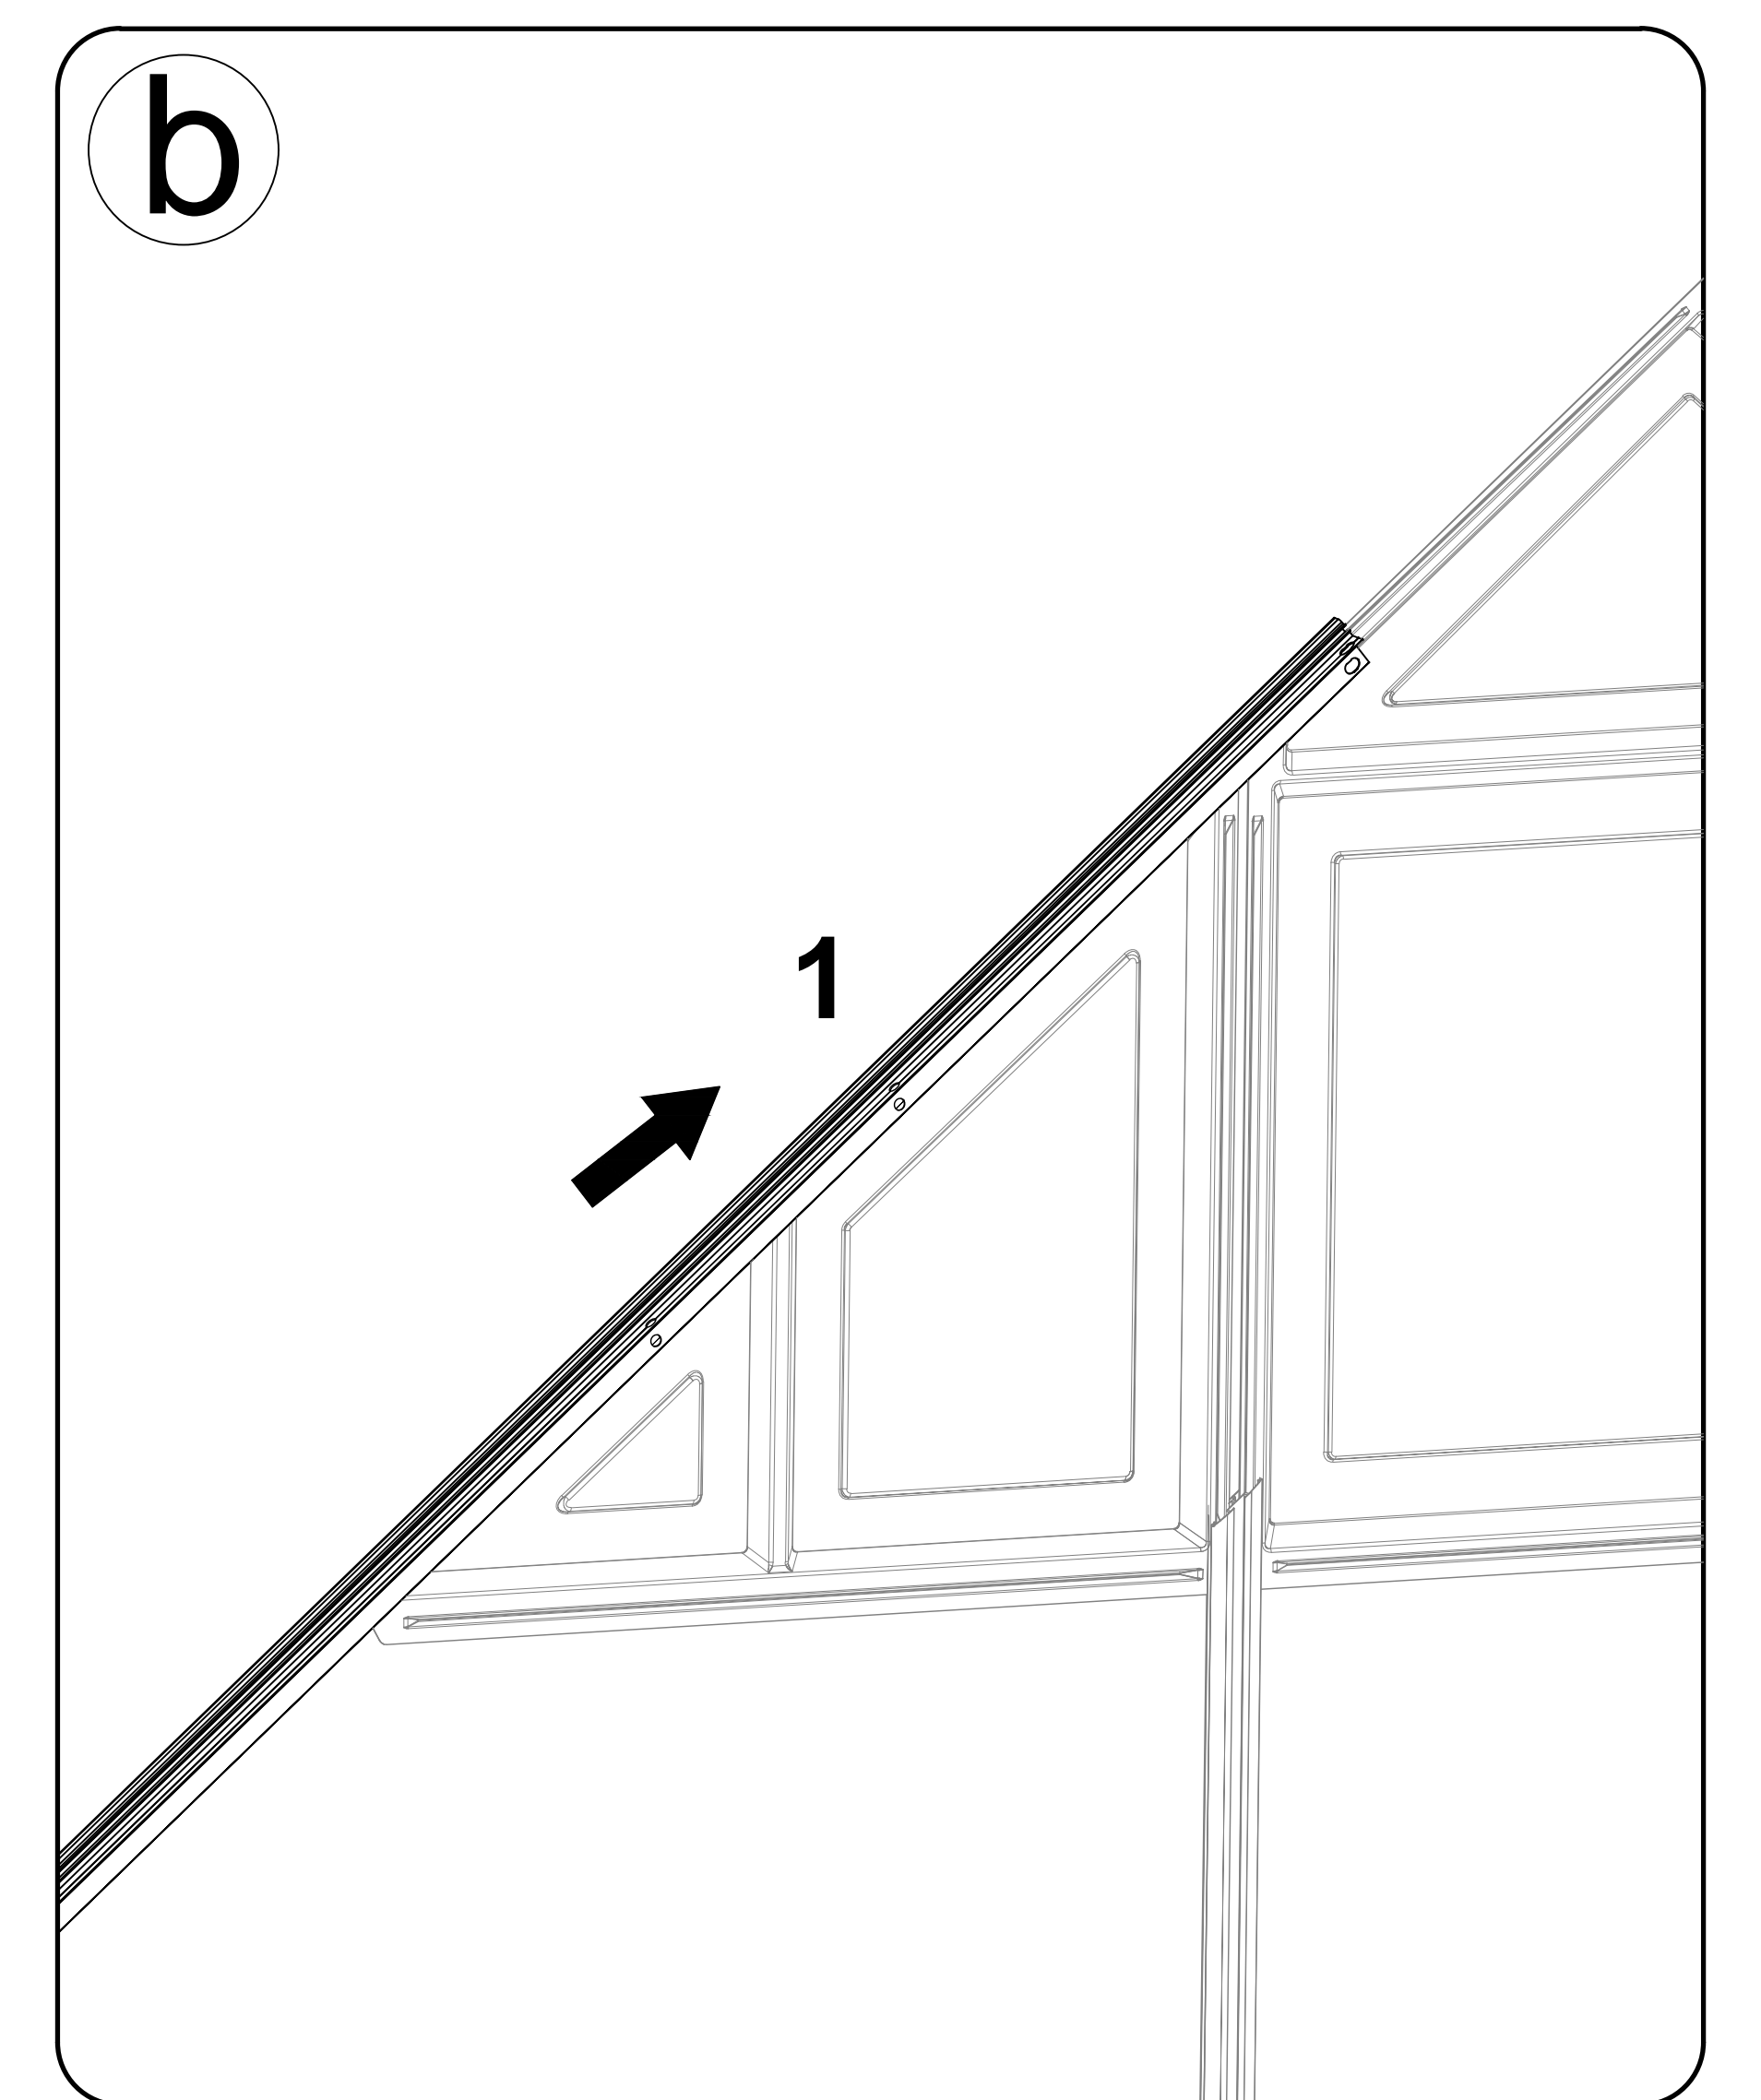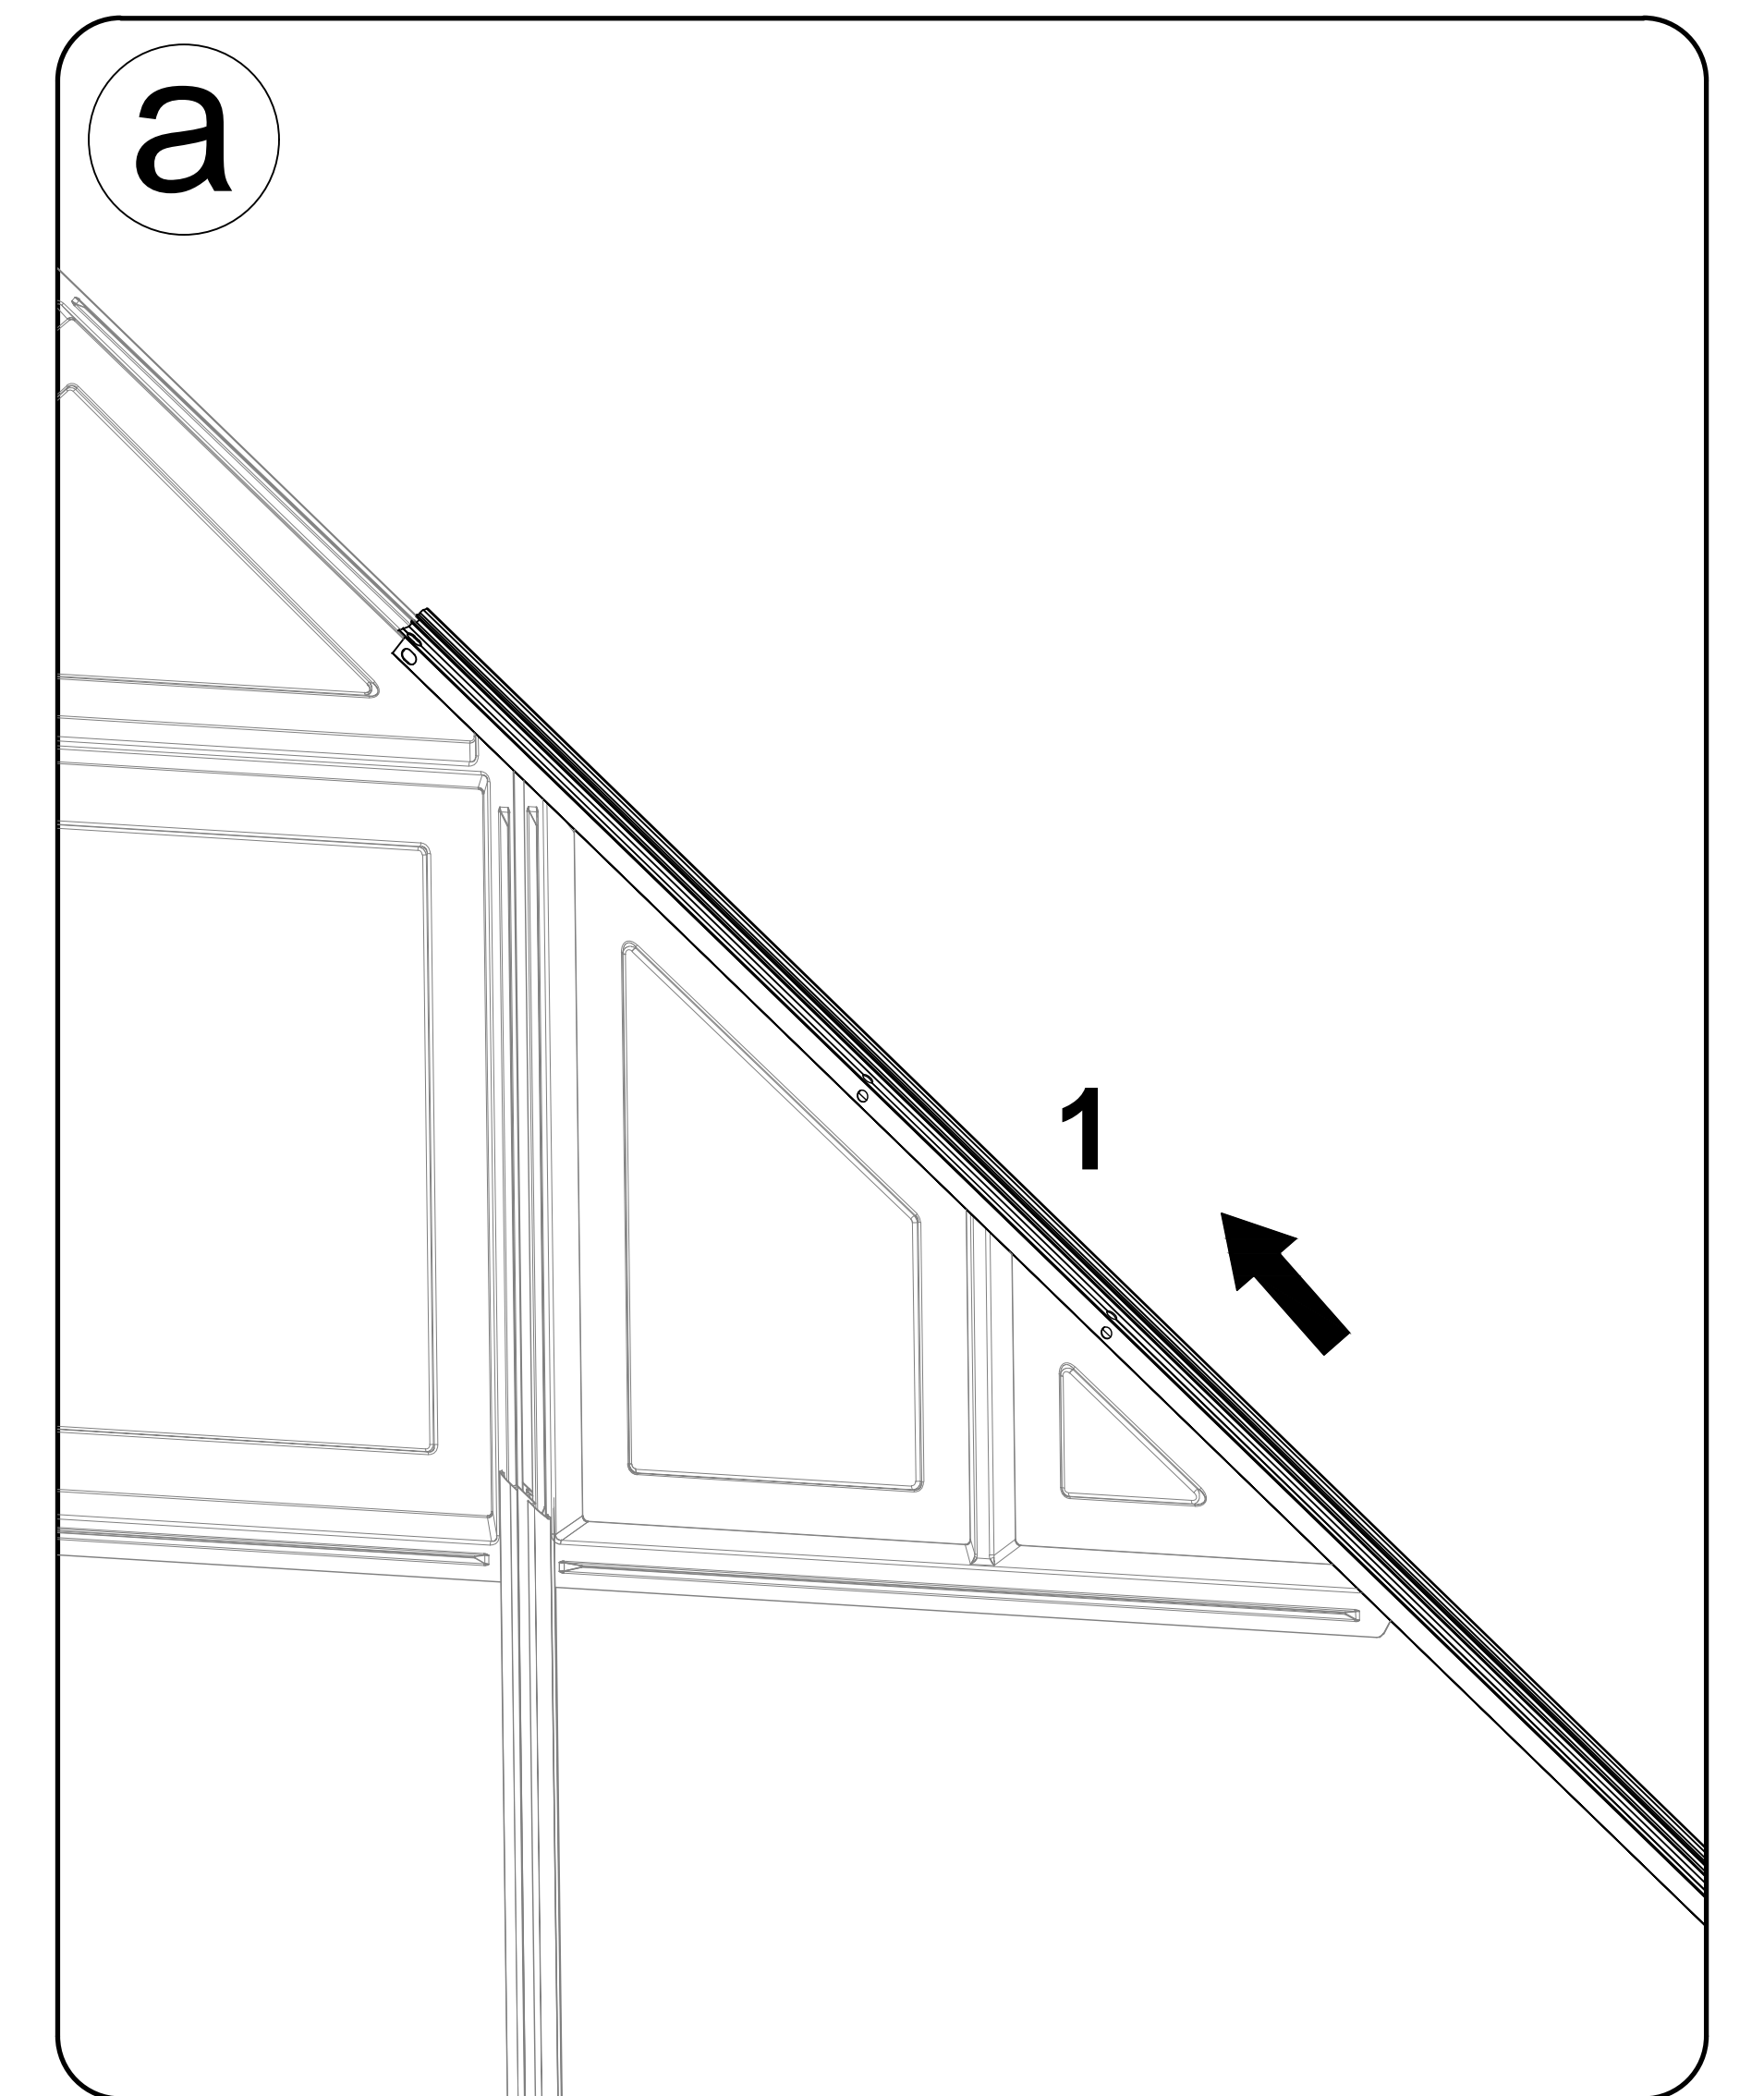
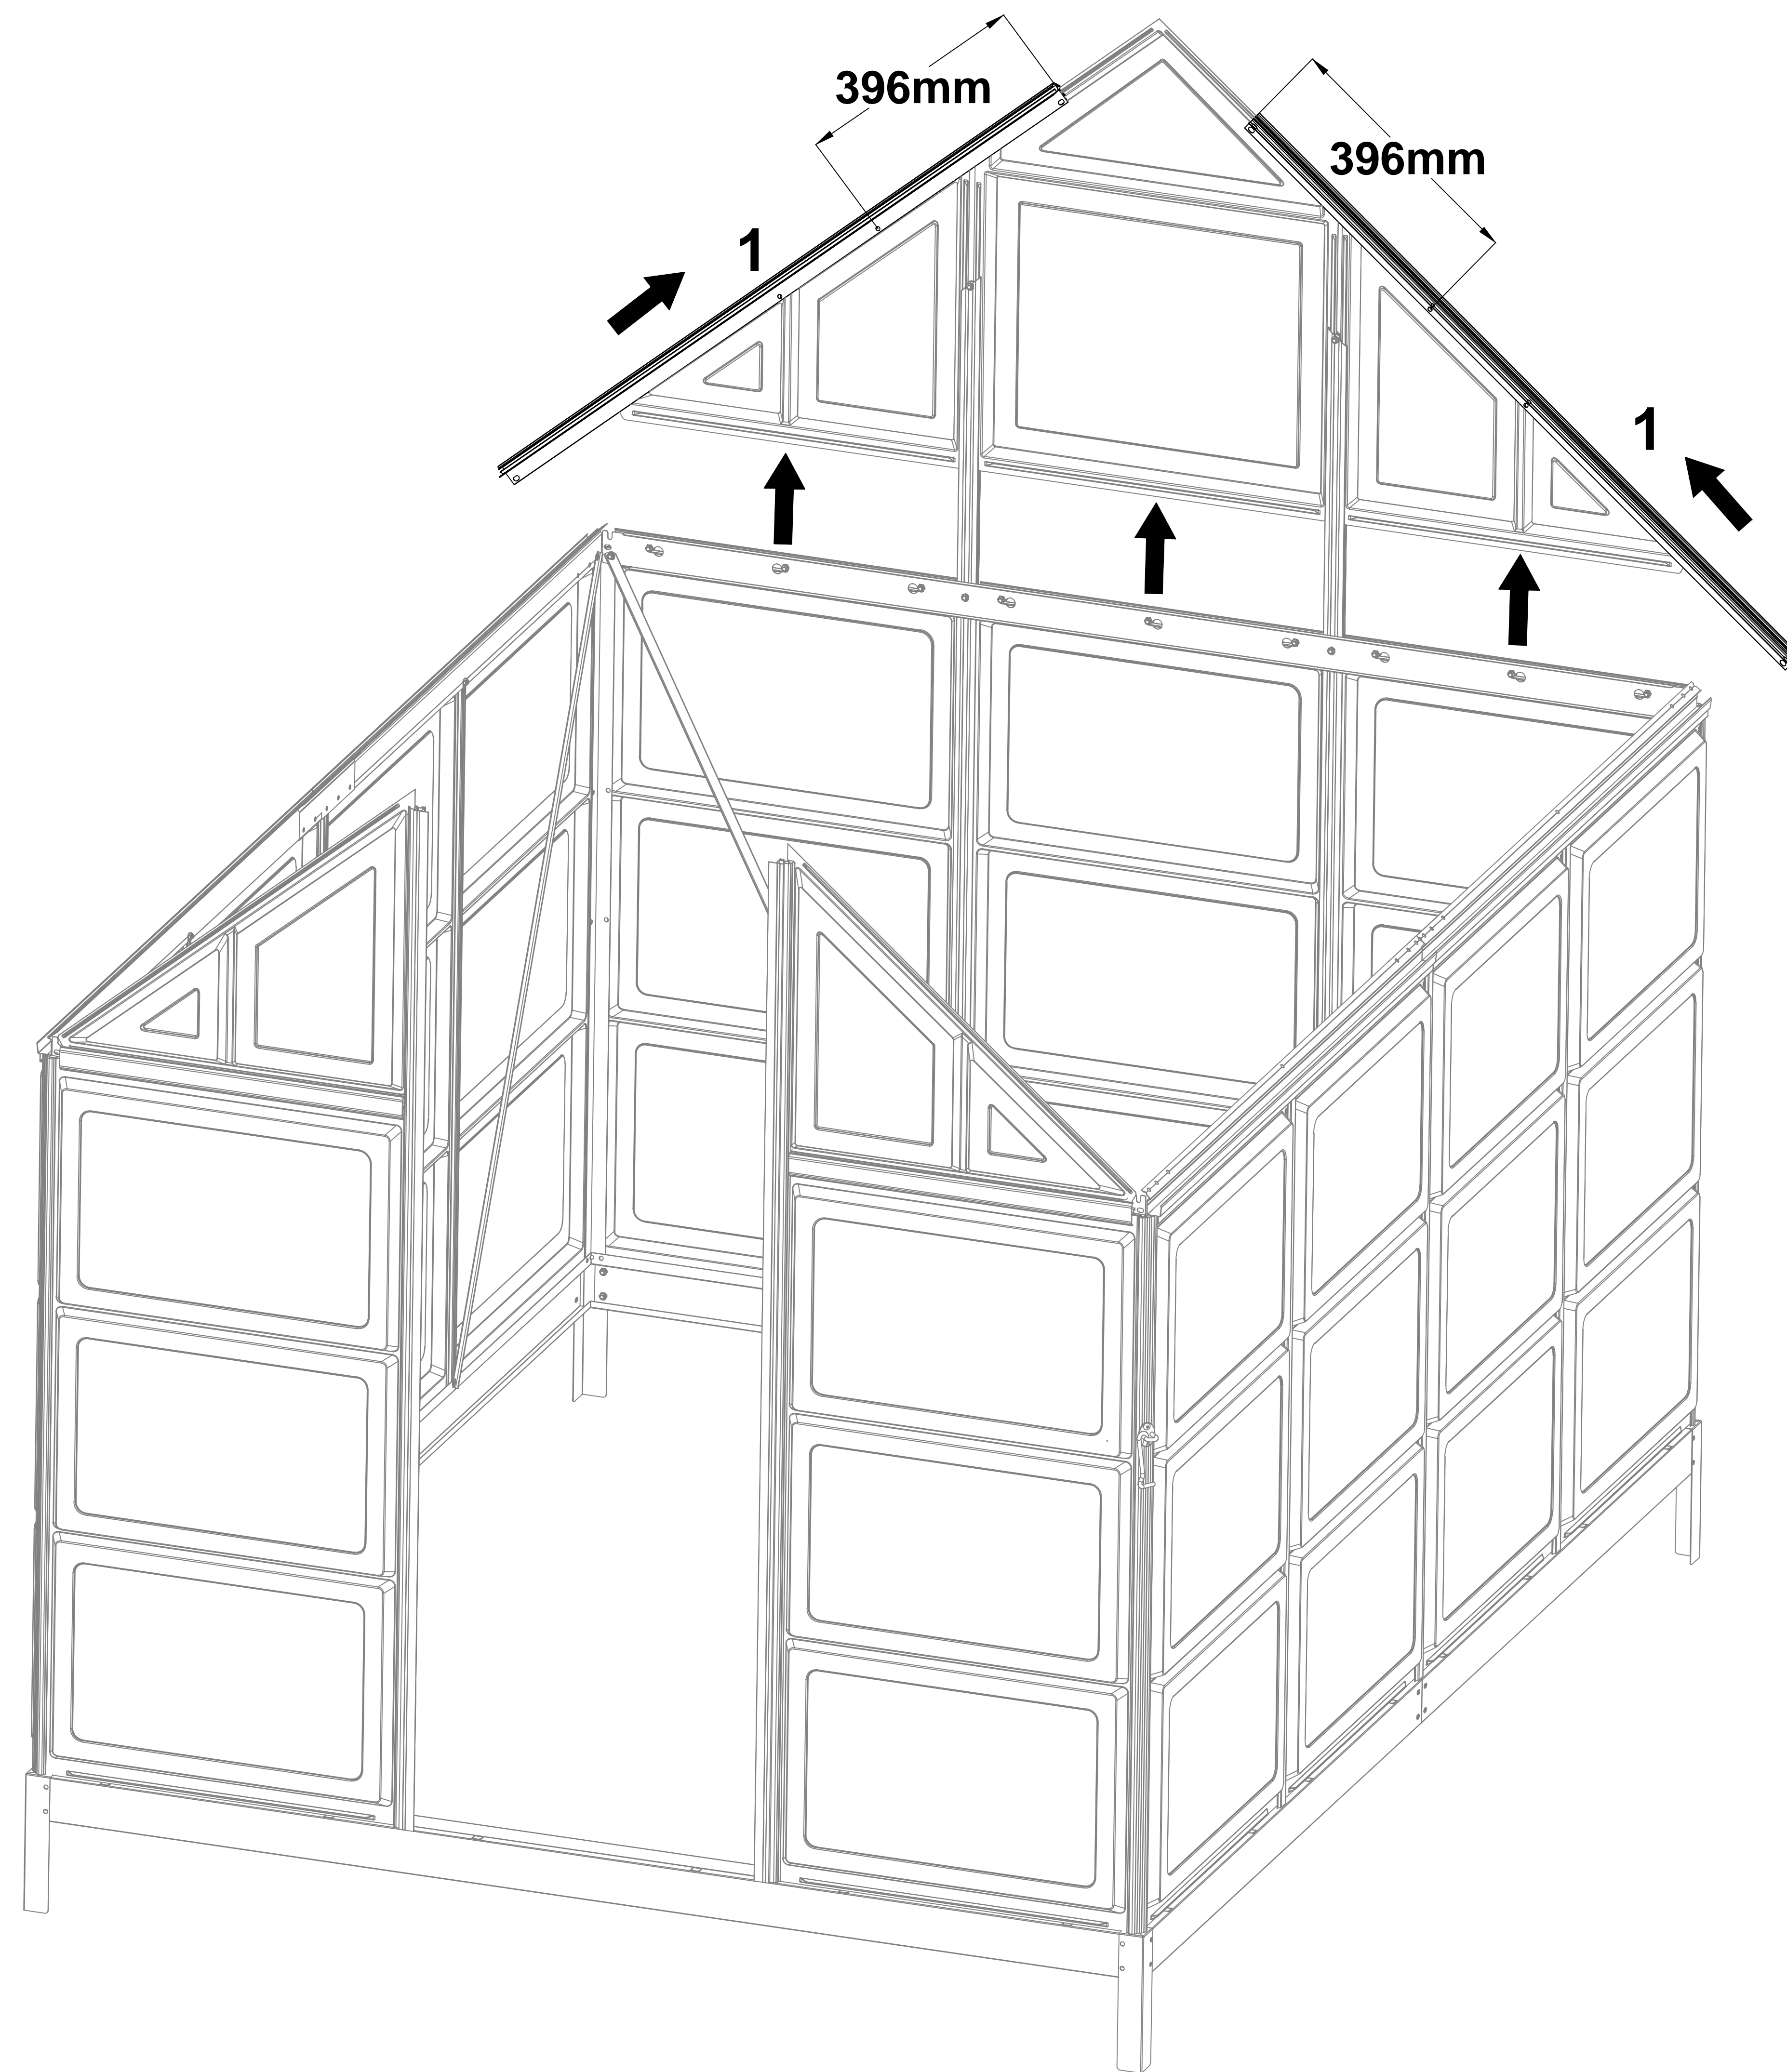
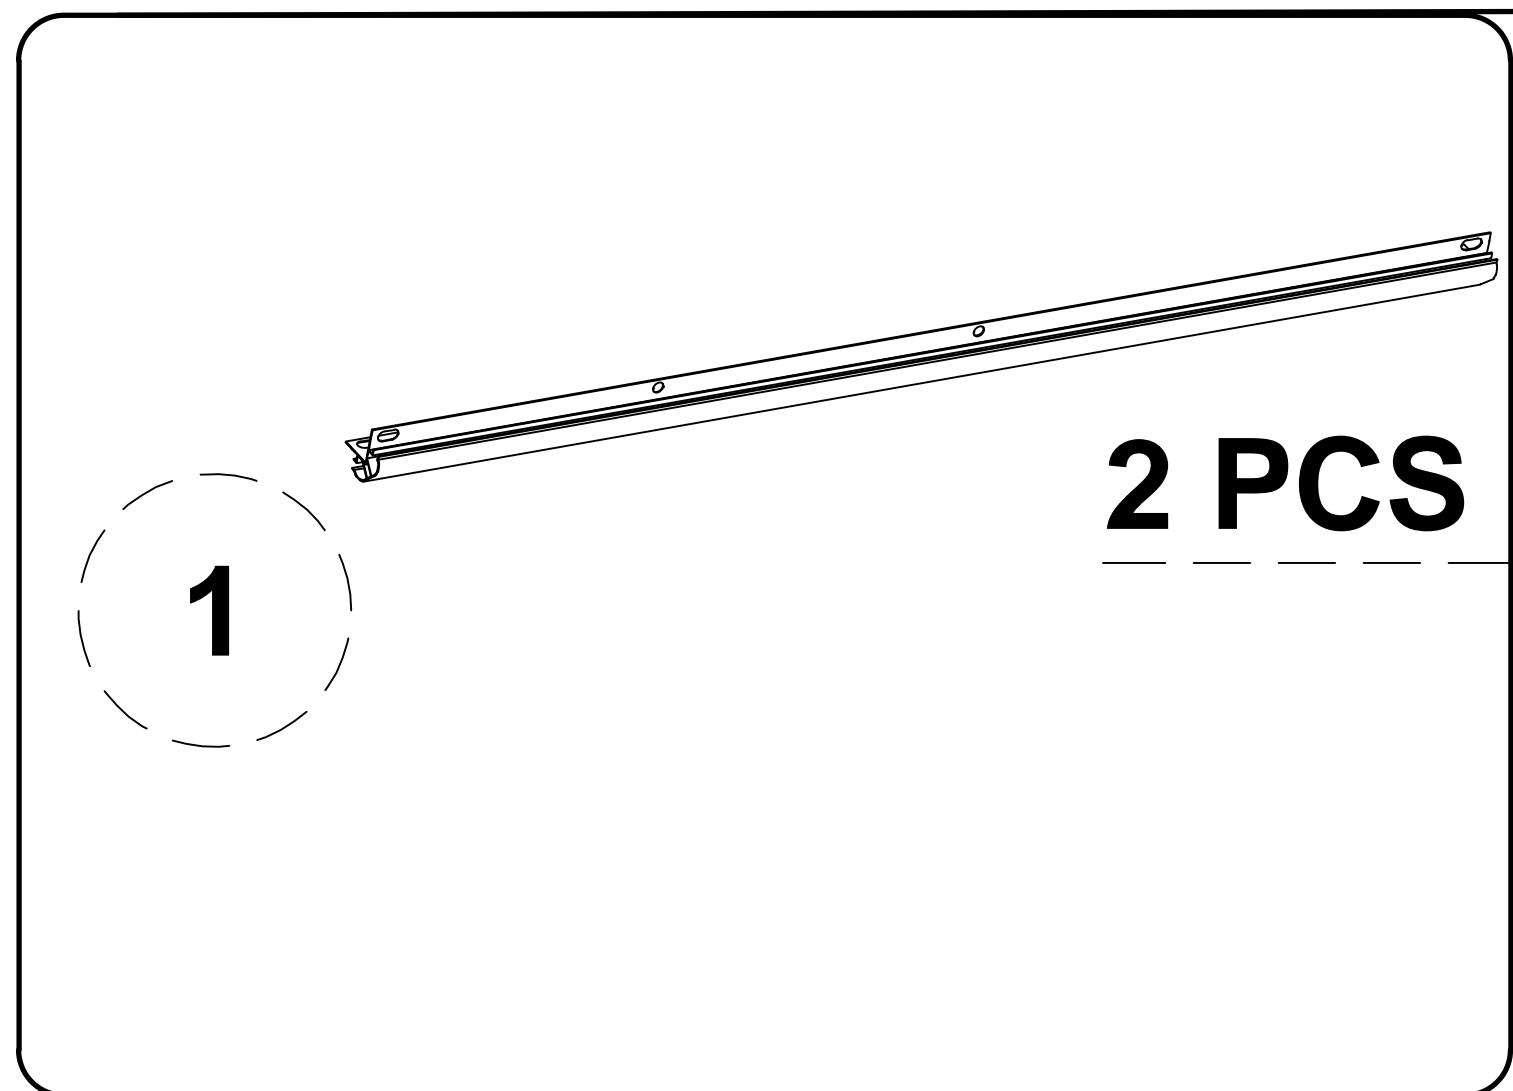





F5

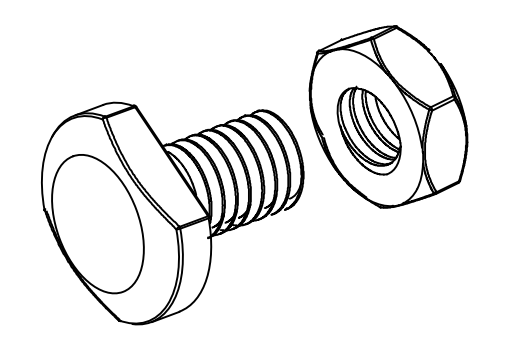




6 PCS

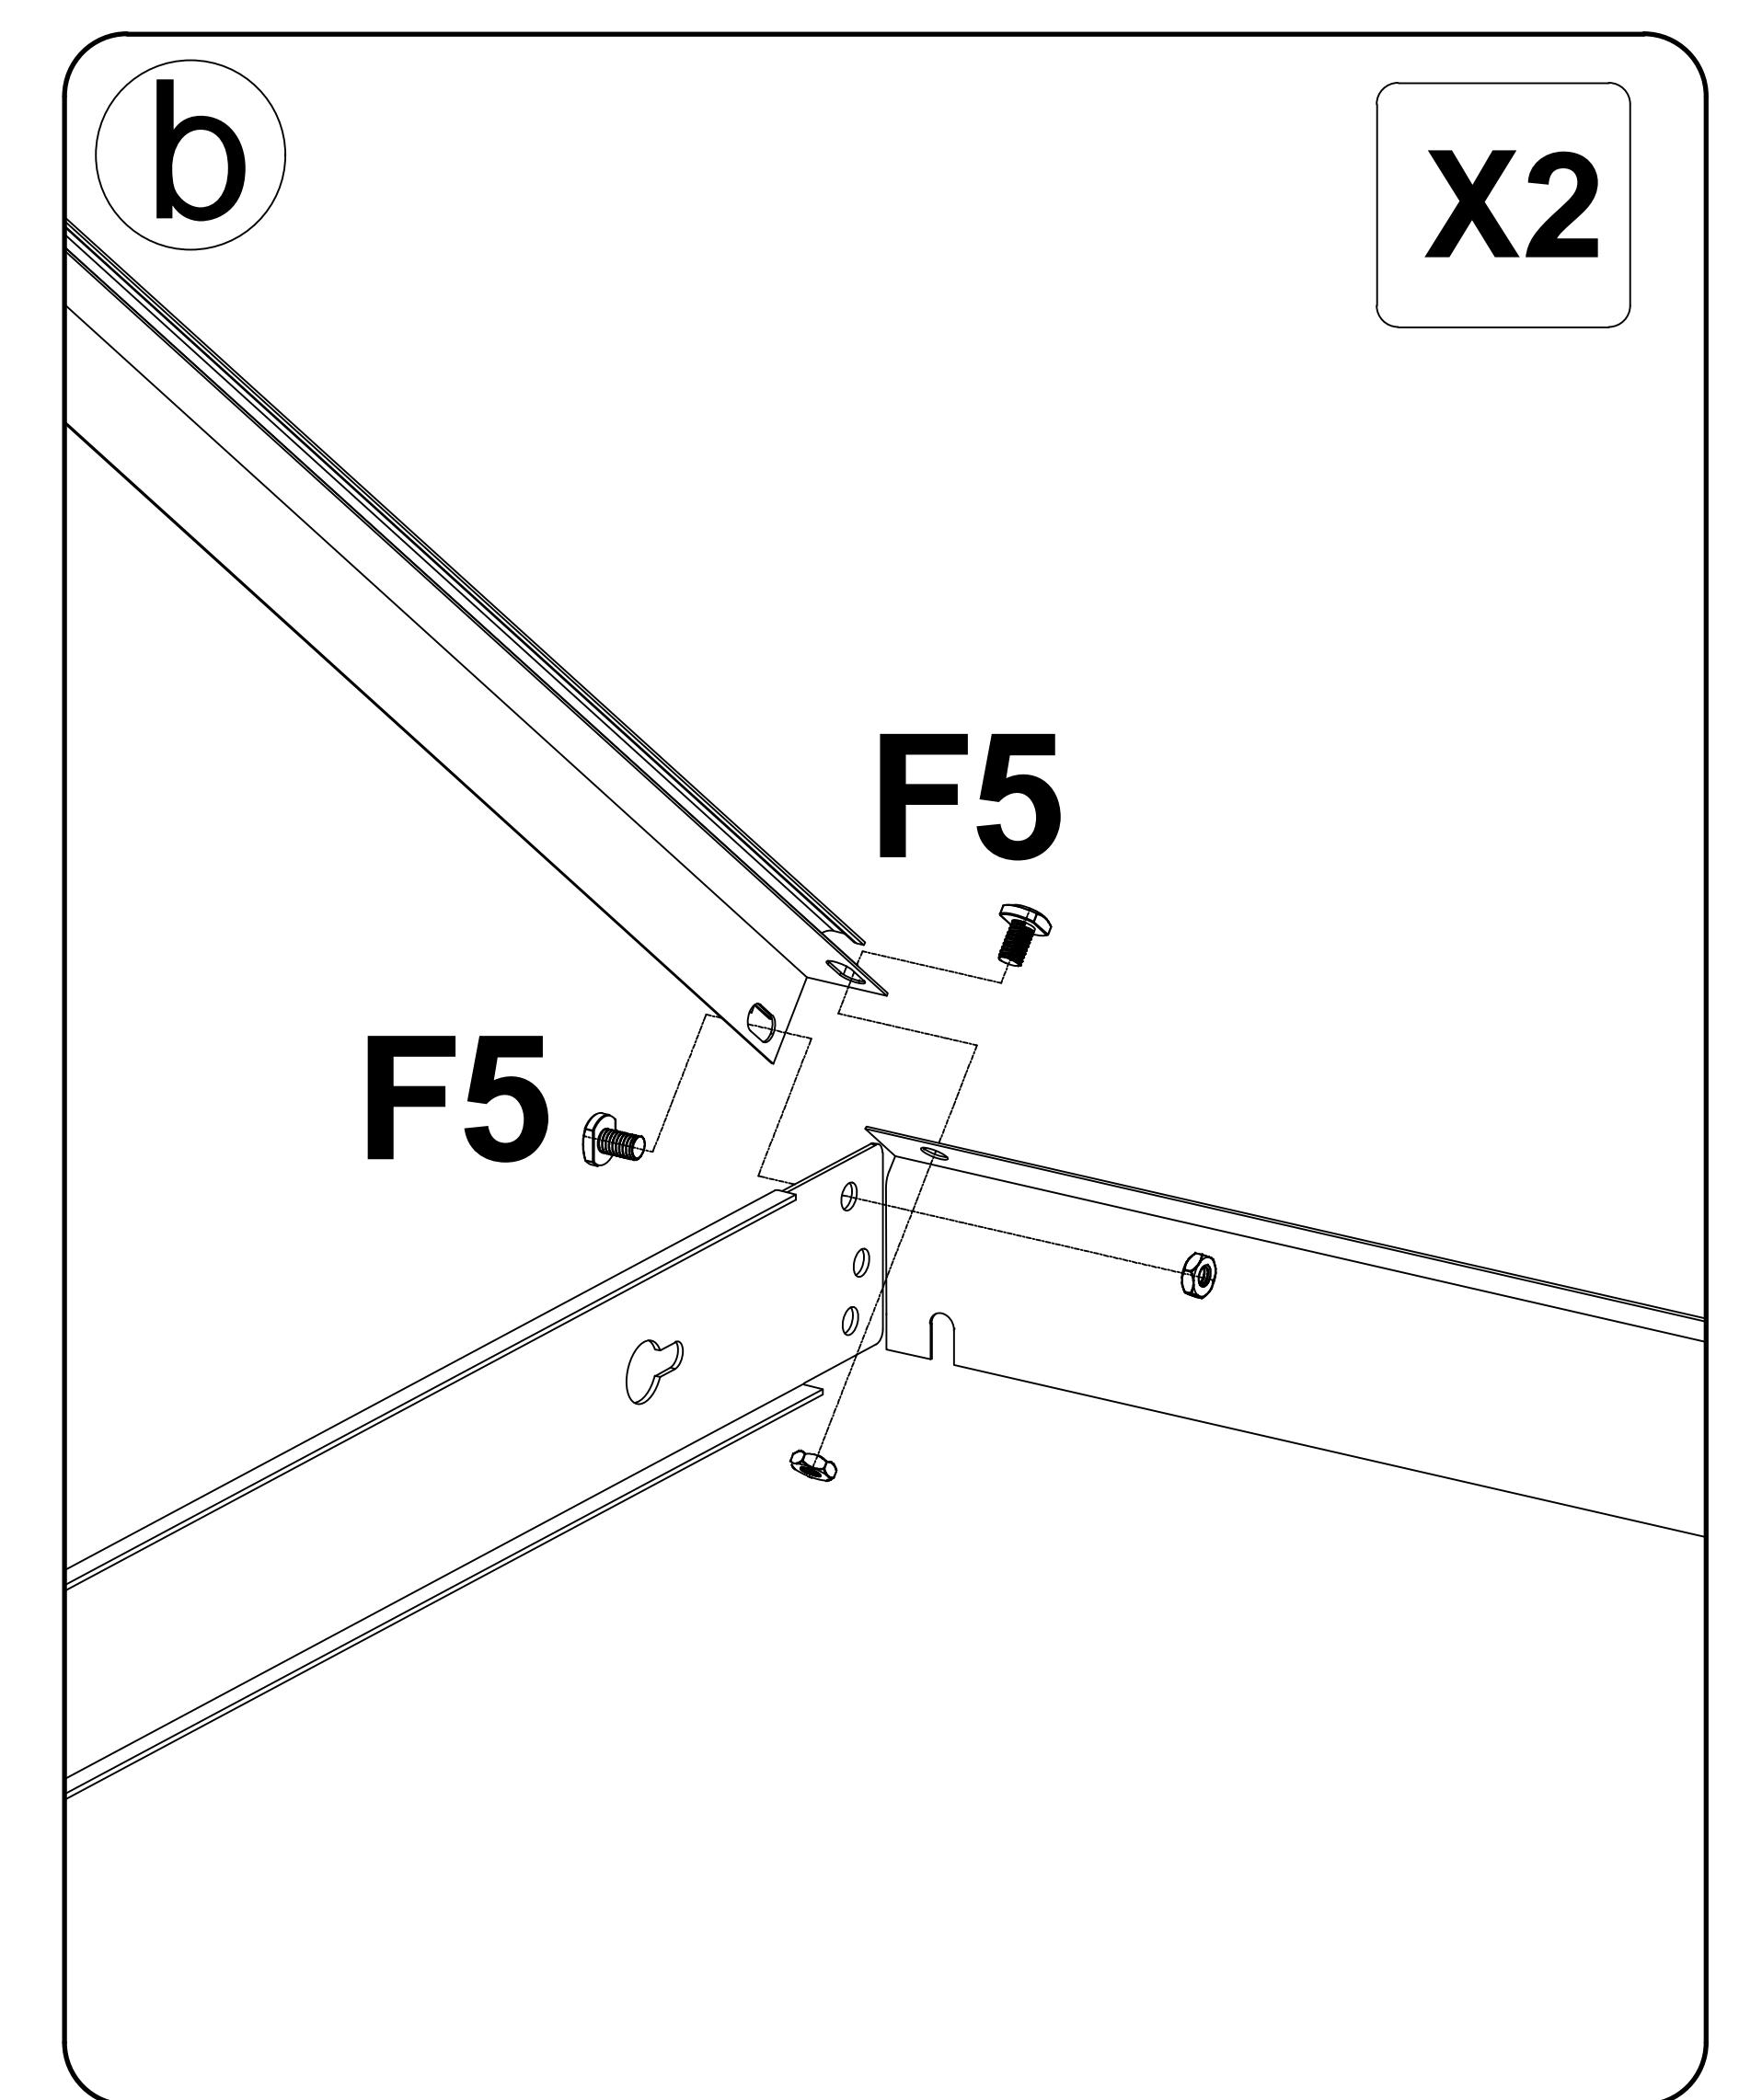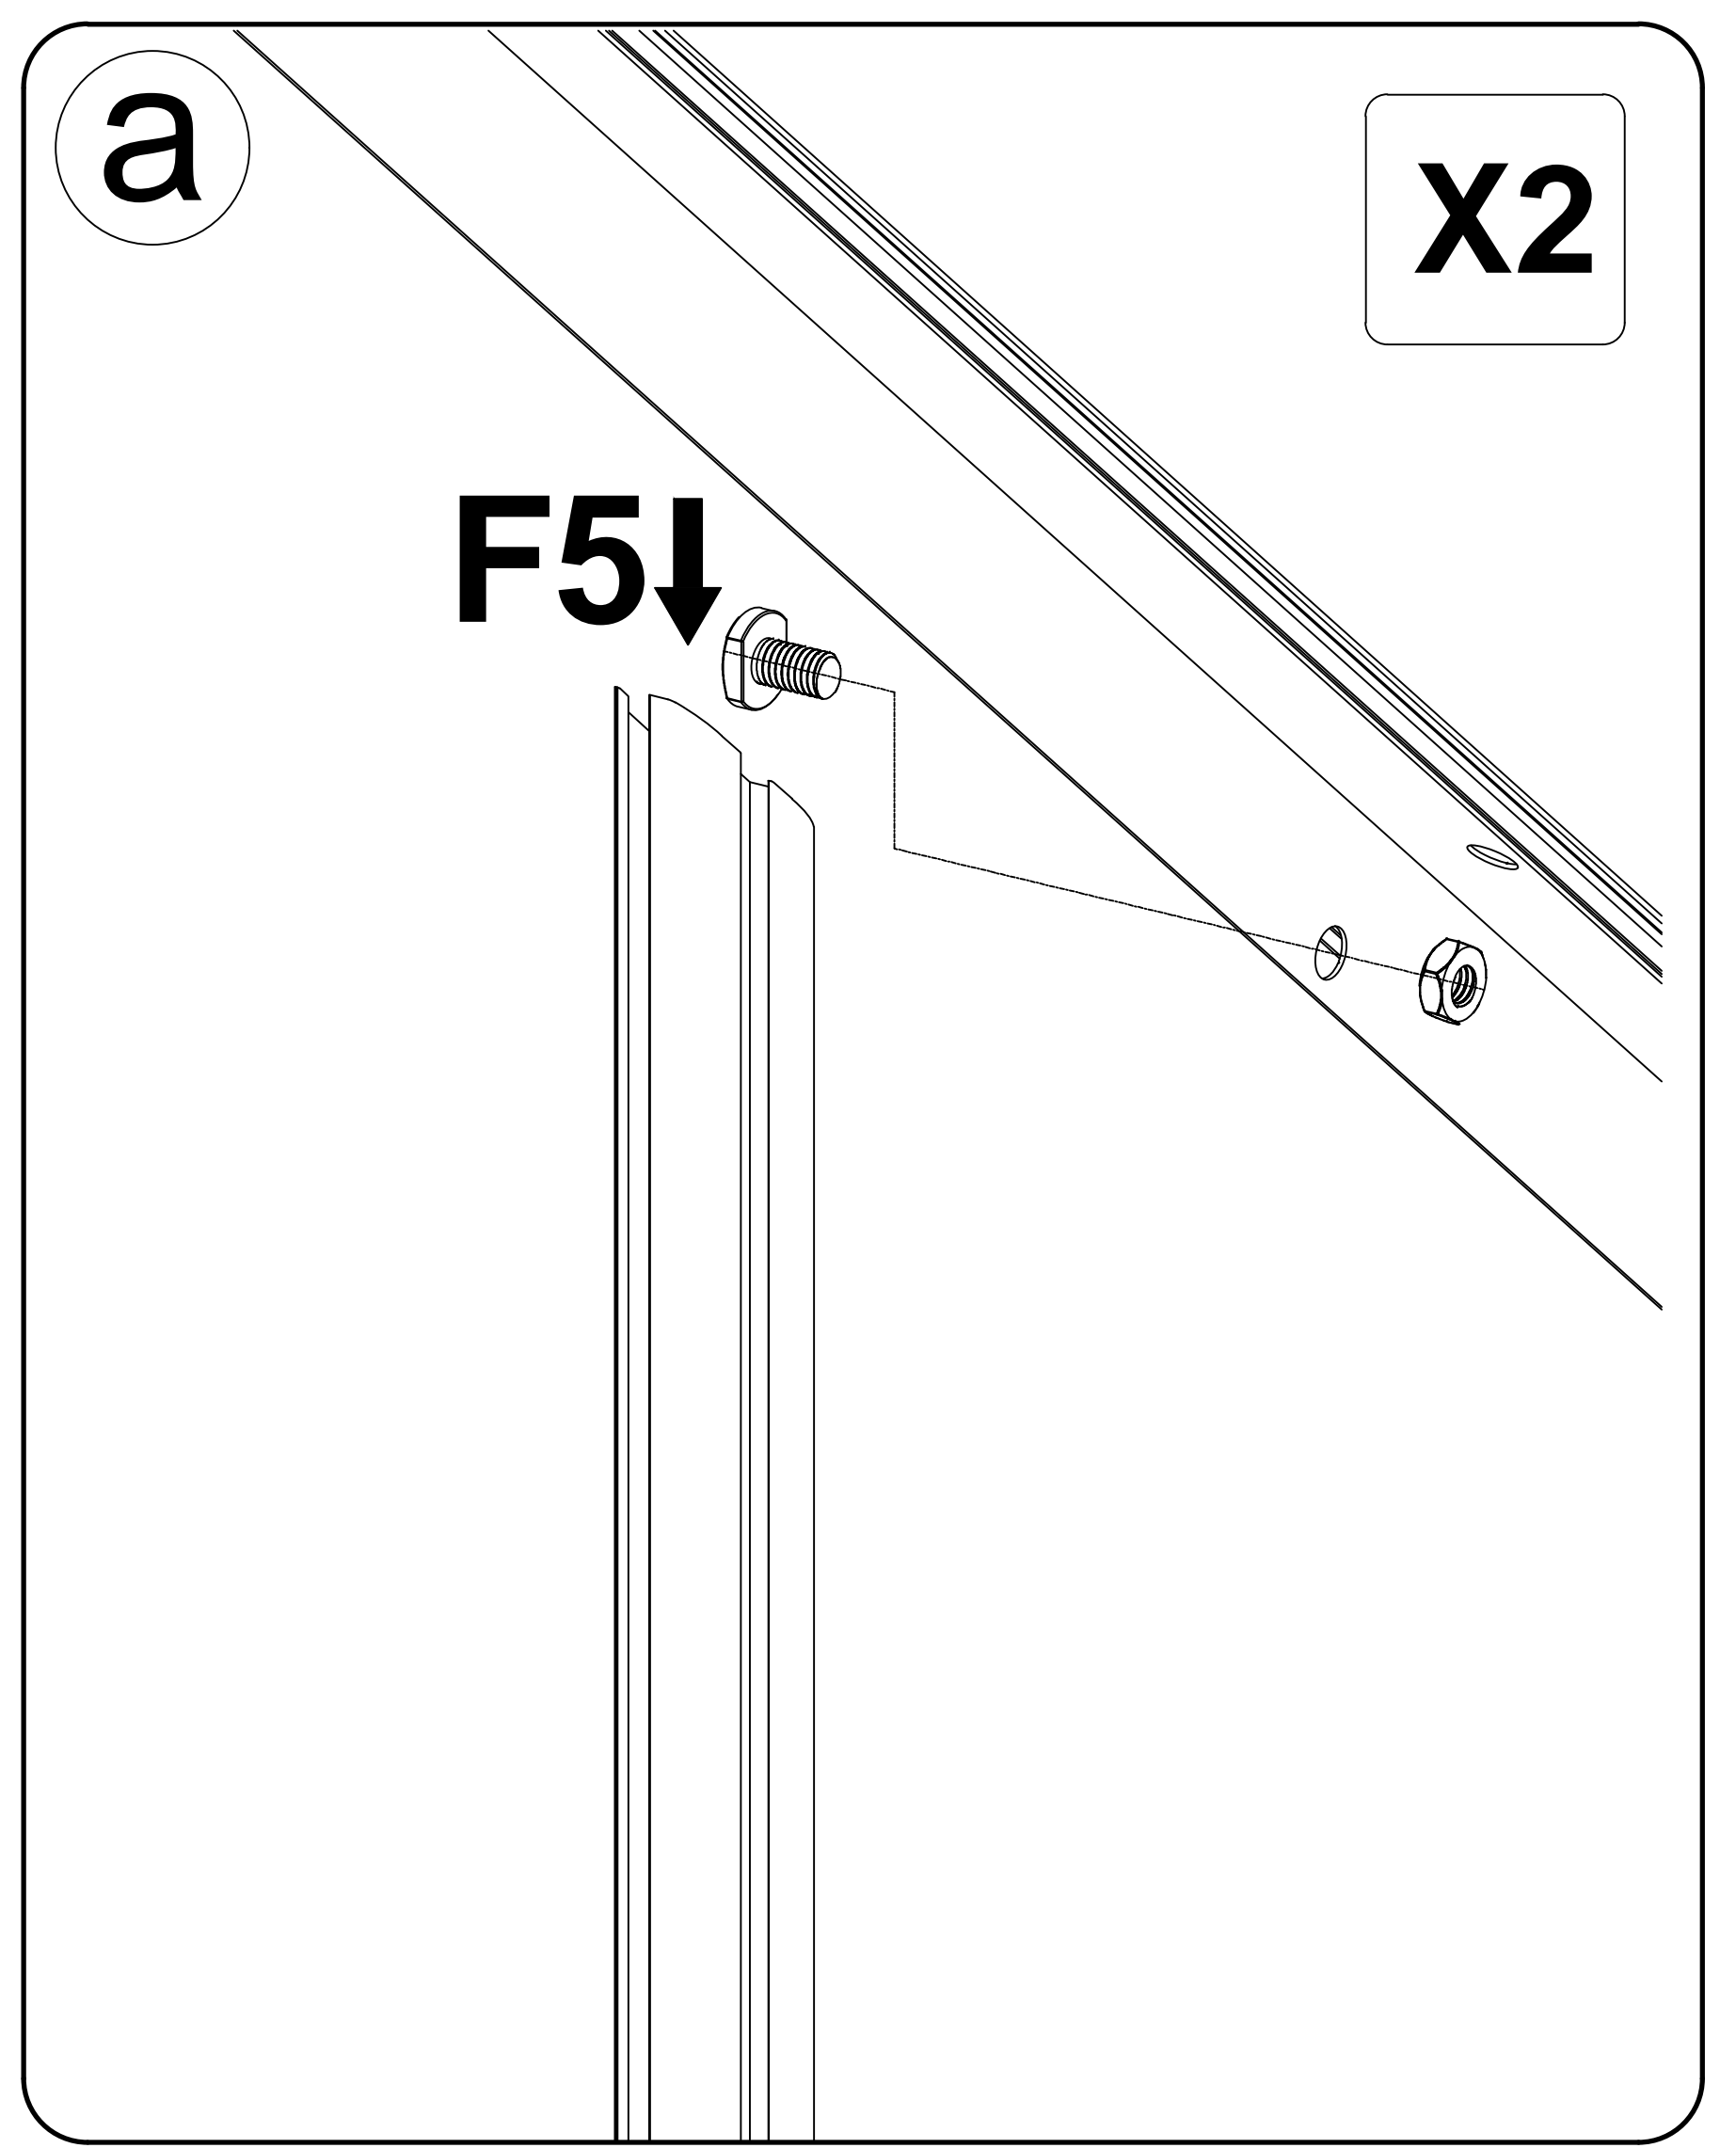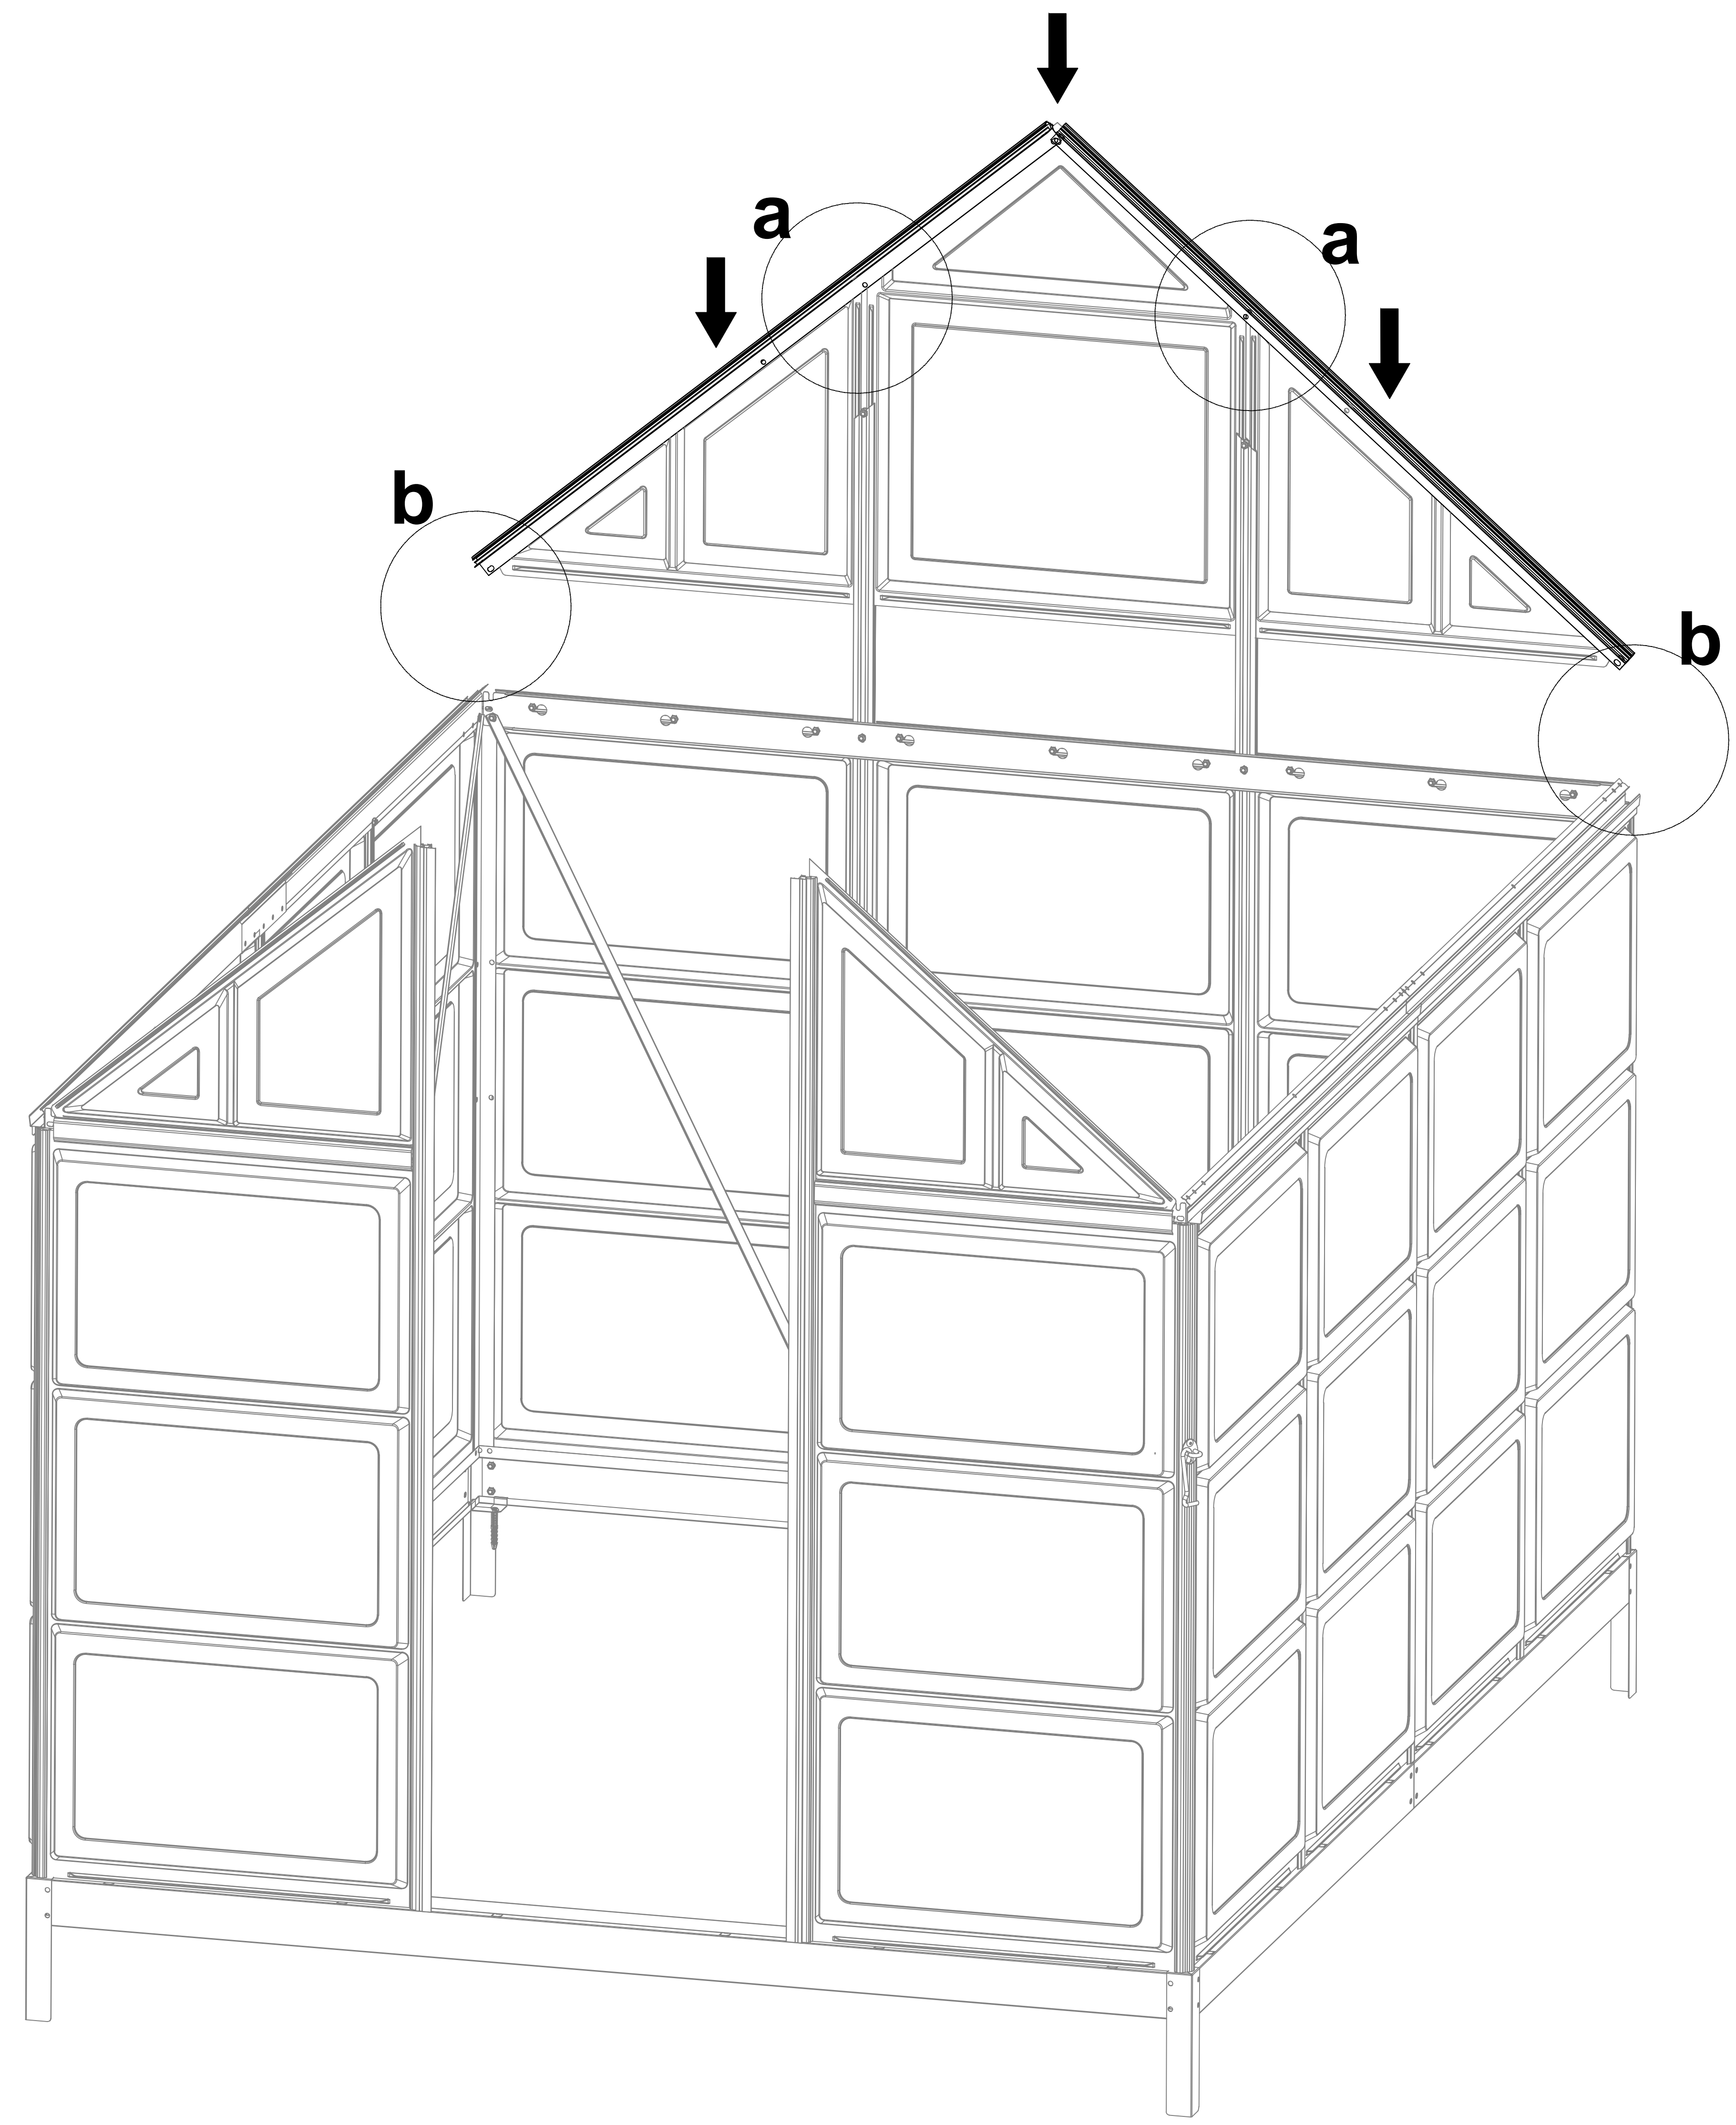




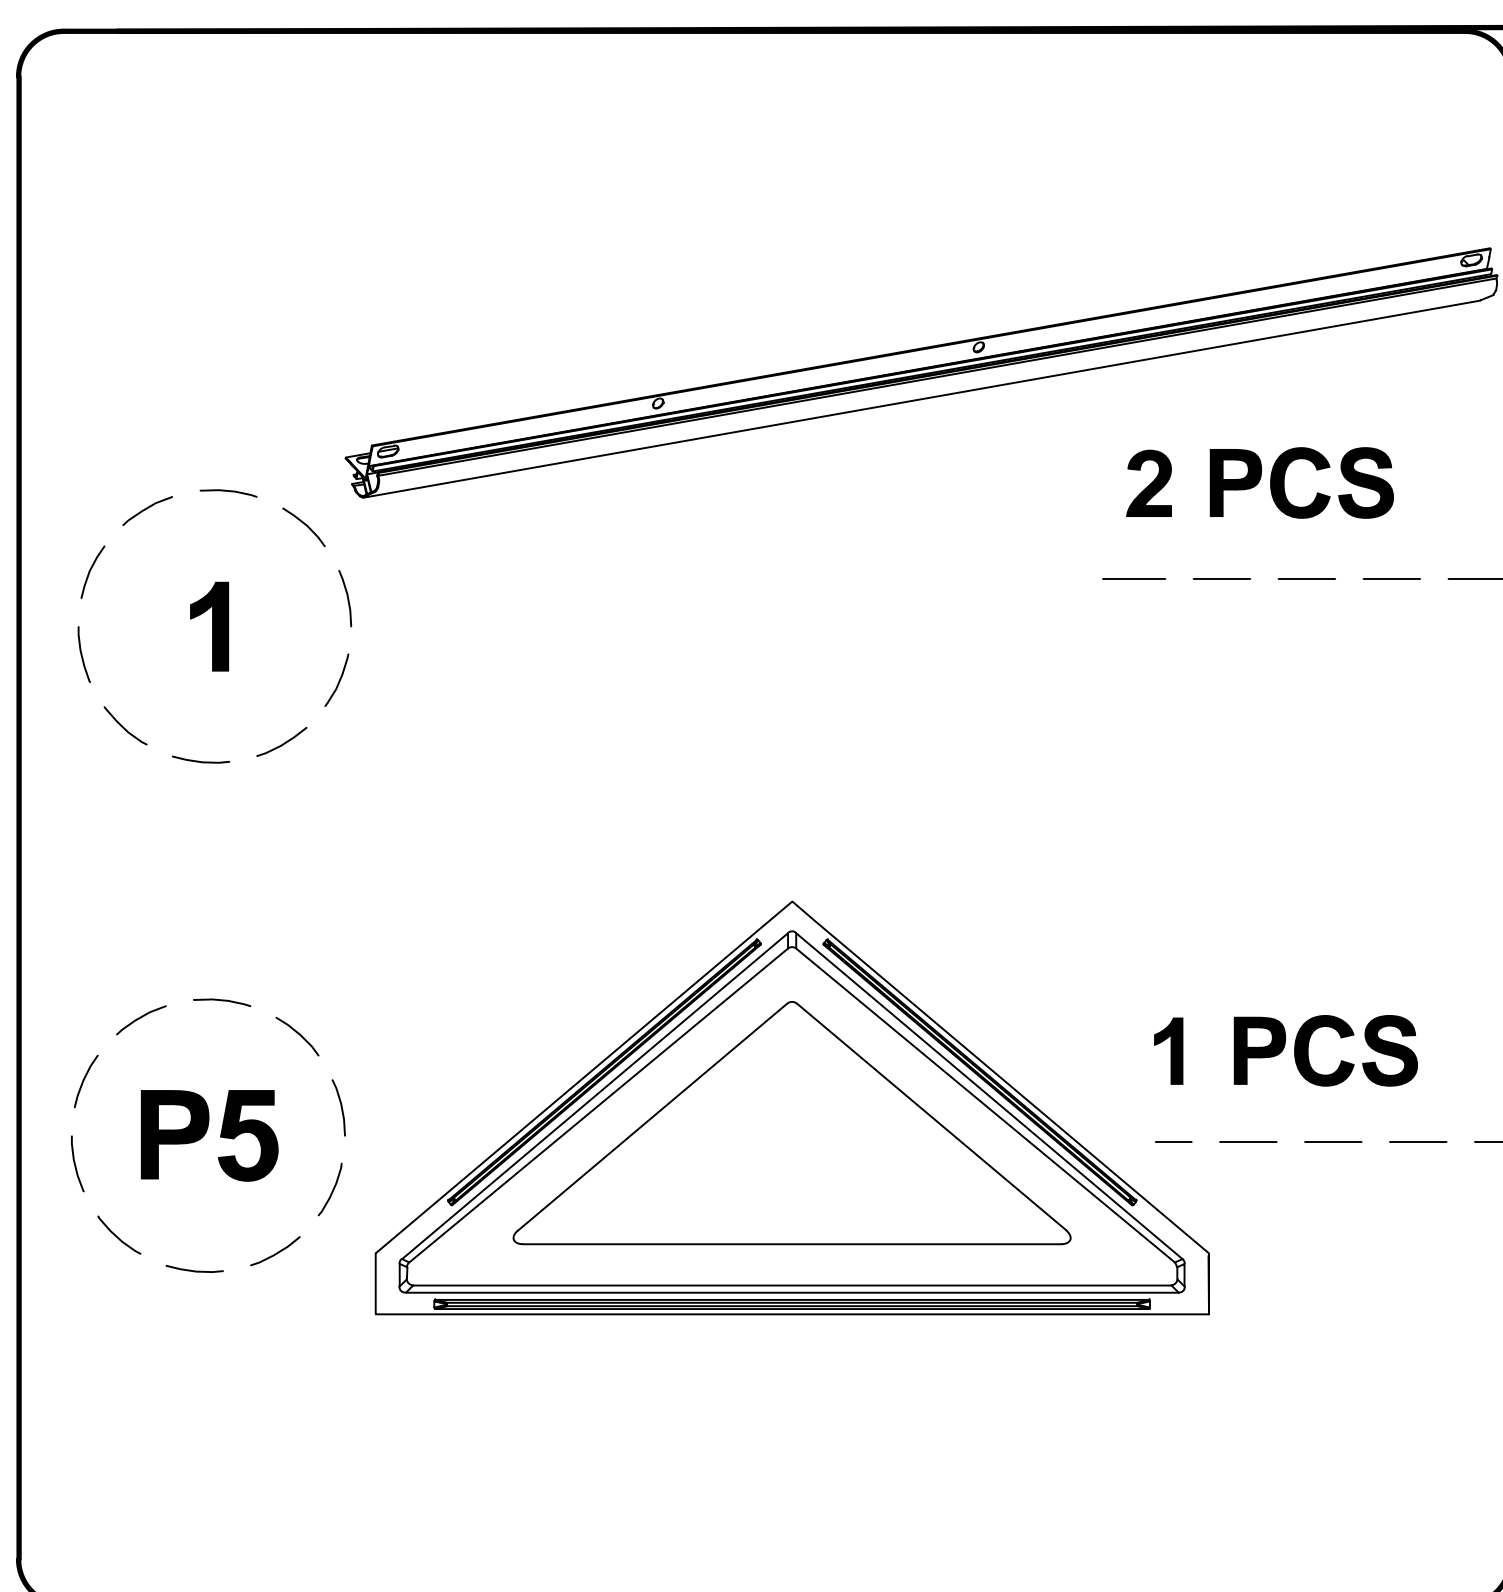

⚠ Tear off the film before inseted into the board and the side of white film needs faced out.

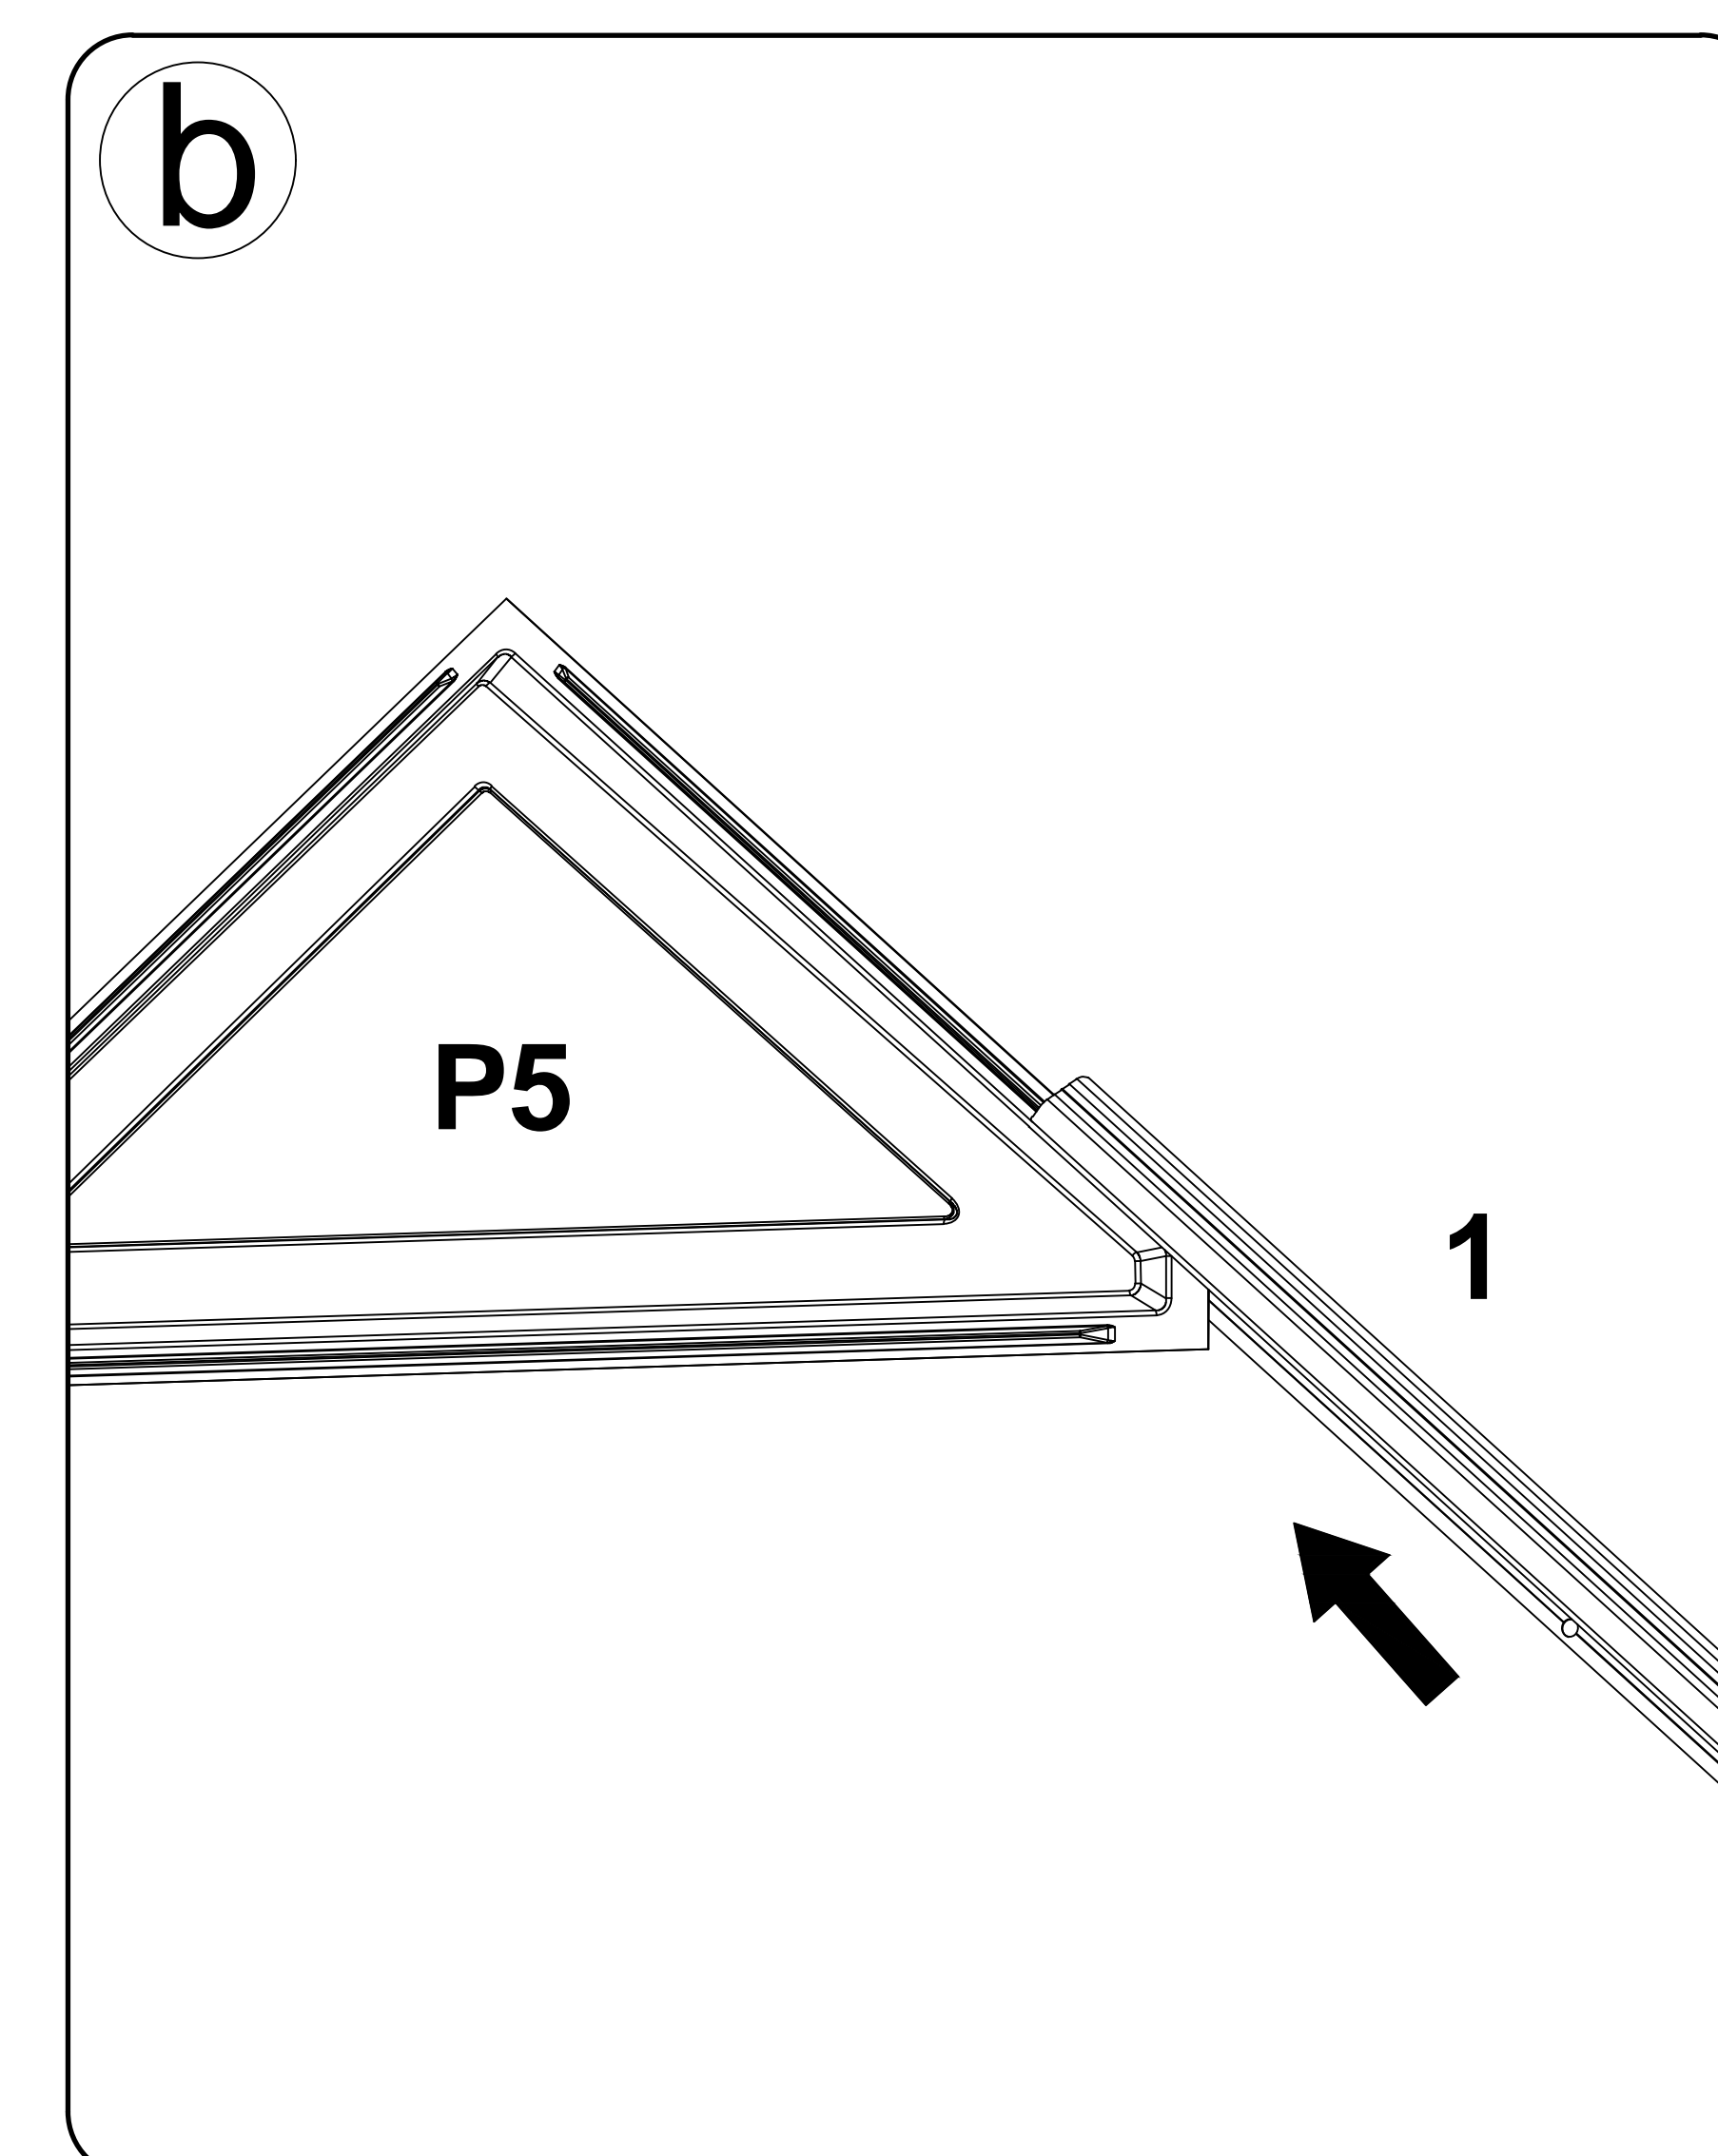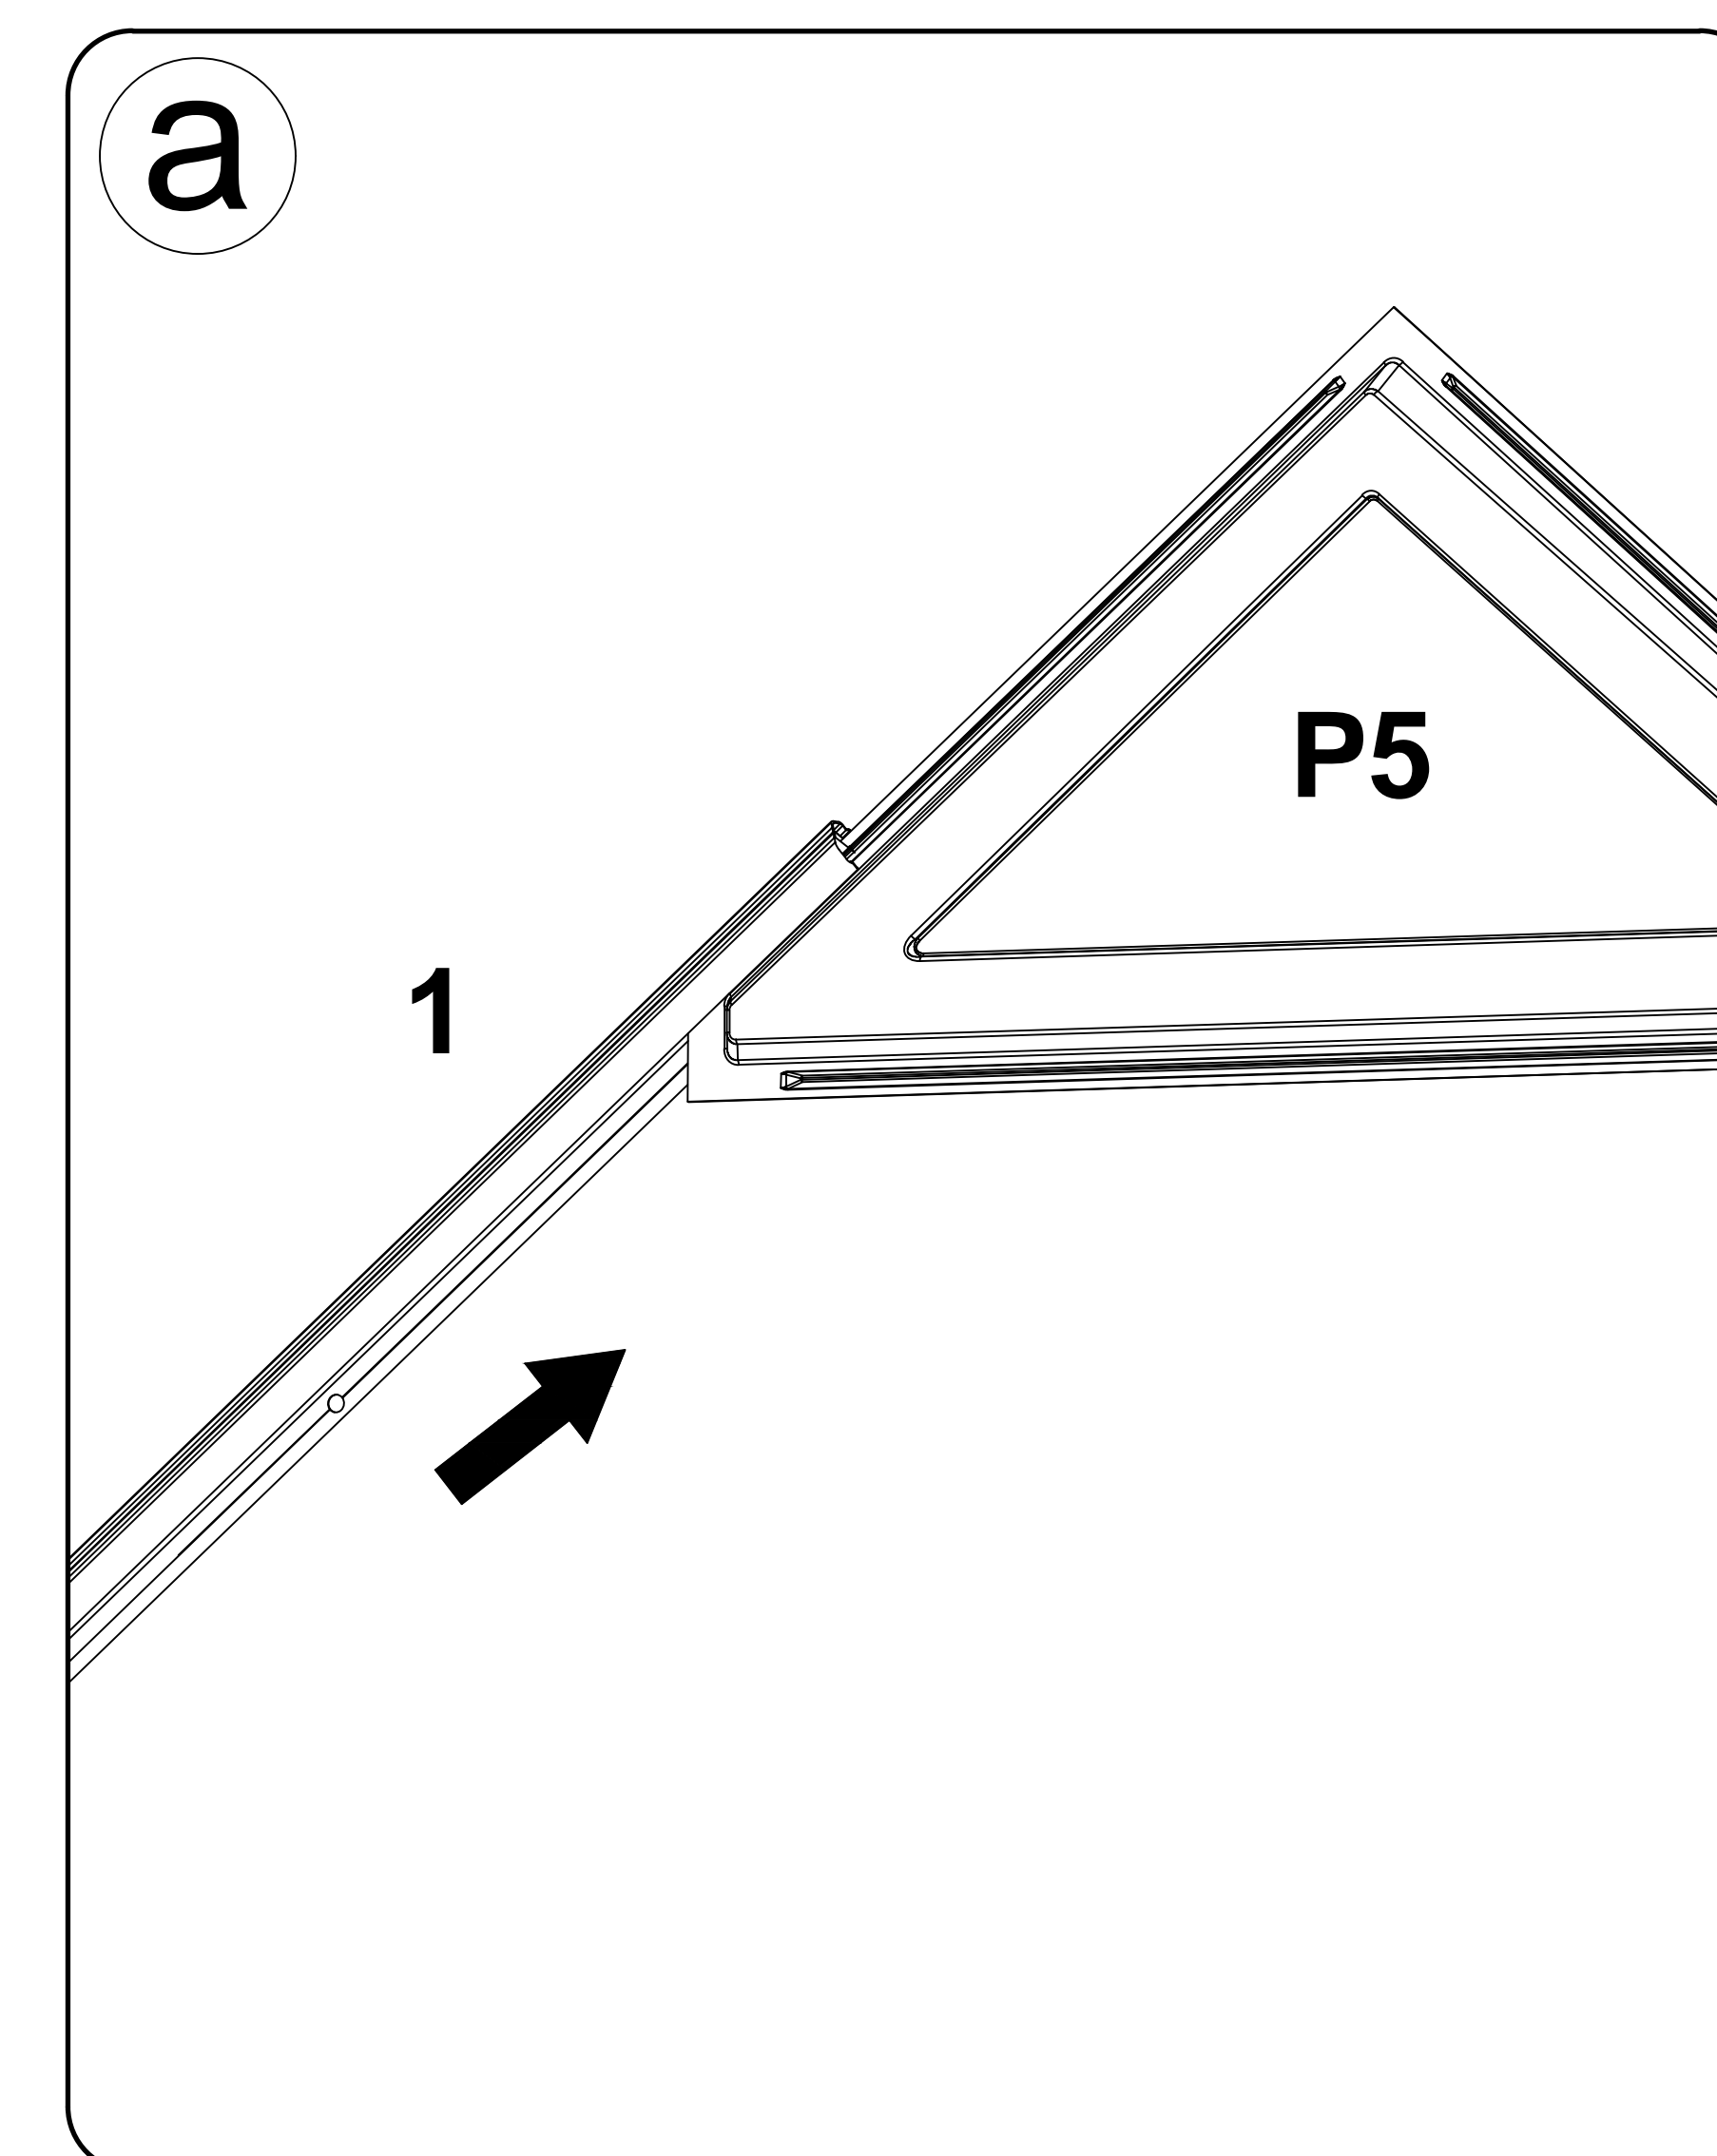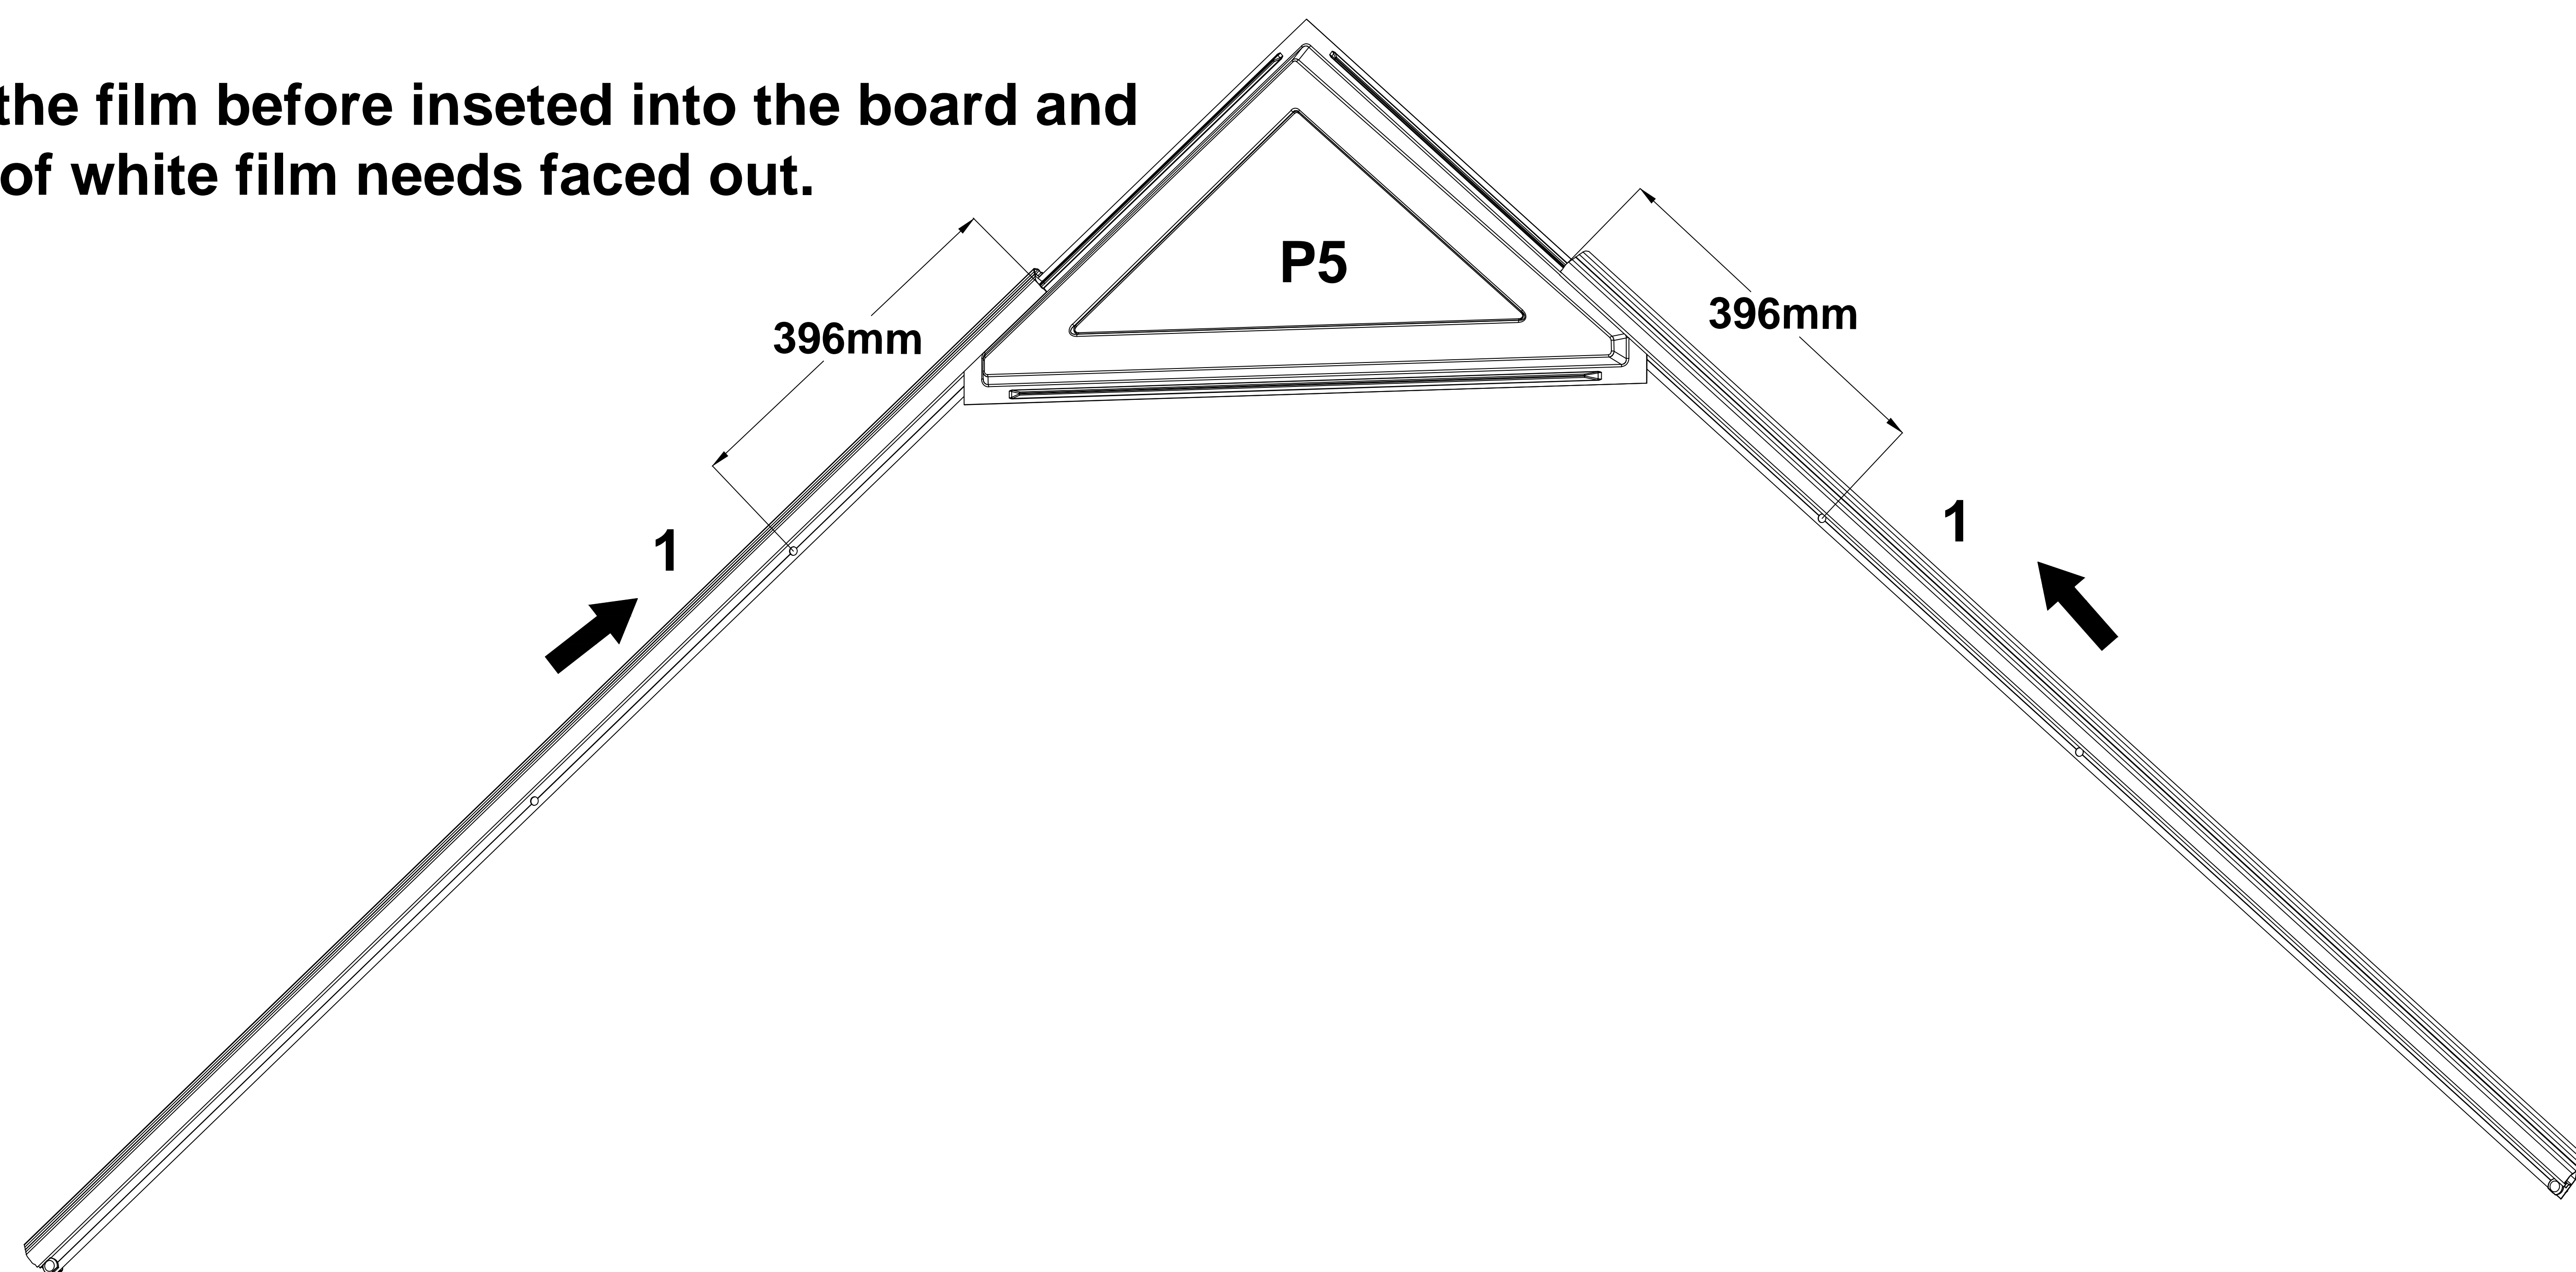


9

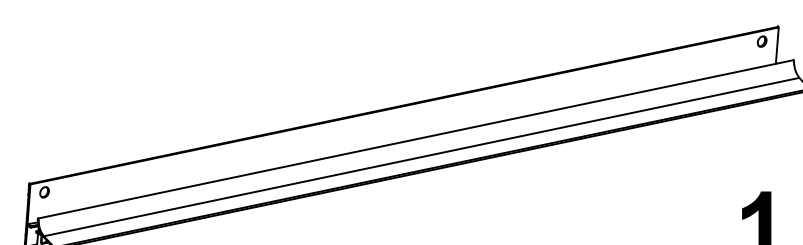


1 PCS


F5

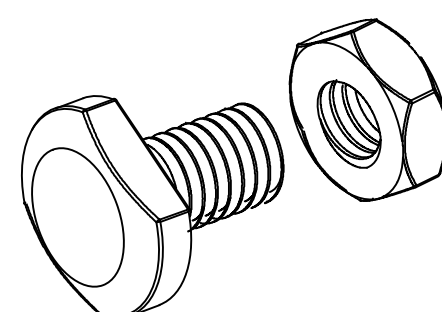


2 PCS



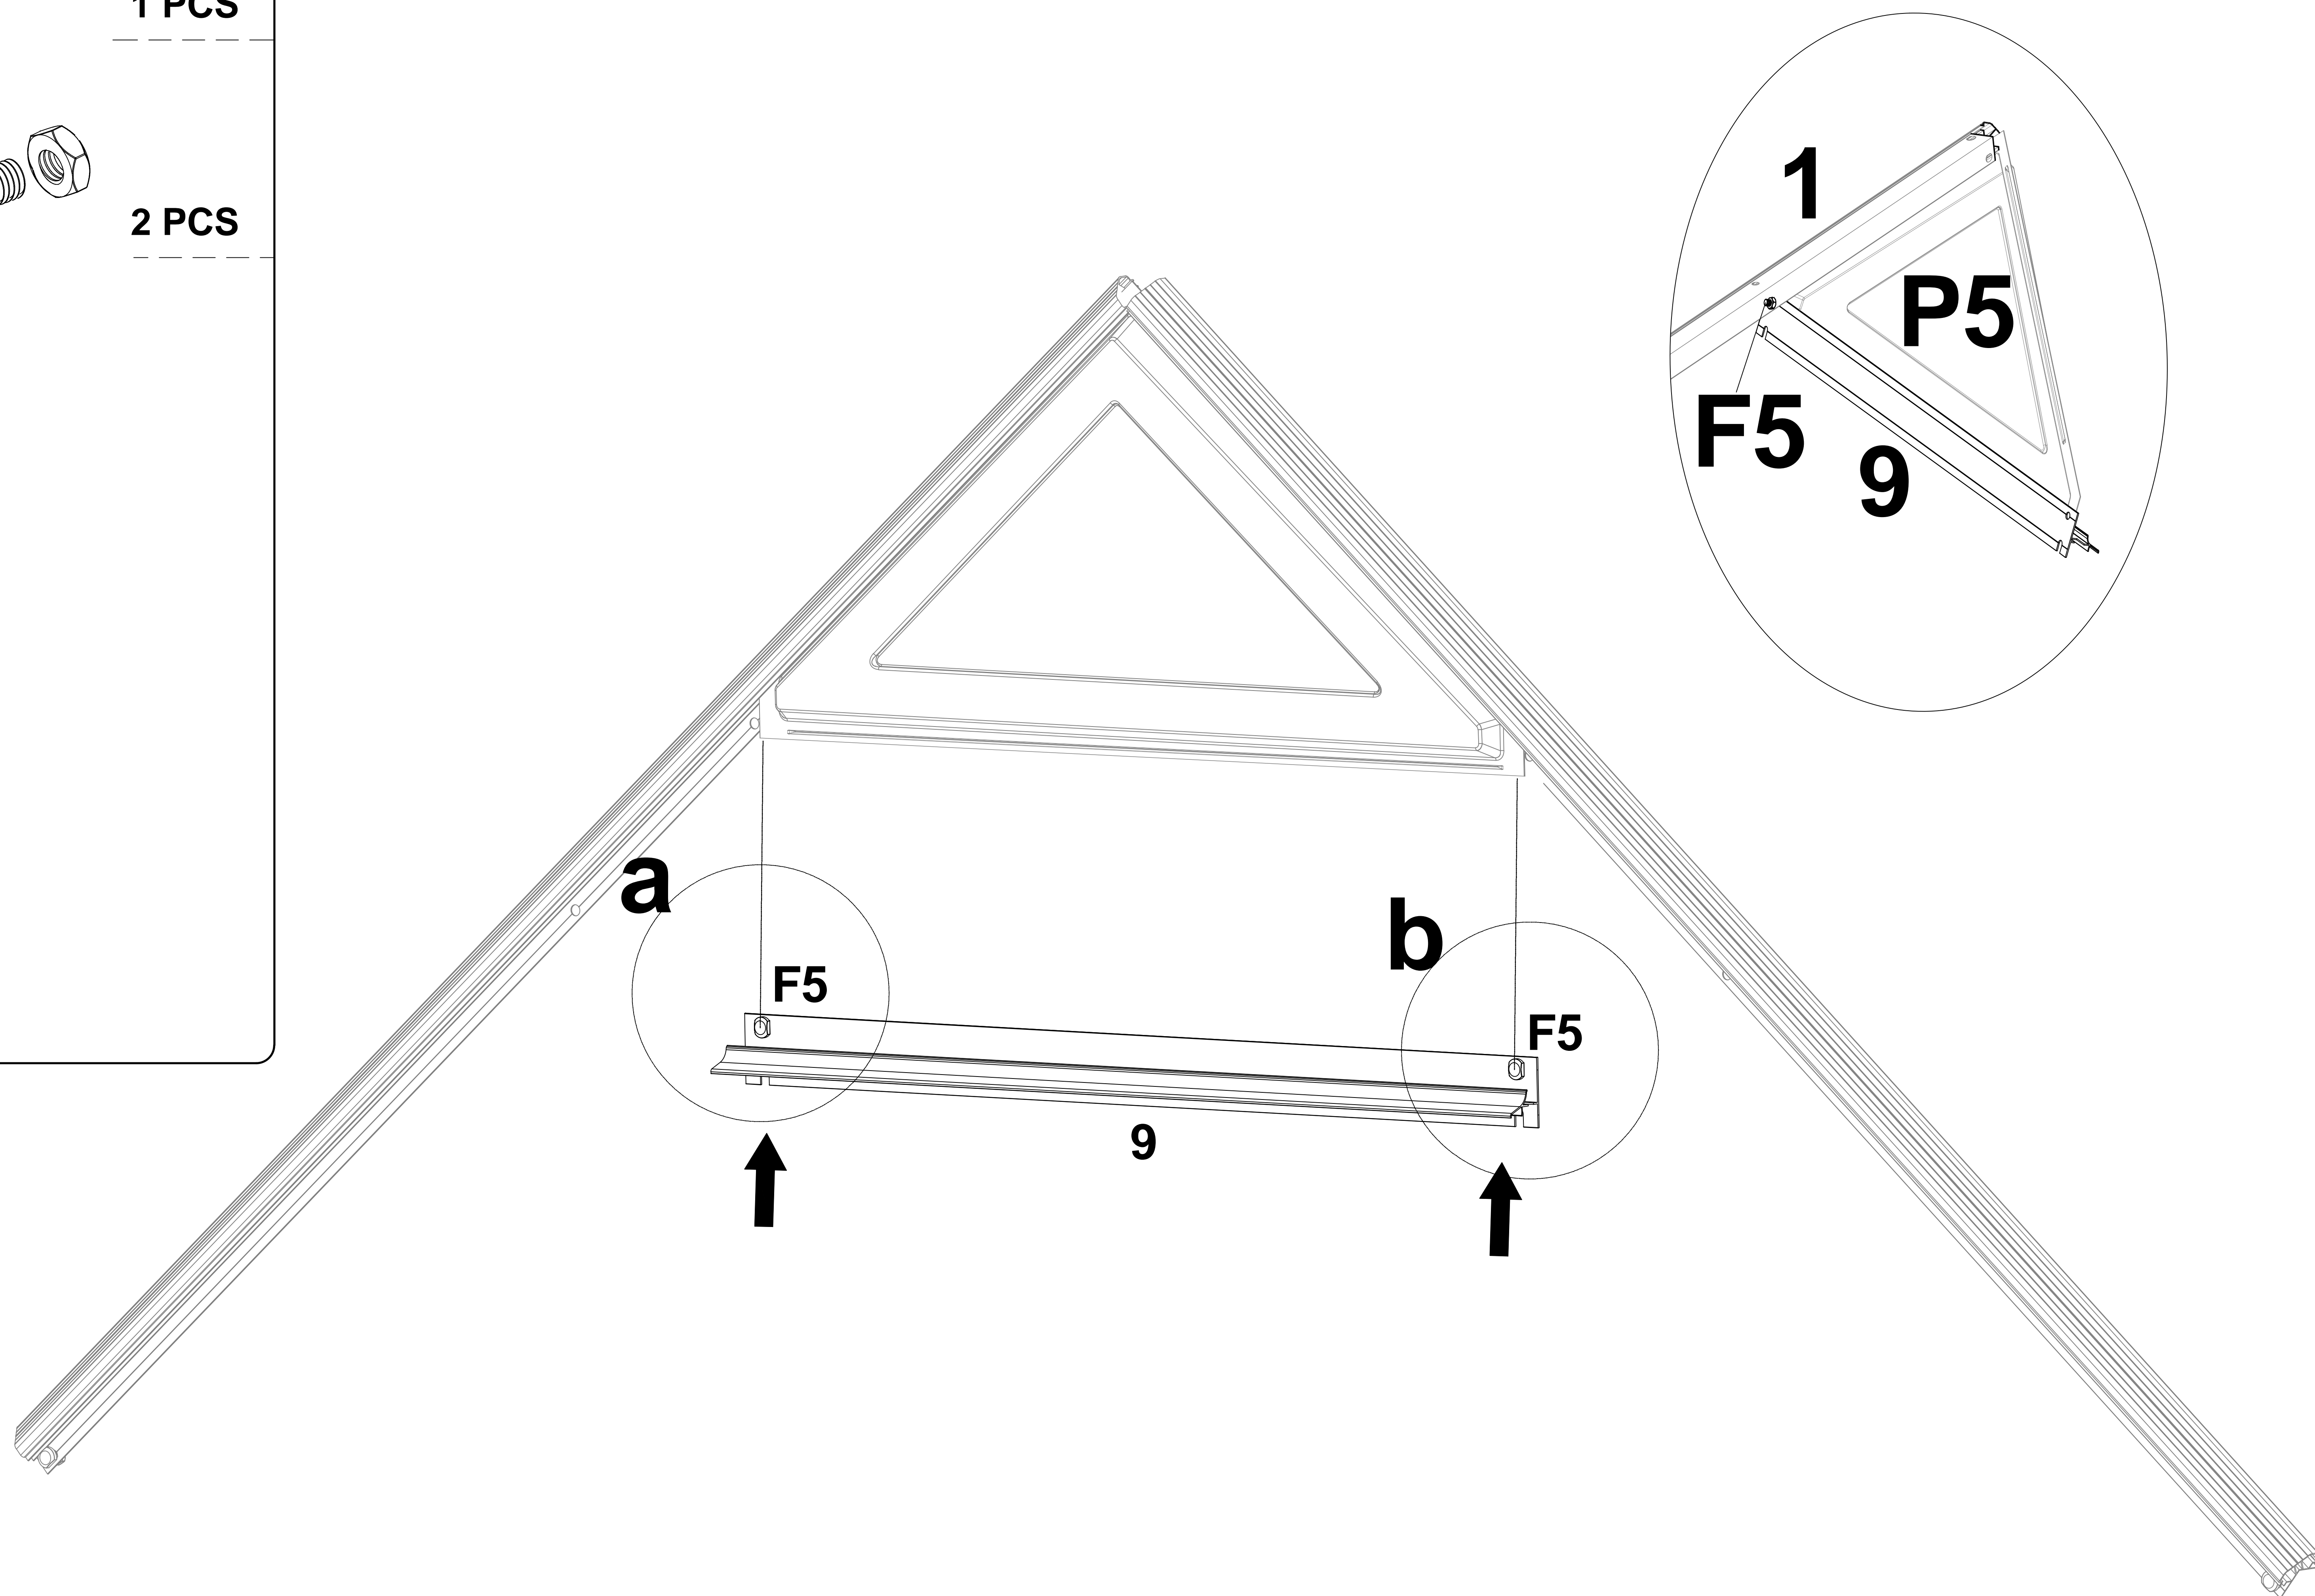


a

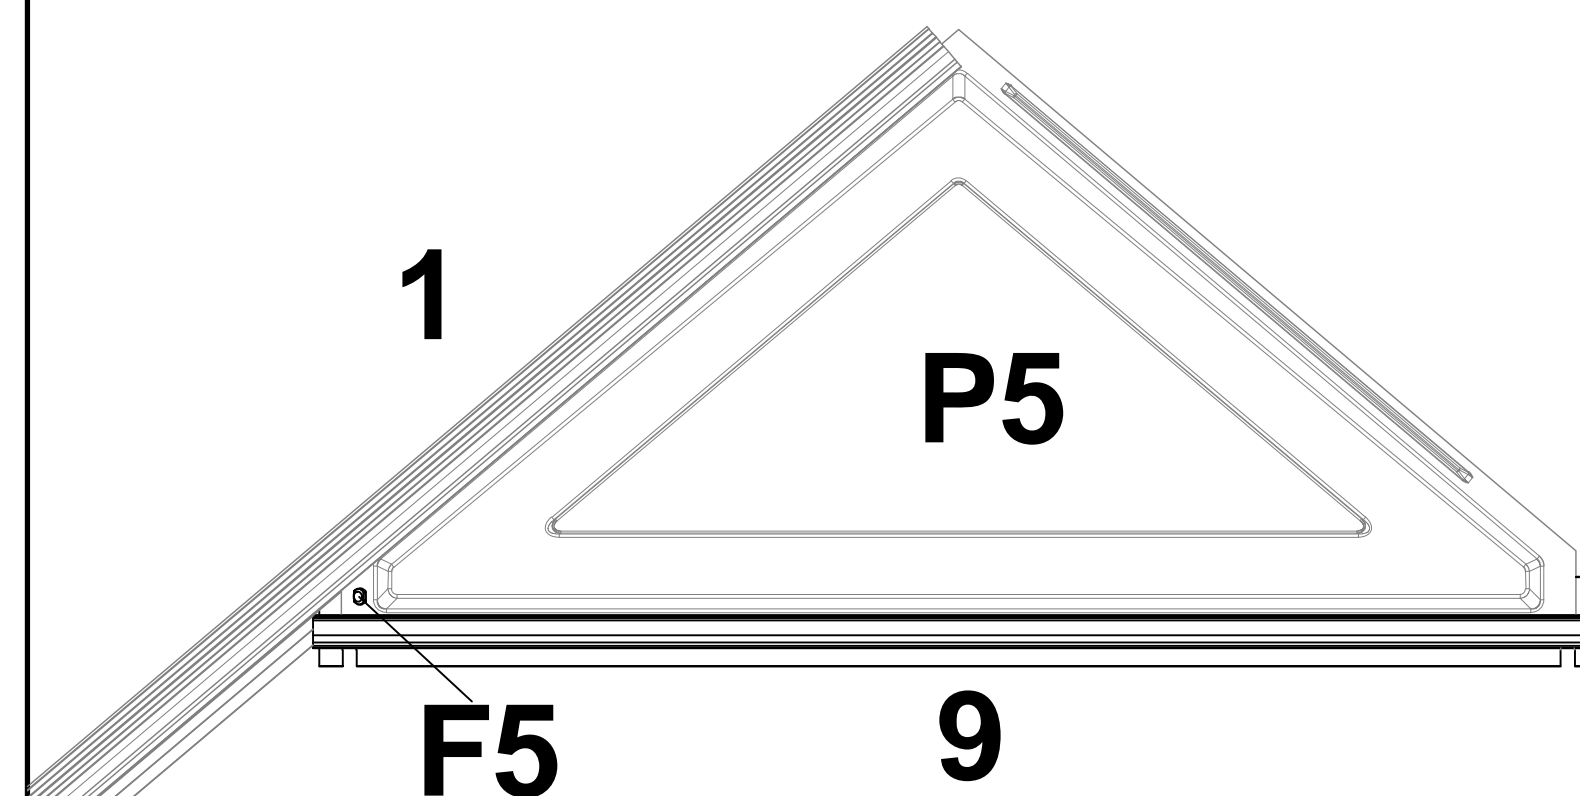


b

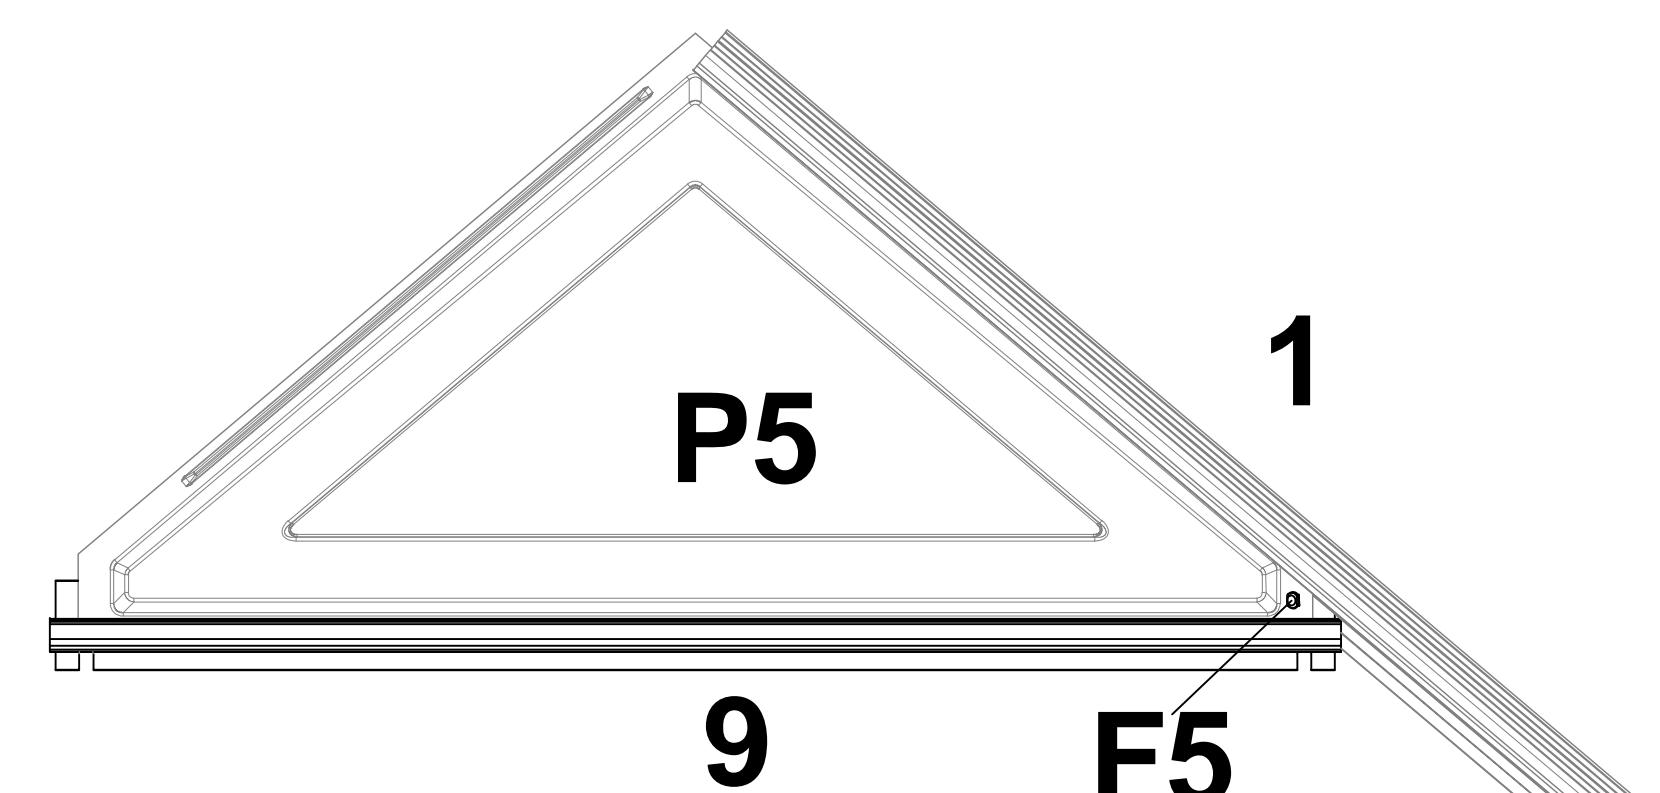

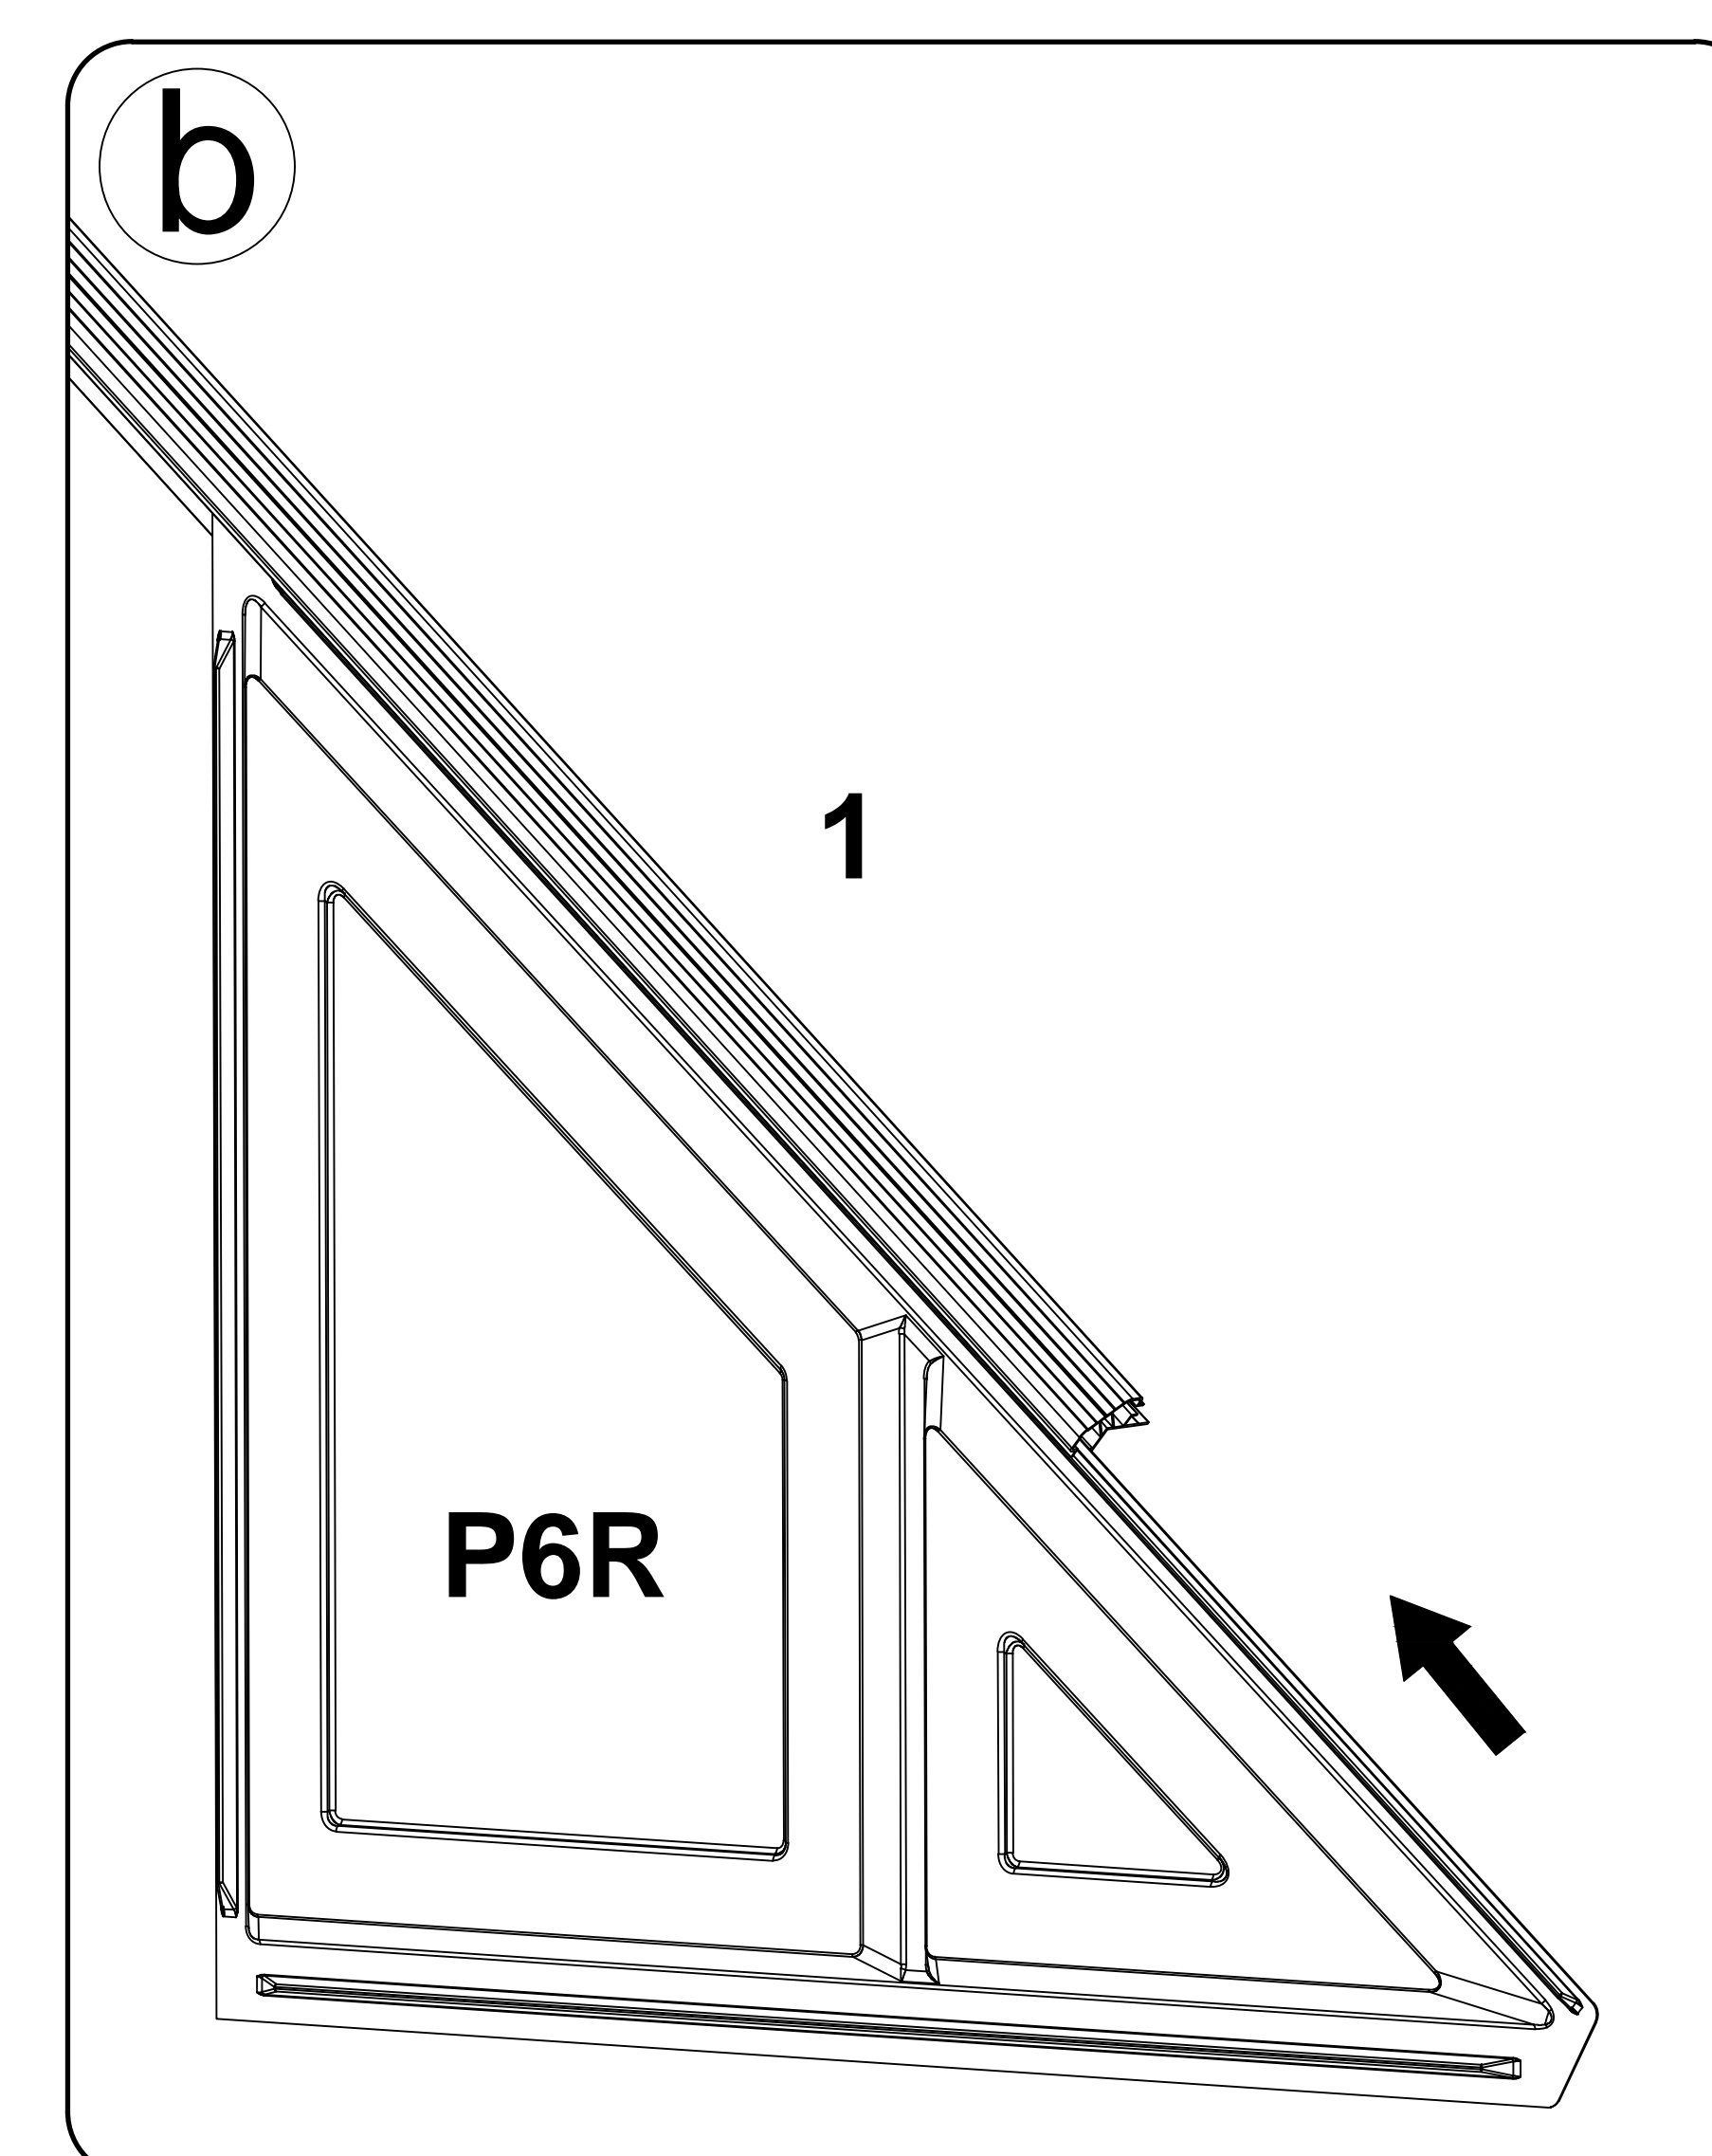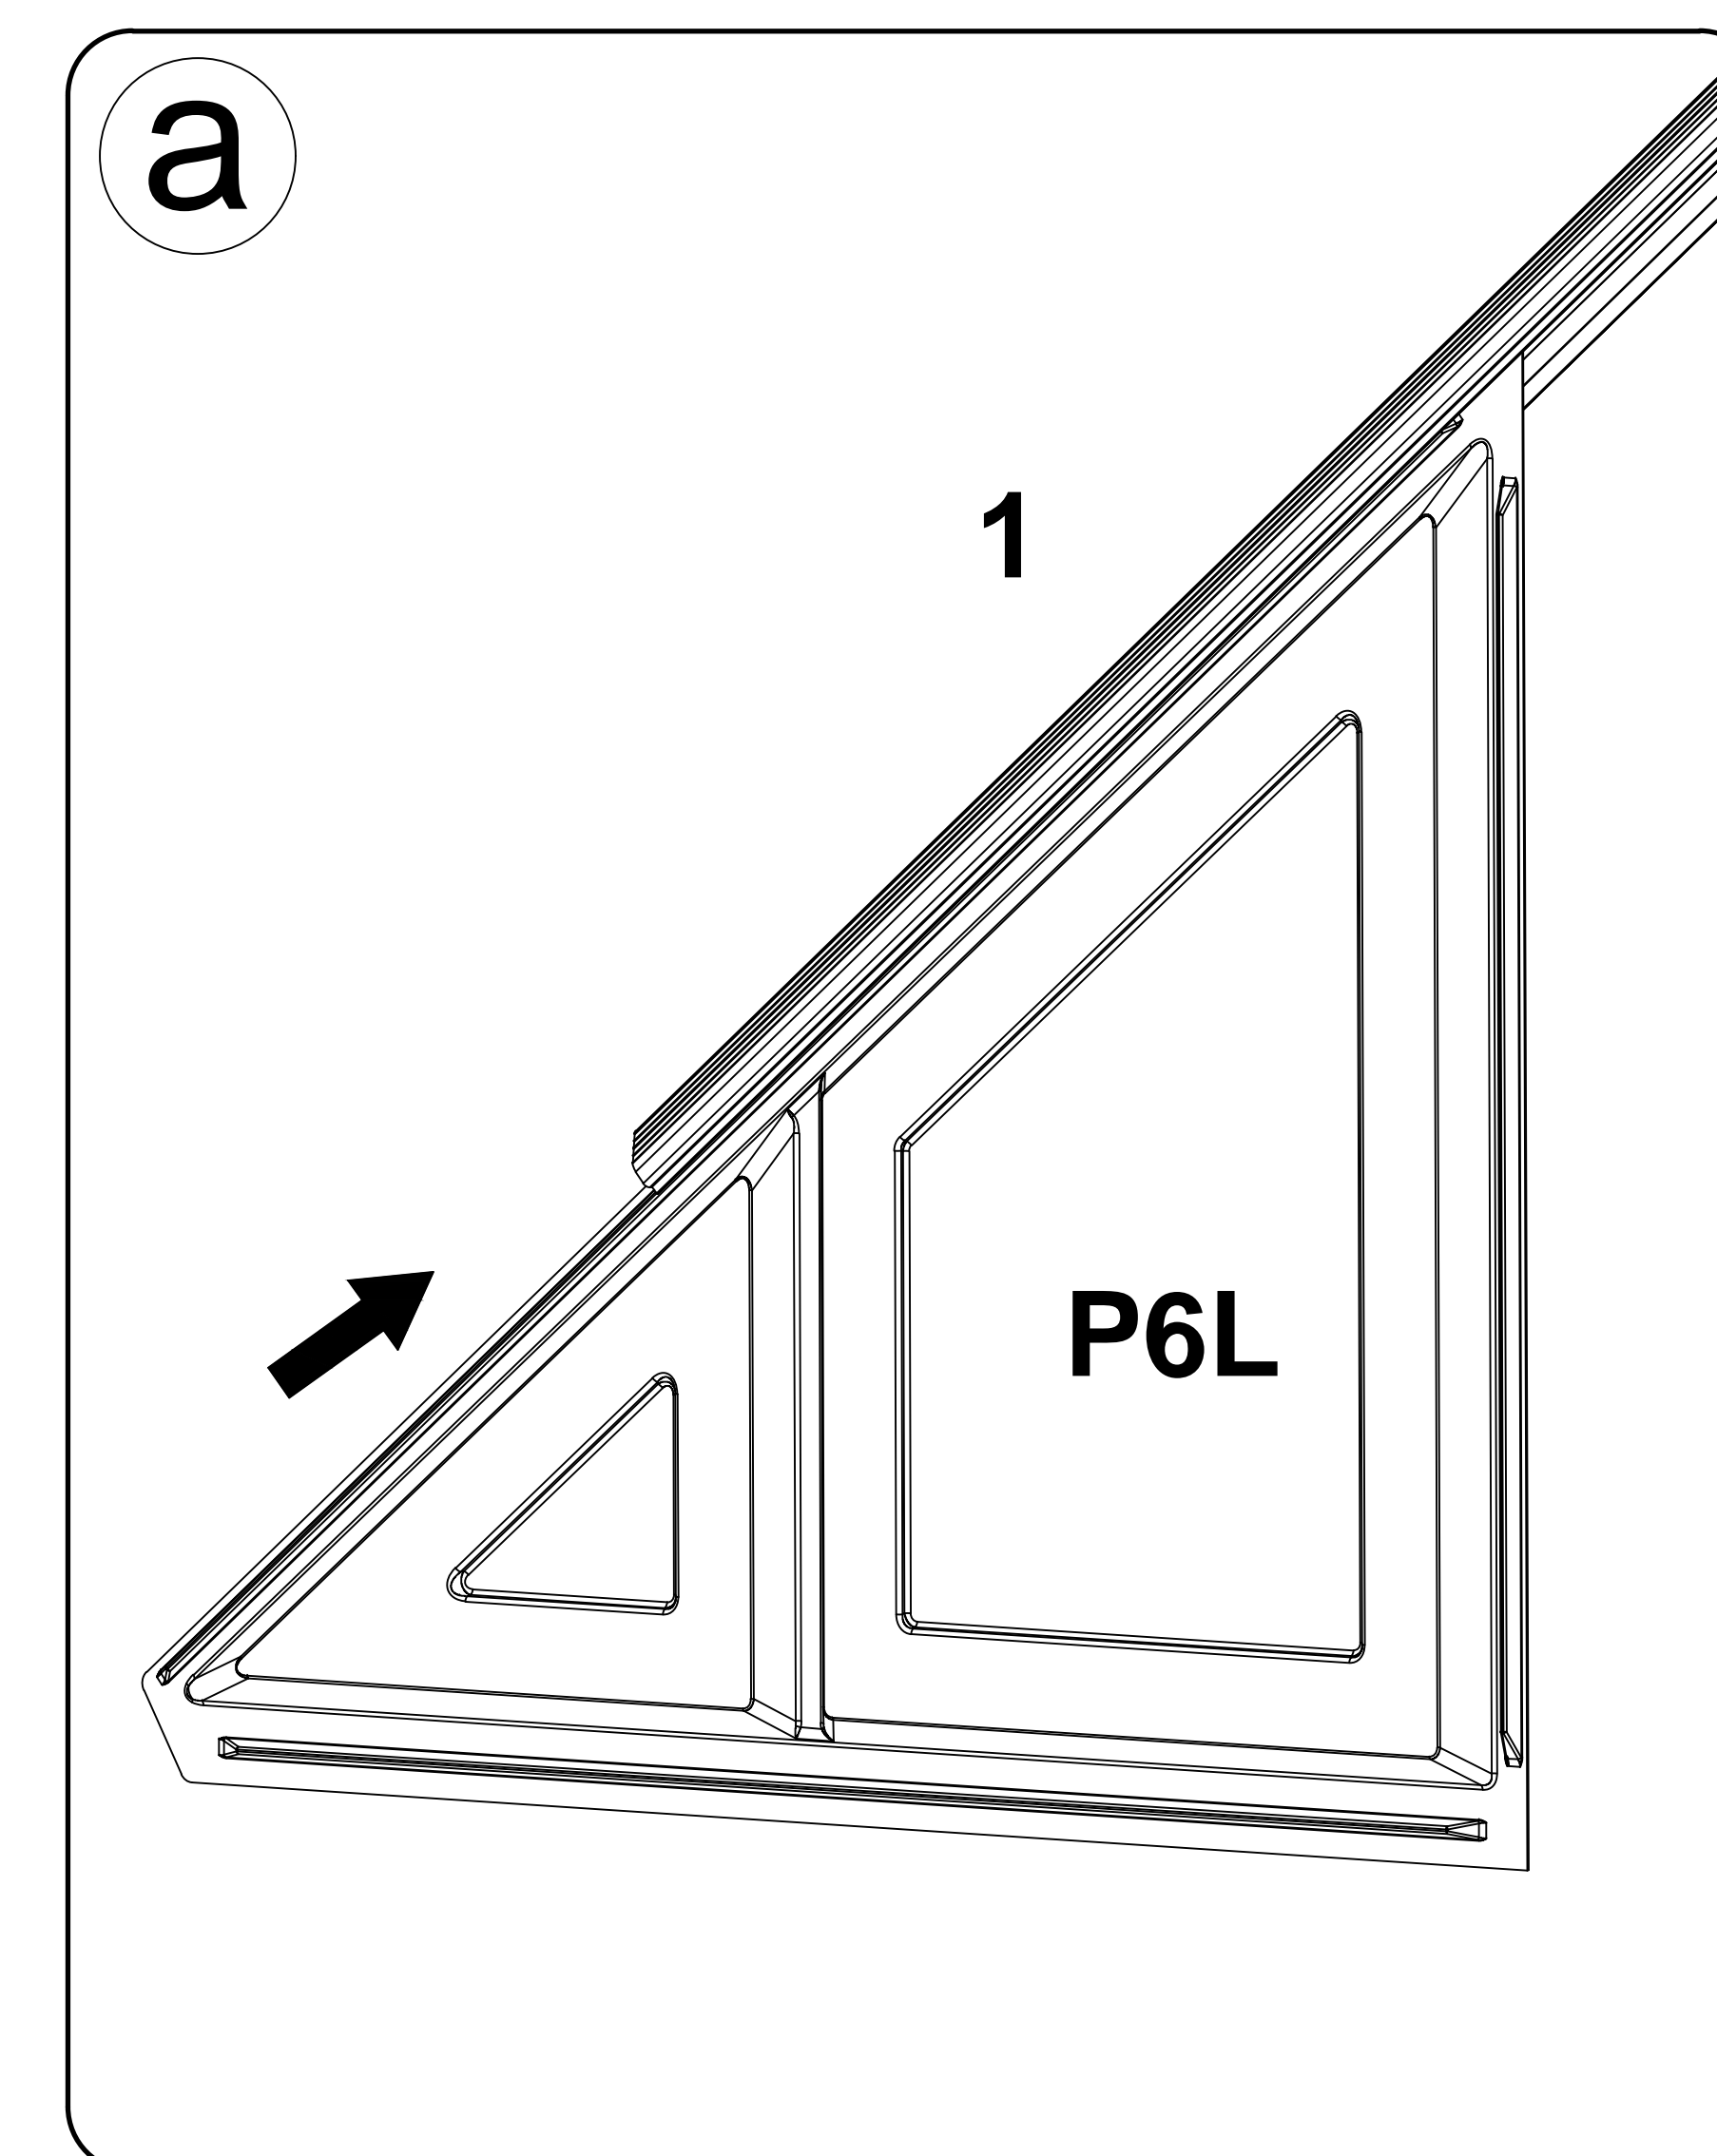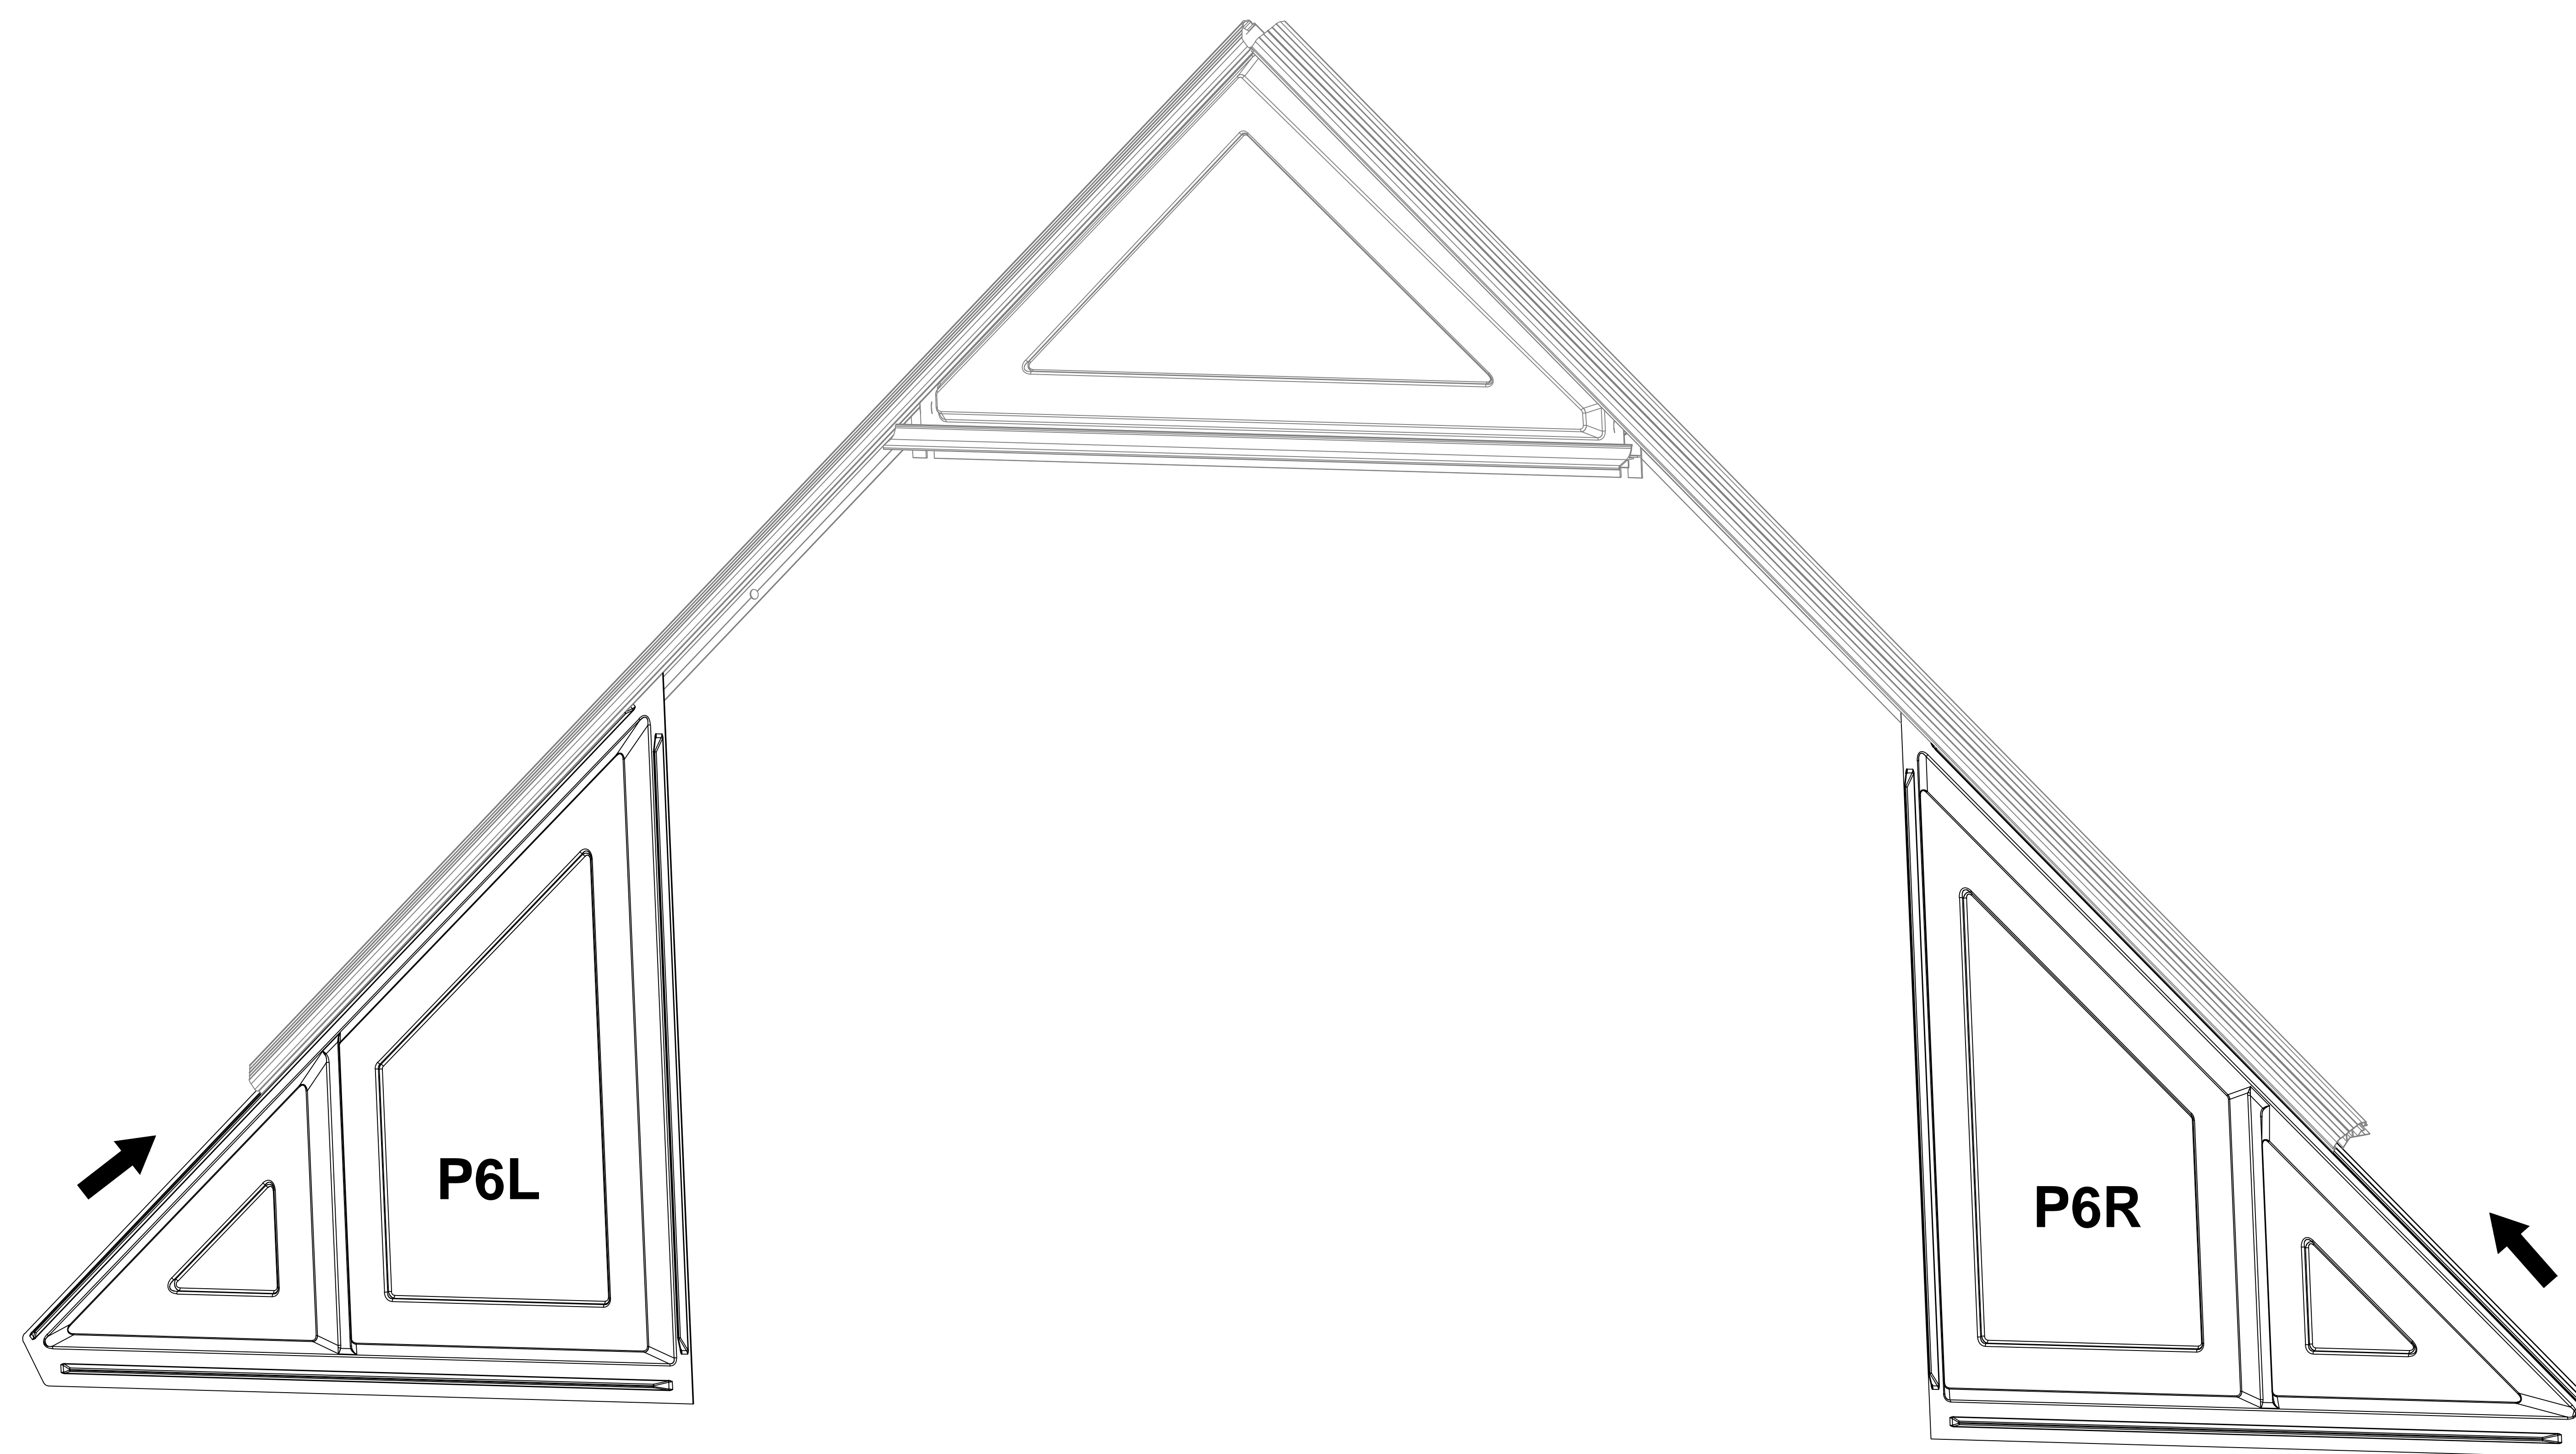








F5

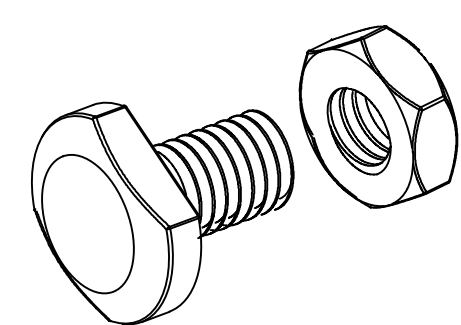


6 PCS

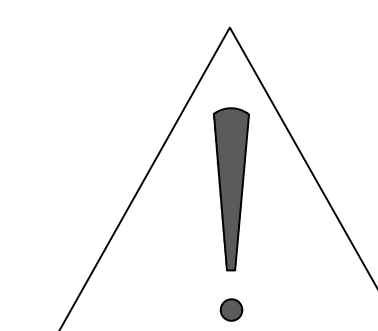

Install the screws in advance according to the instruction.

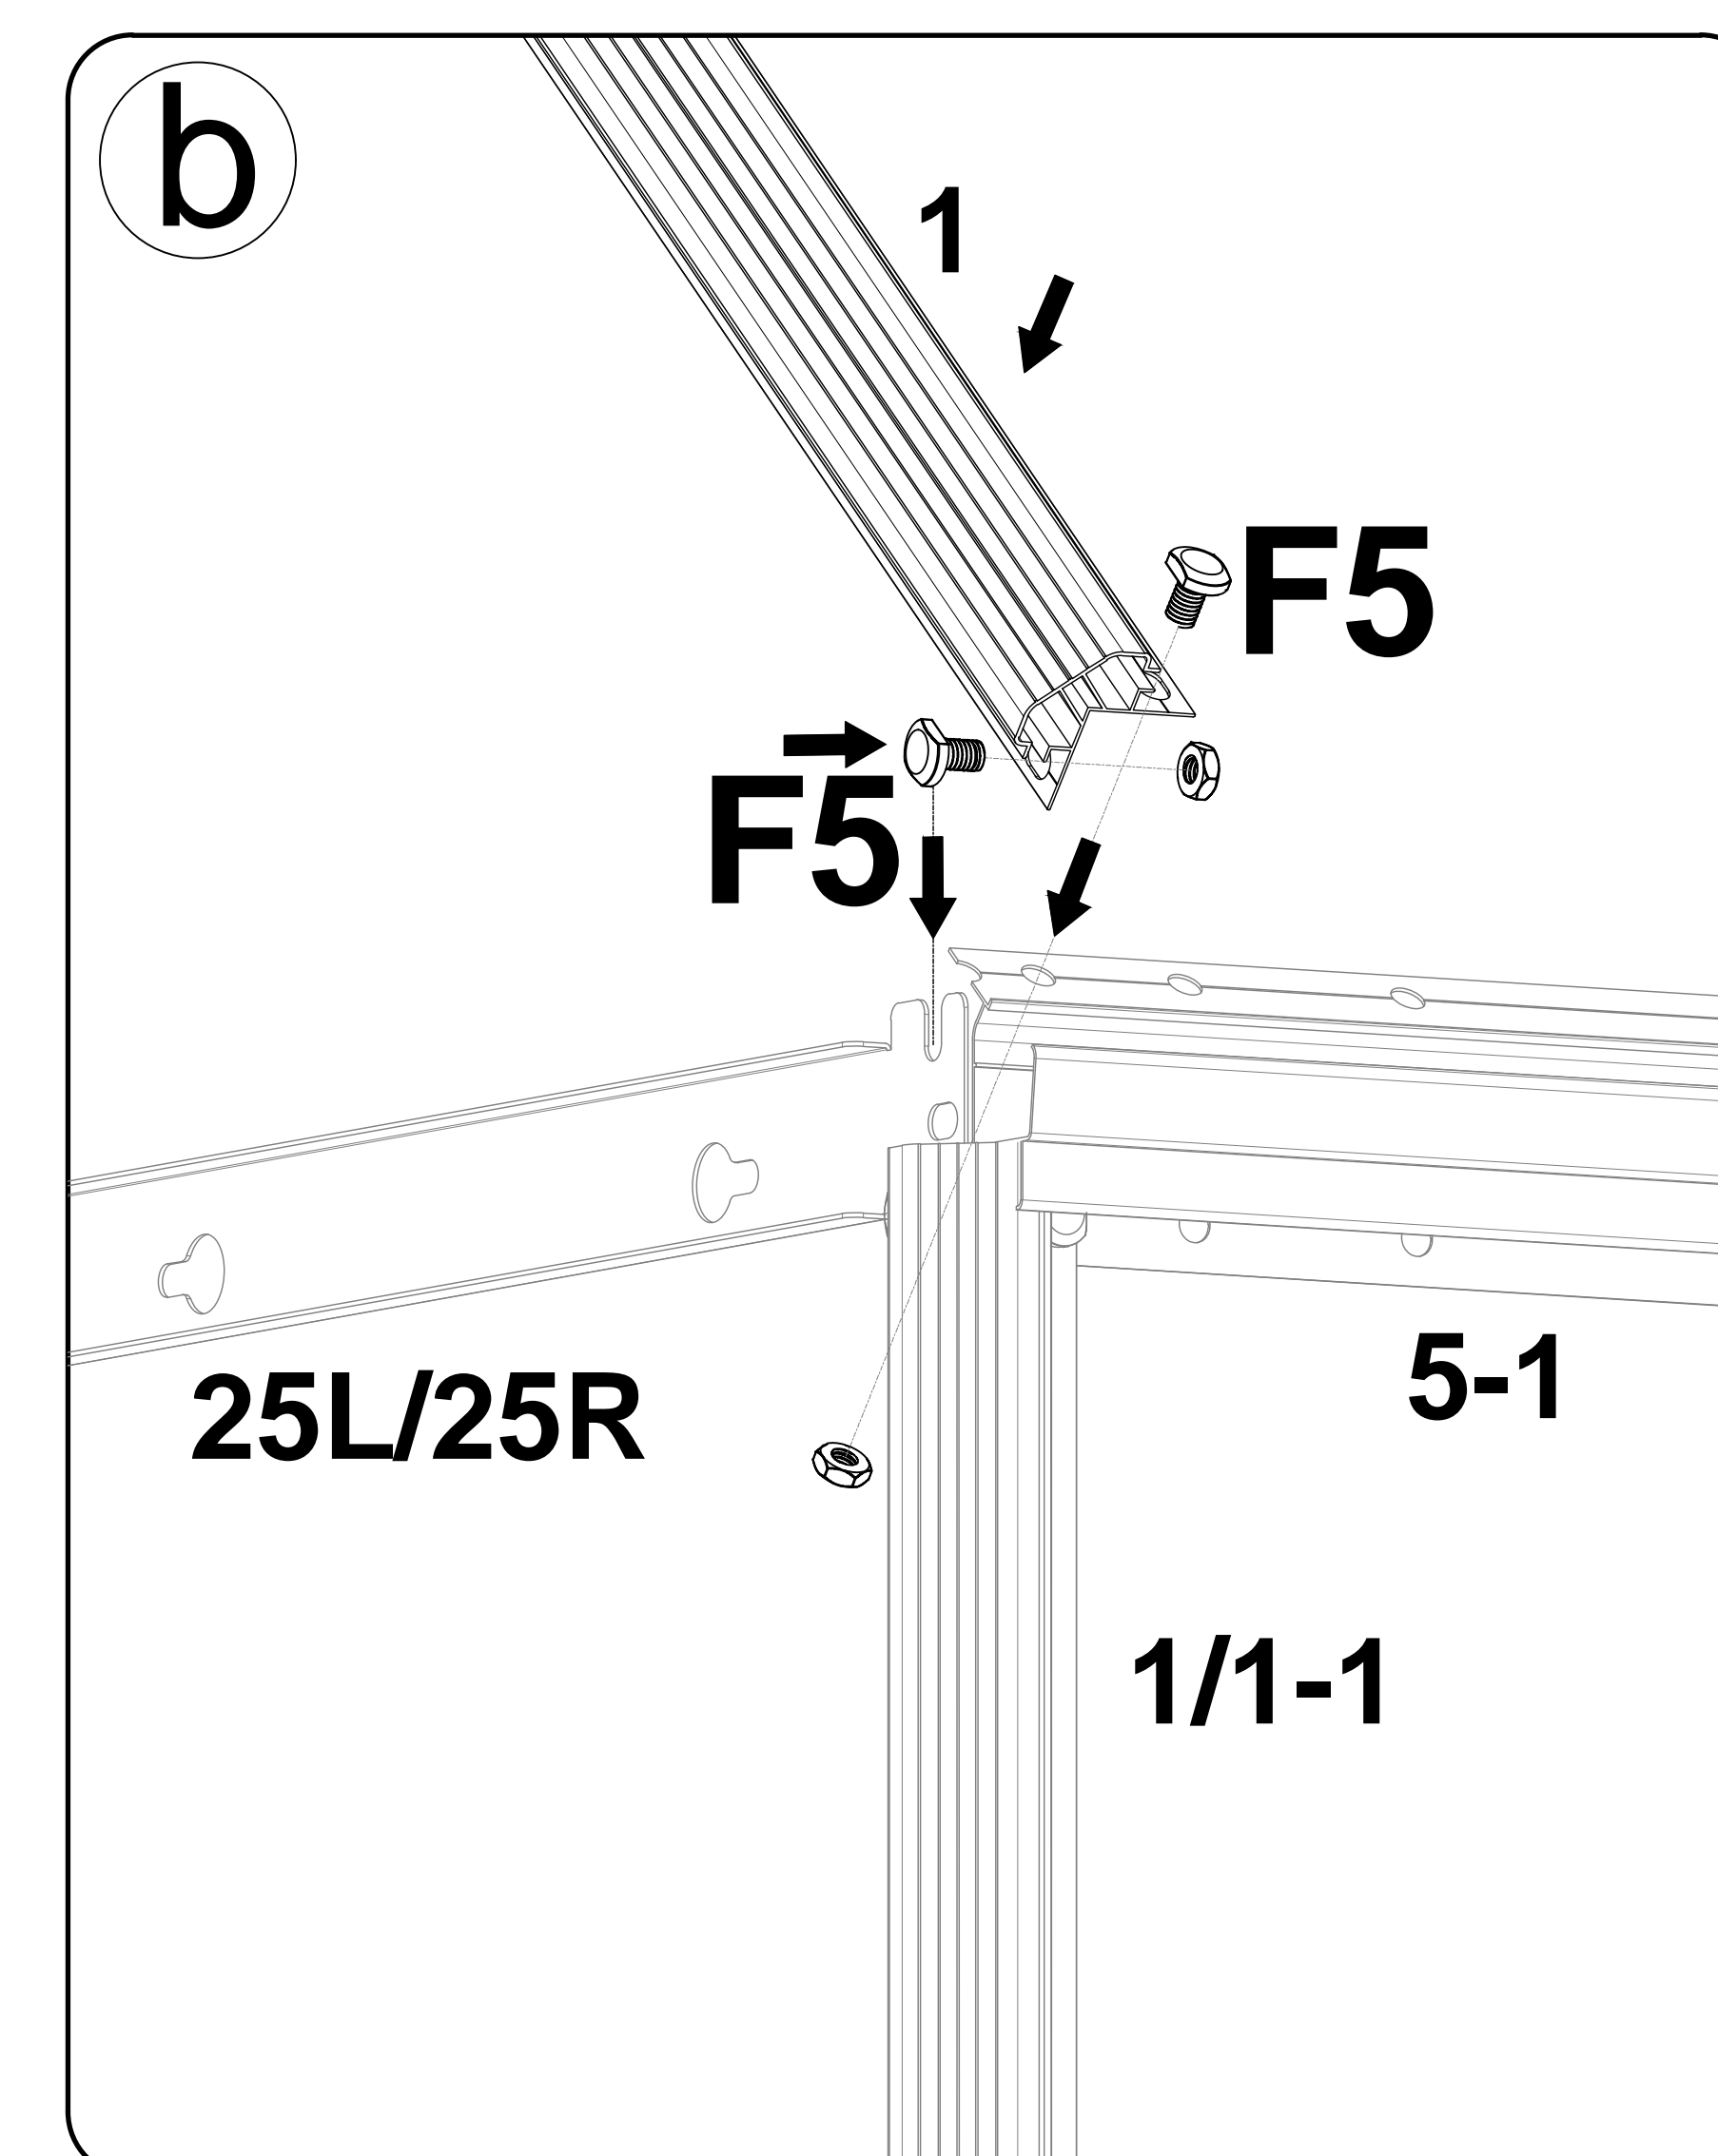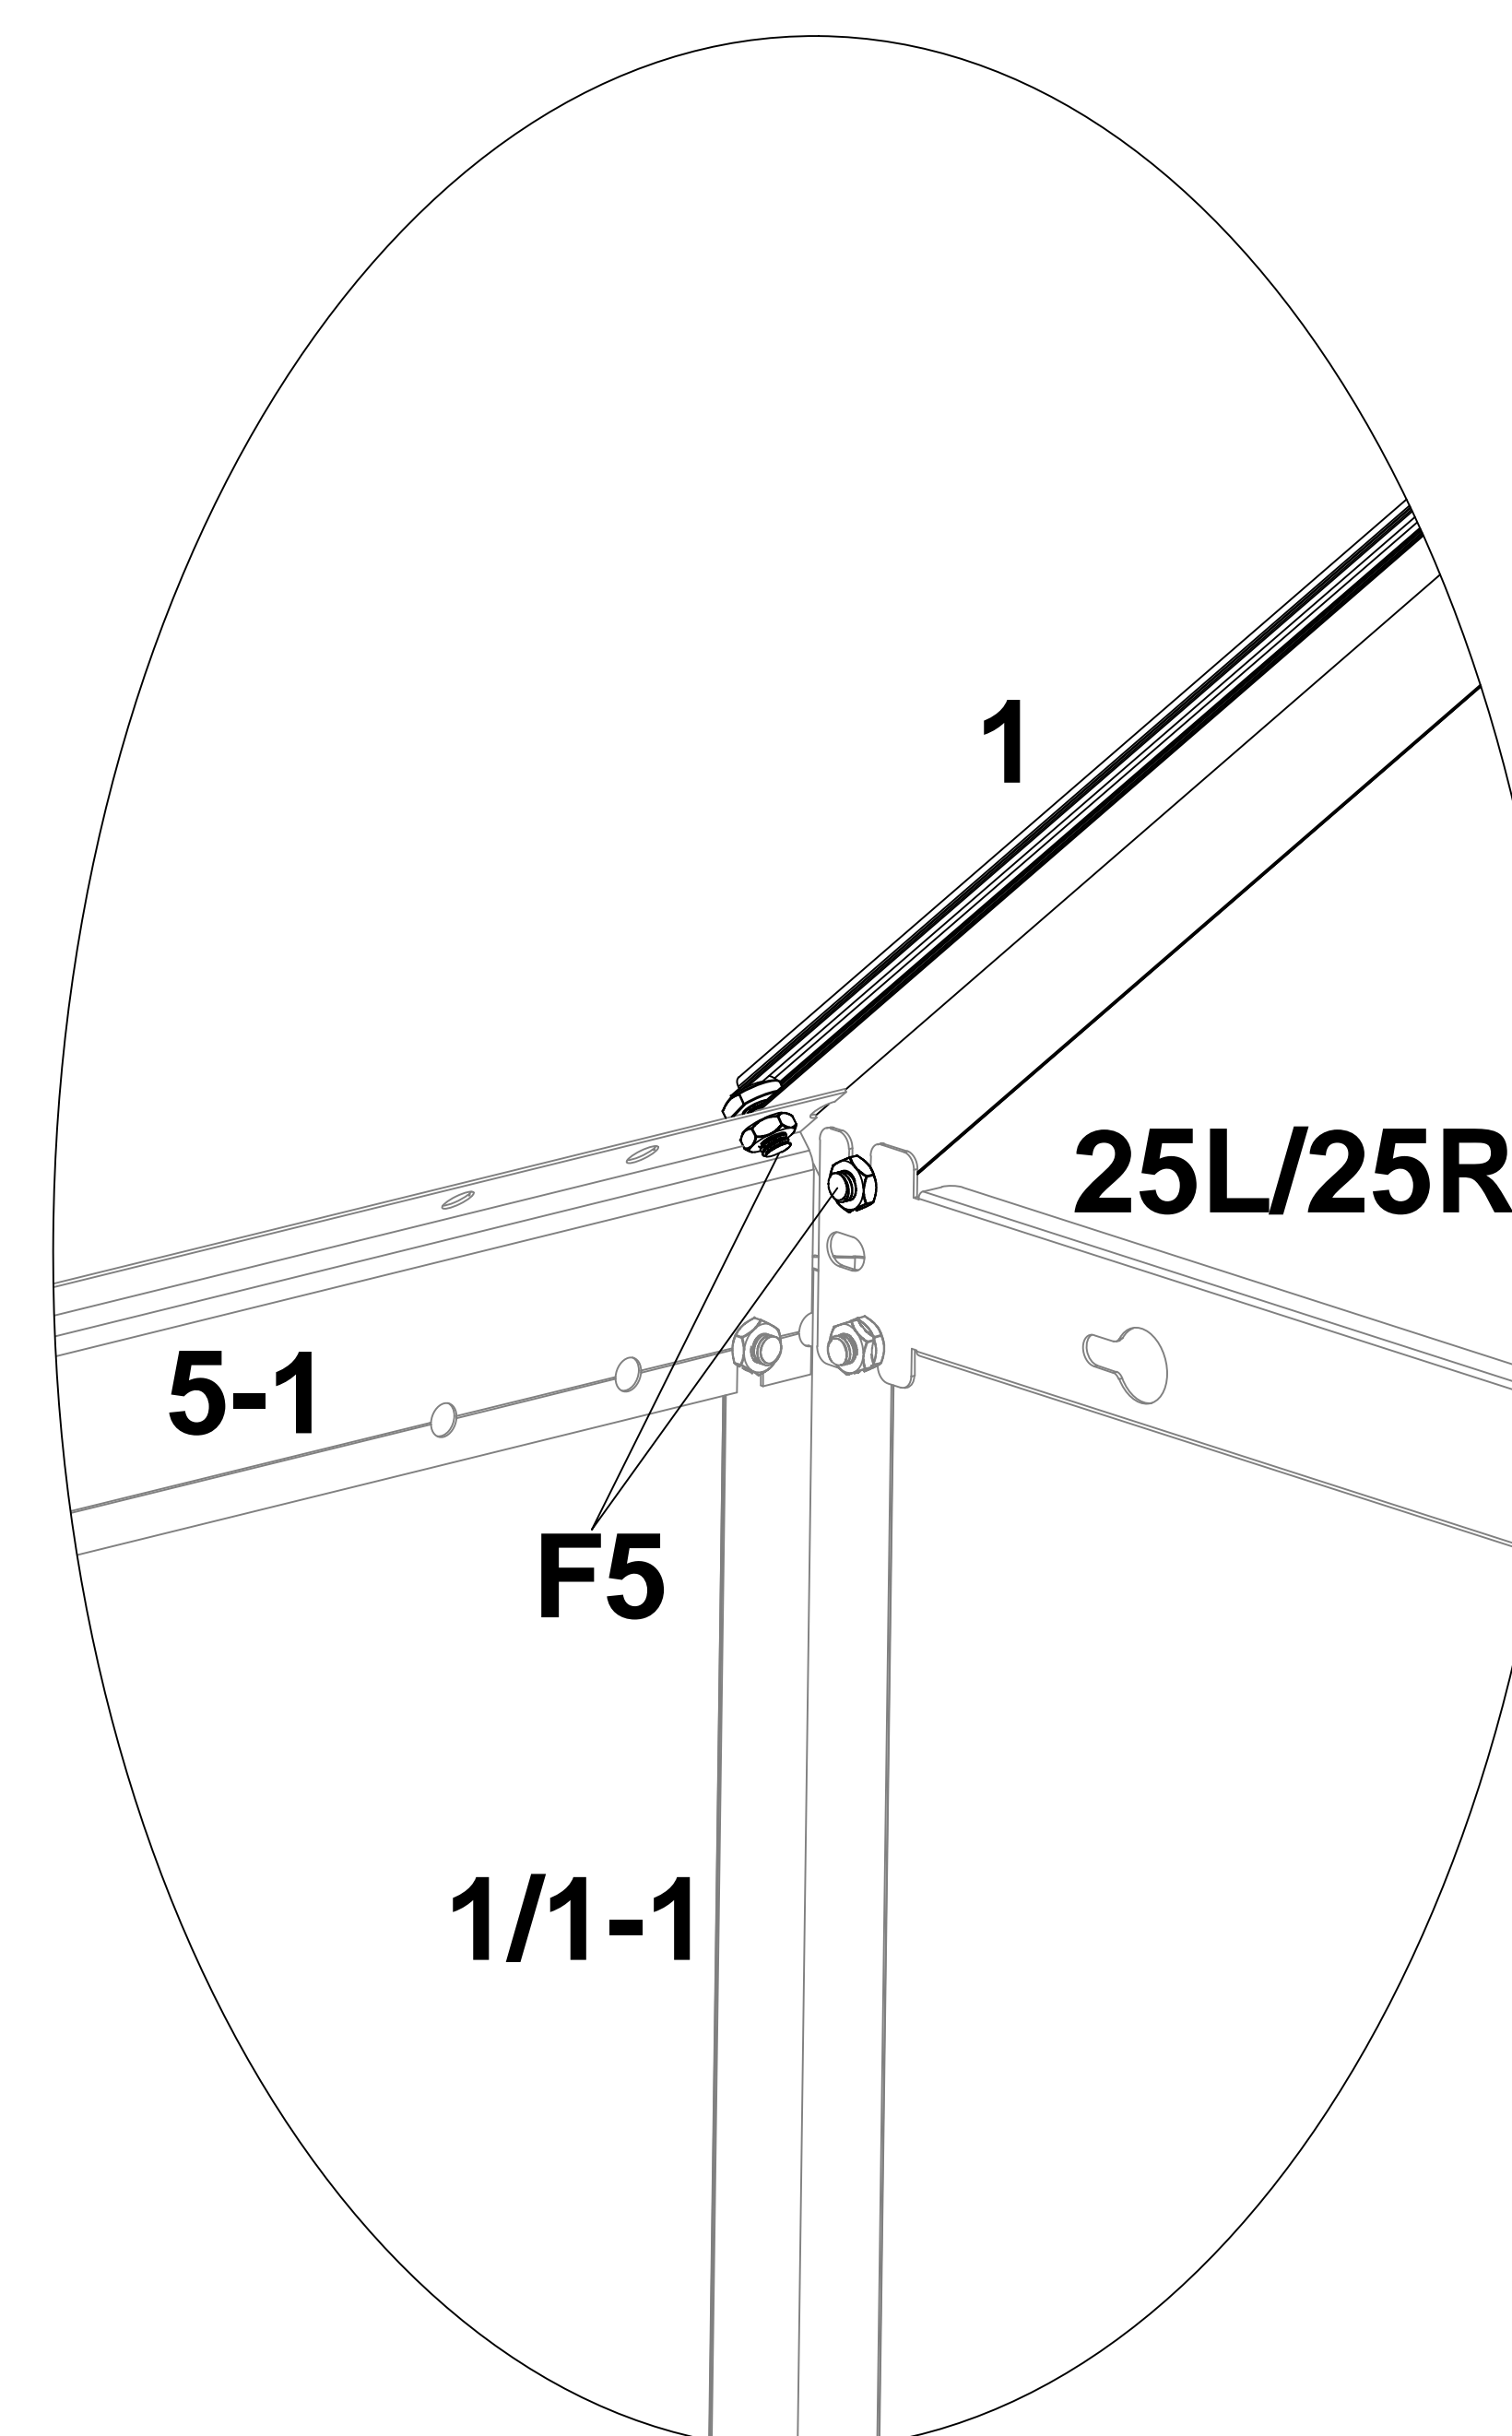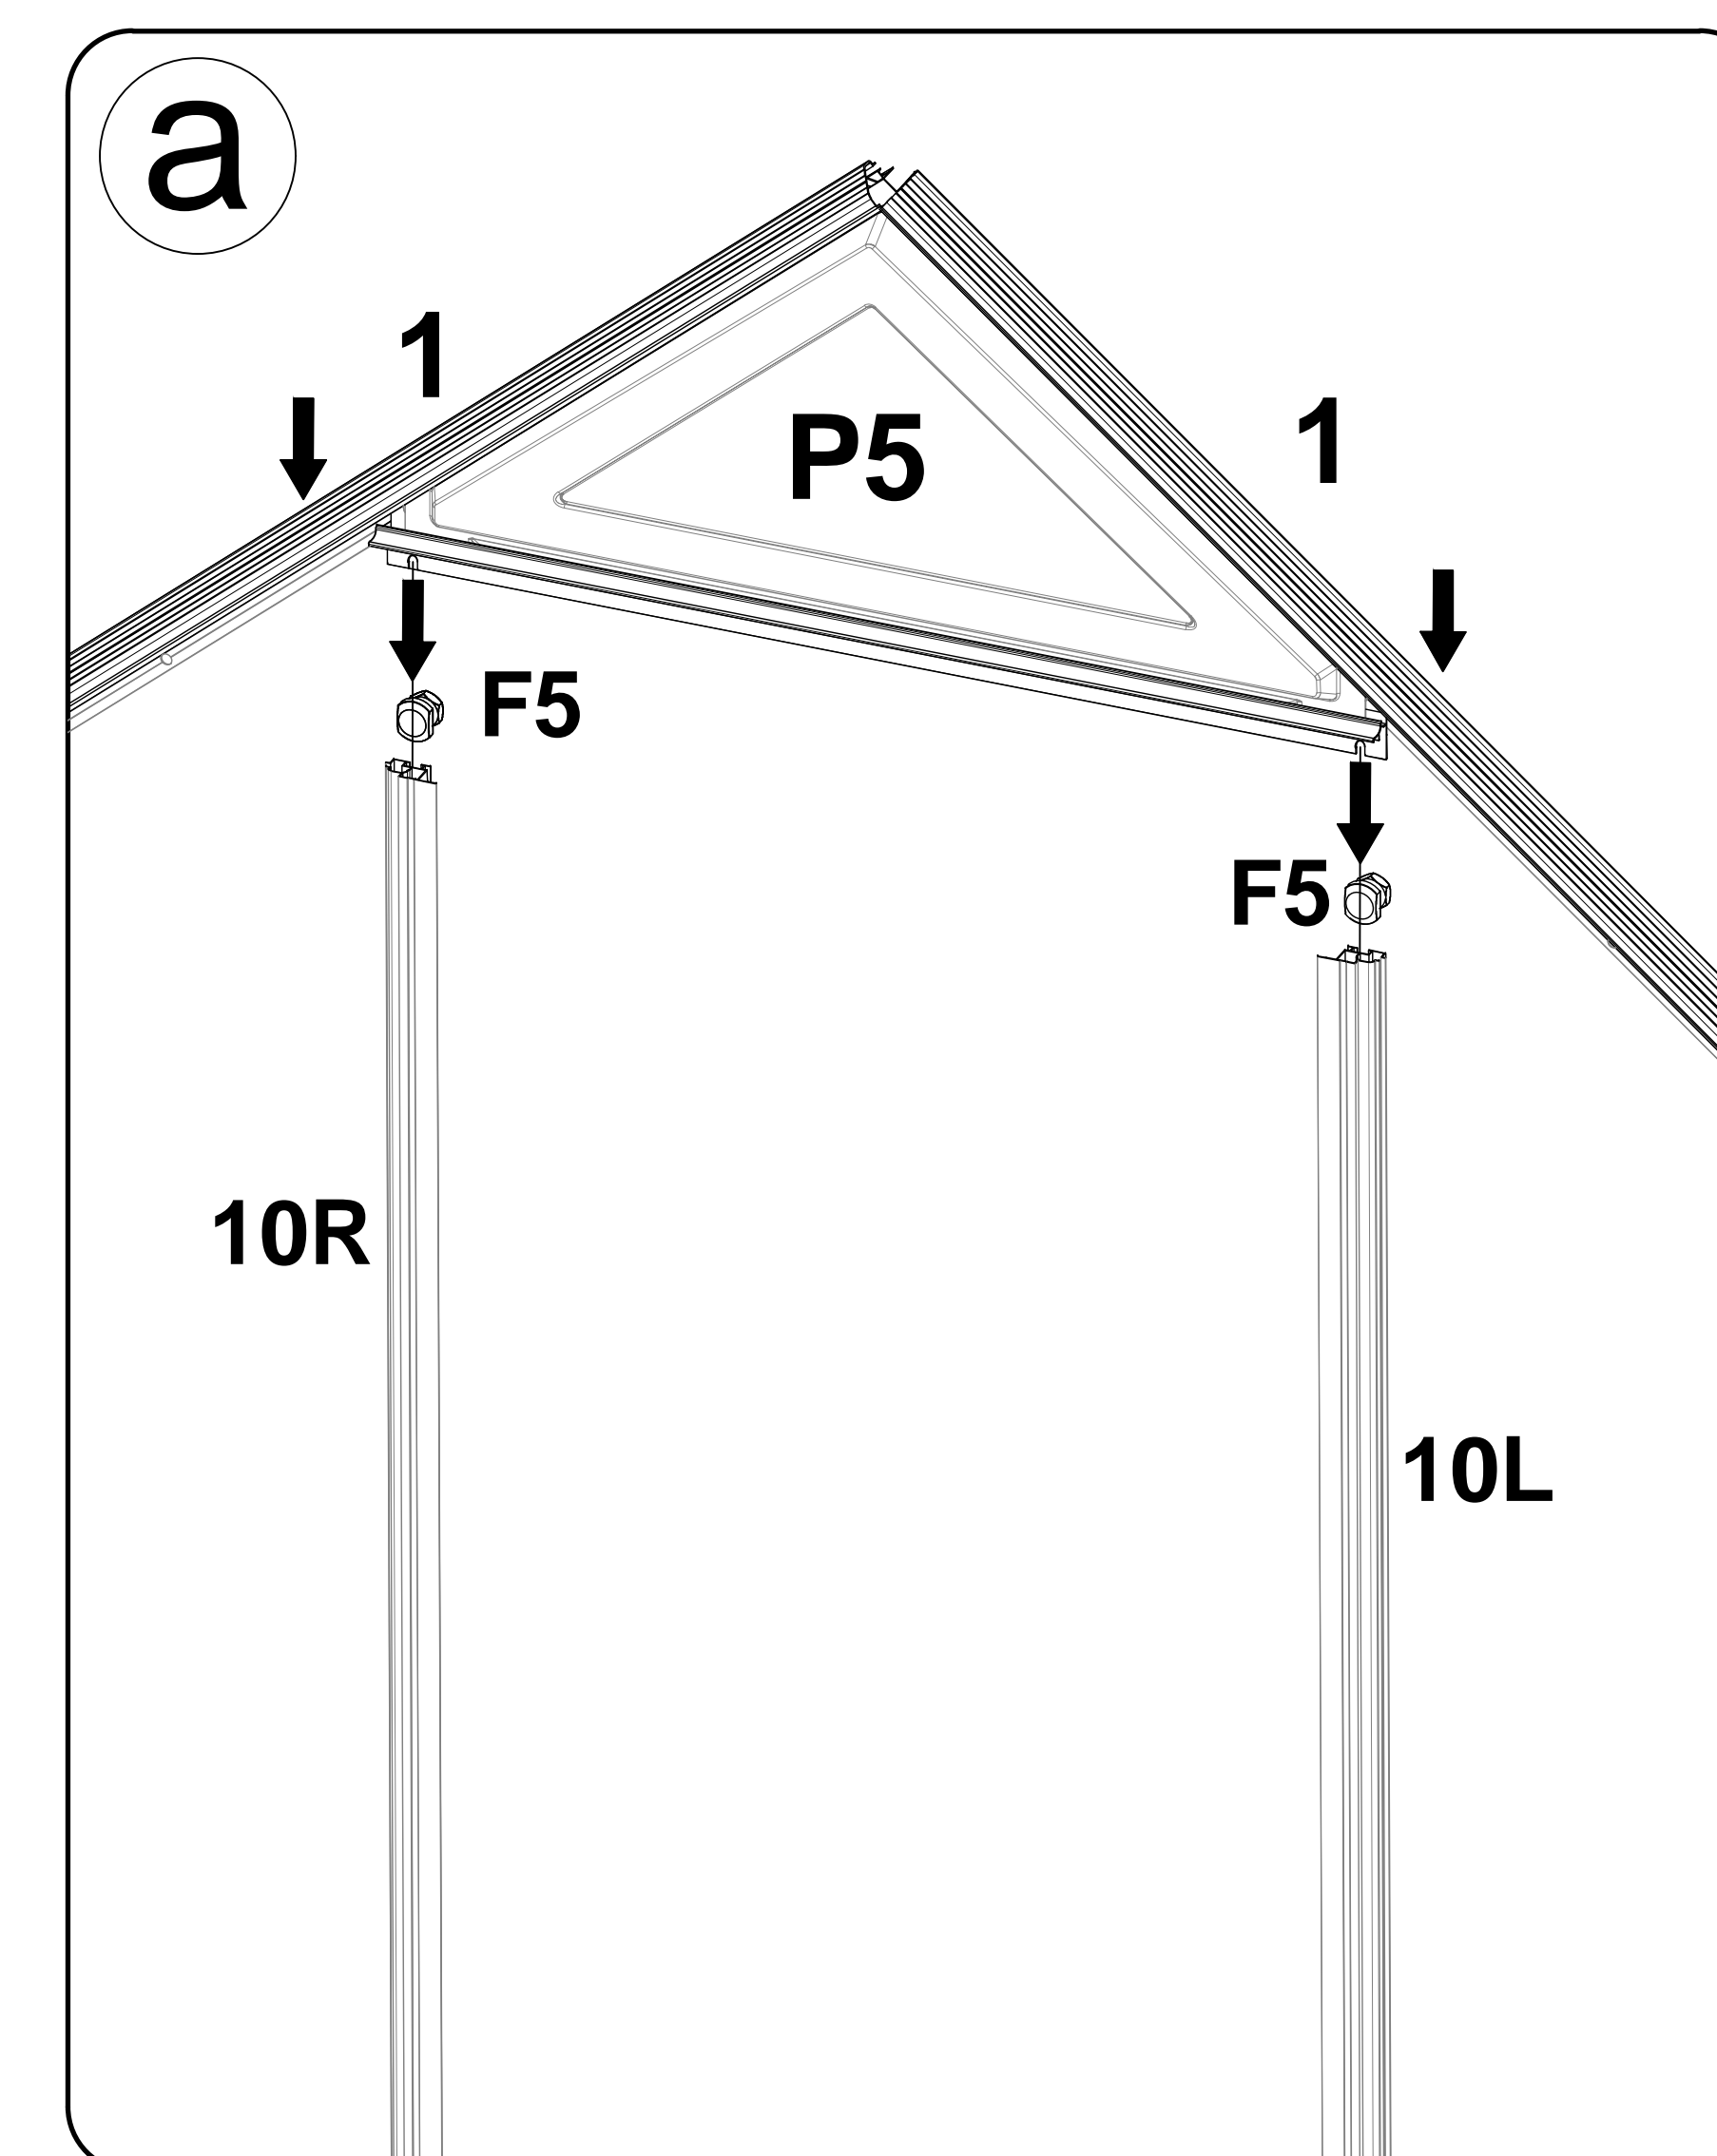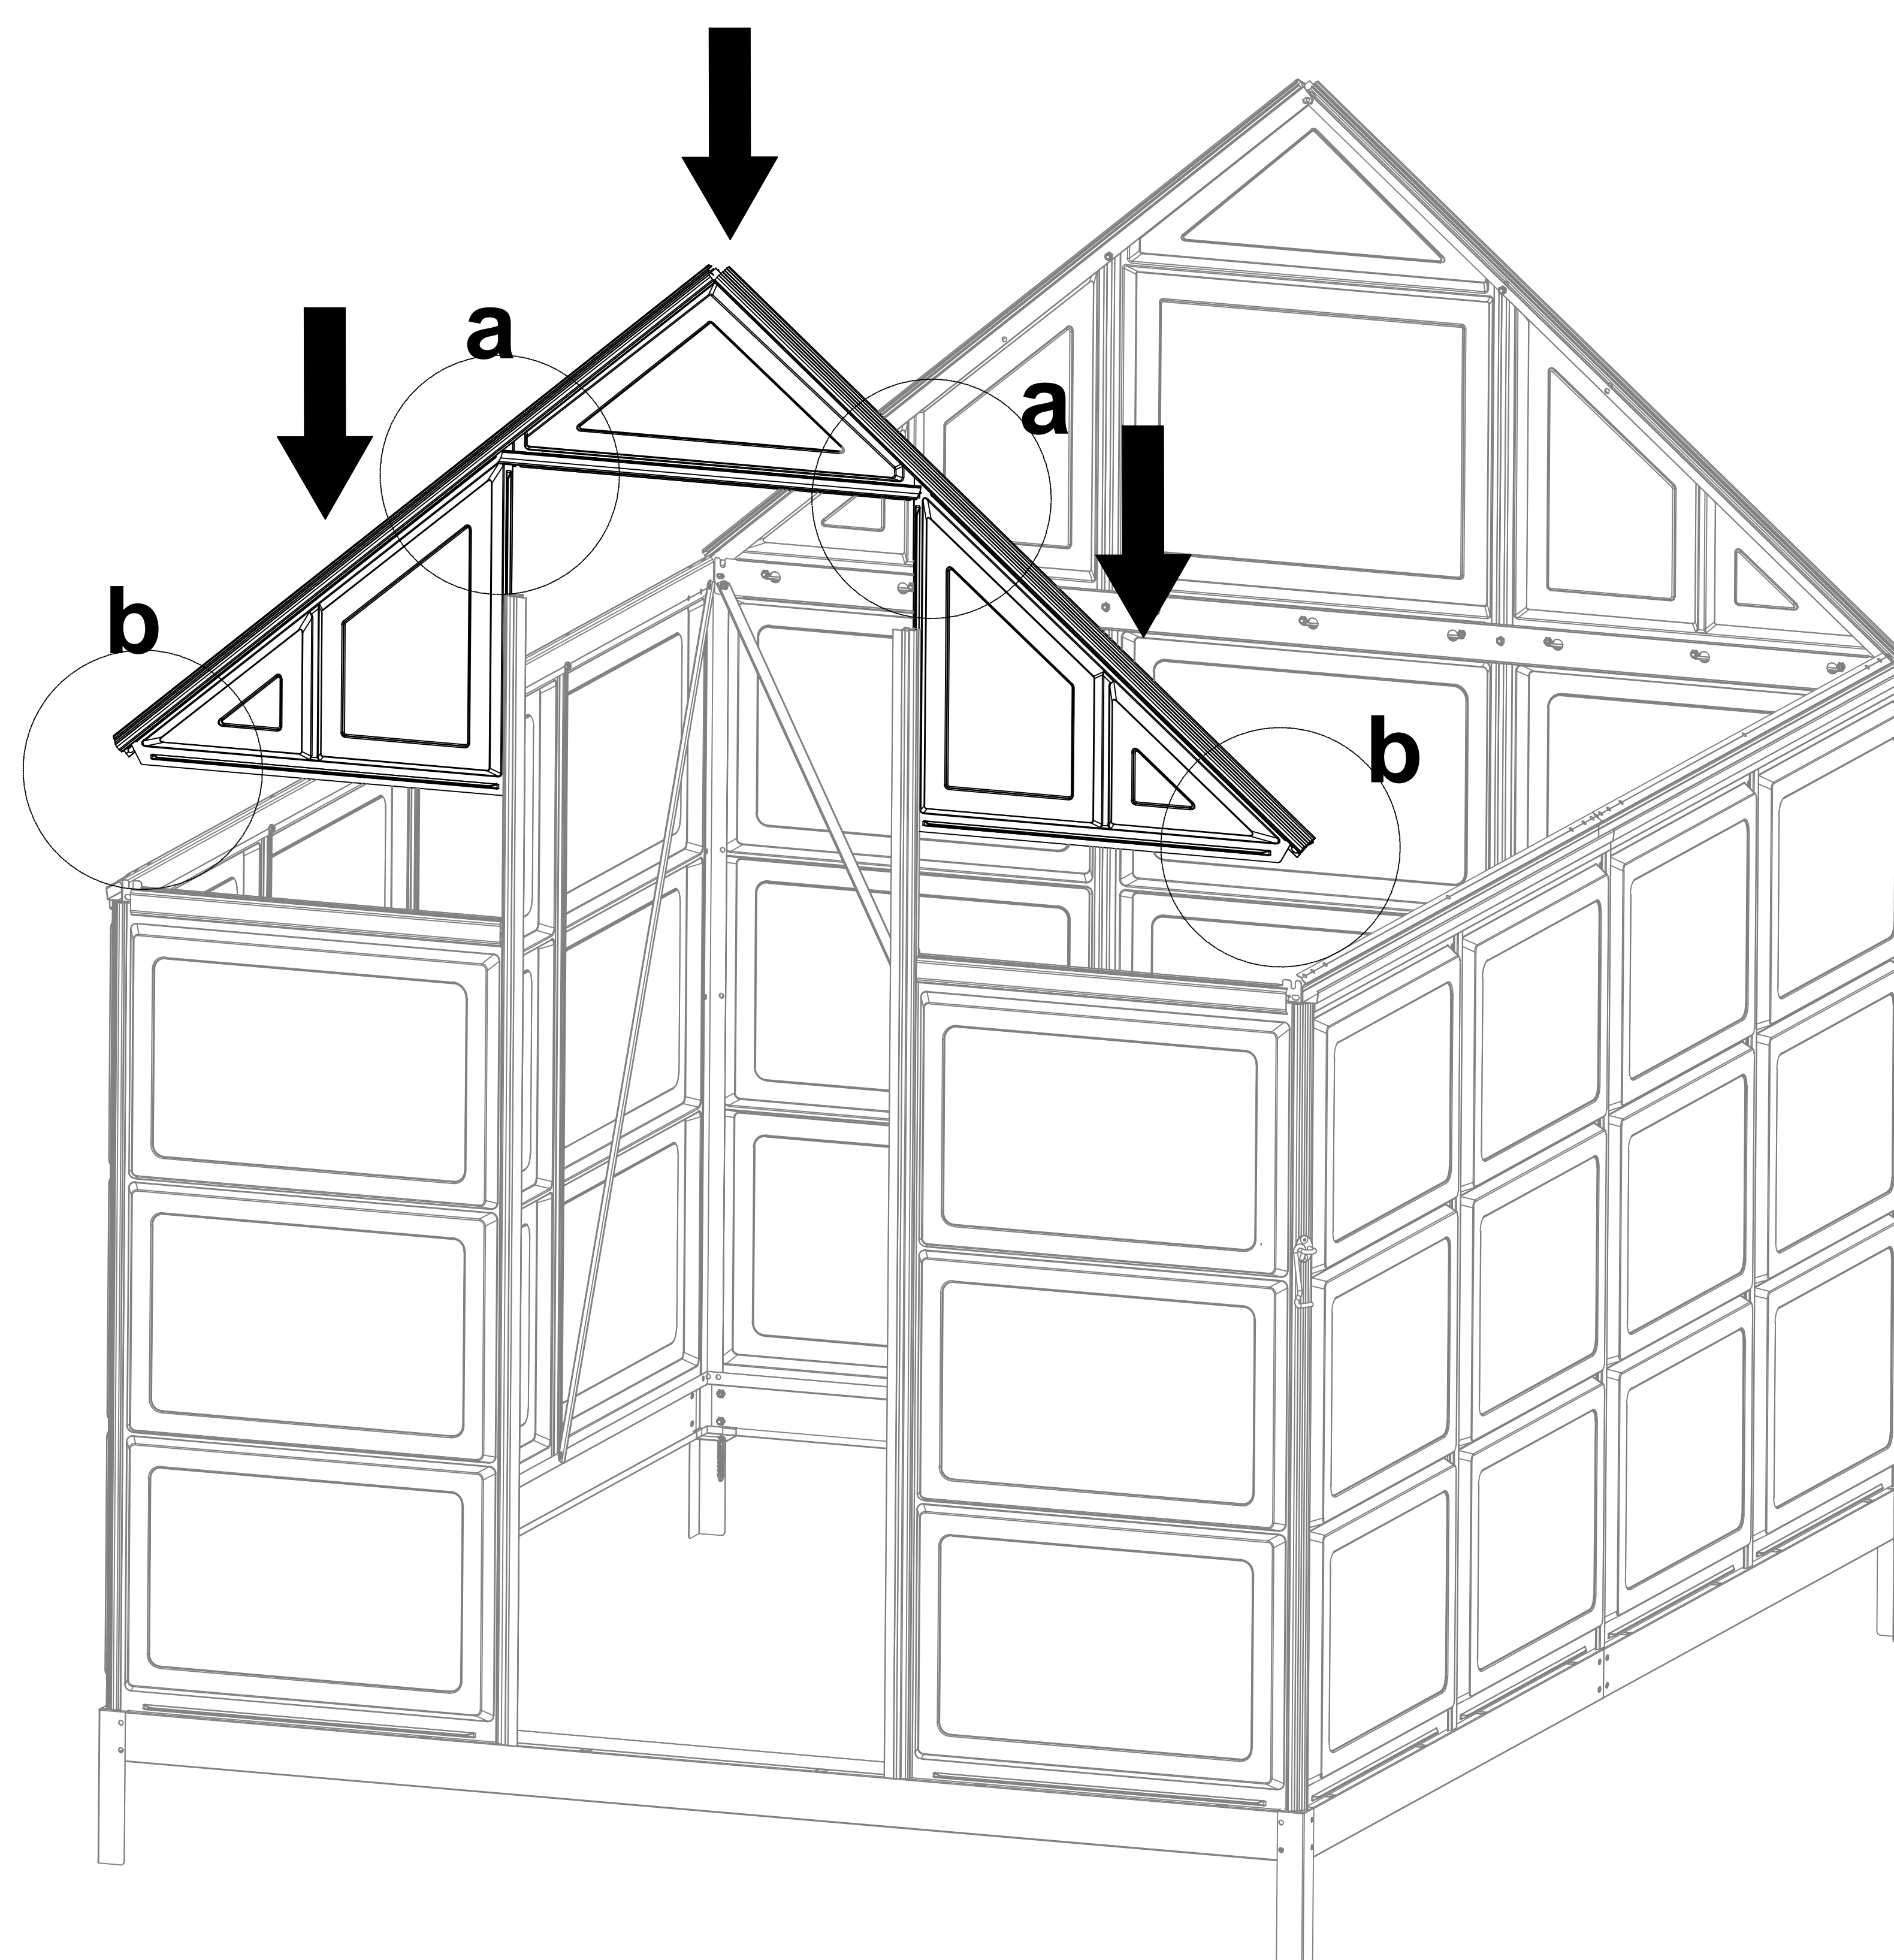


6

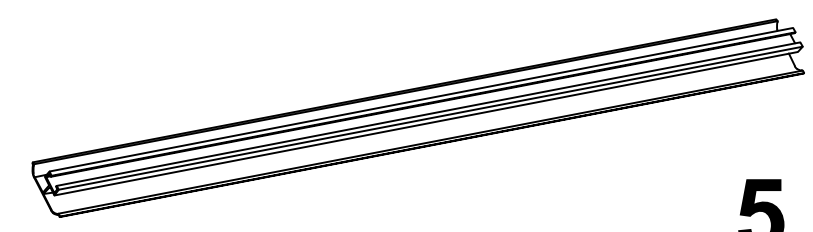


5 PCS


F5

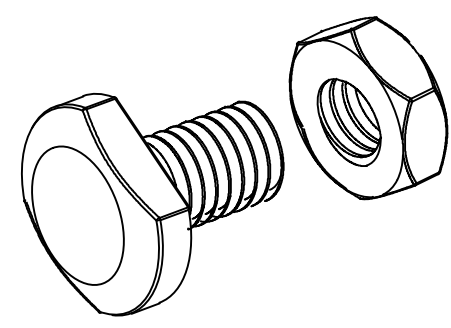


15 PCS

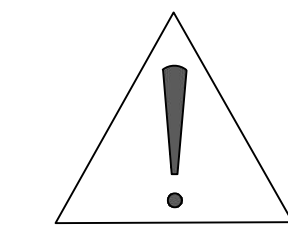


## Internal View

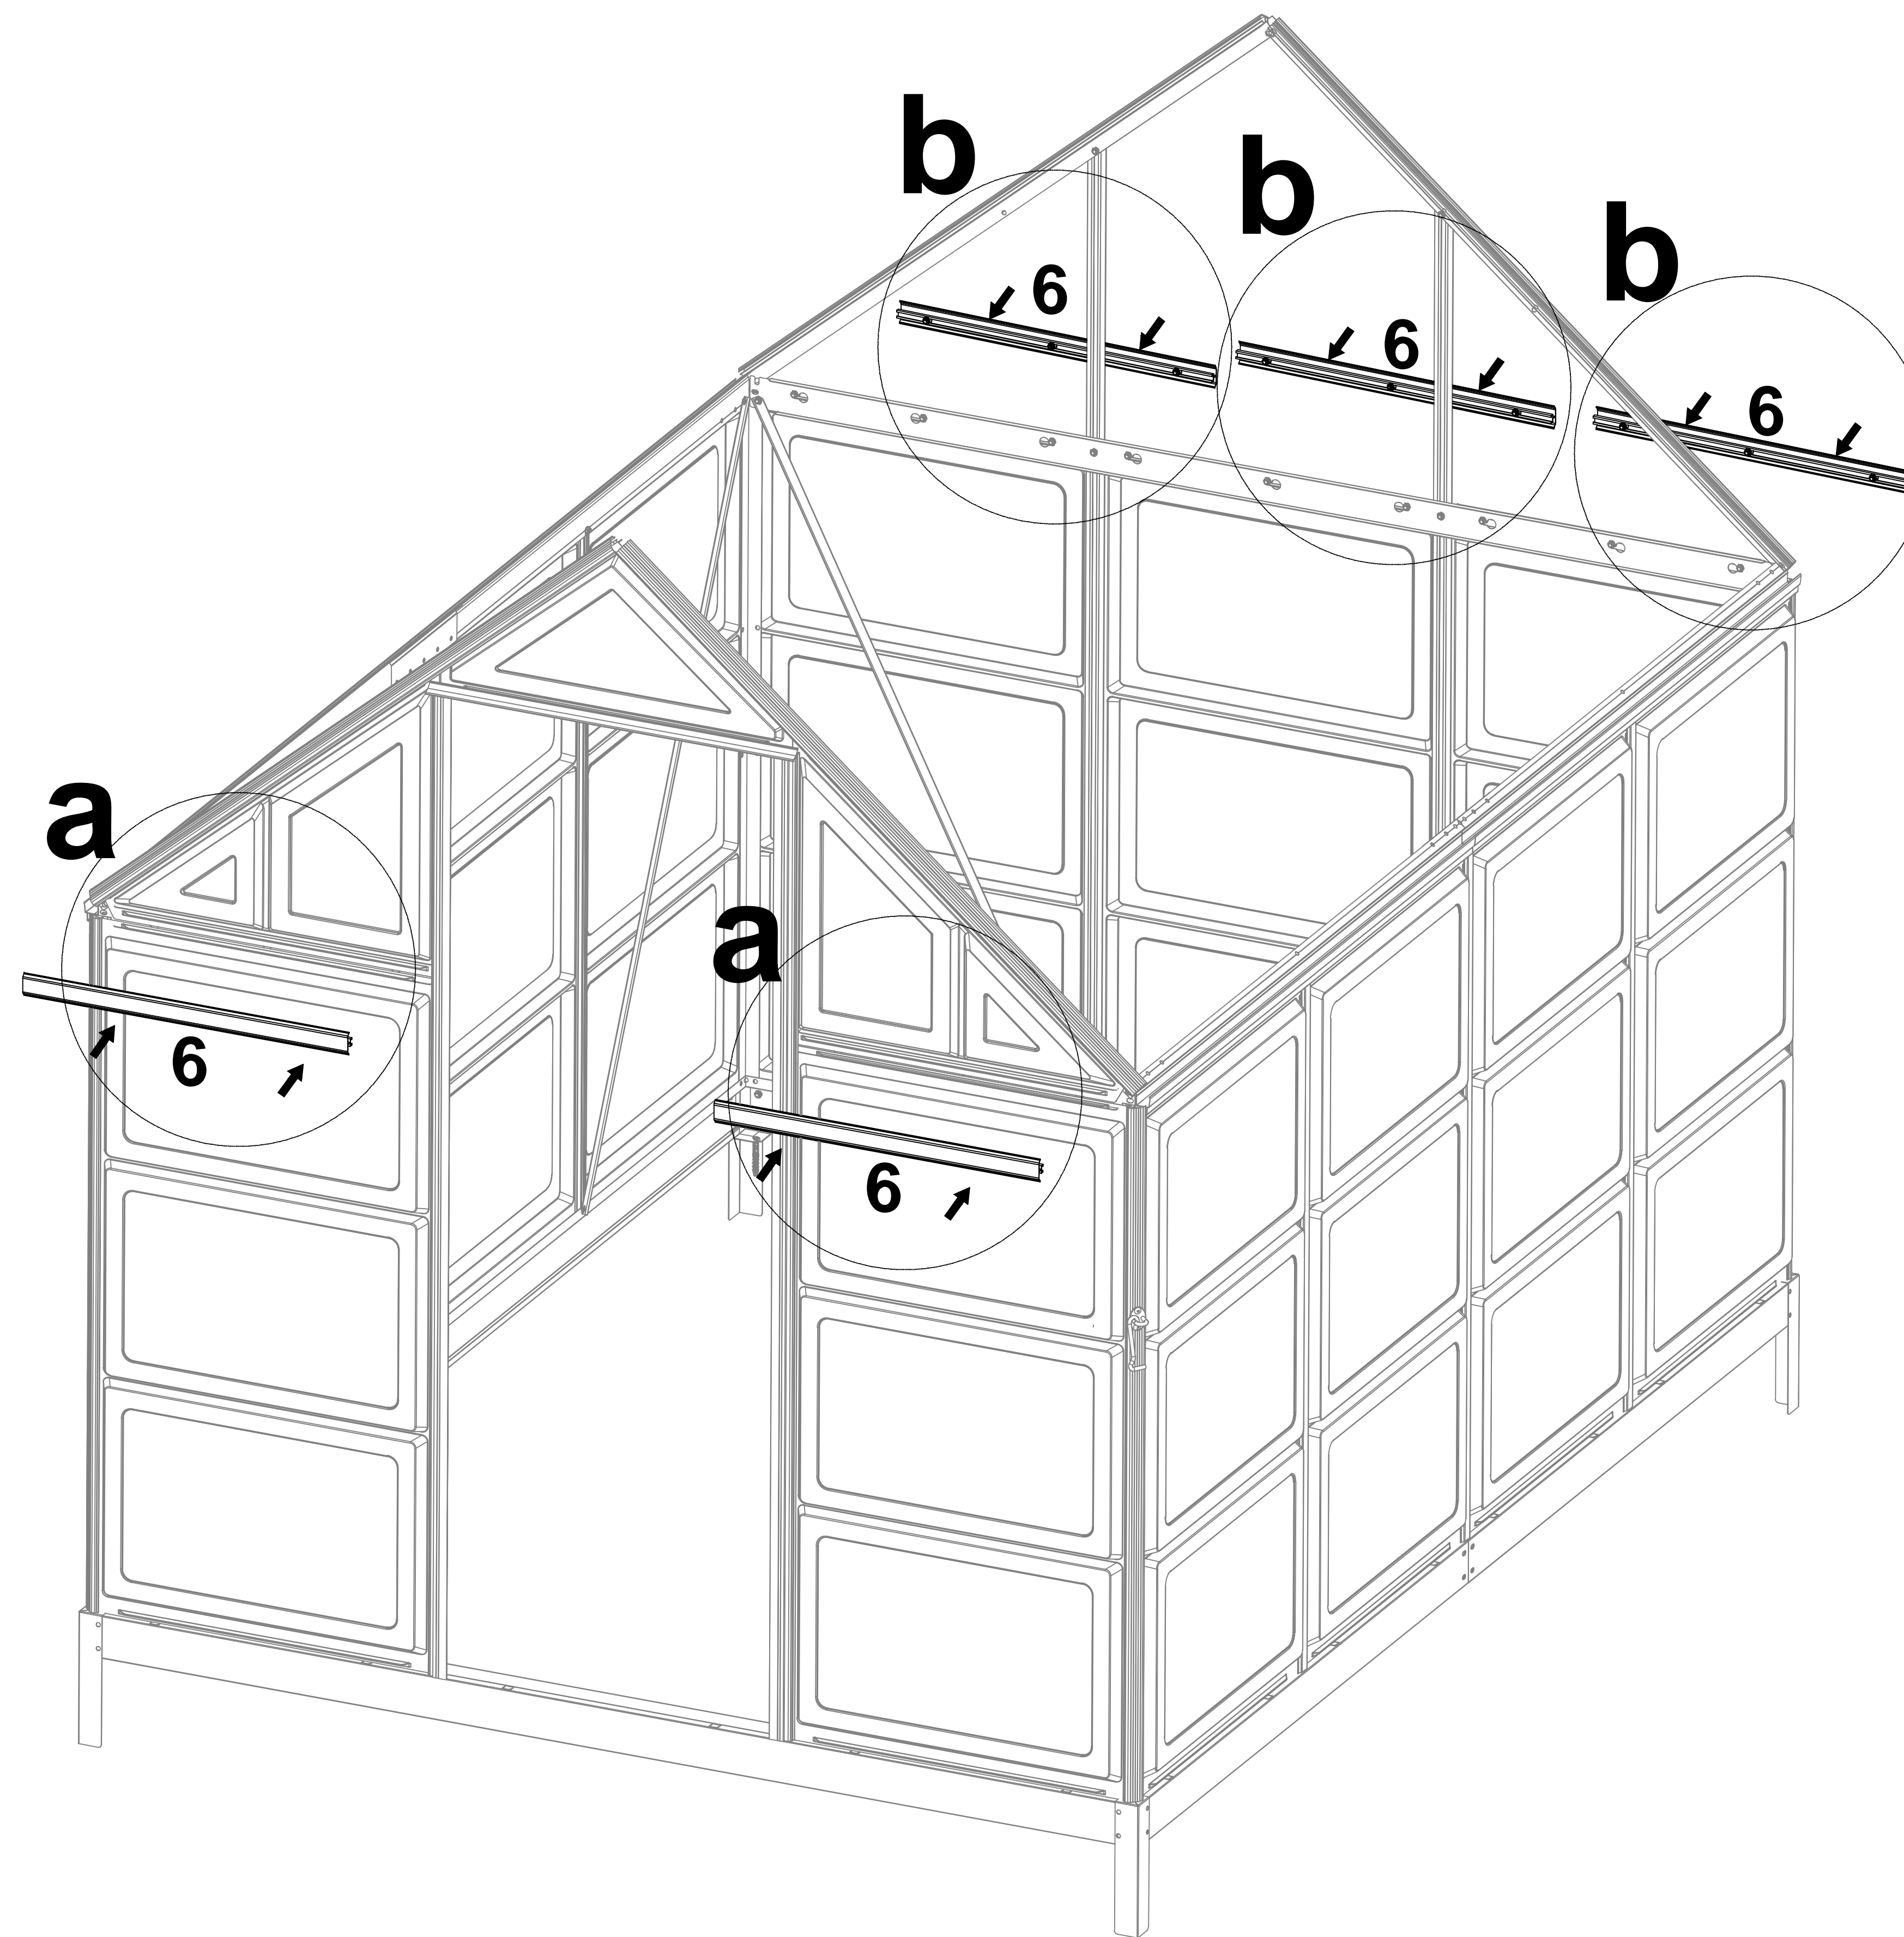



a

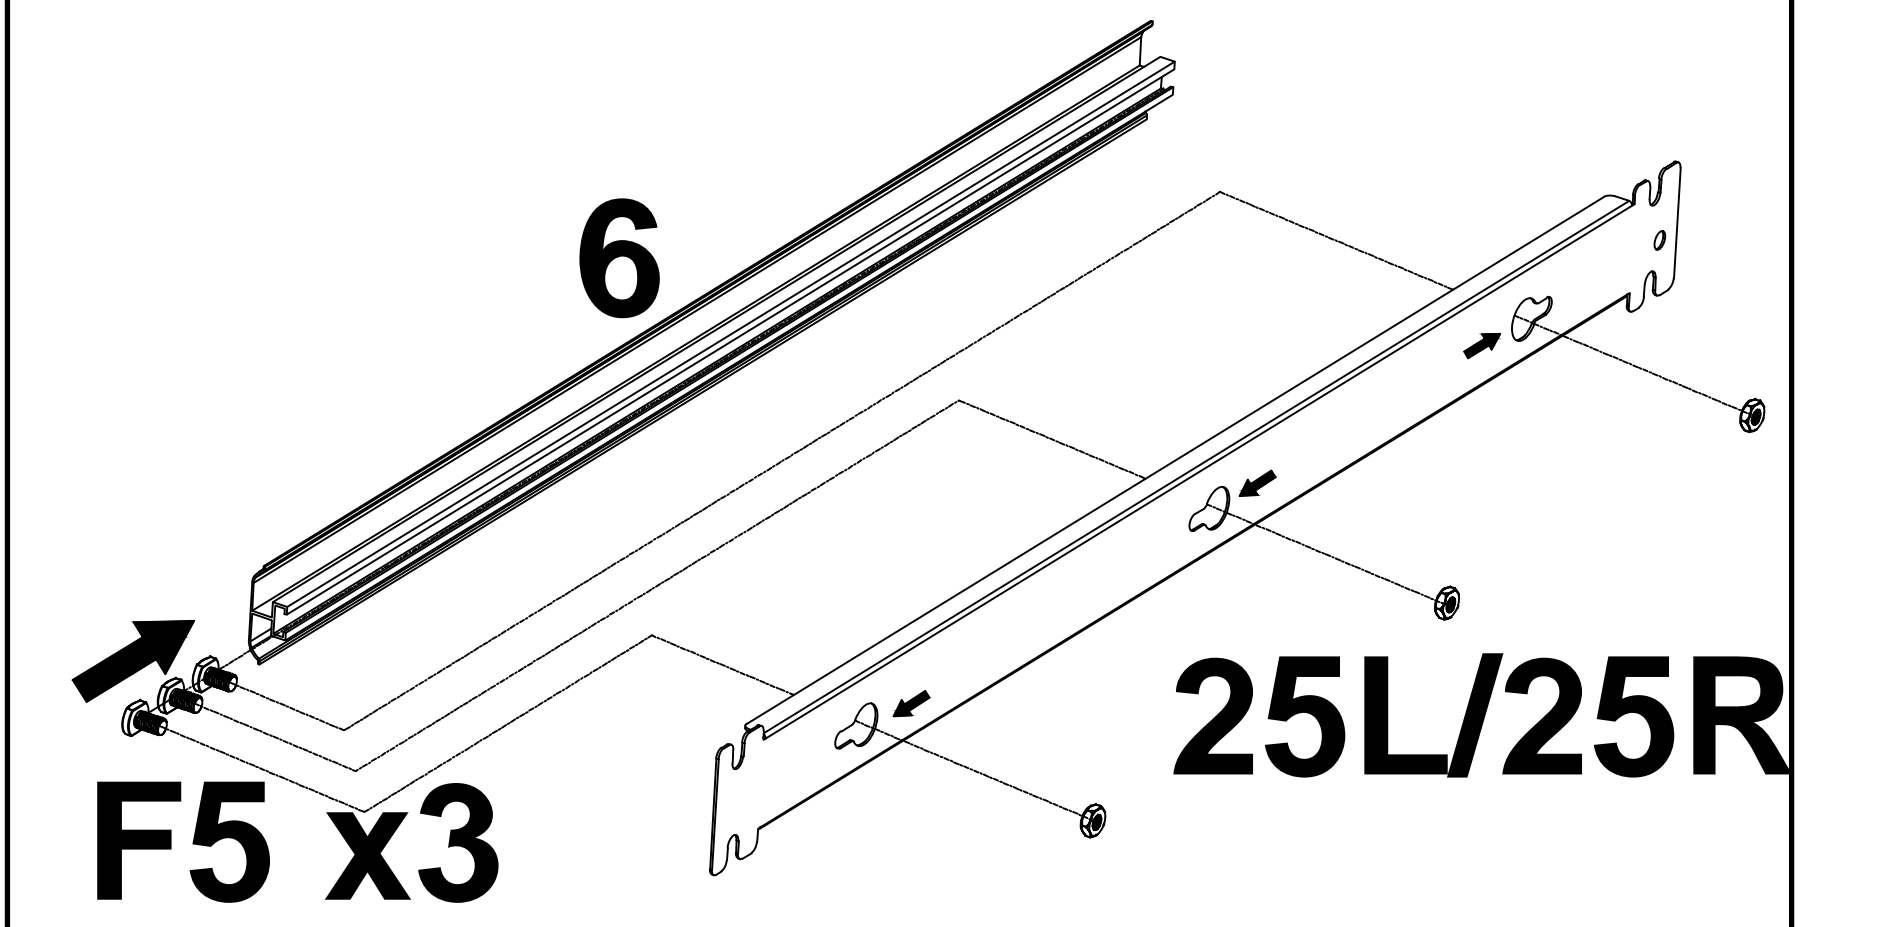


b

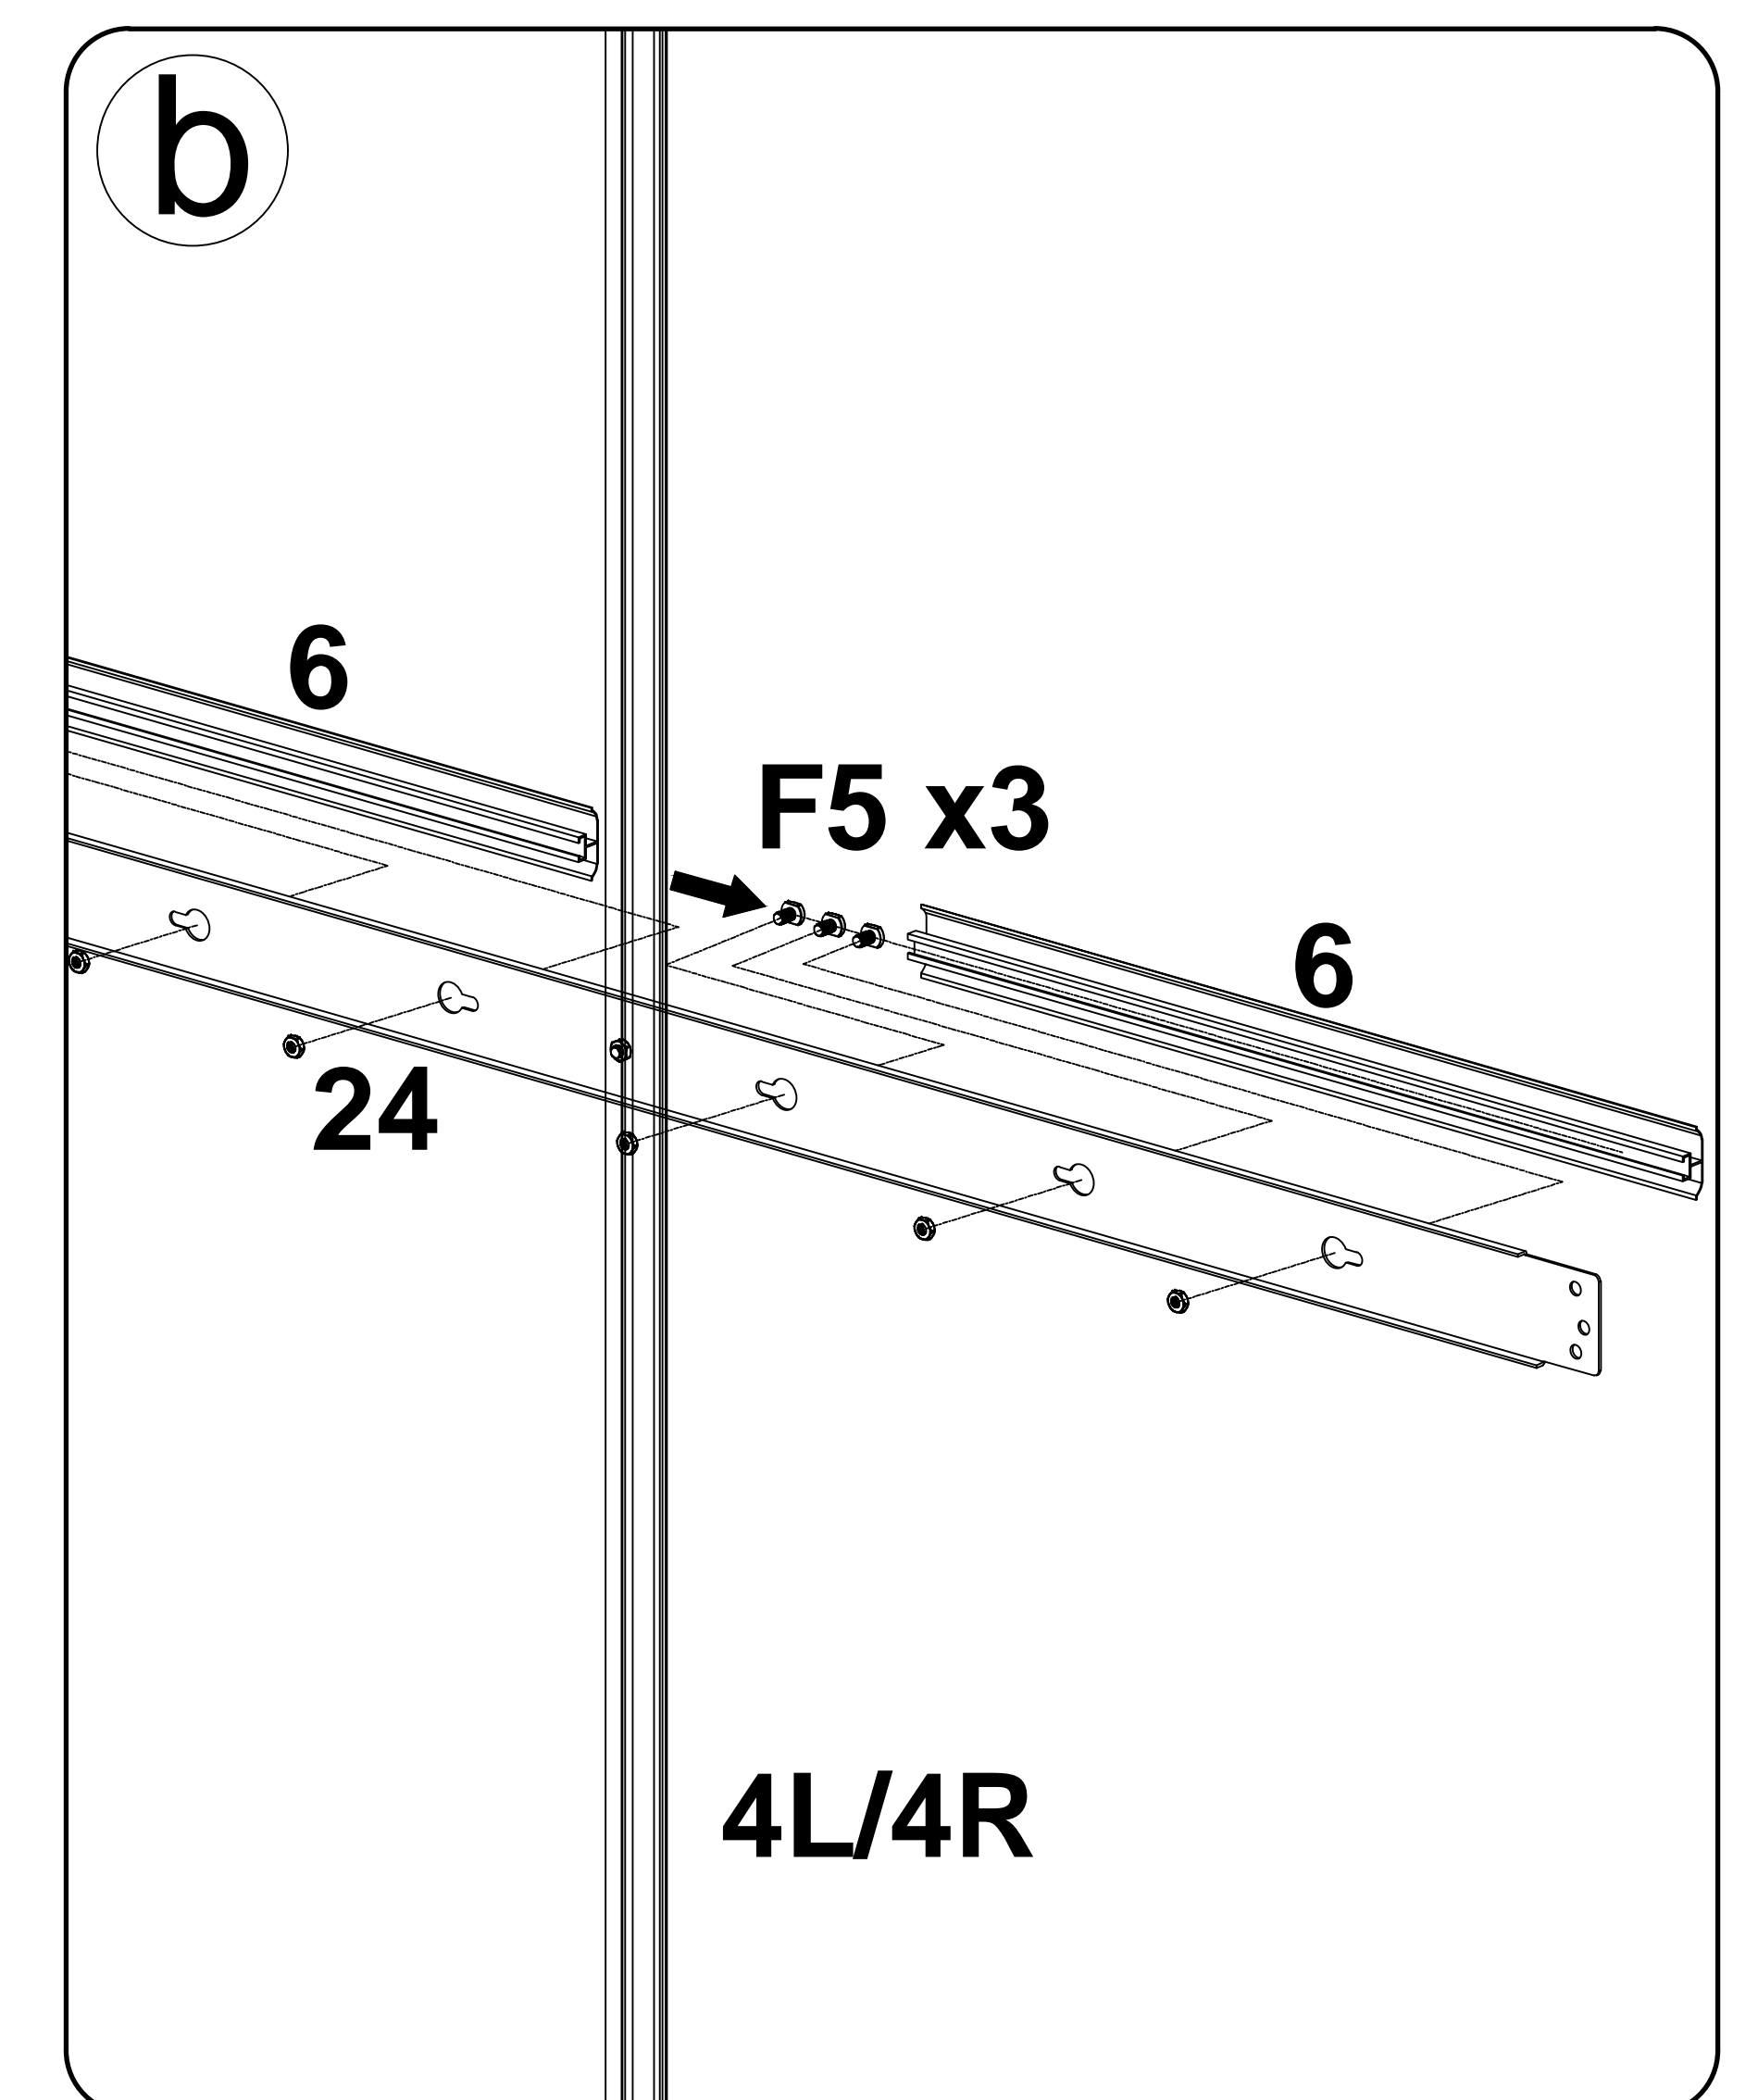


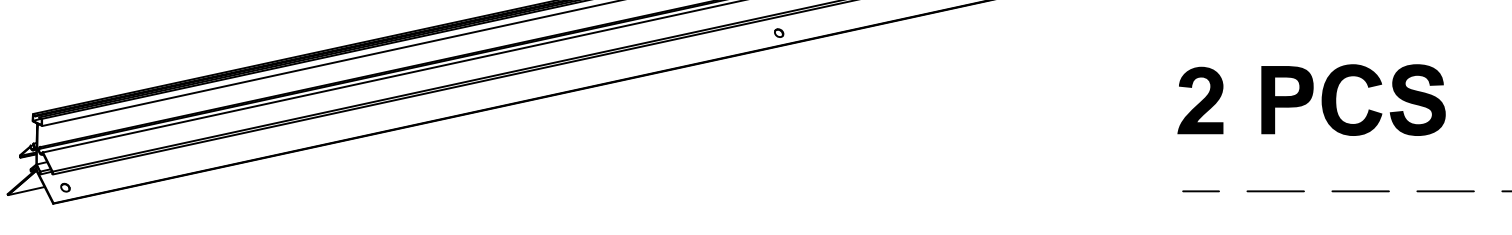
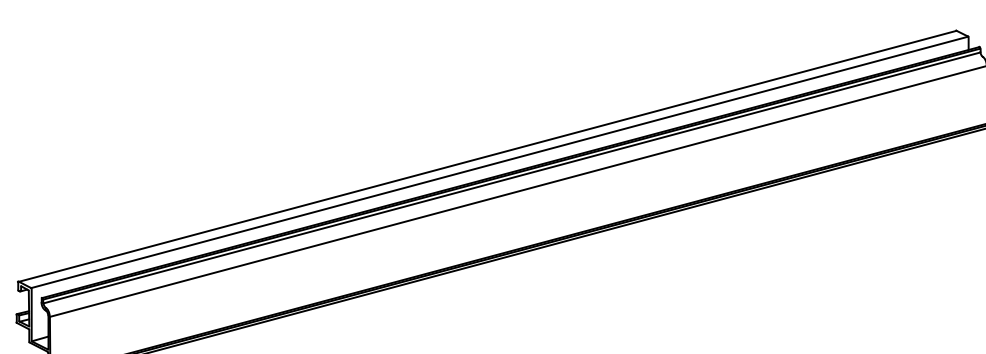
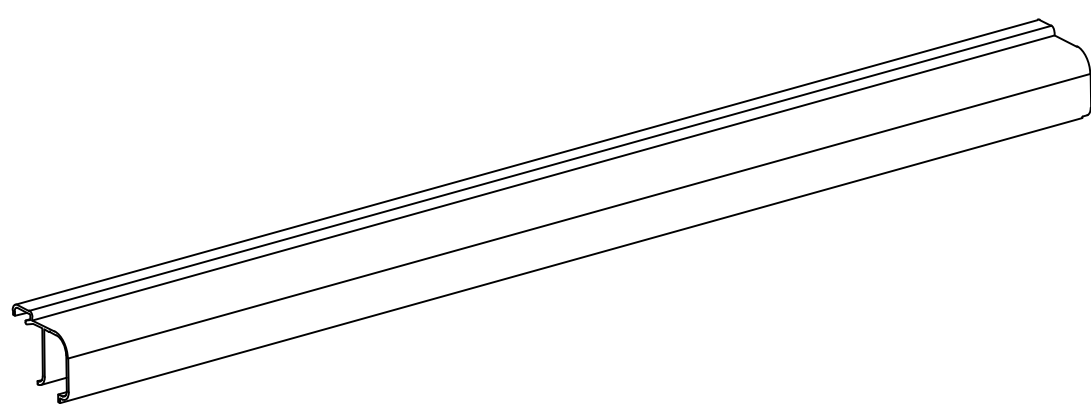
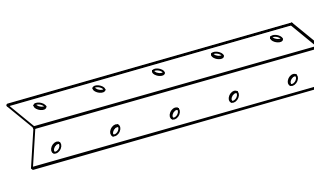
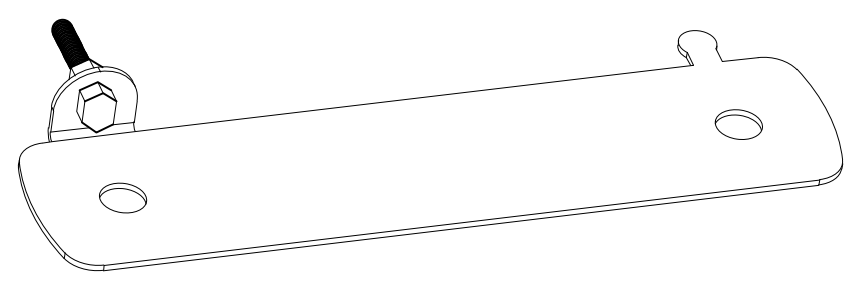
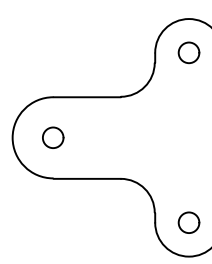
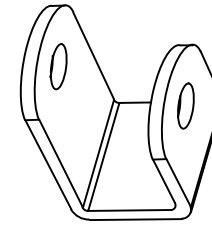
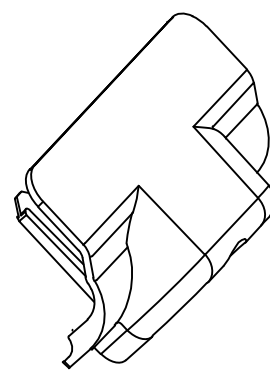
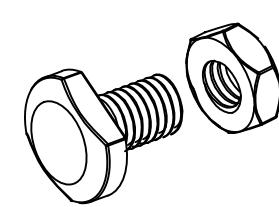
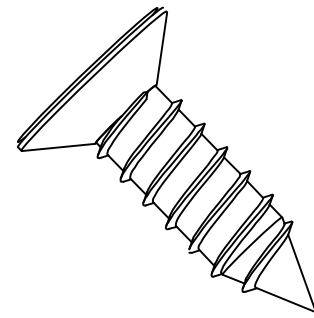
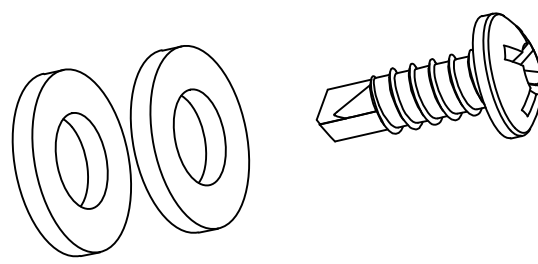
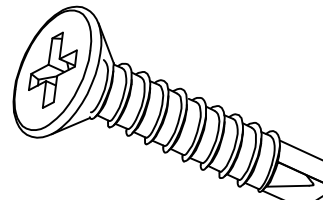


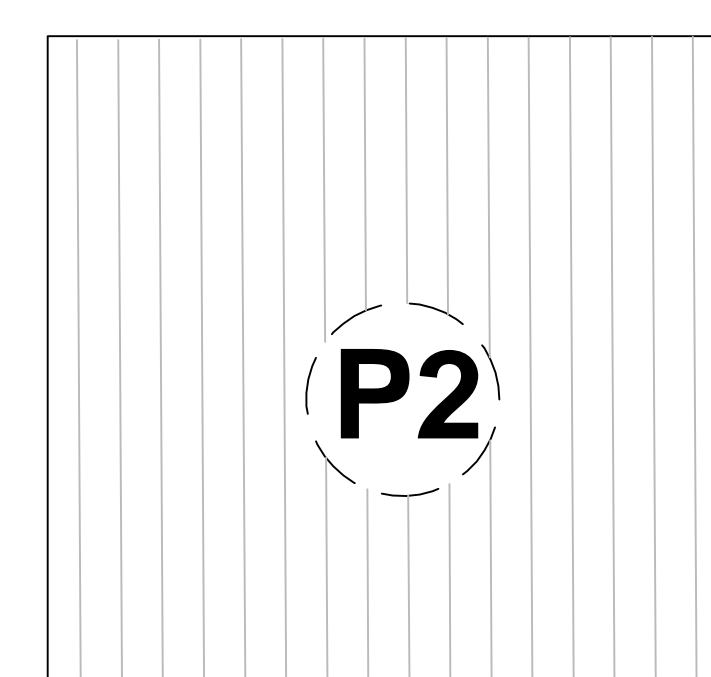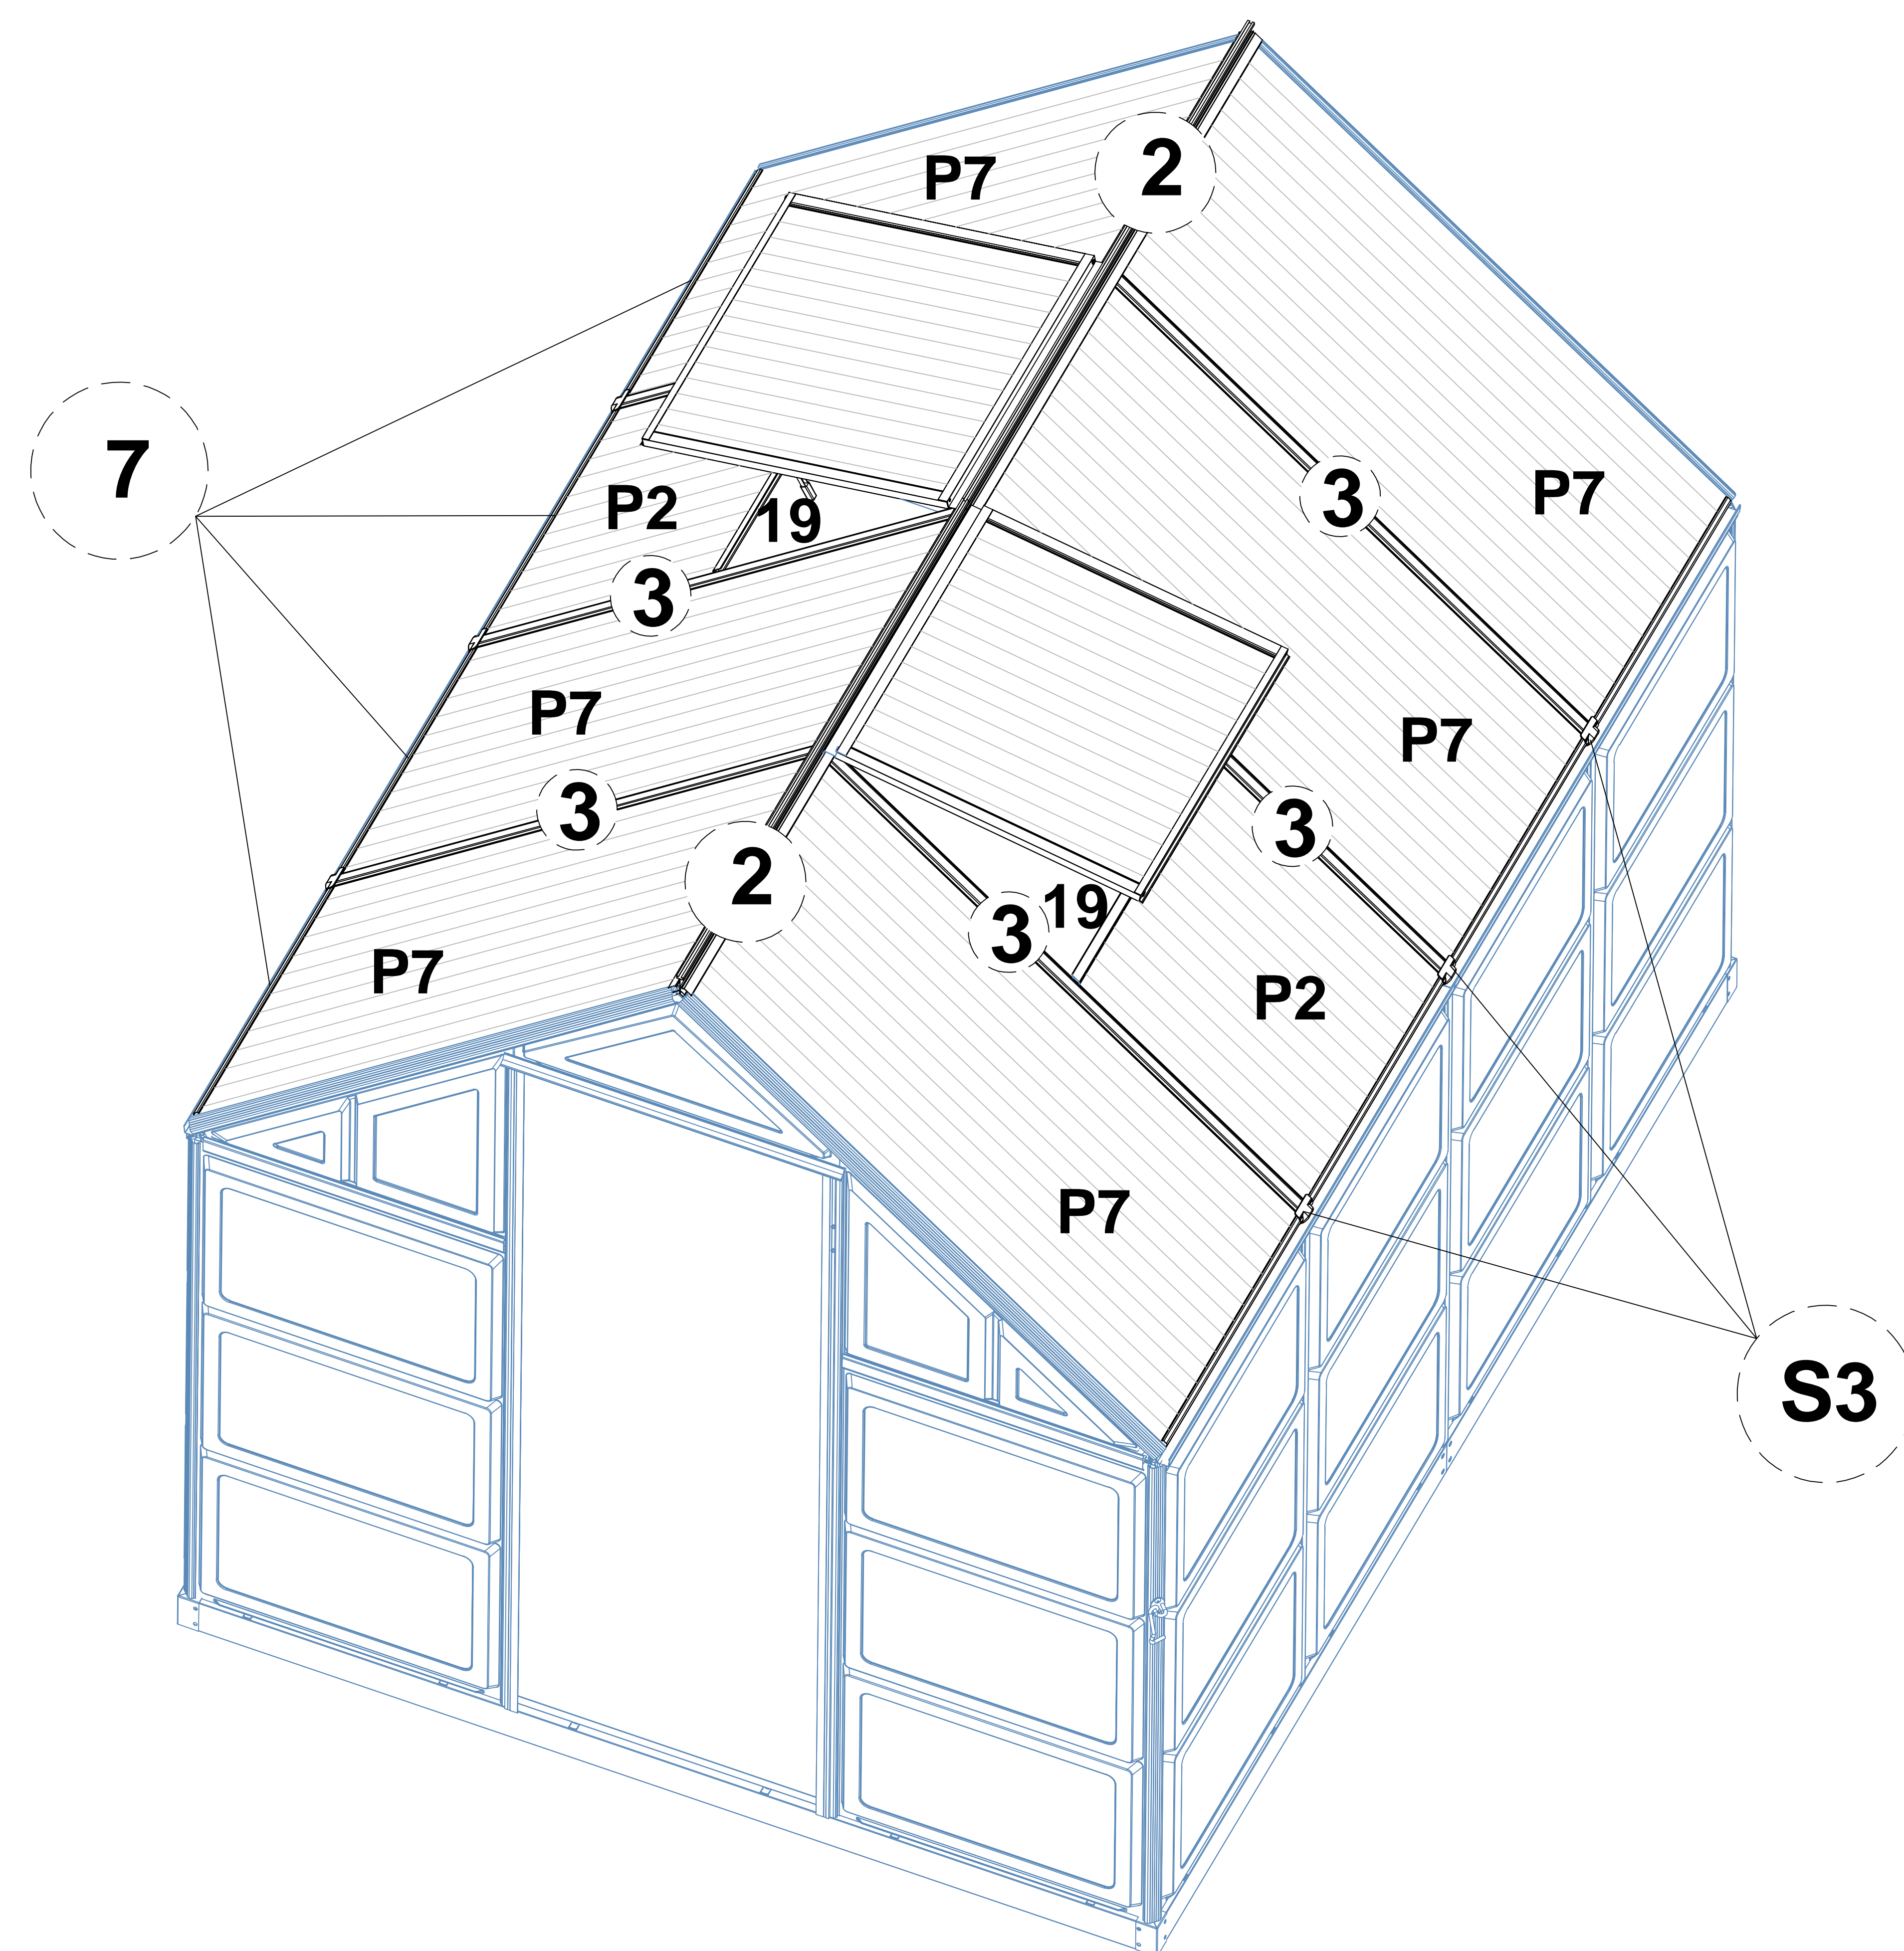




**x2**



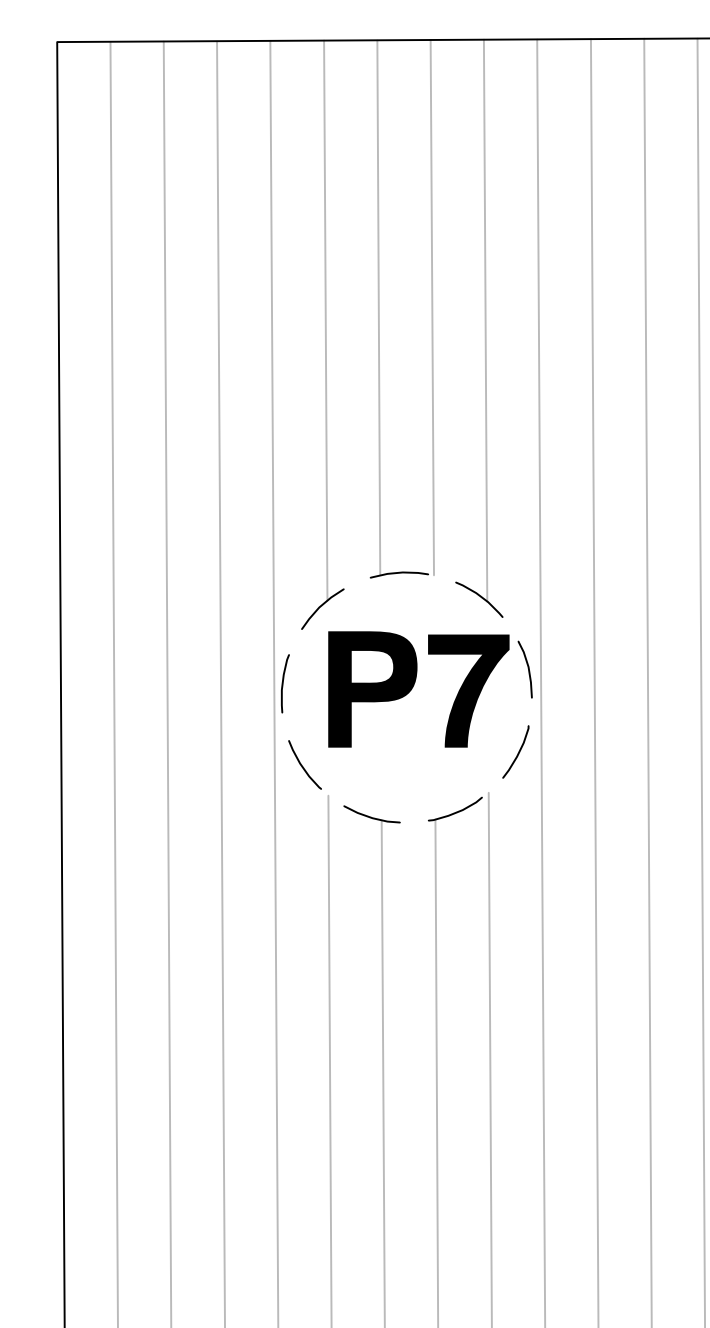


**x6**

MM		
3		6 PCS
2		2 PCS
19		2 PCS
7		12 PCS
29		1 PCS
B4		2 PCS
B5		4 PCS
B8		2 PCS
S3		6 PCS
F5		40 PCS
F6		6 PCS
F10		4 PCS
F11		4 PCS

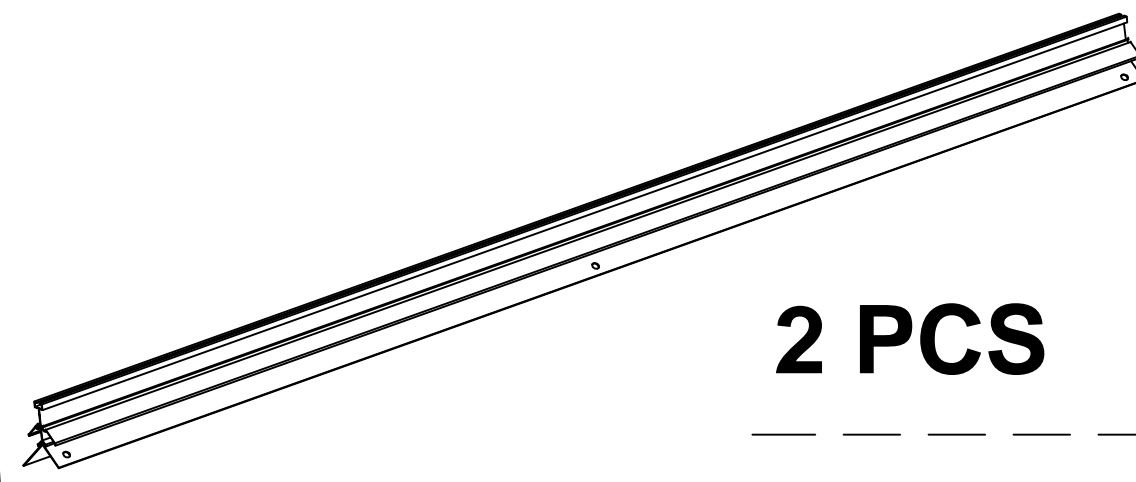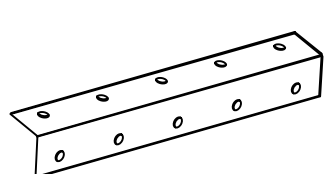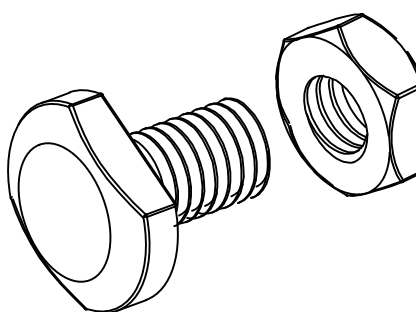

2		2 PCS
29		1 PCS
F5		12 PCS

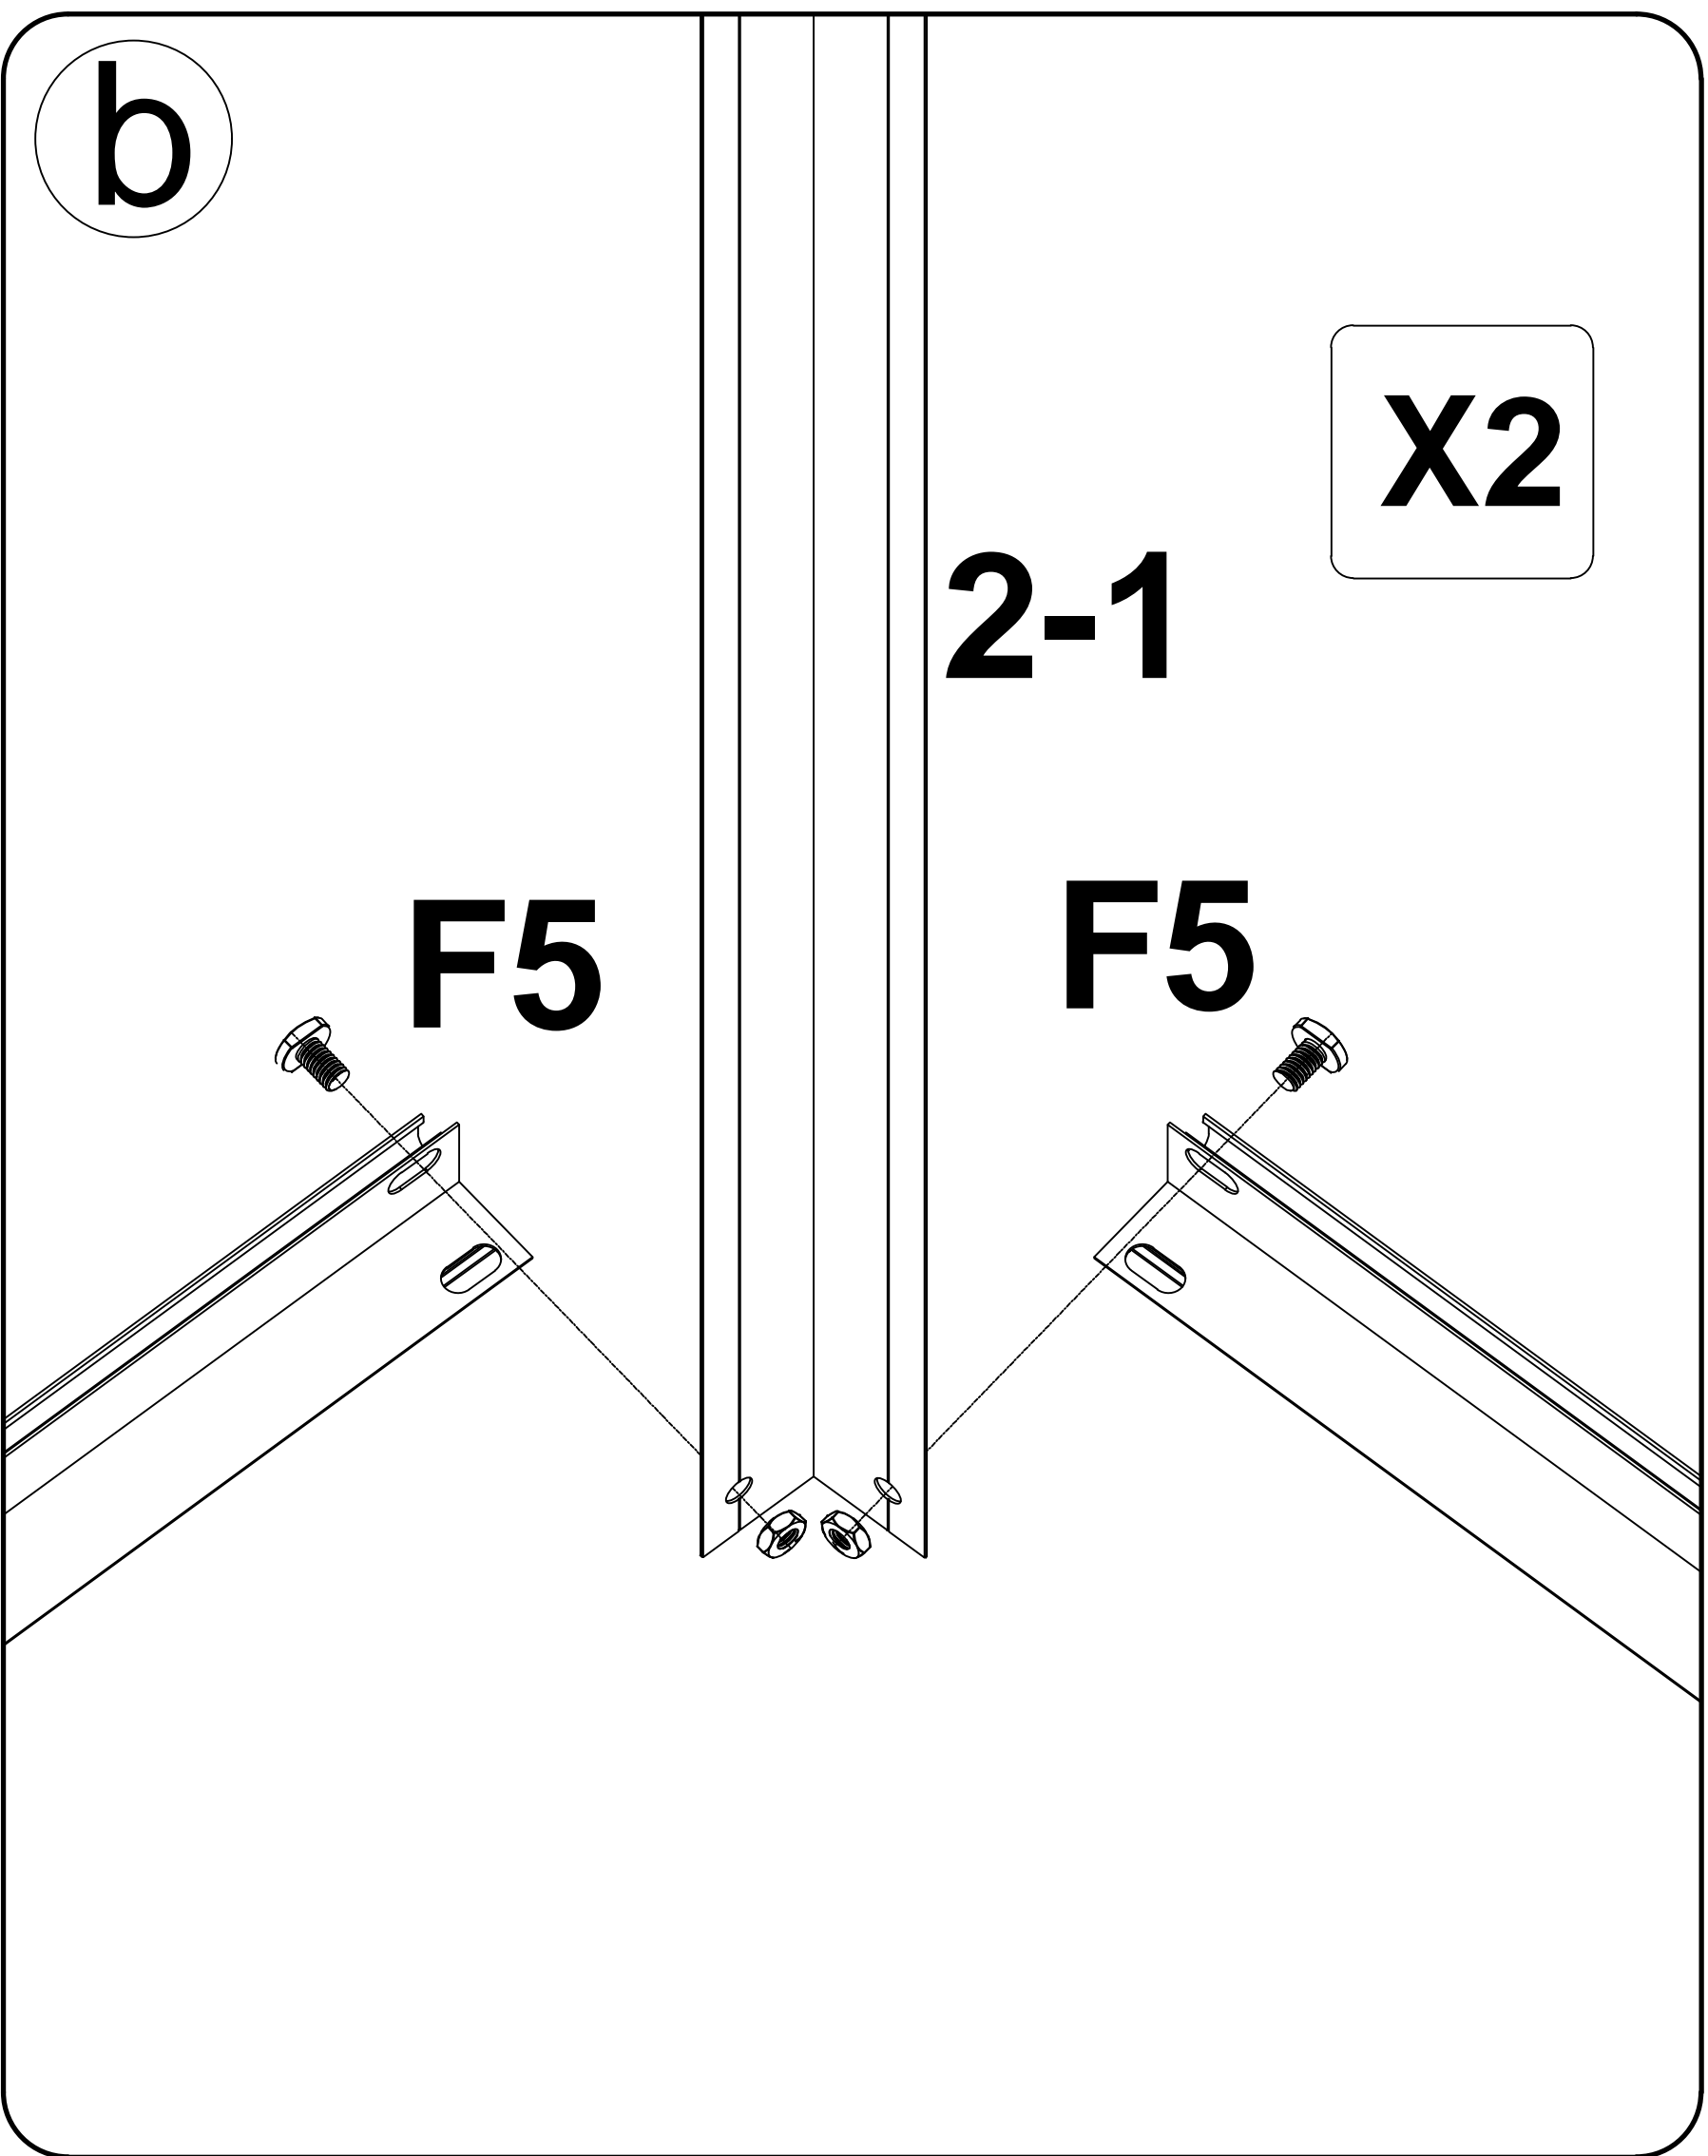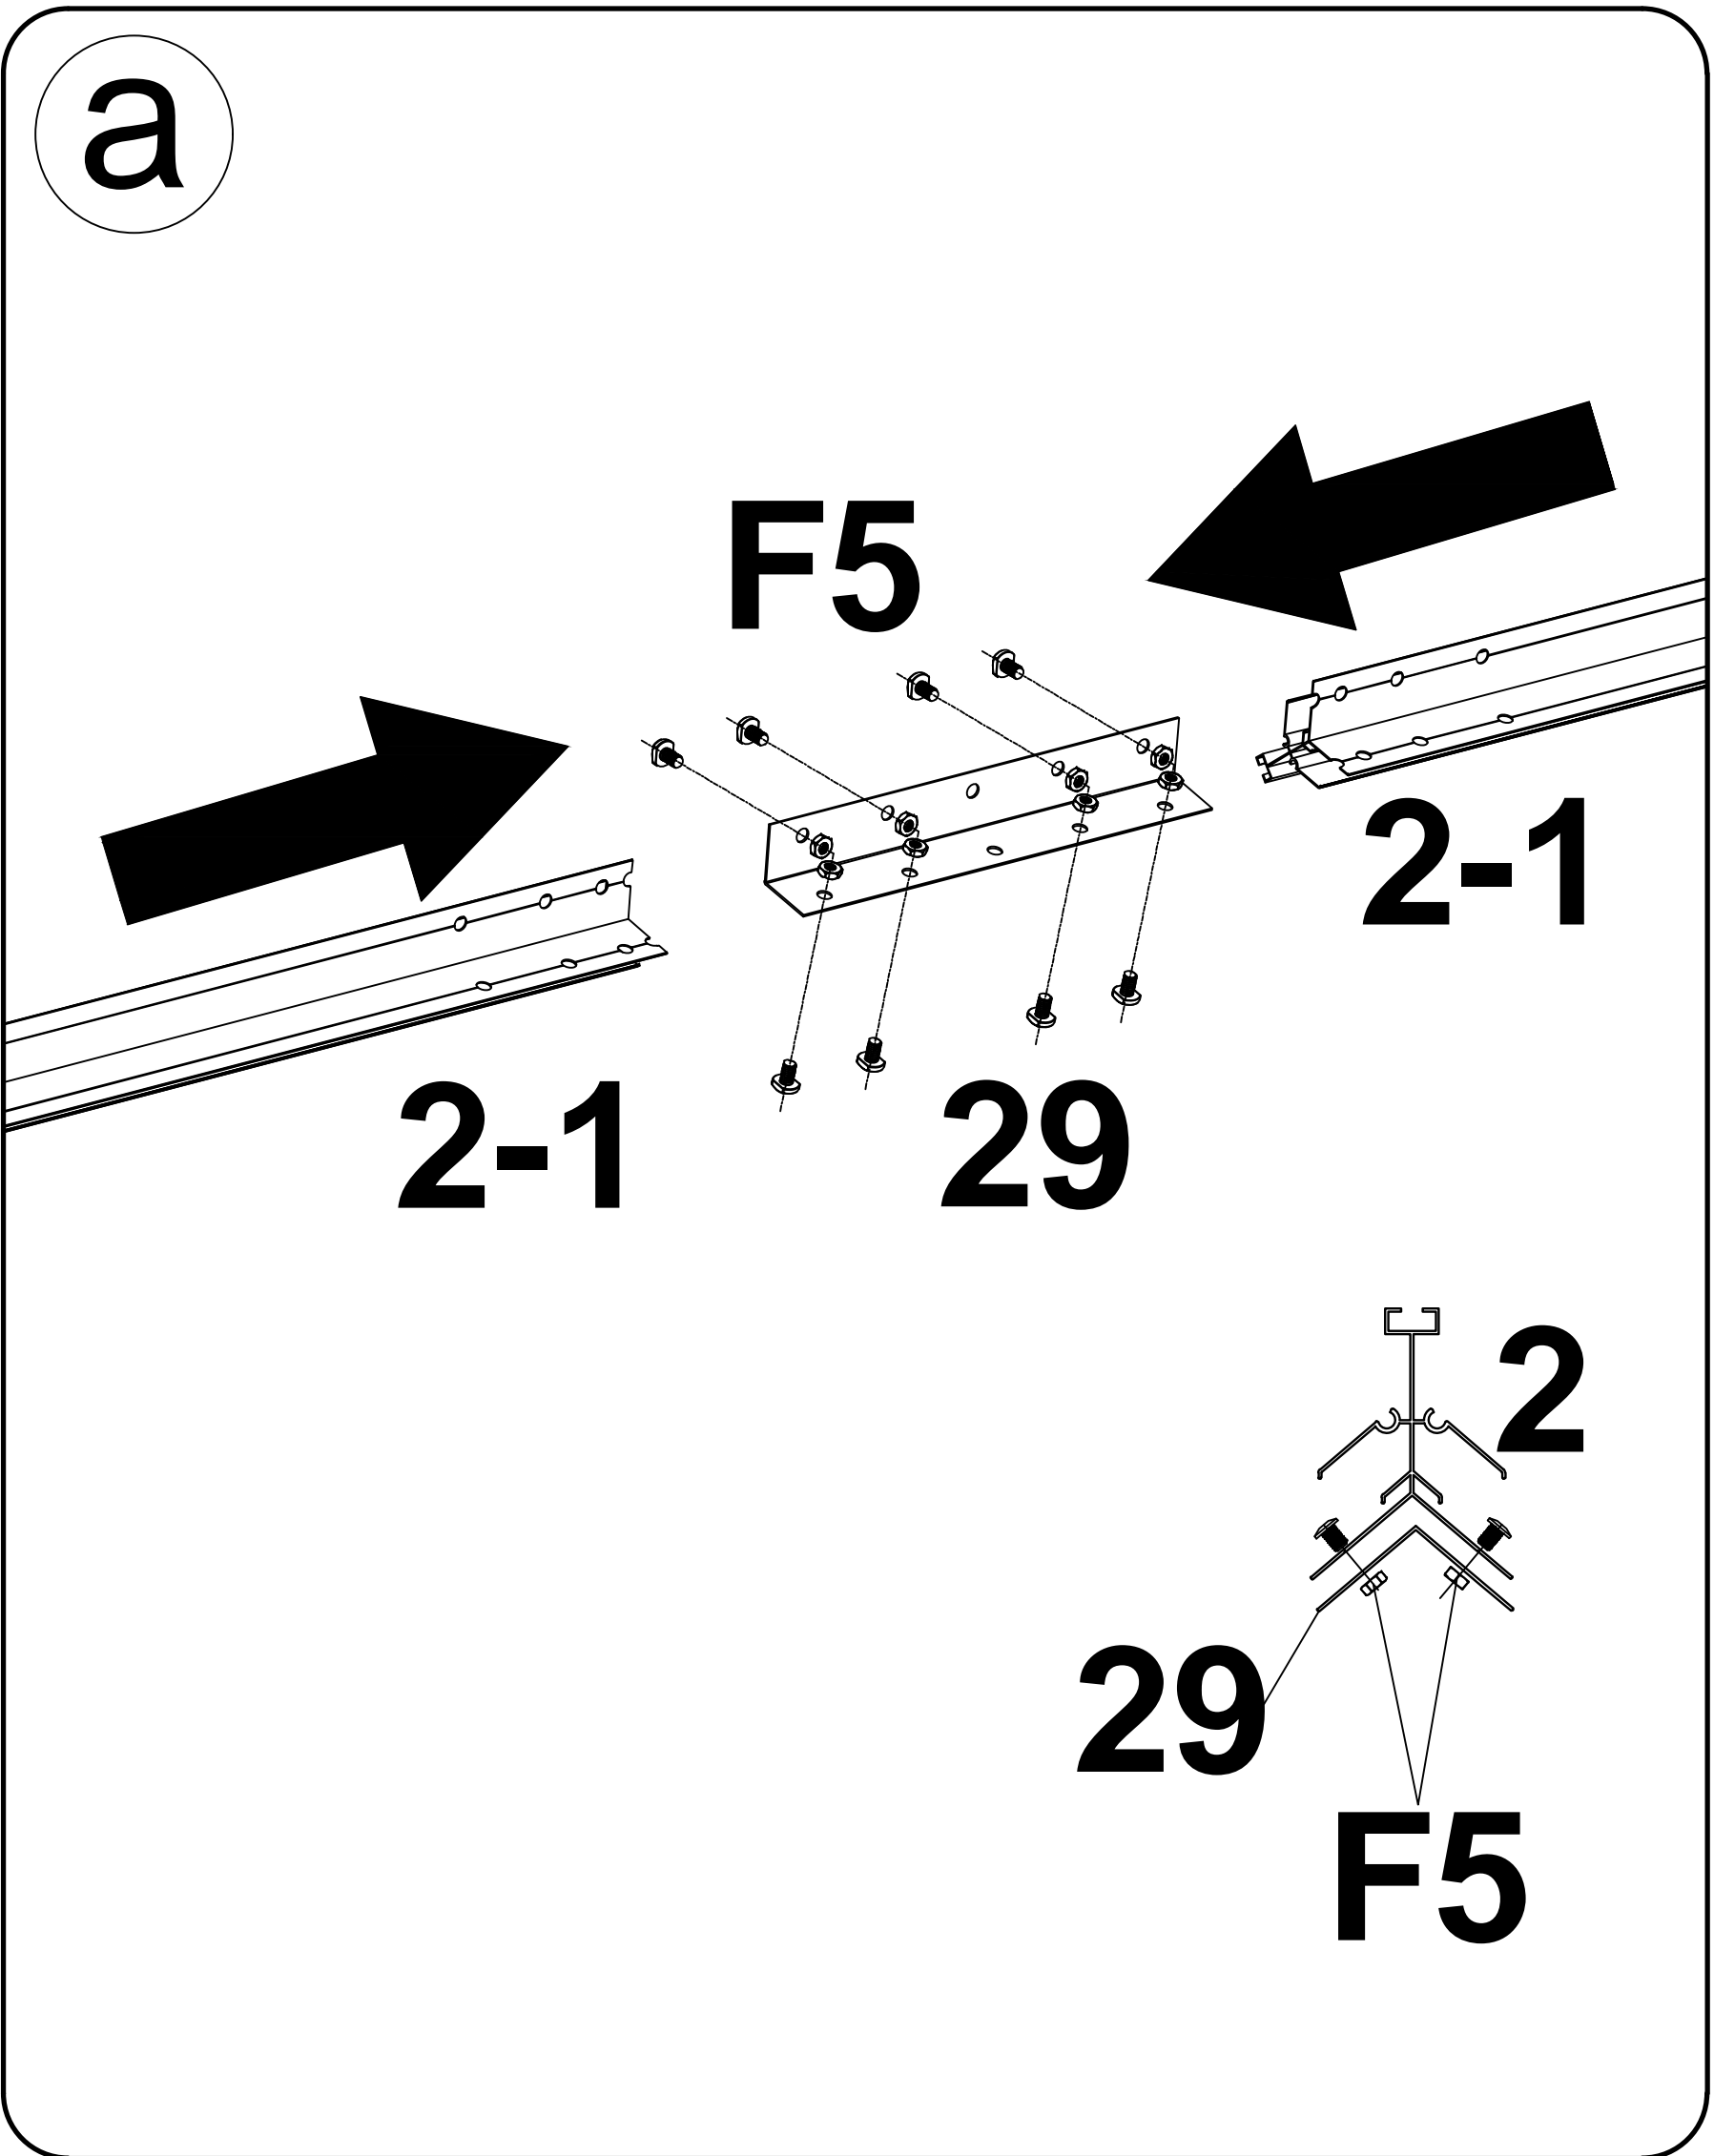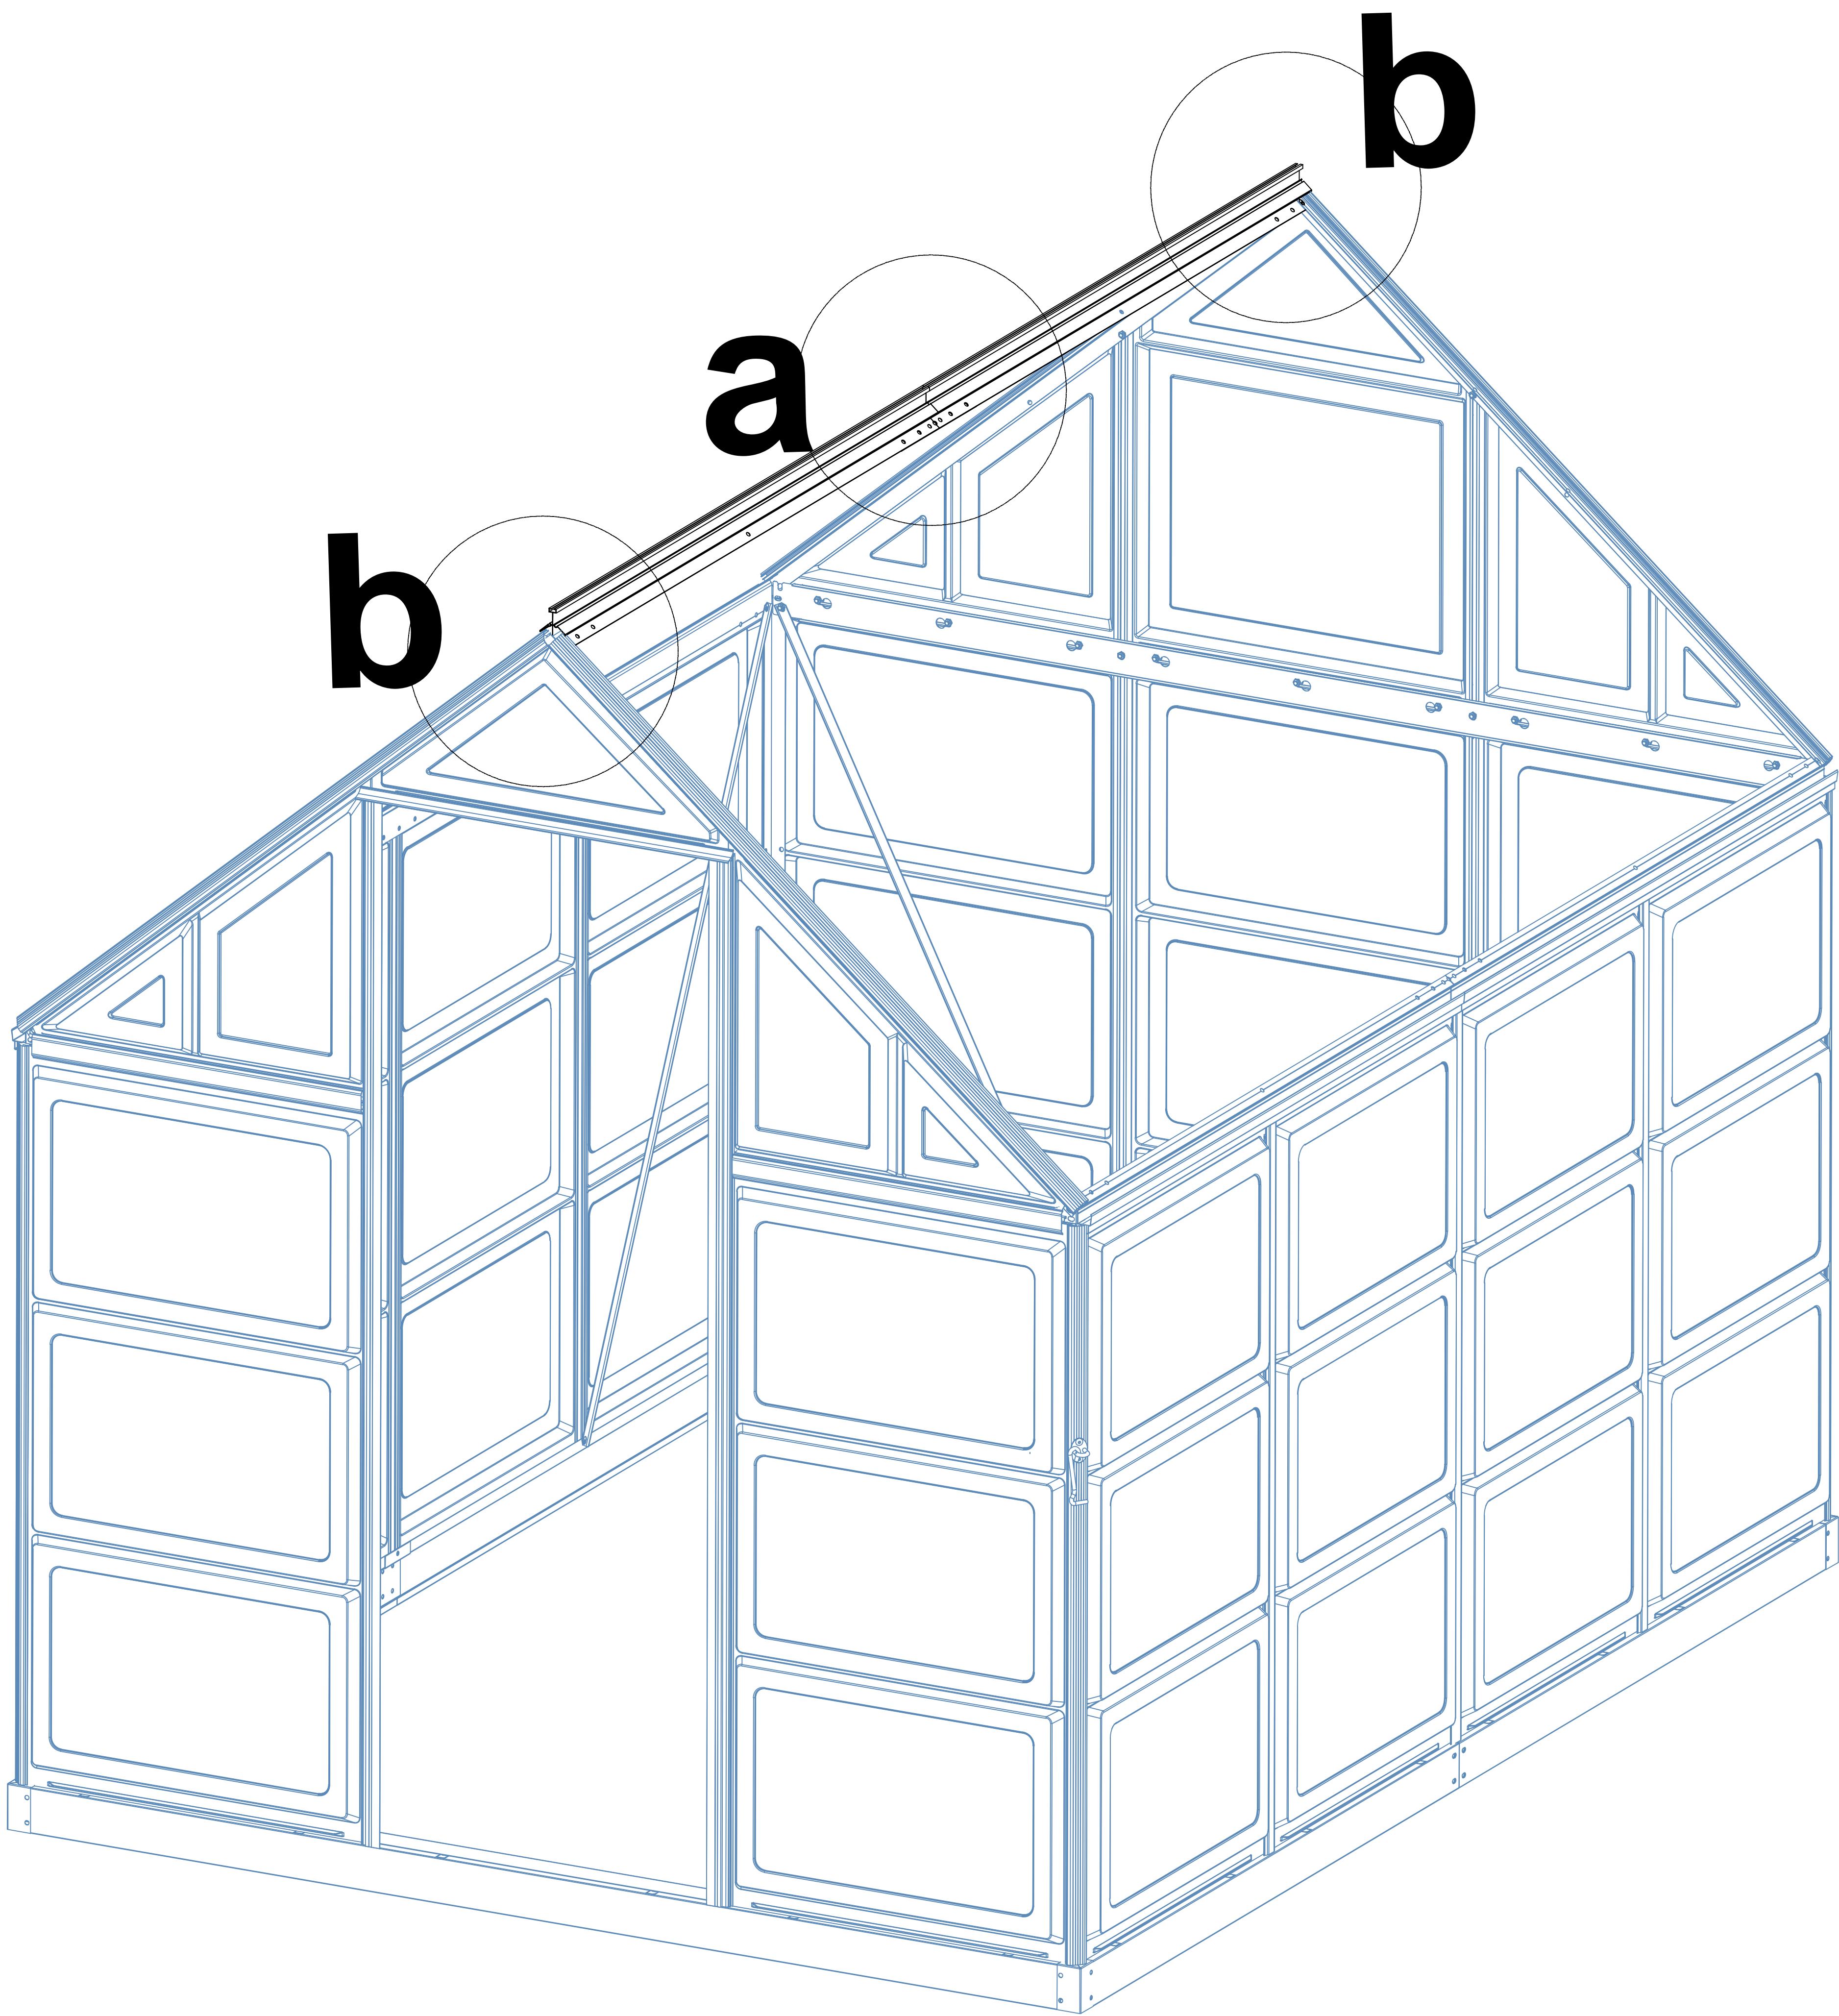

 **Internal View**





3




6 PCS

F5






20 PCS


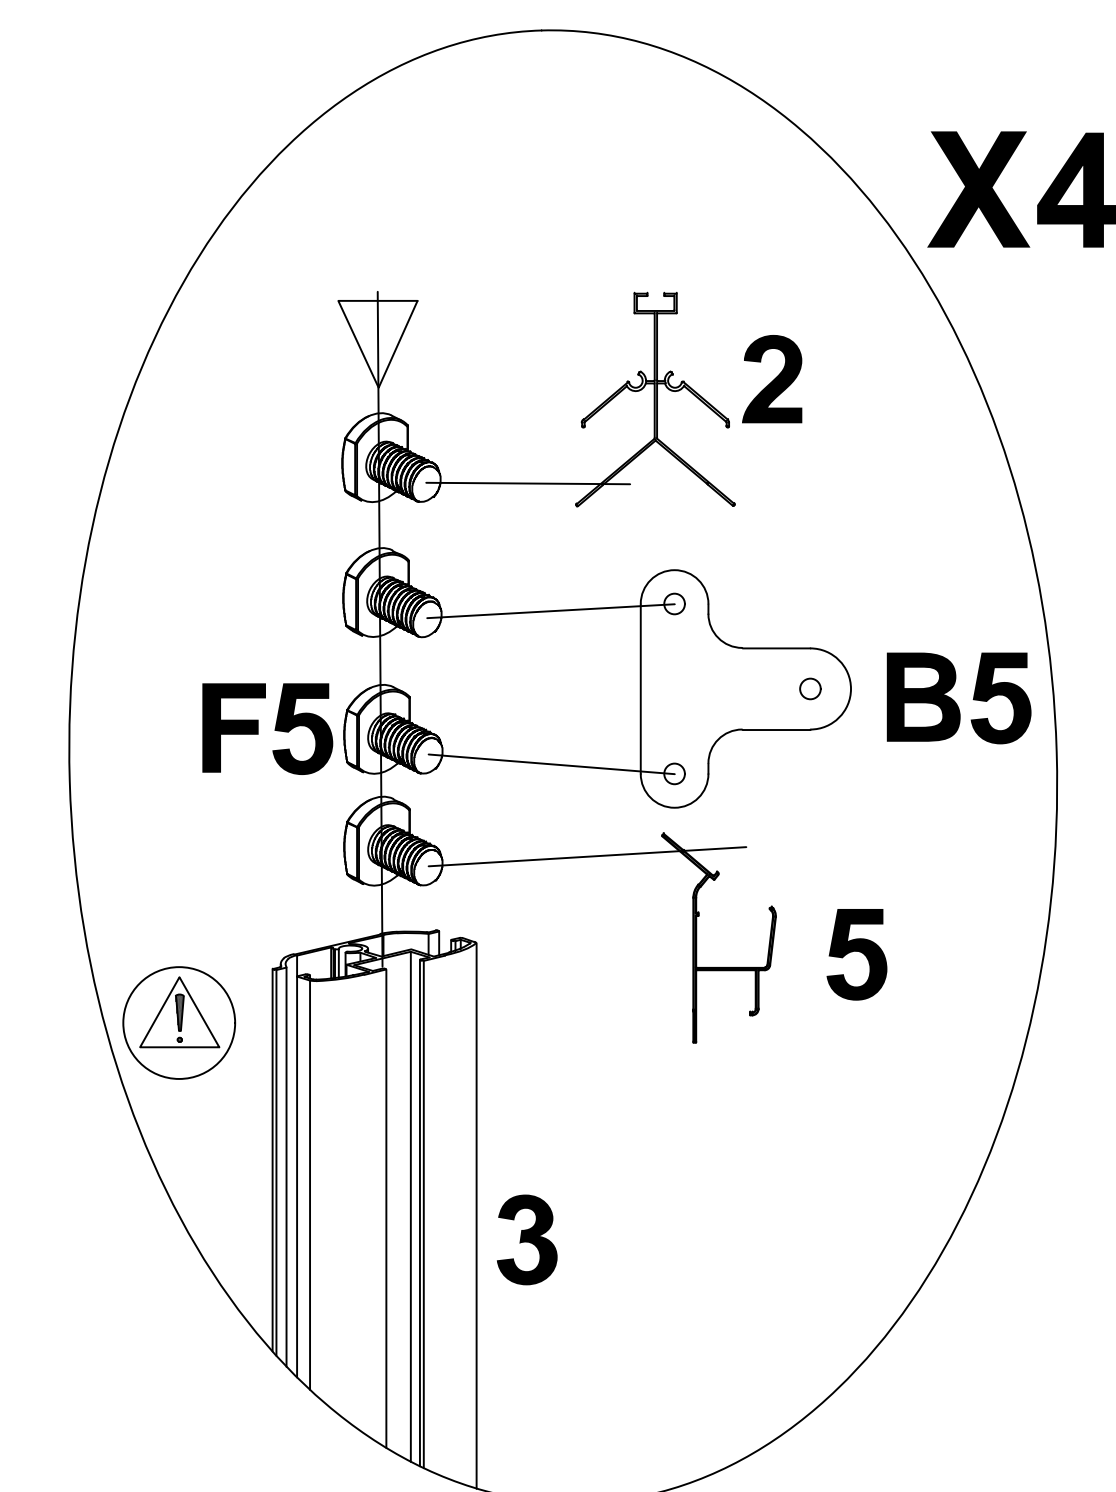
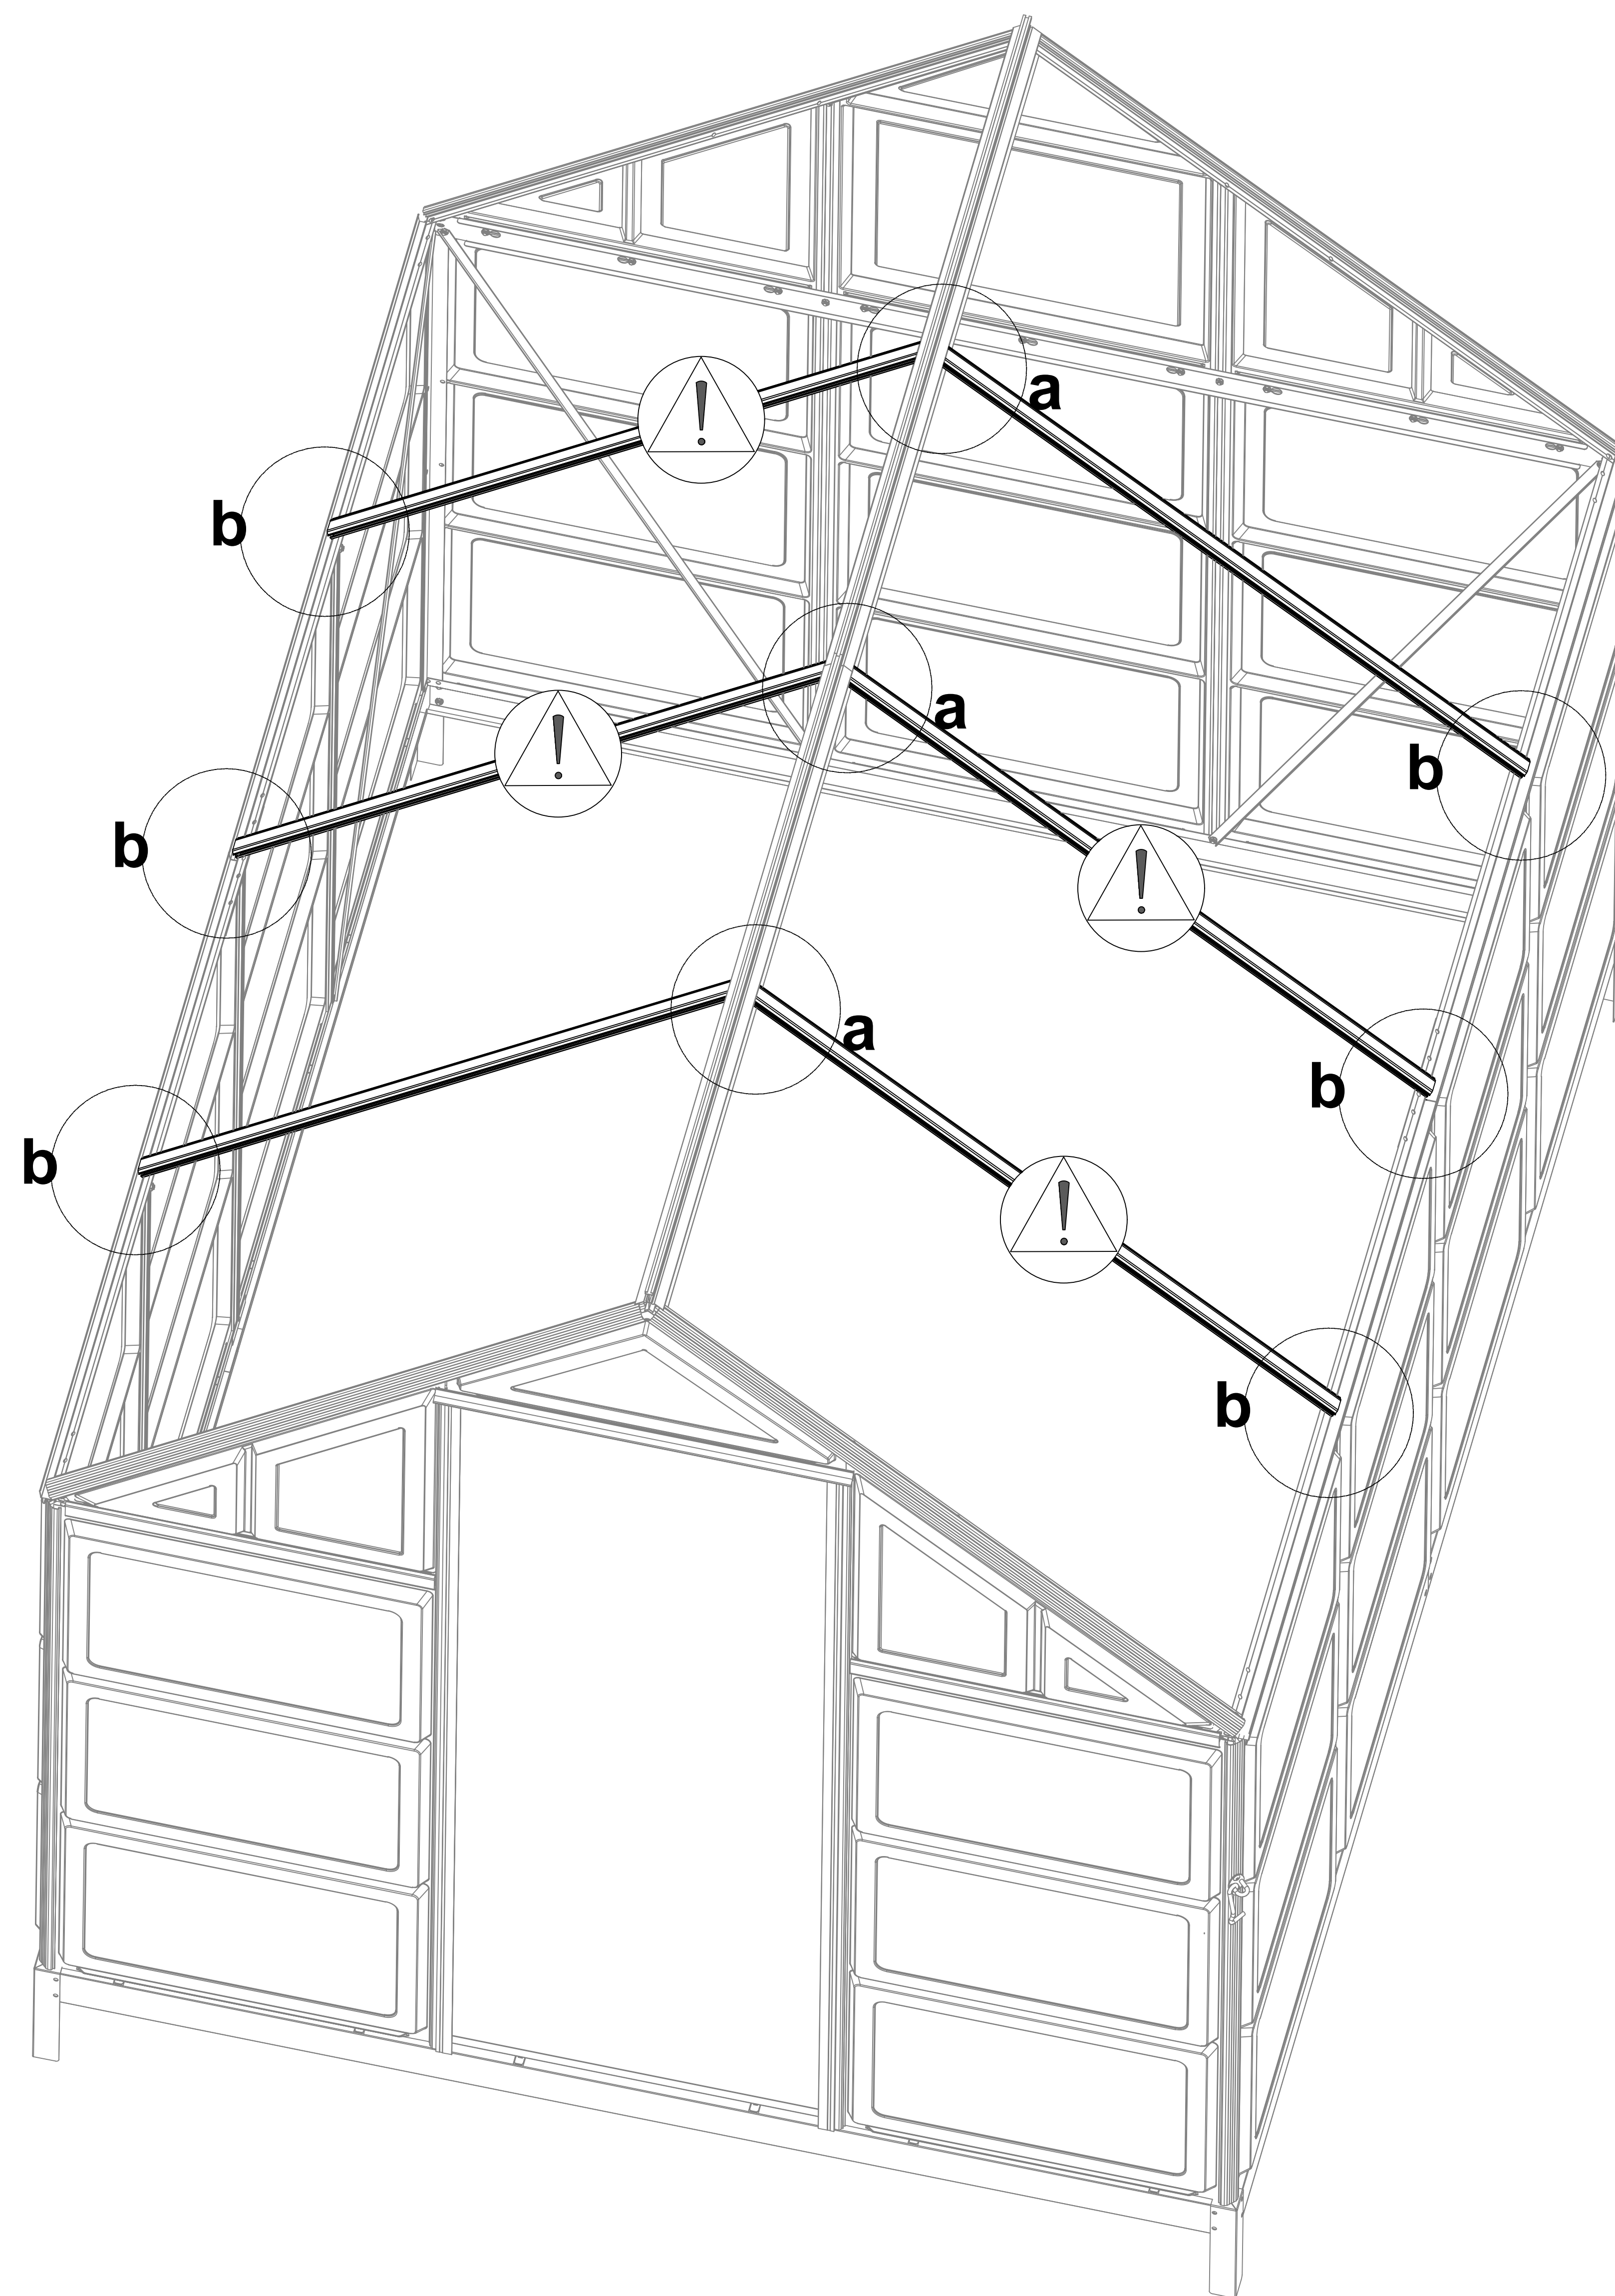


Install the screws in advance according to the instruction.

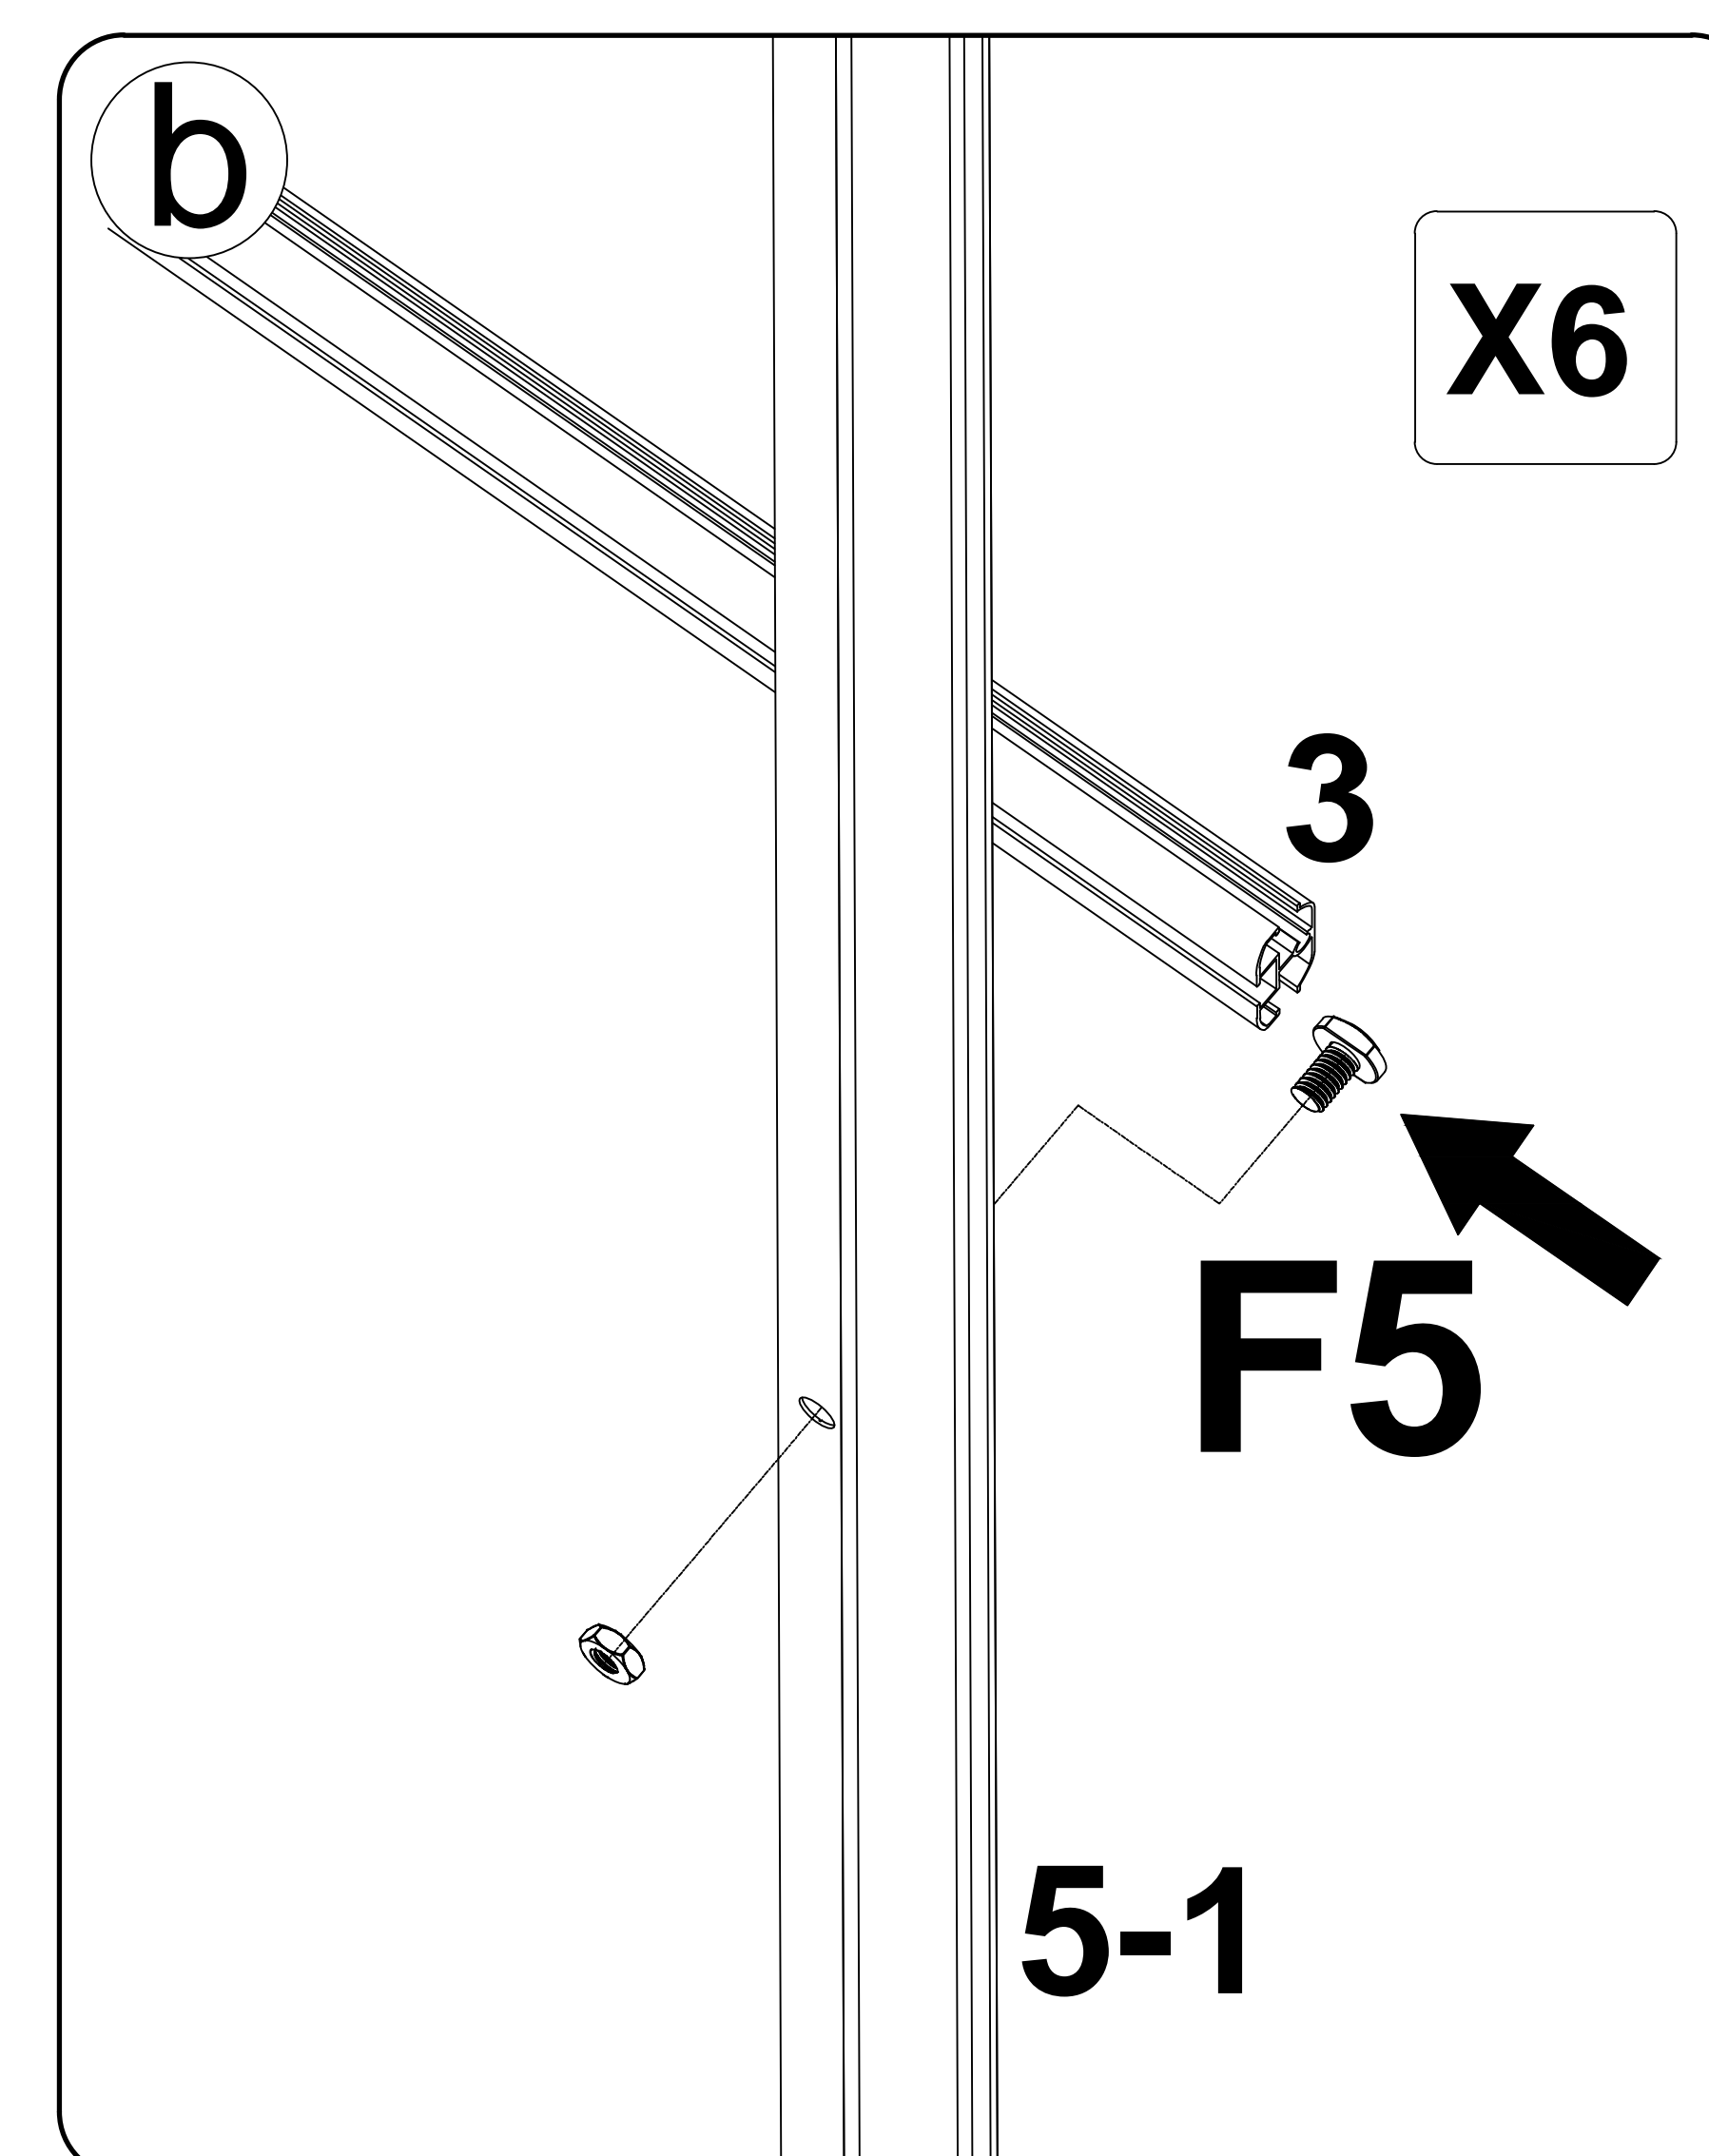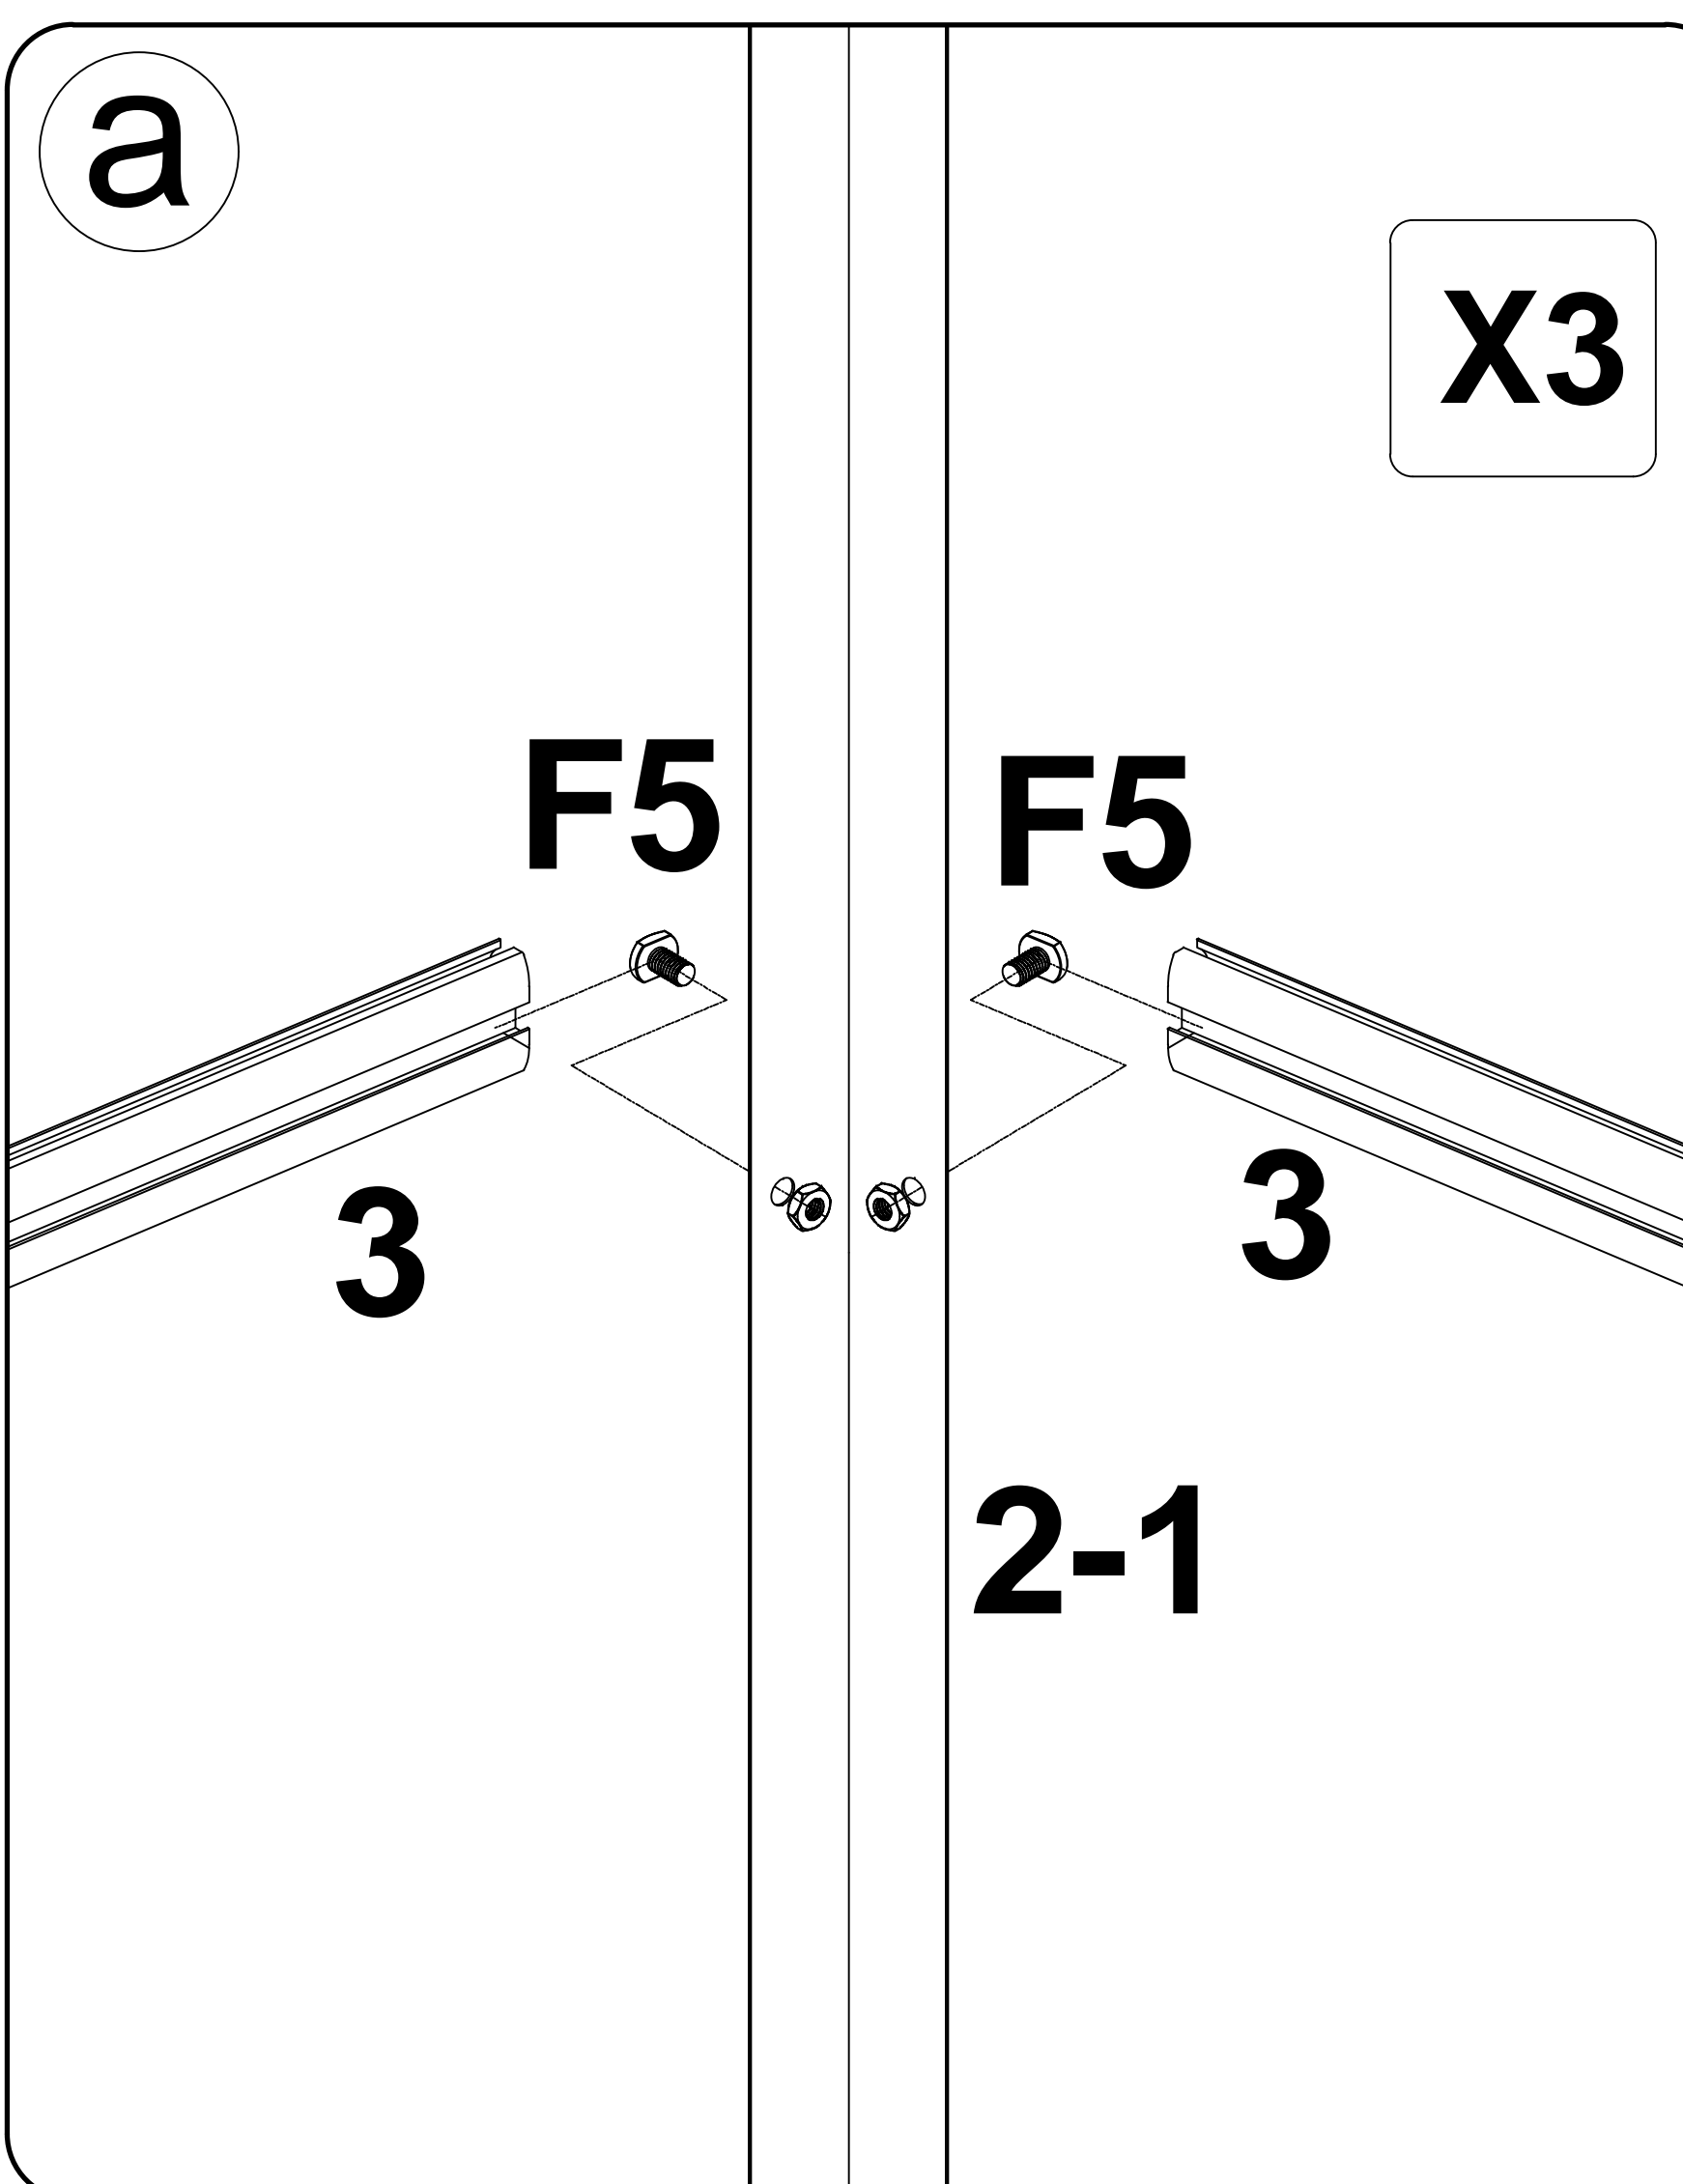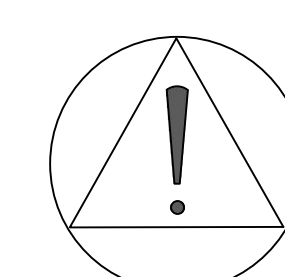

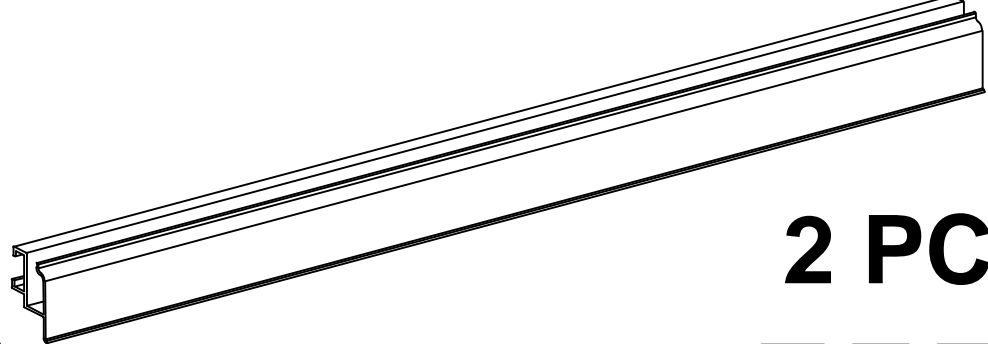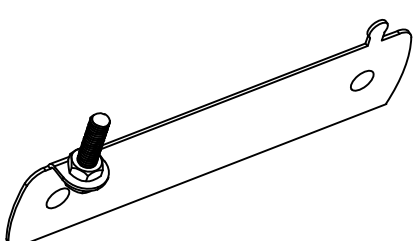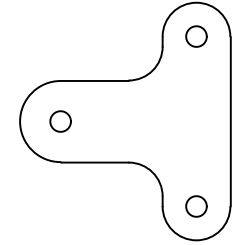
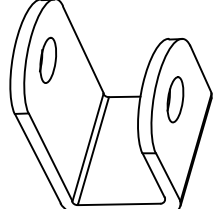
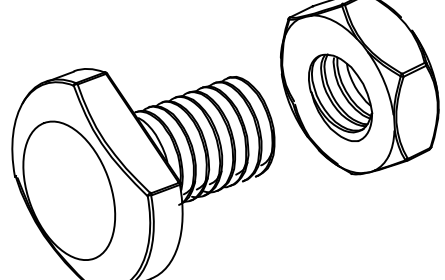


- 19**  **2 PCS**
- B4**  **2 PCS**
- B5**  **4 PCS**
- B8**  **2 PCS**
- F5**  **8 PCS**

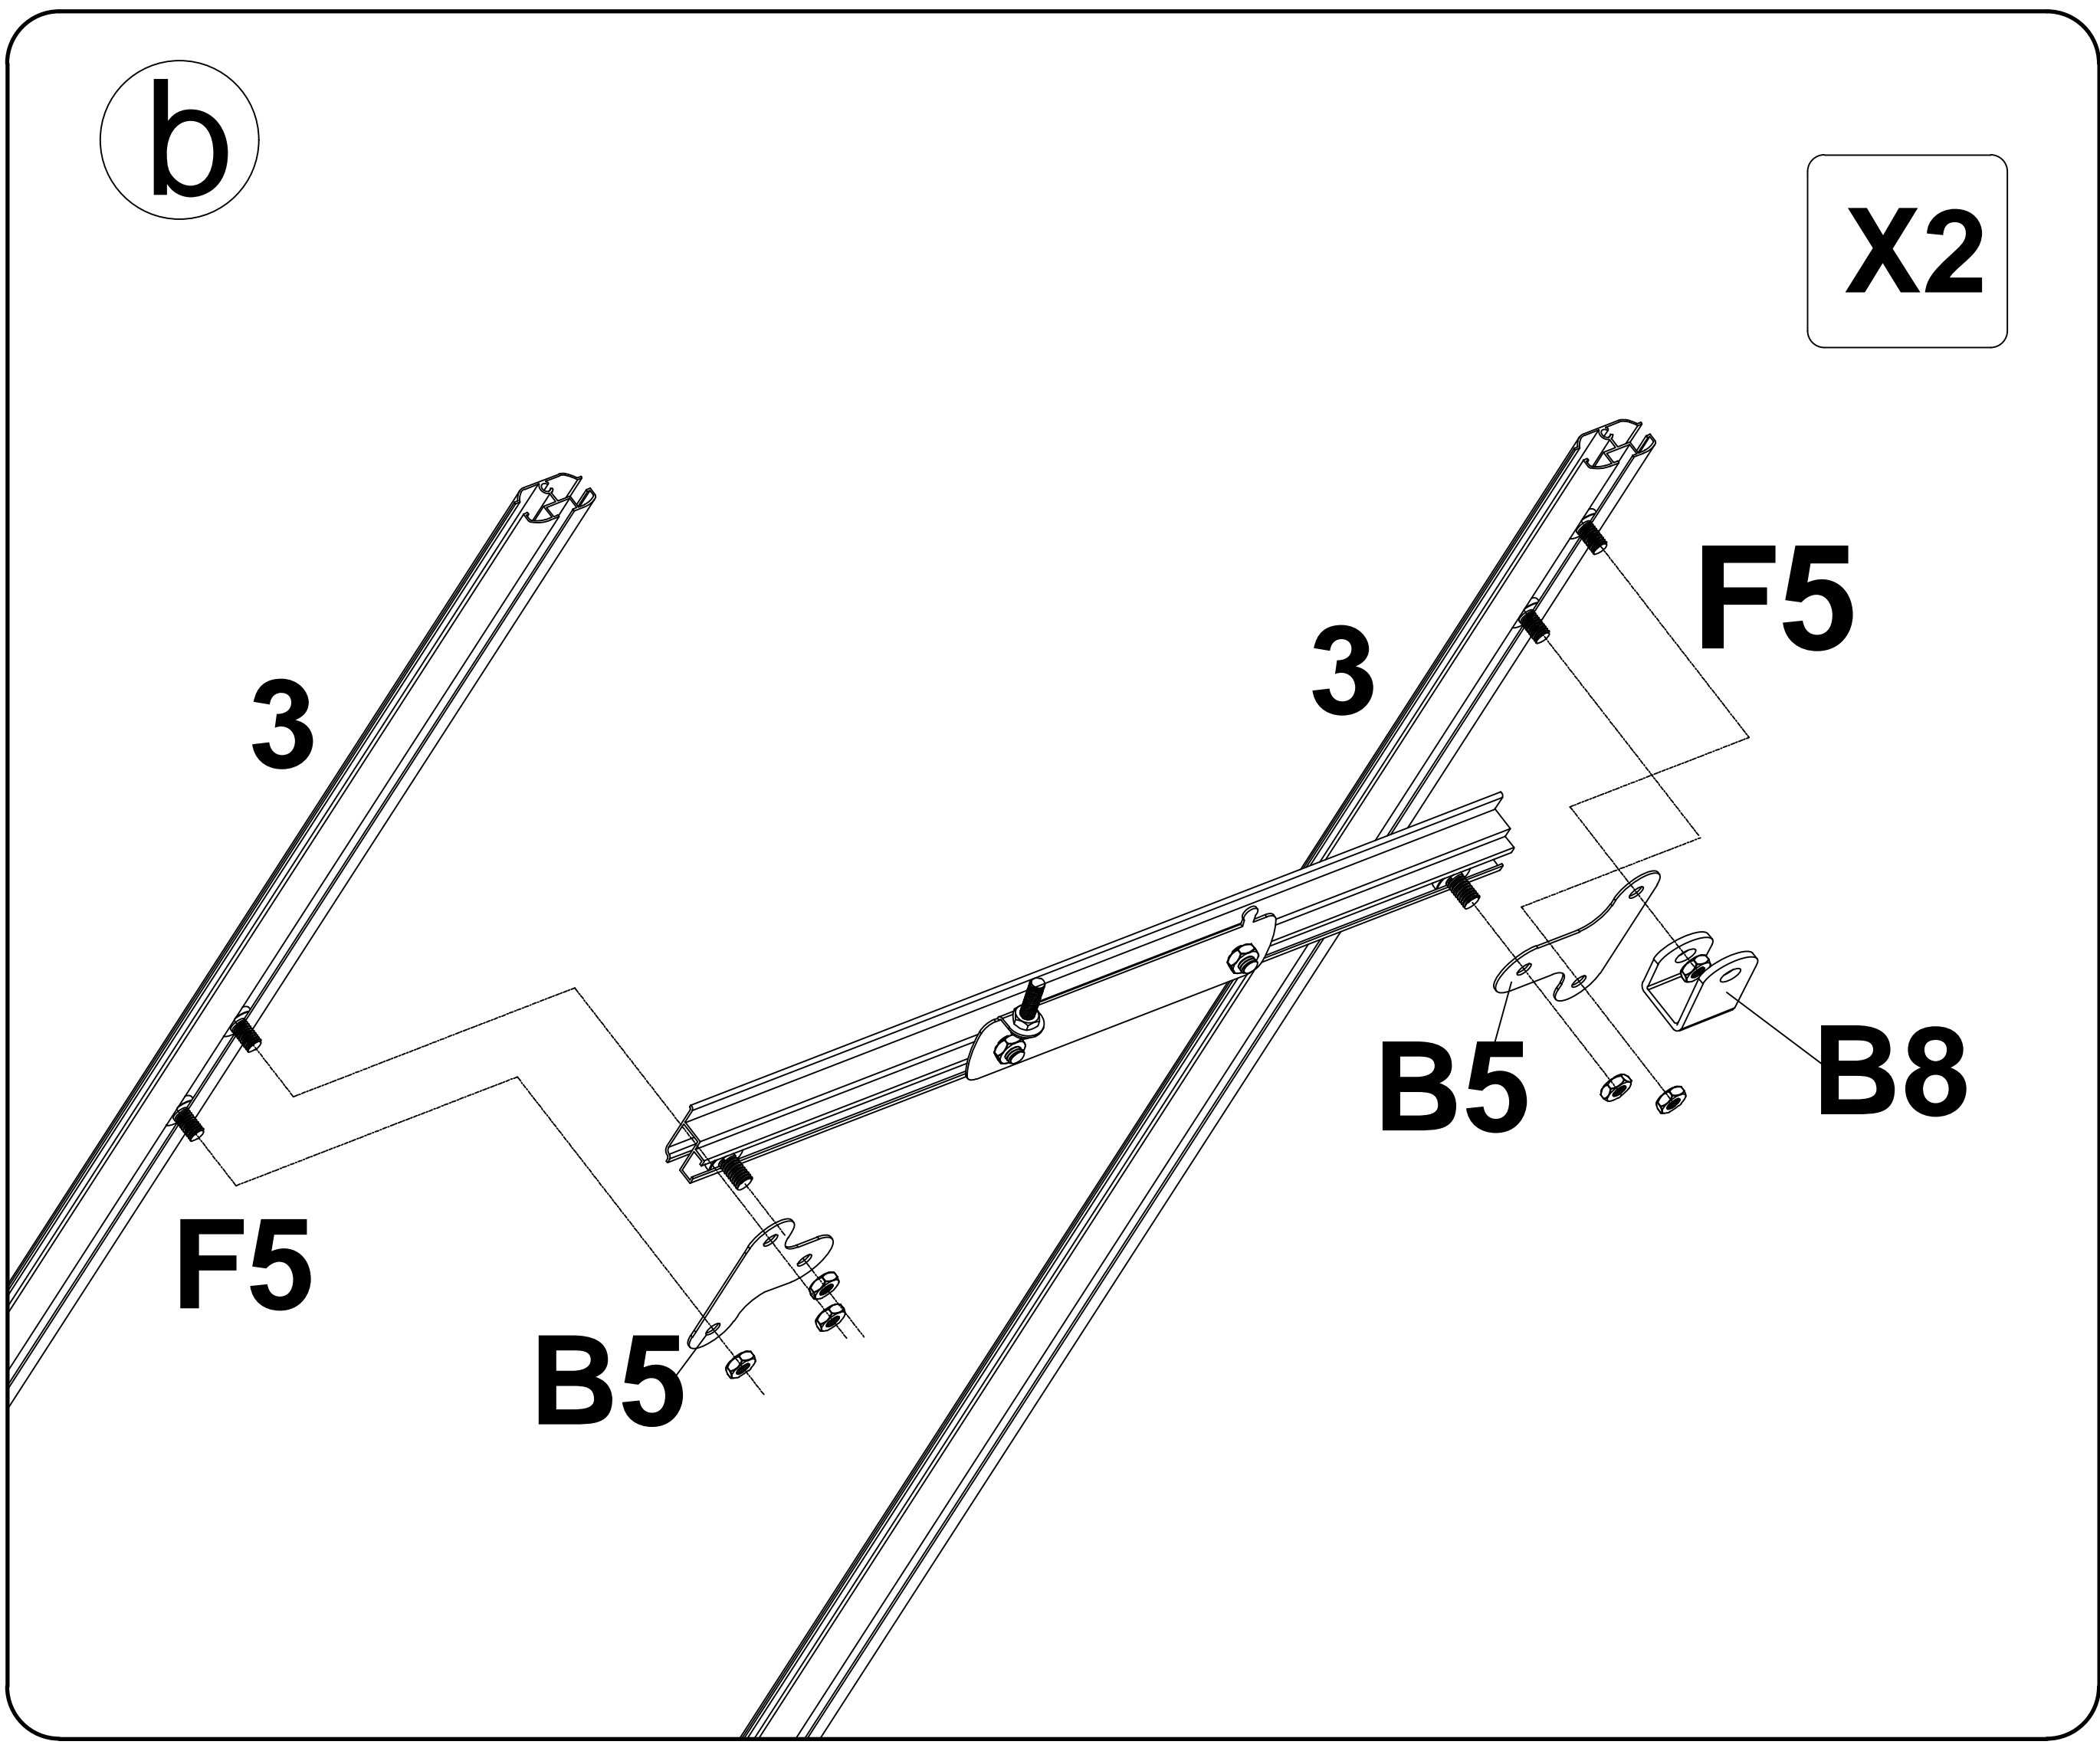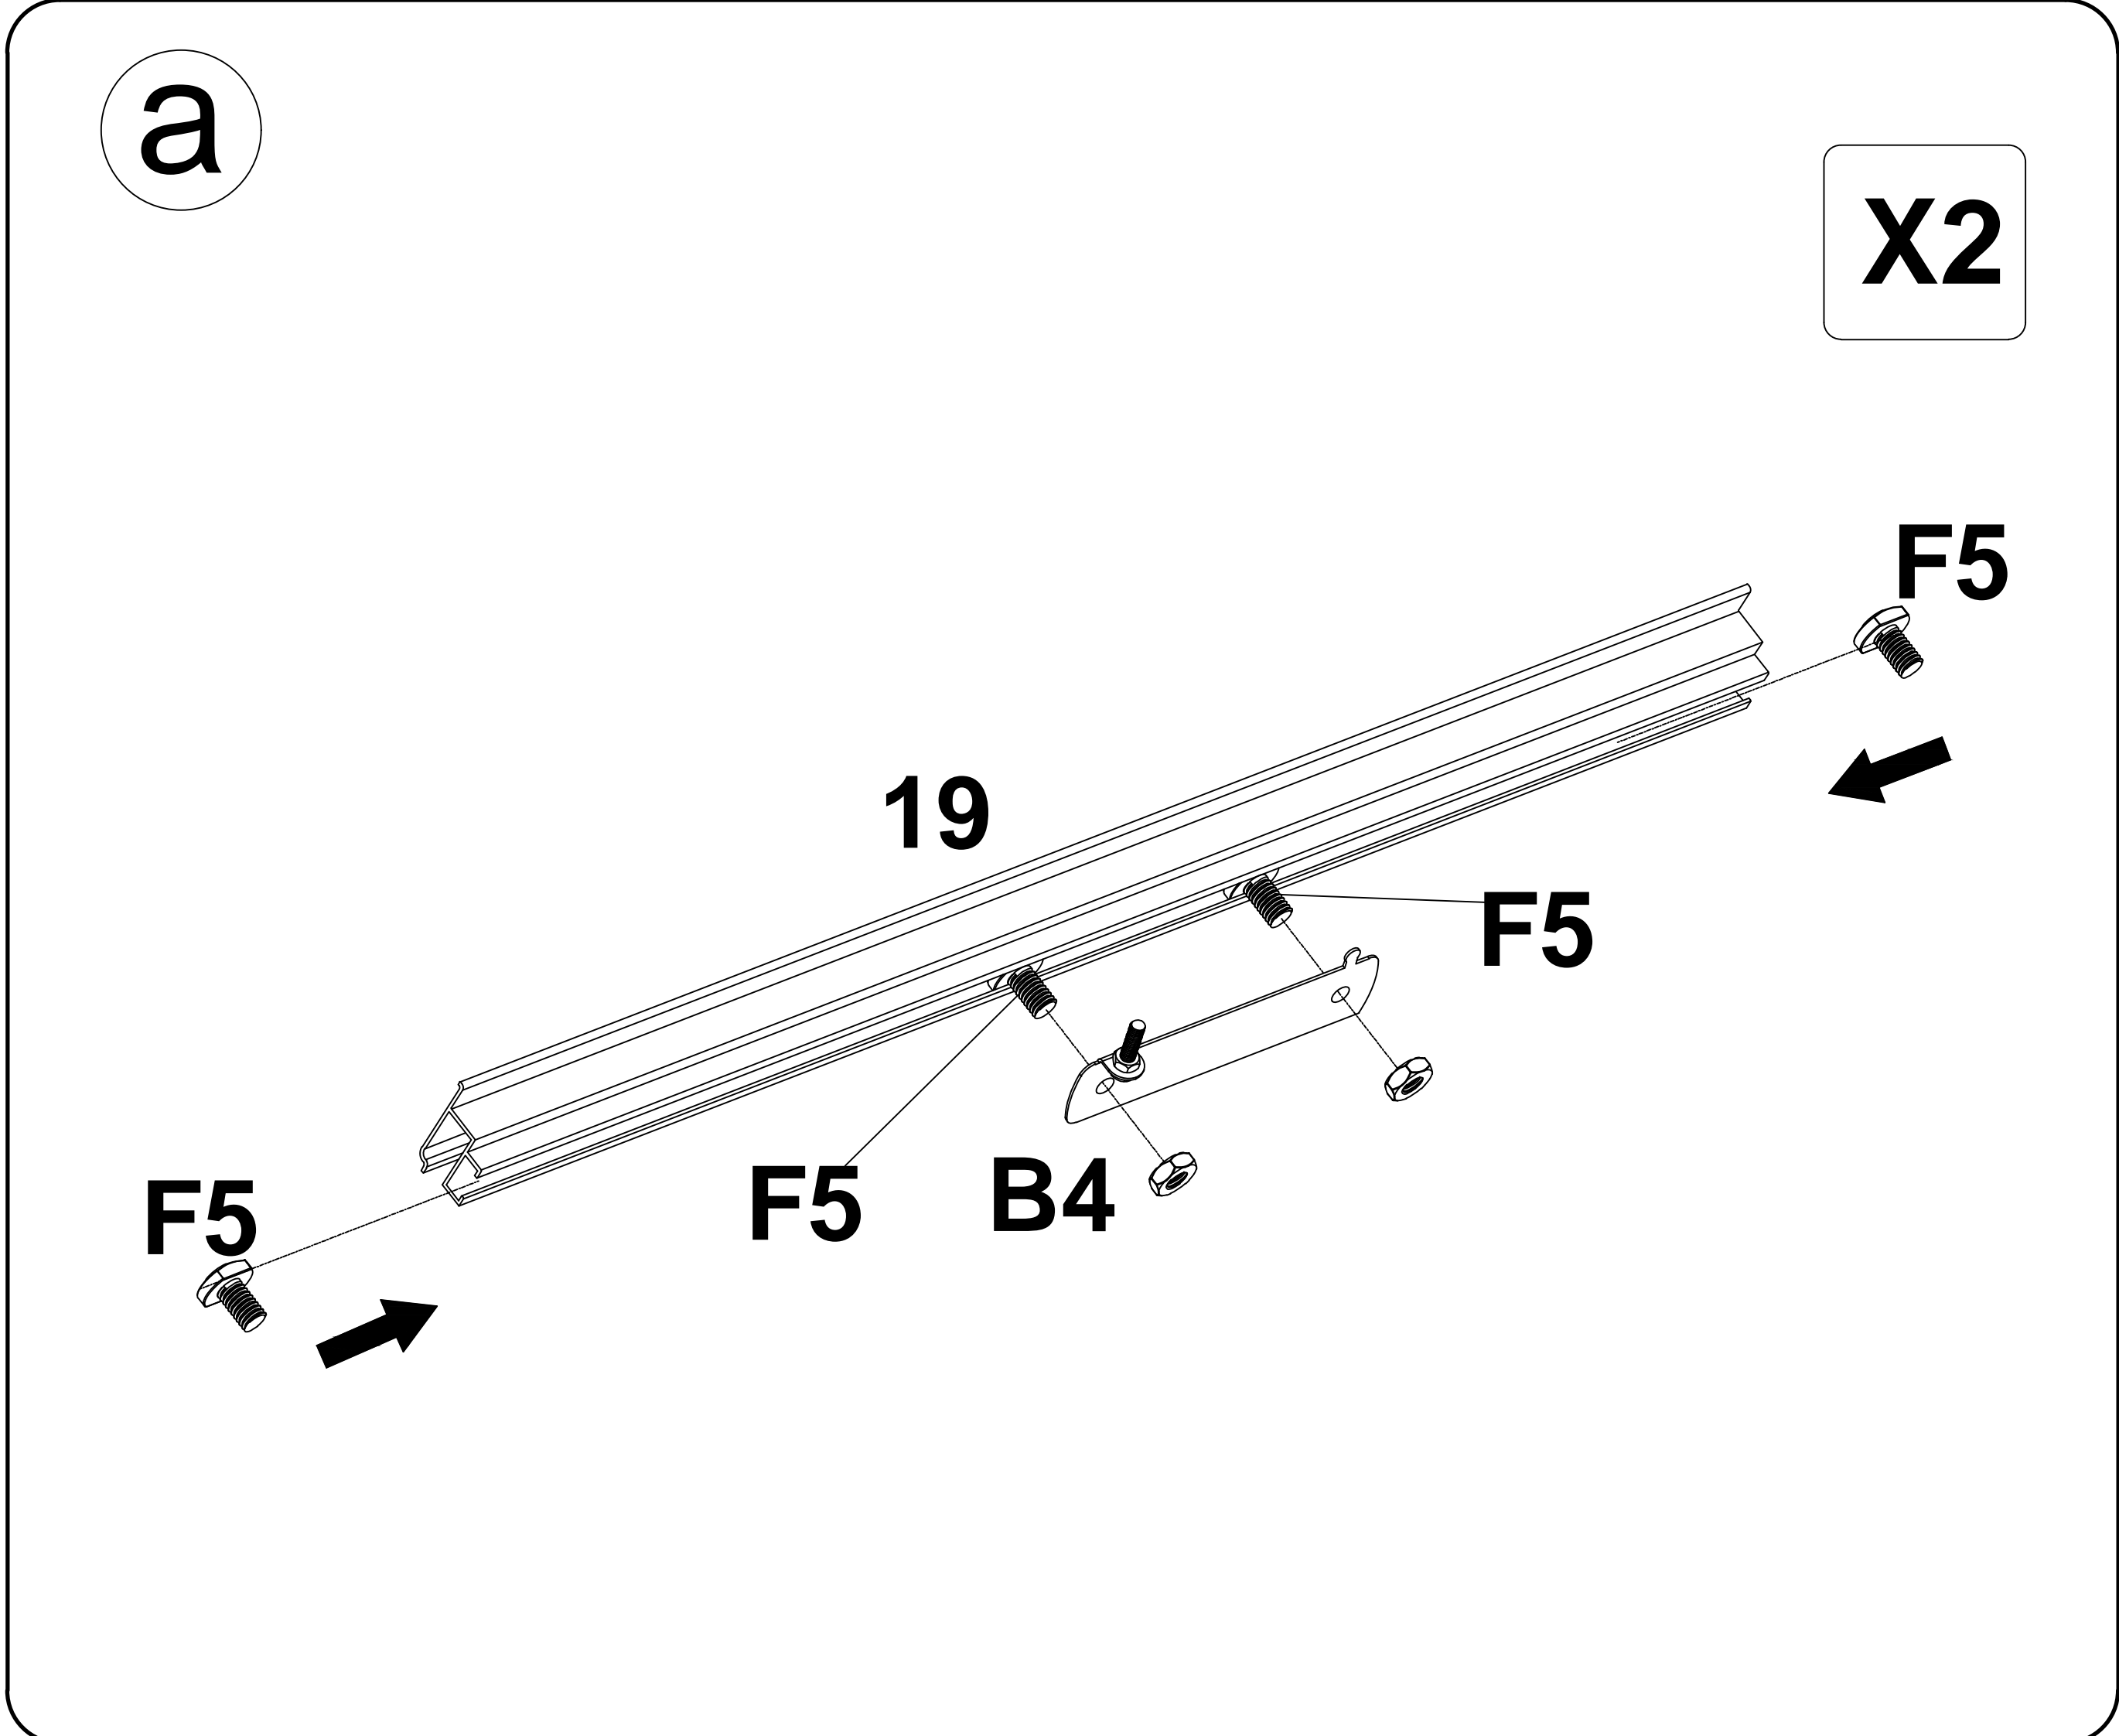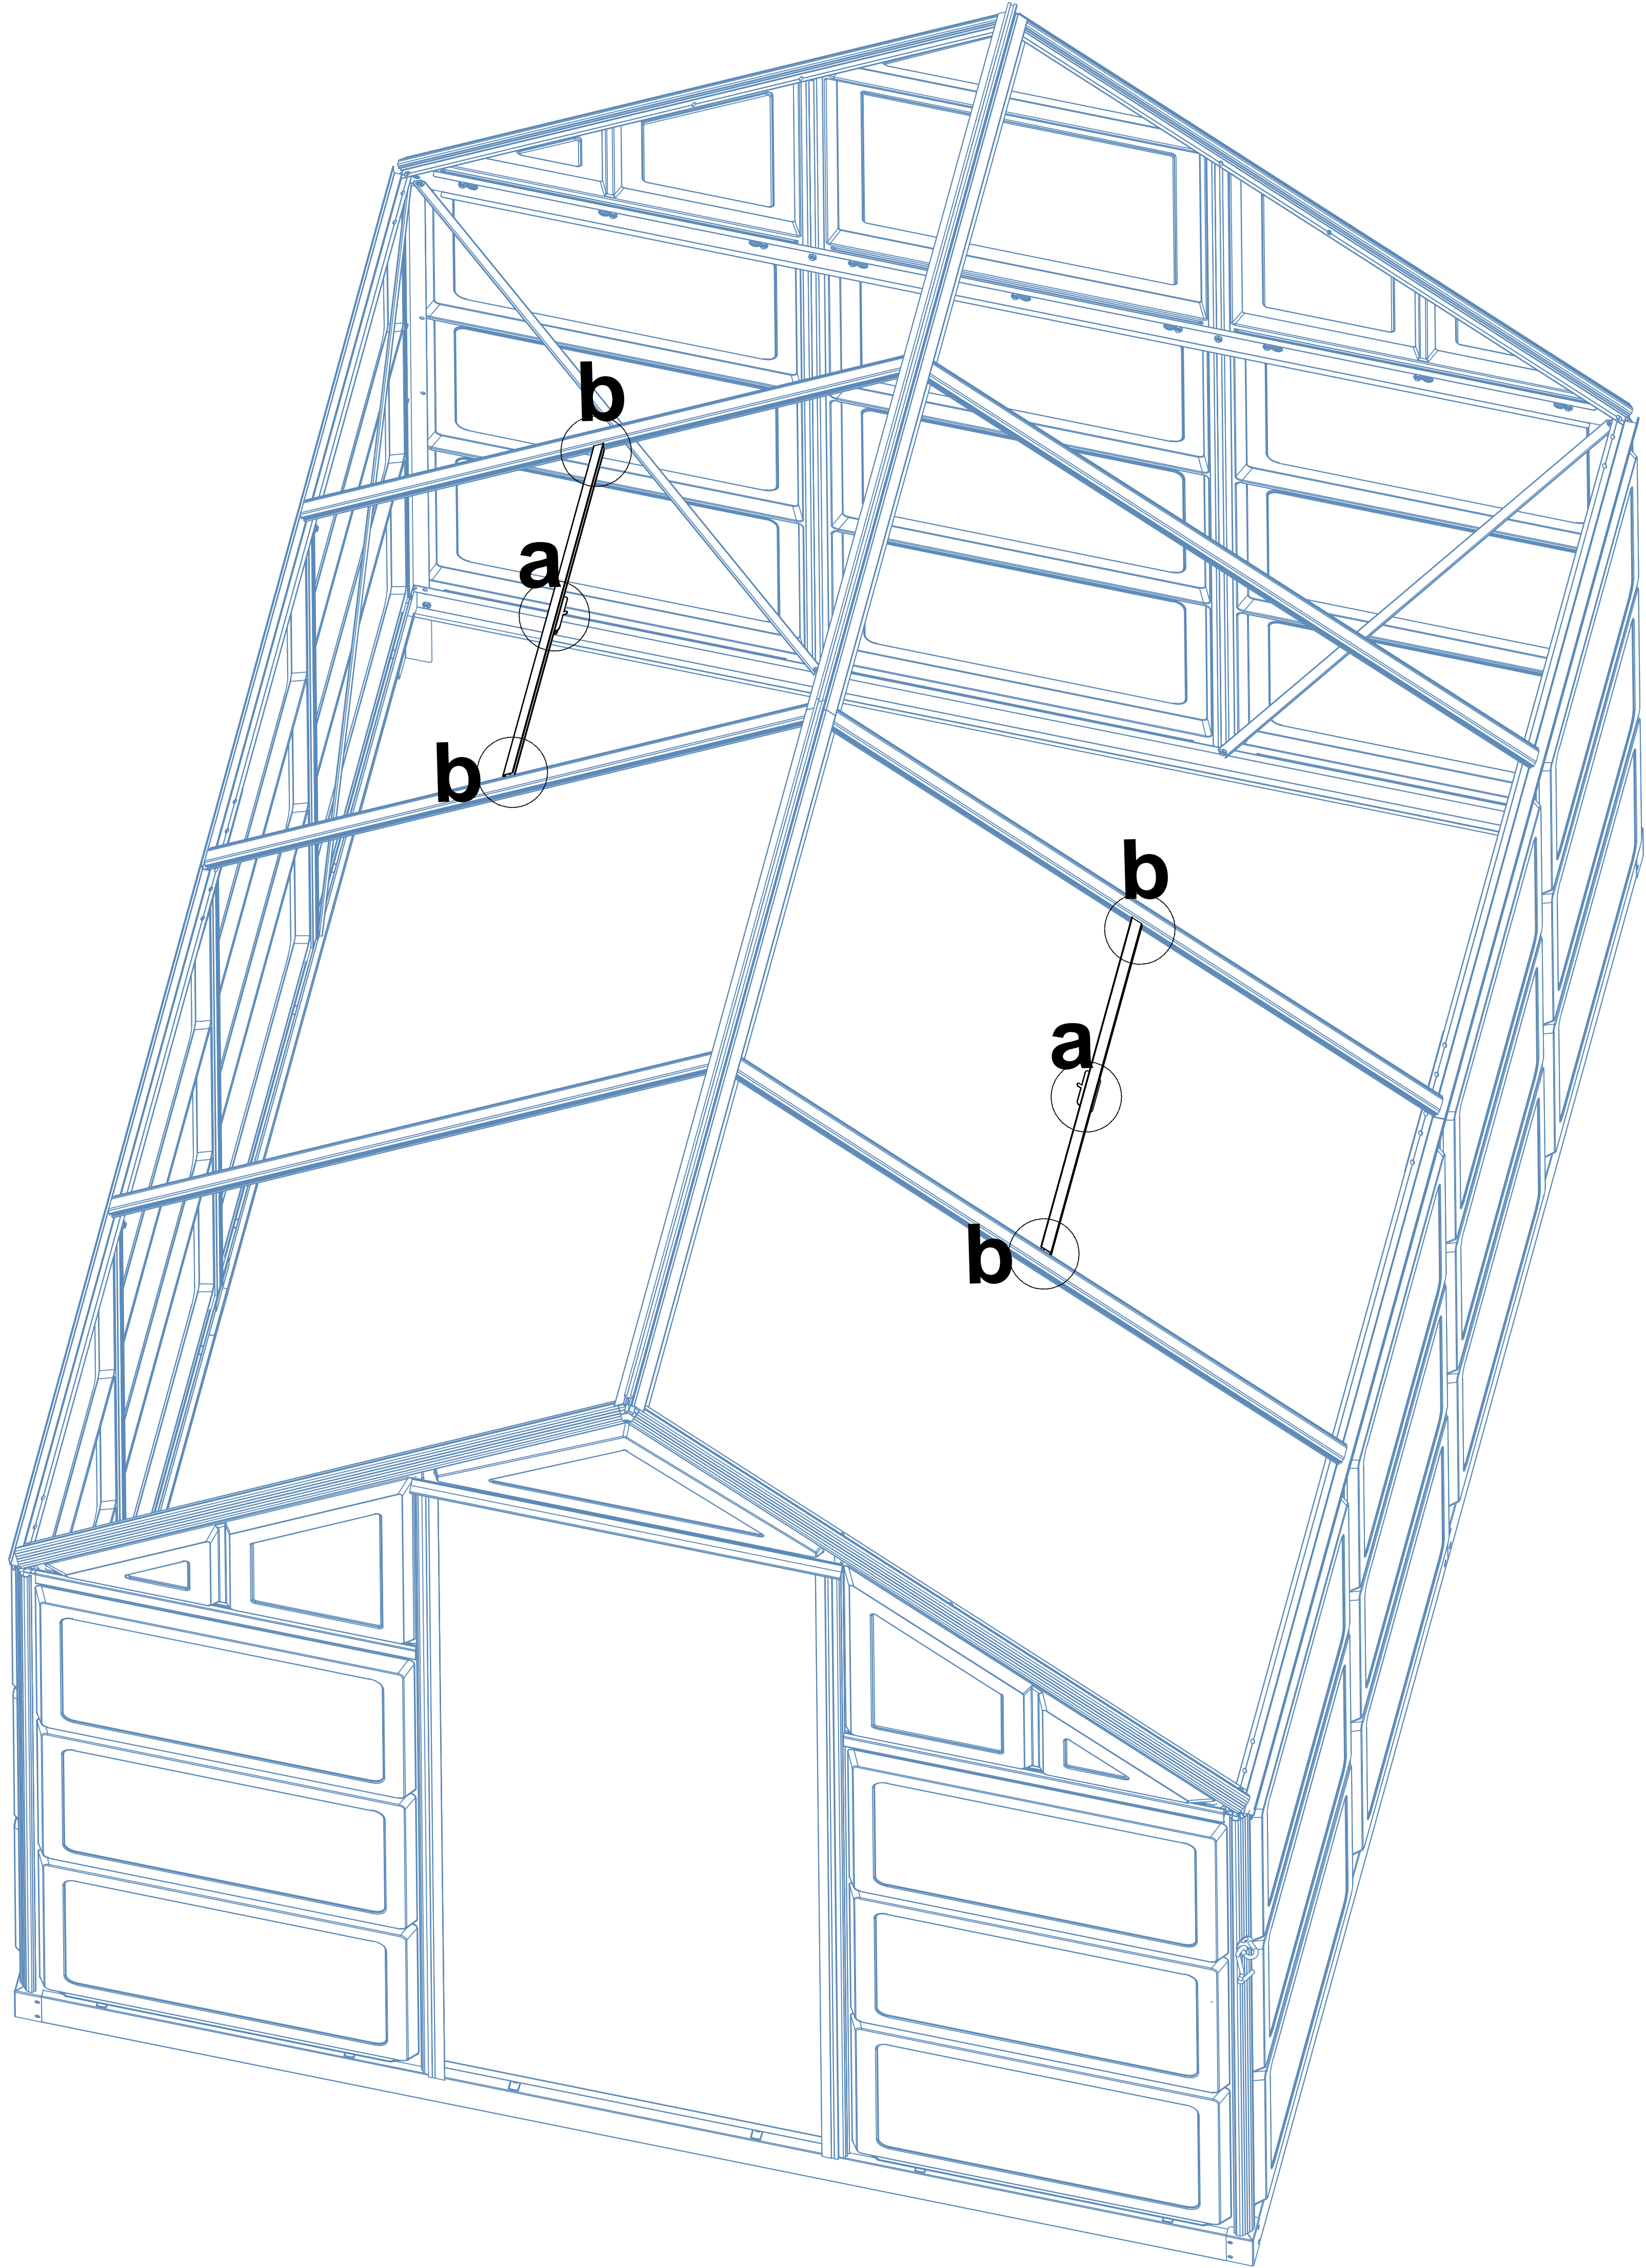


 **Internal View**



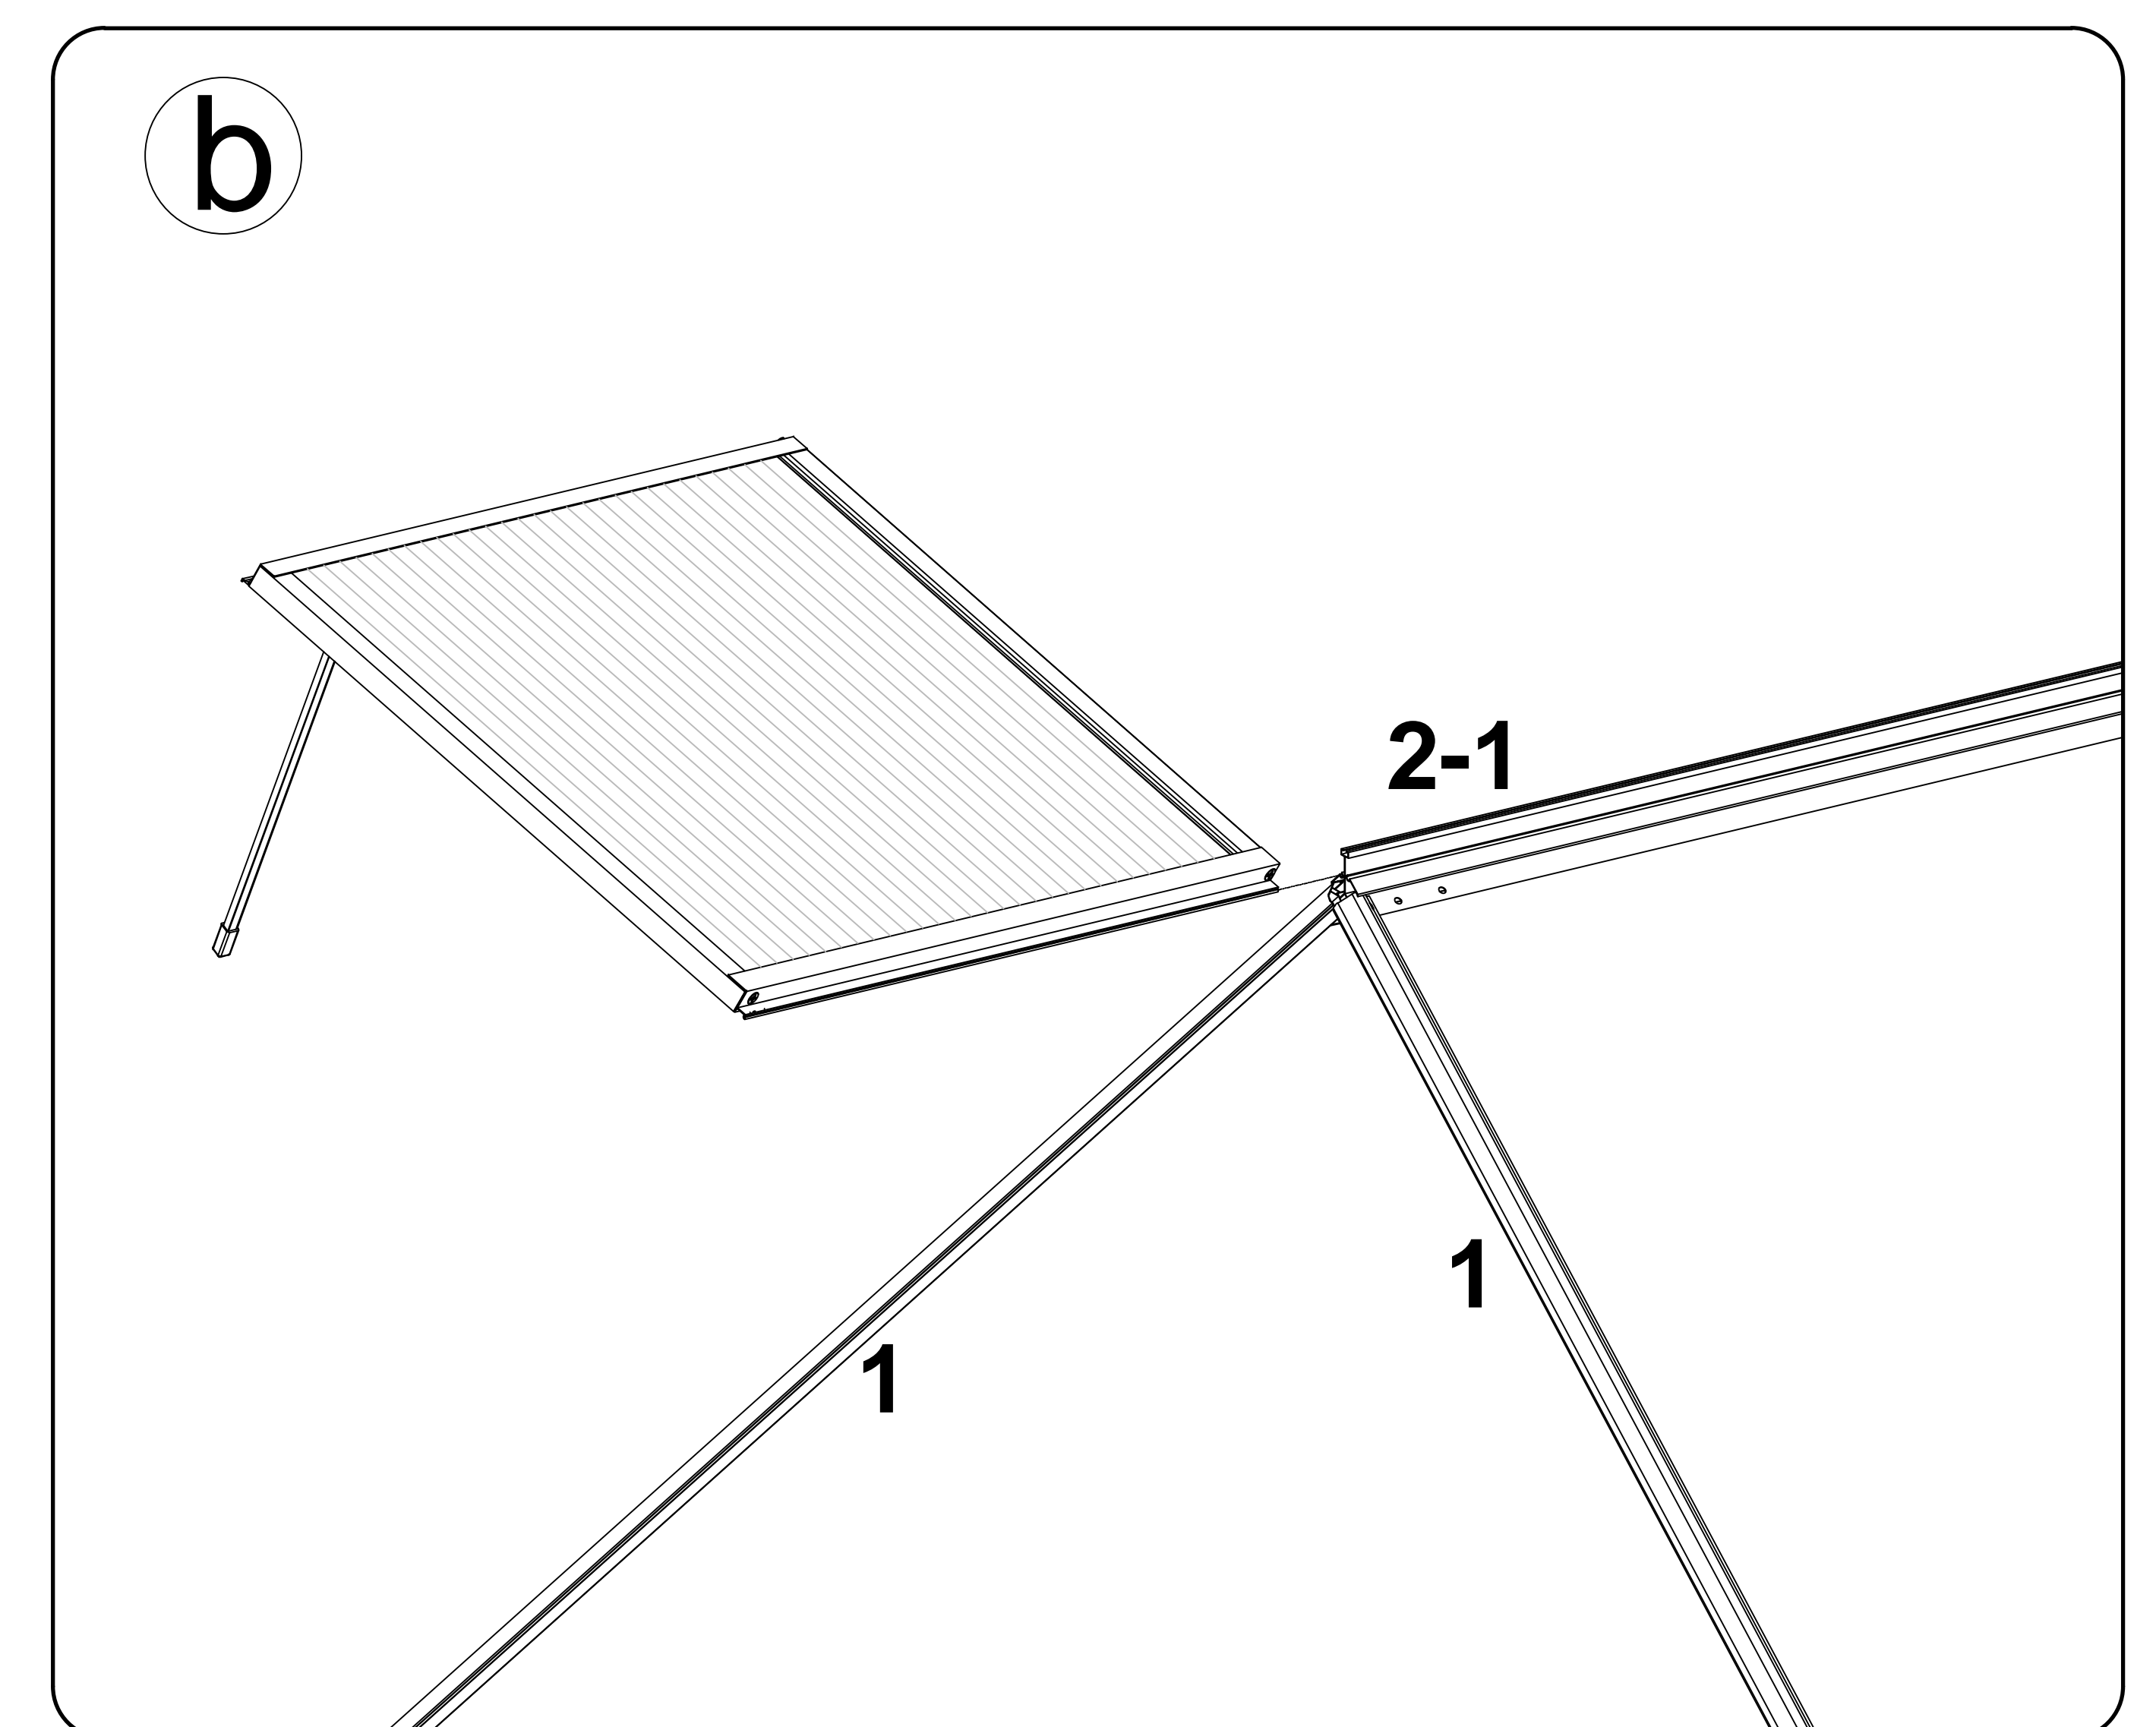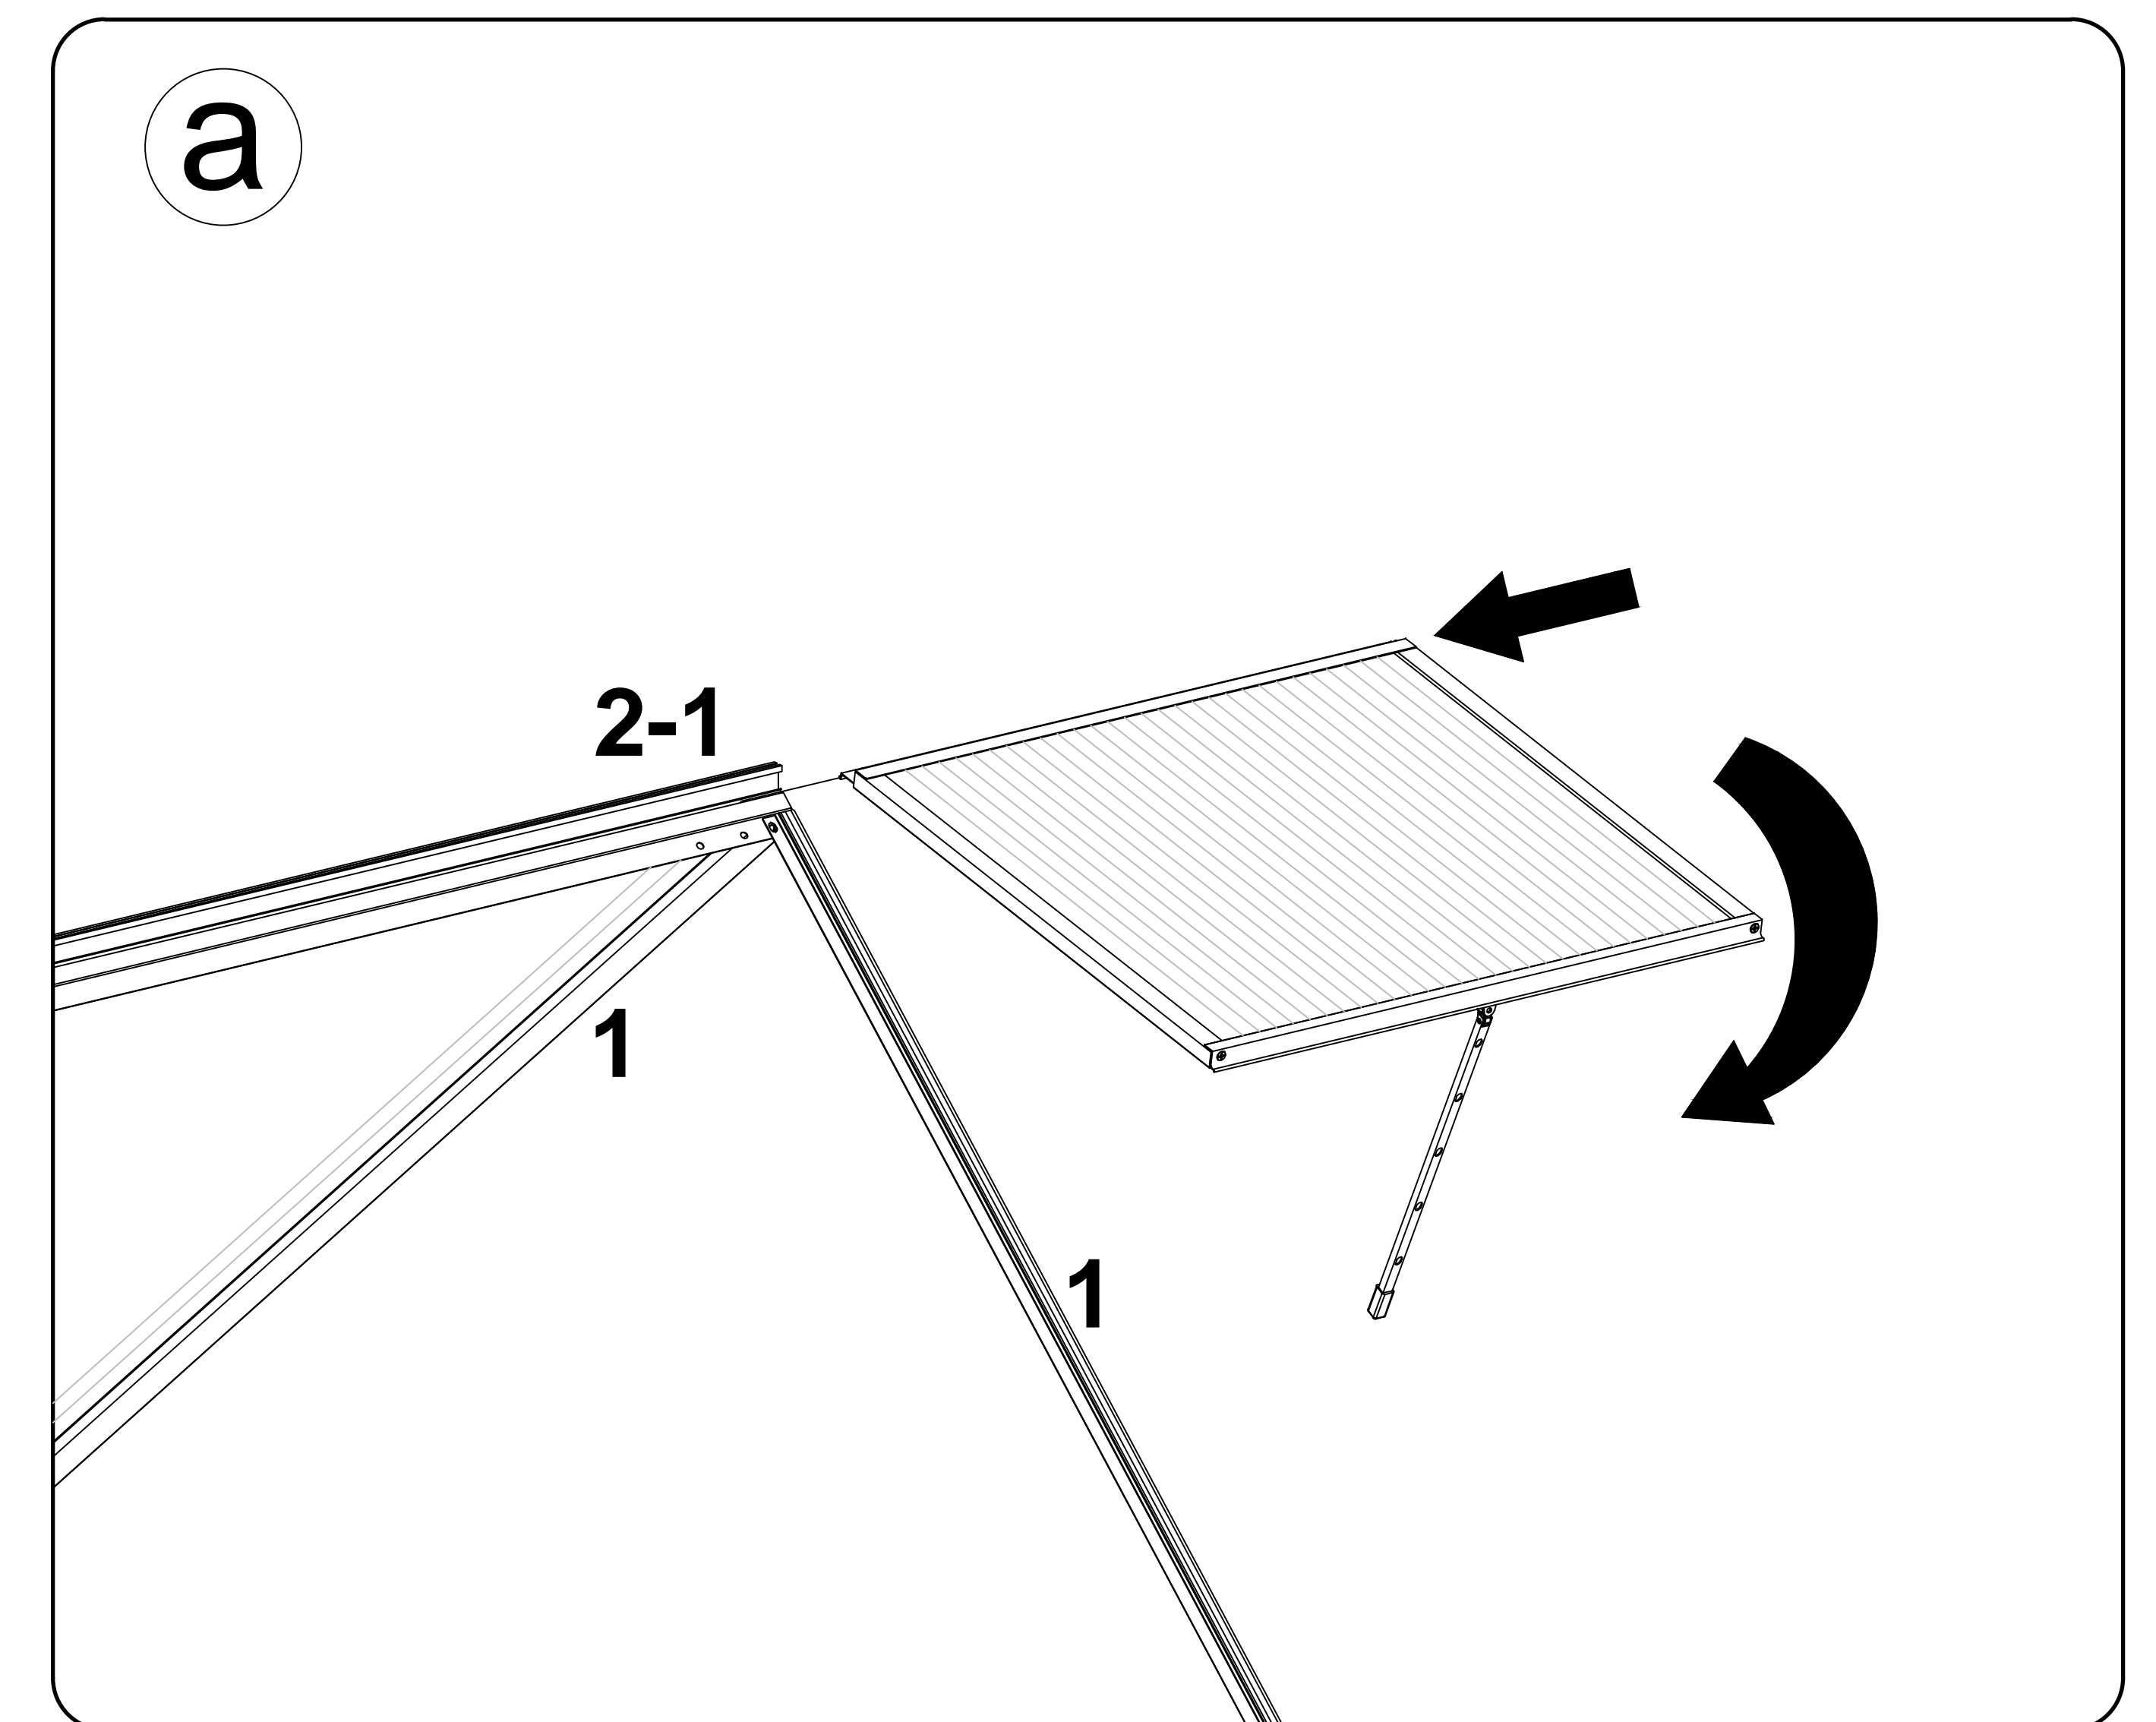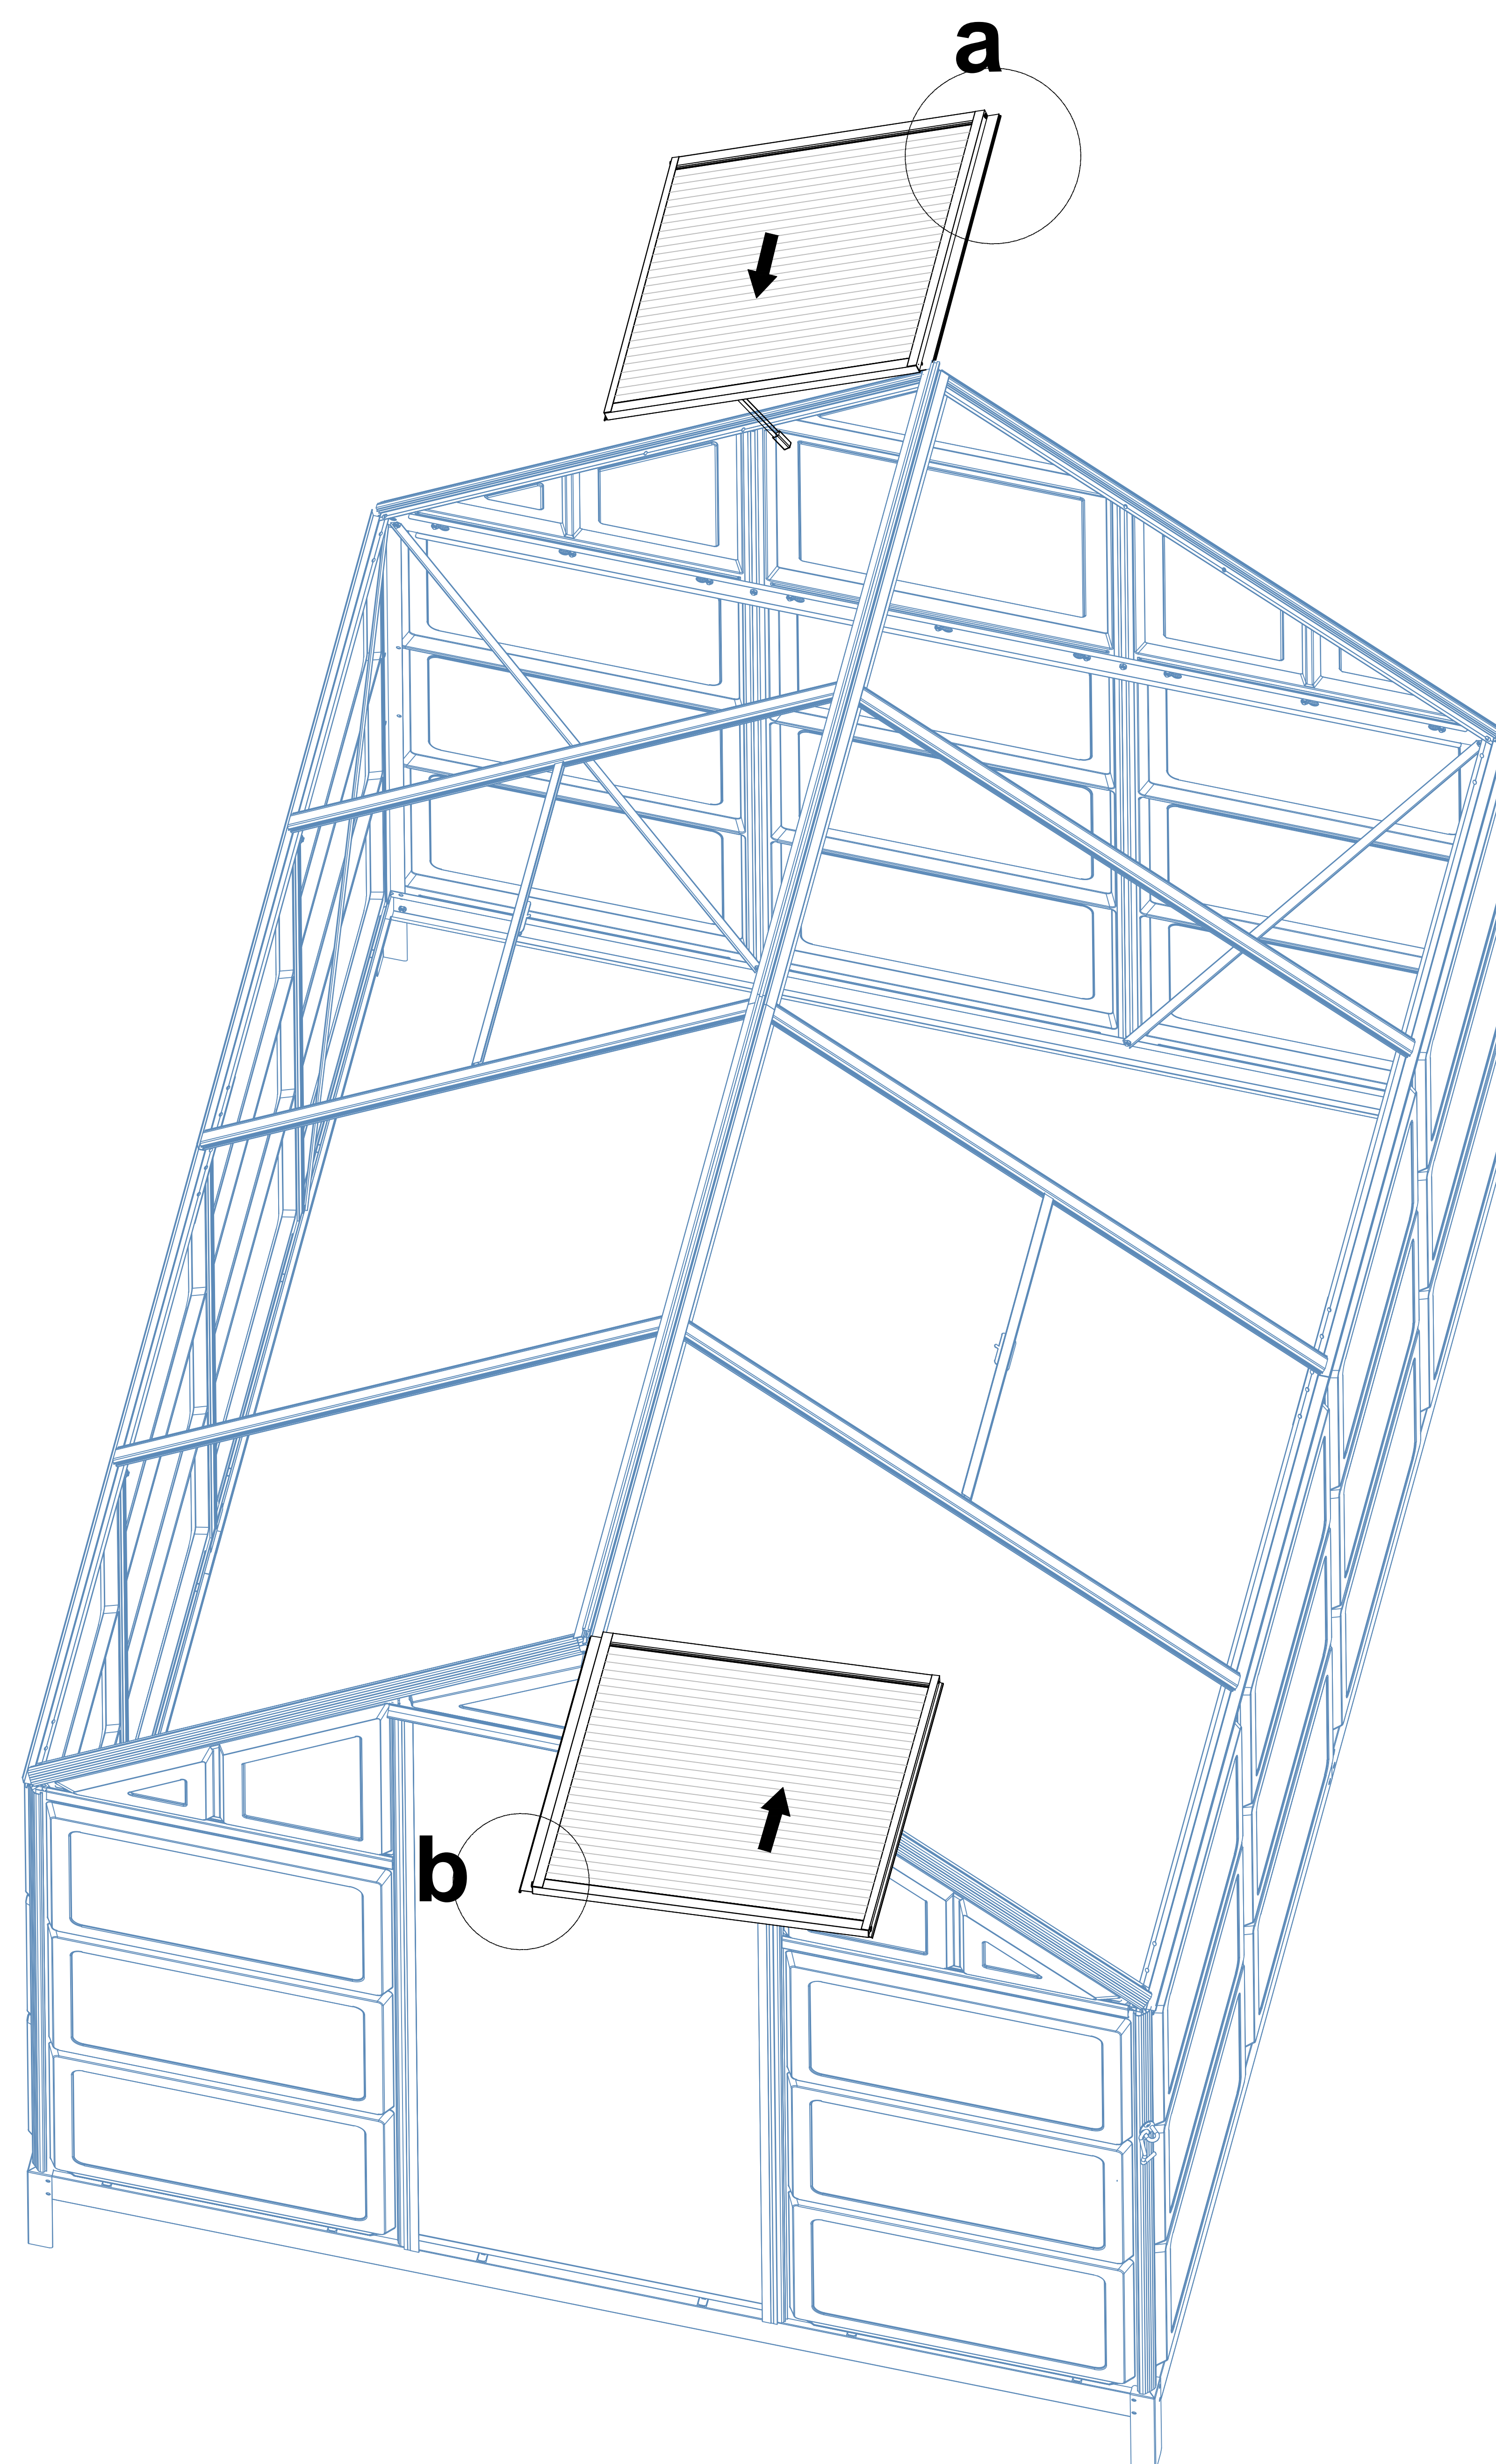



F10

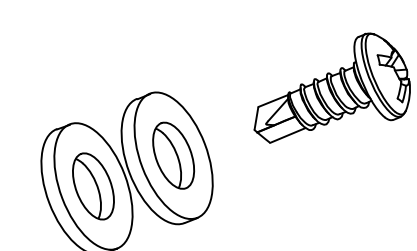


4 PCS

F10

F10

2-1

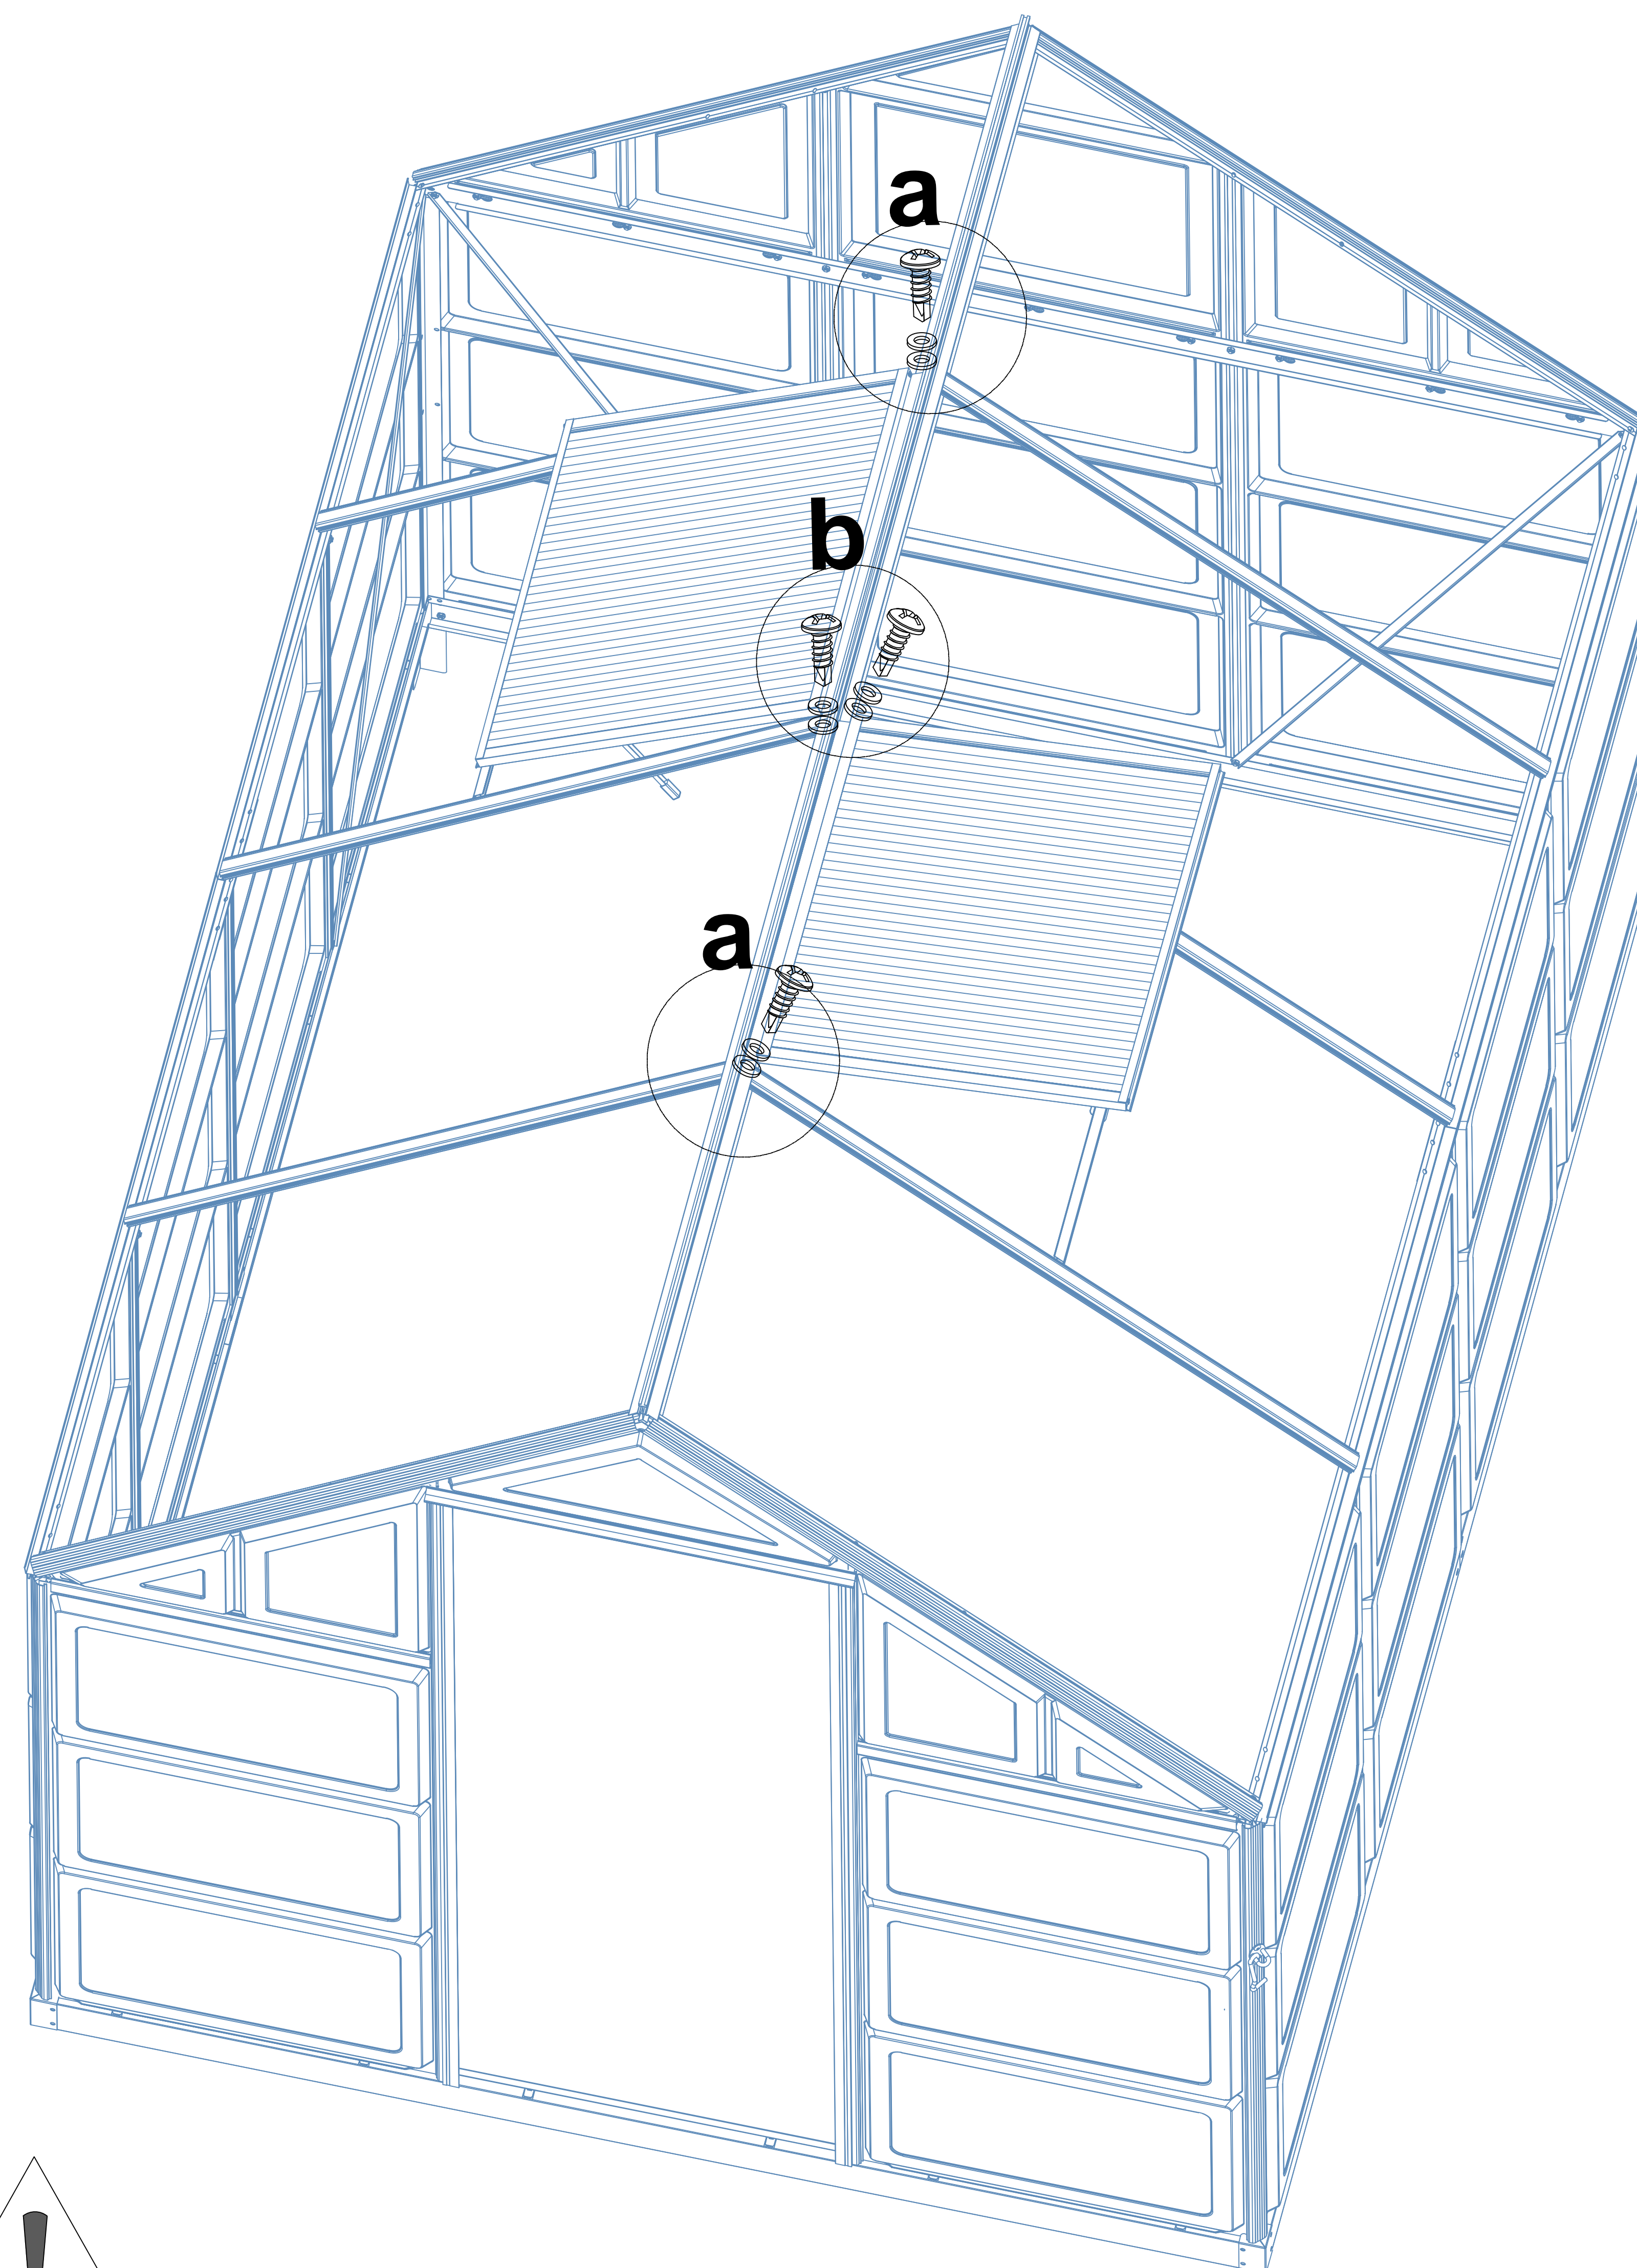

a

F10


b

F10


F10

First position the window in the middle of two No. 3 pieces, and then press F9 onto the No. 2-1 top beam to fix it on both sides to prevent the window from sliding left and right.







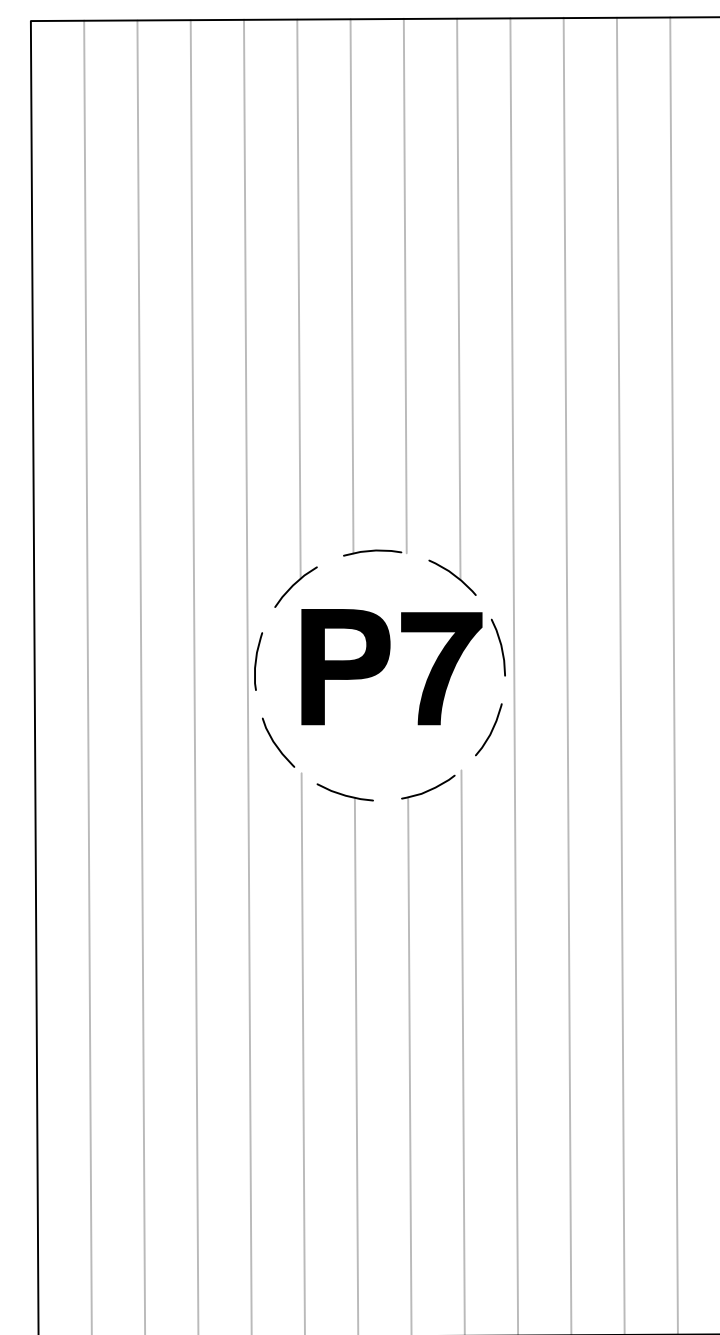

**x6**

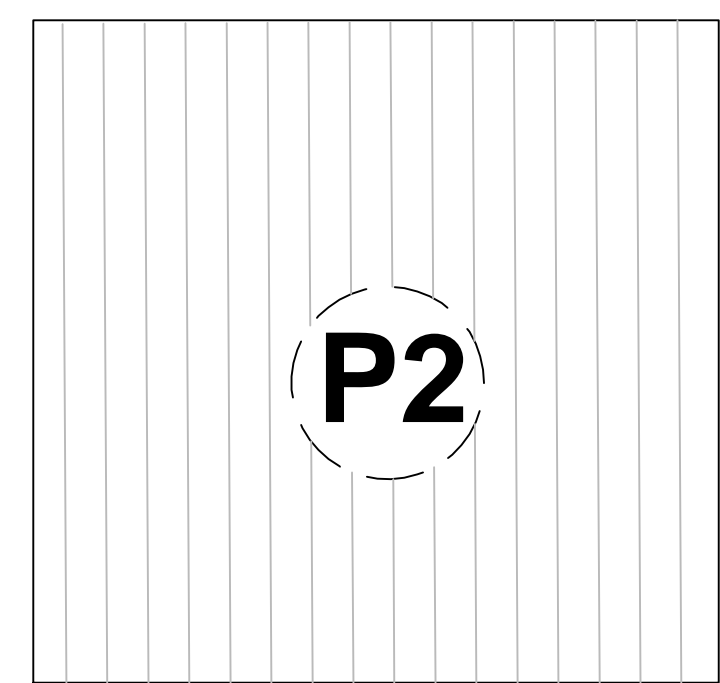





**x2**

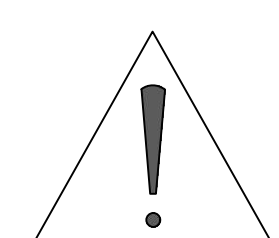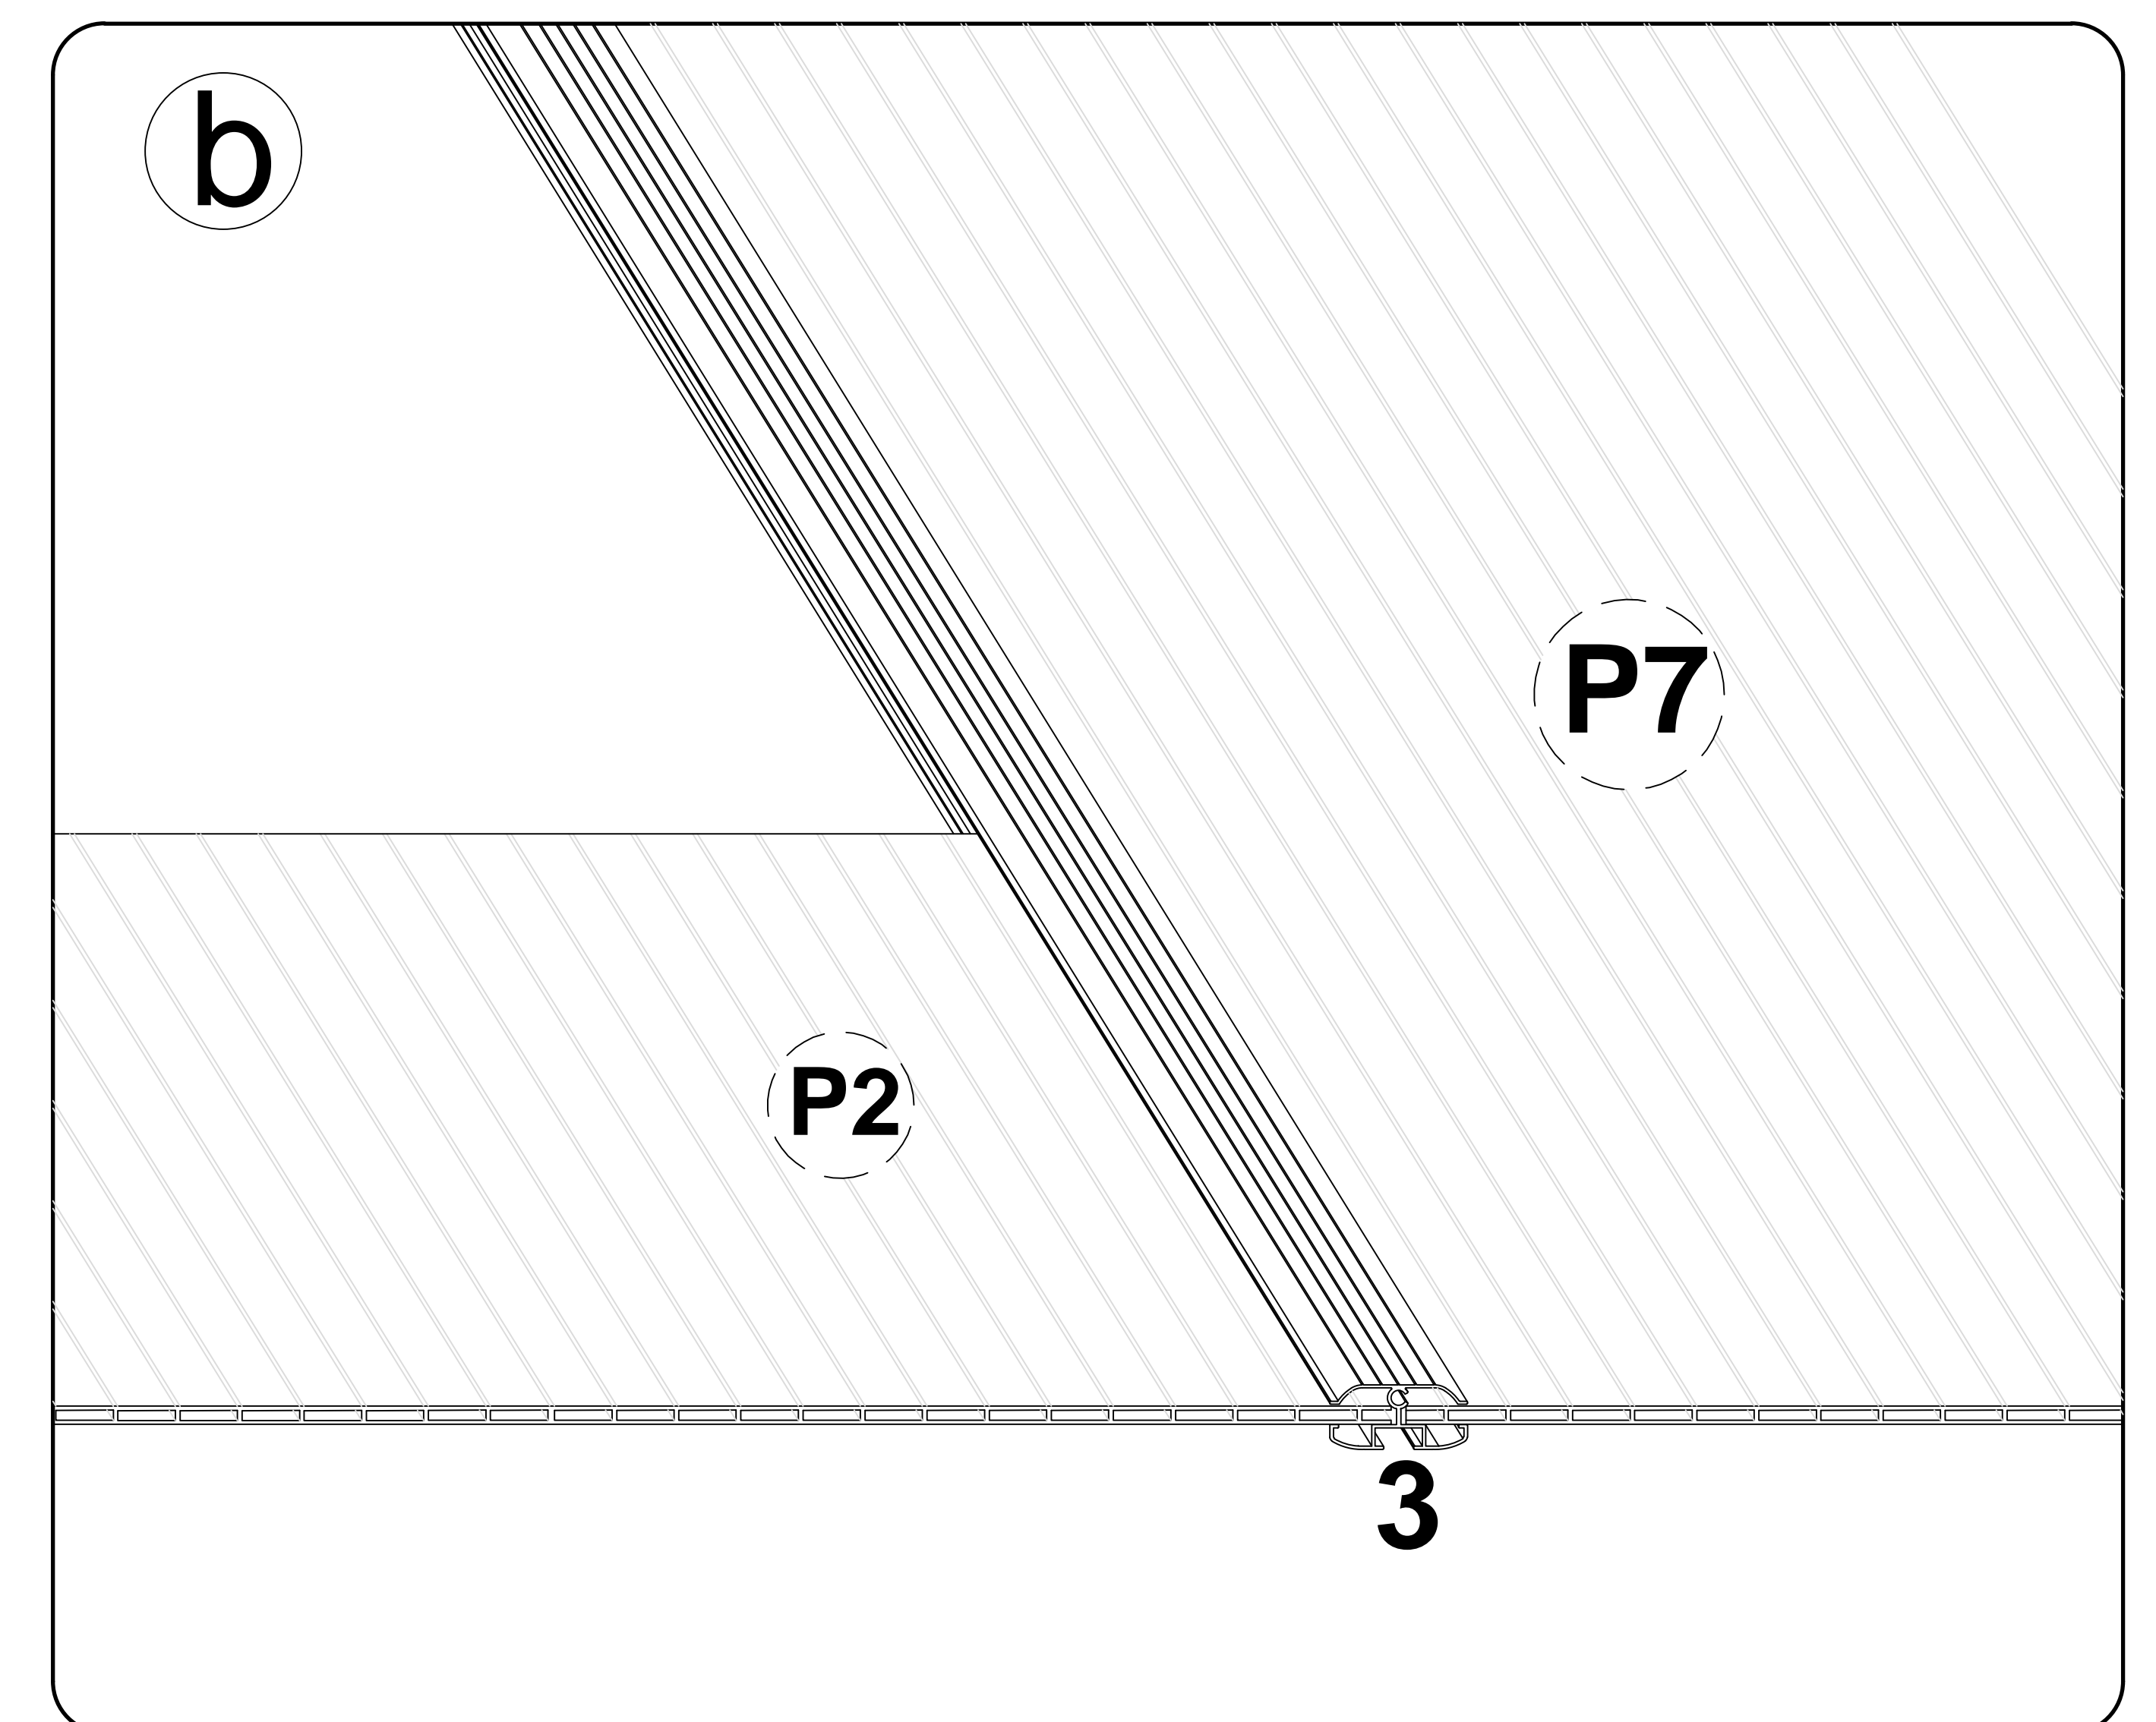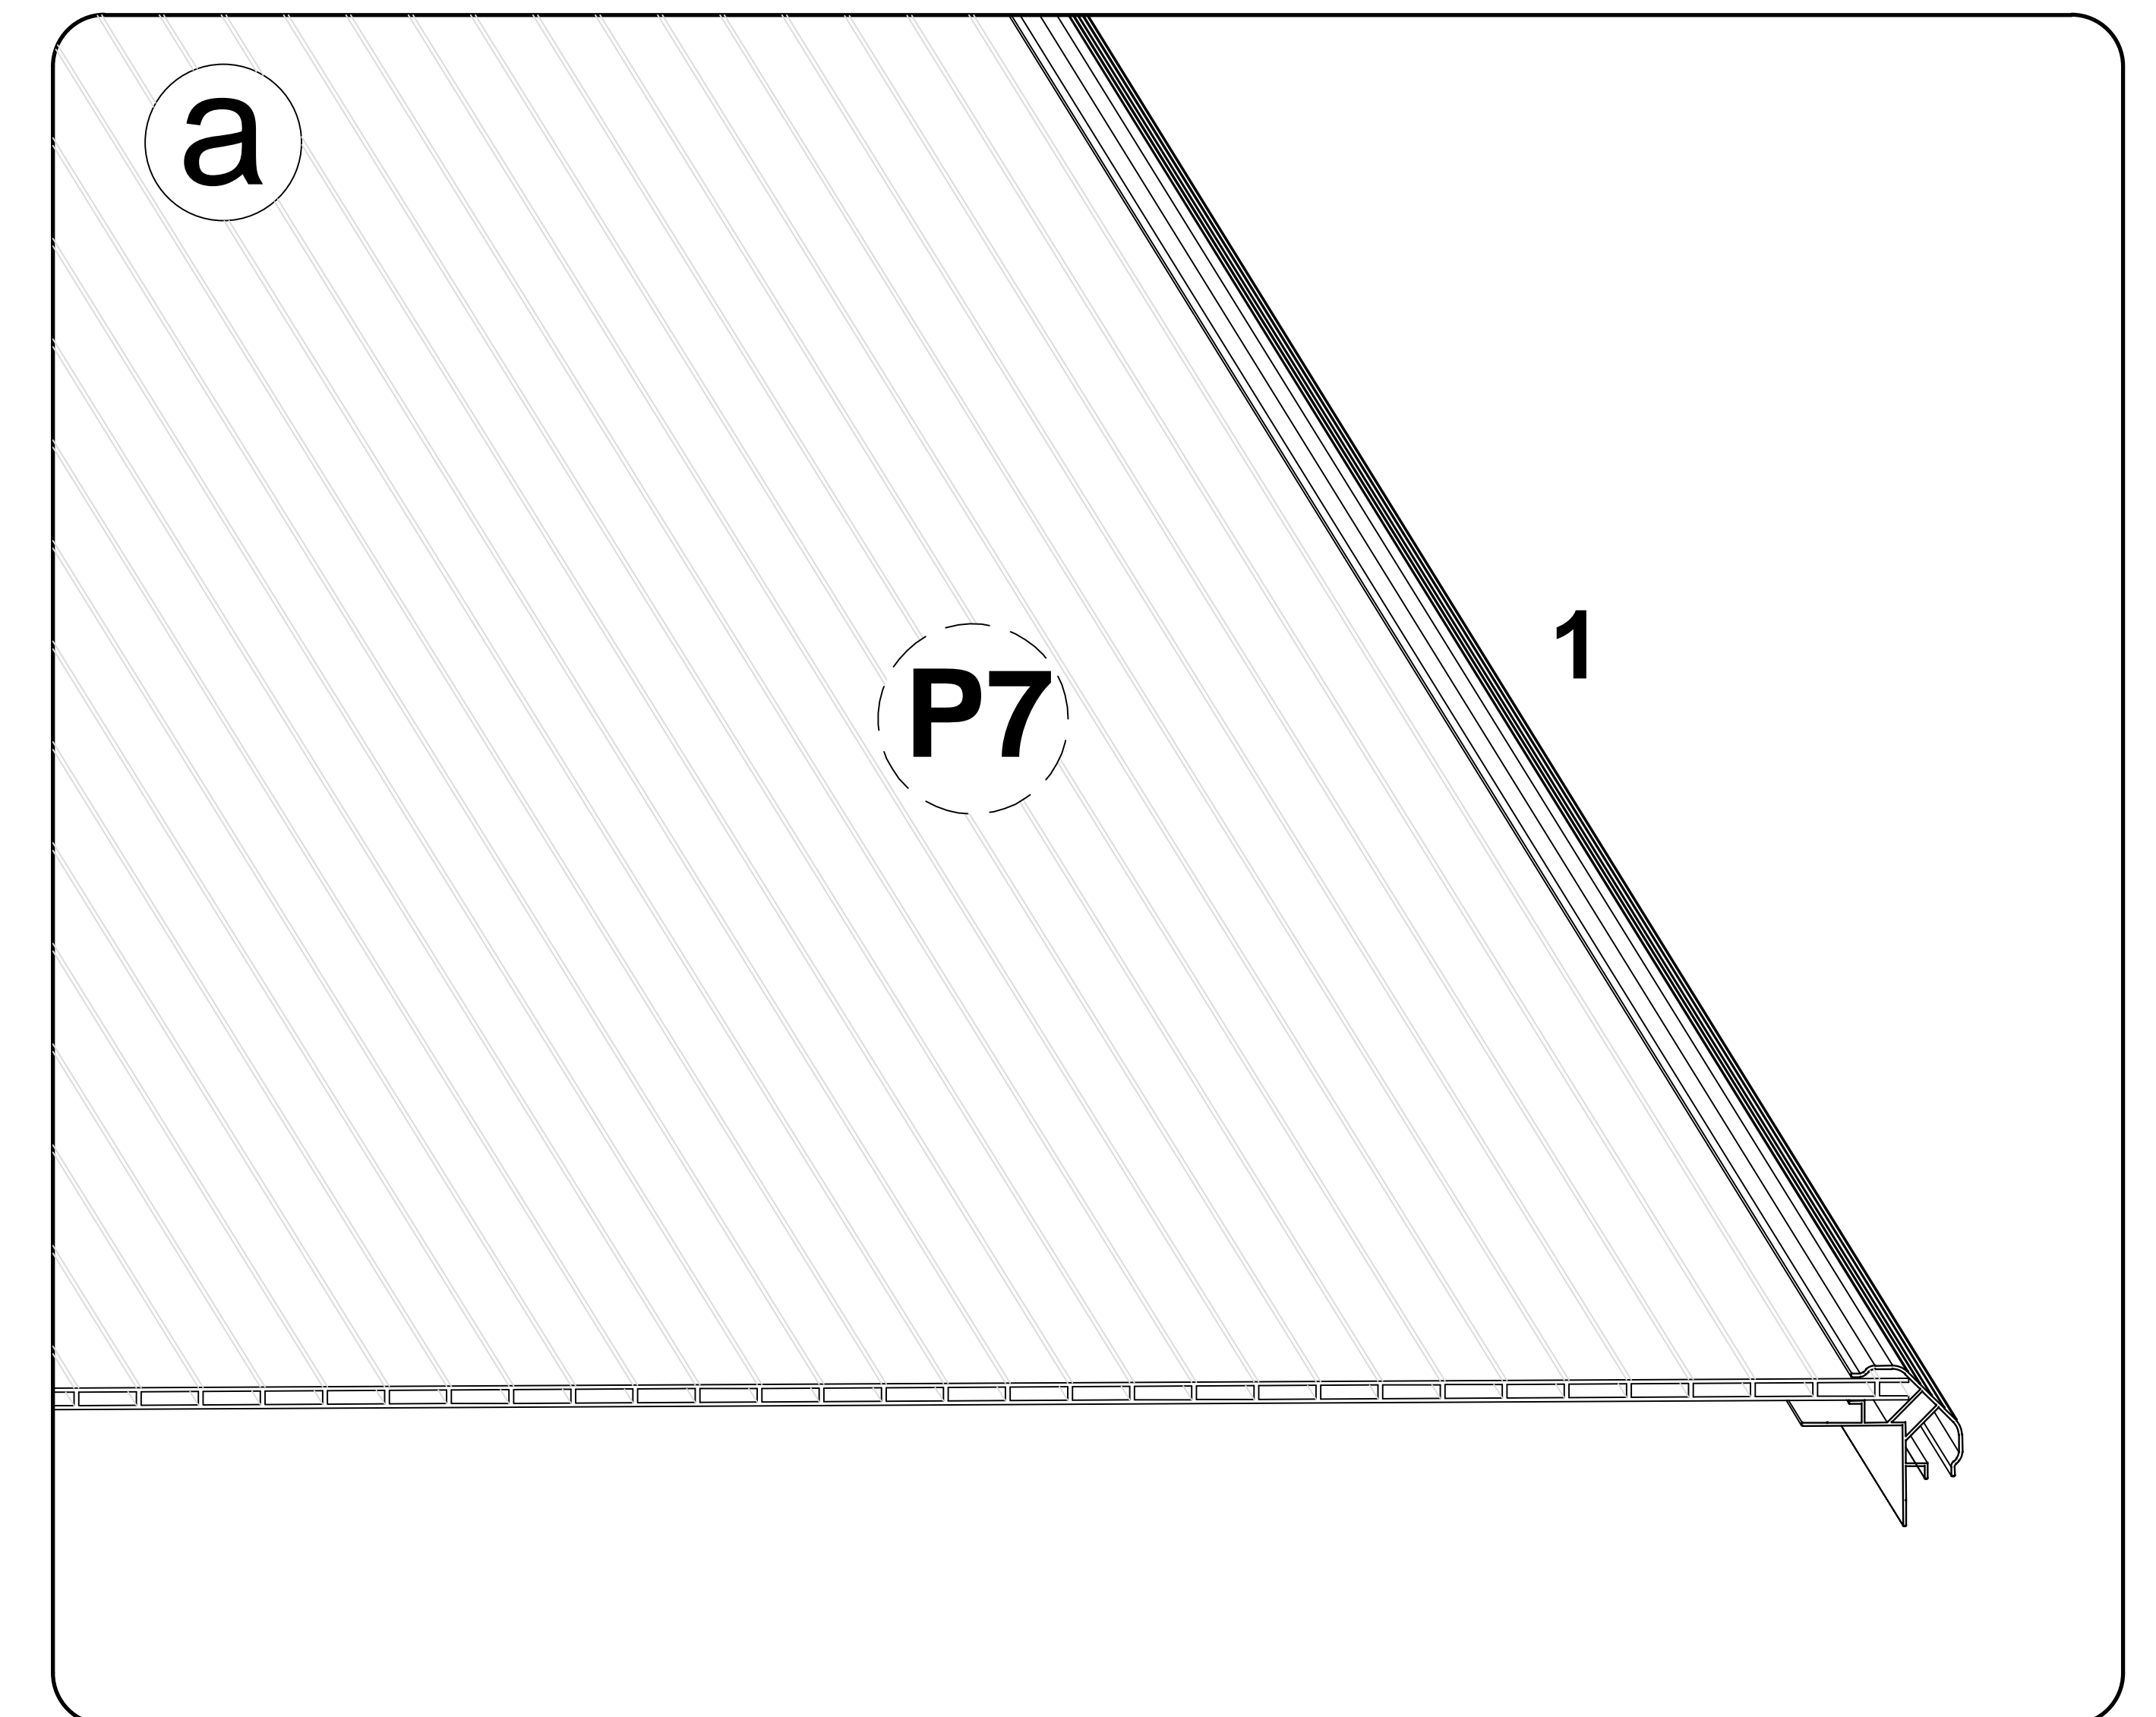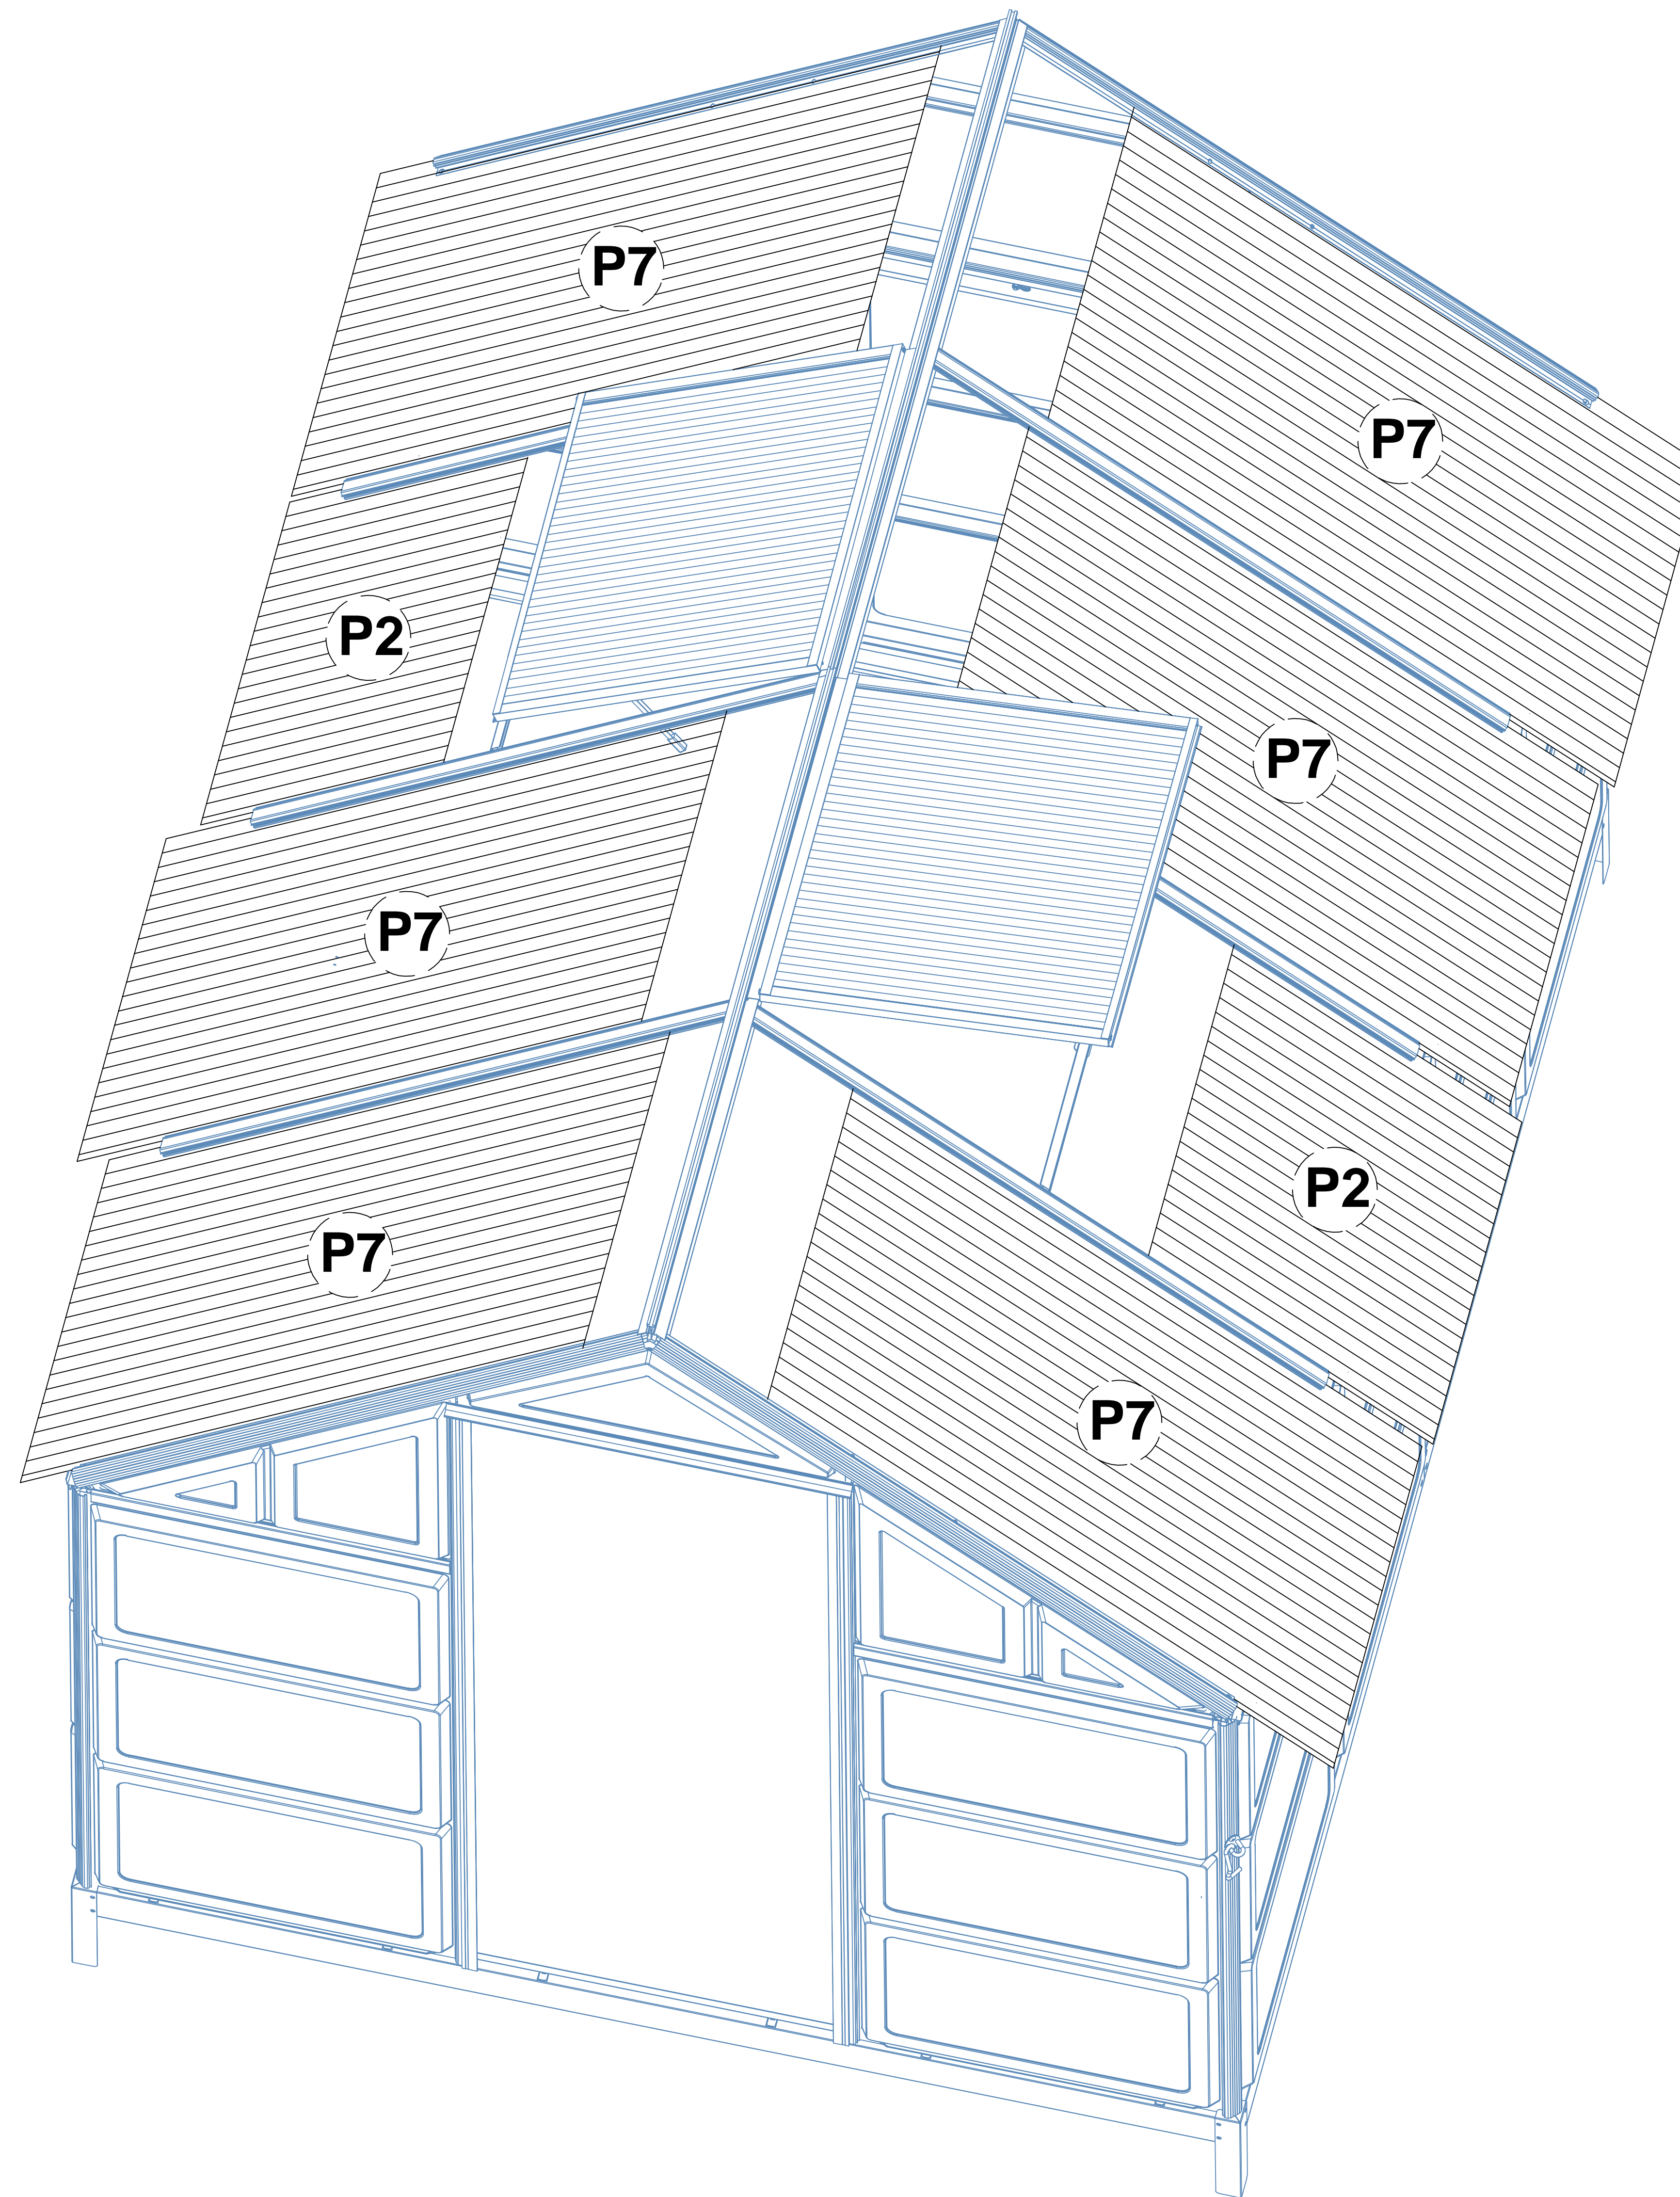


**Tear off the film before inseted into the board and the side of white film needs faced out.**




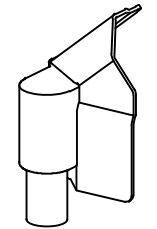
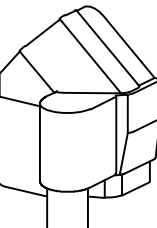
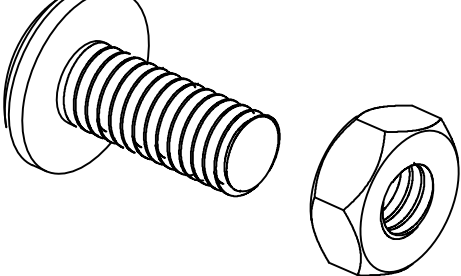
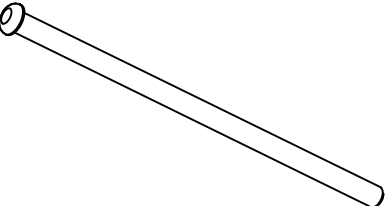



- 7 8 PCS
- S3 6 PCS
- F6 6 PCS
- F11 4 PCS

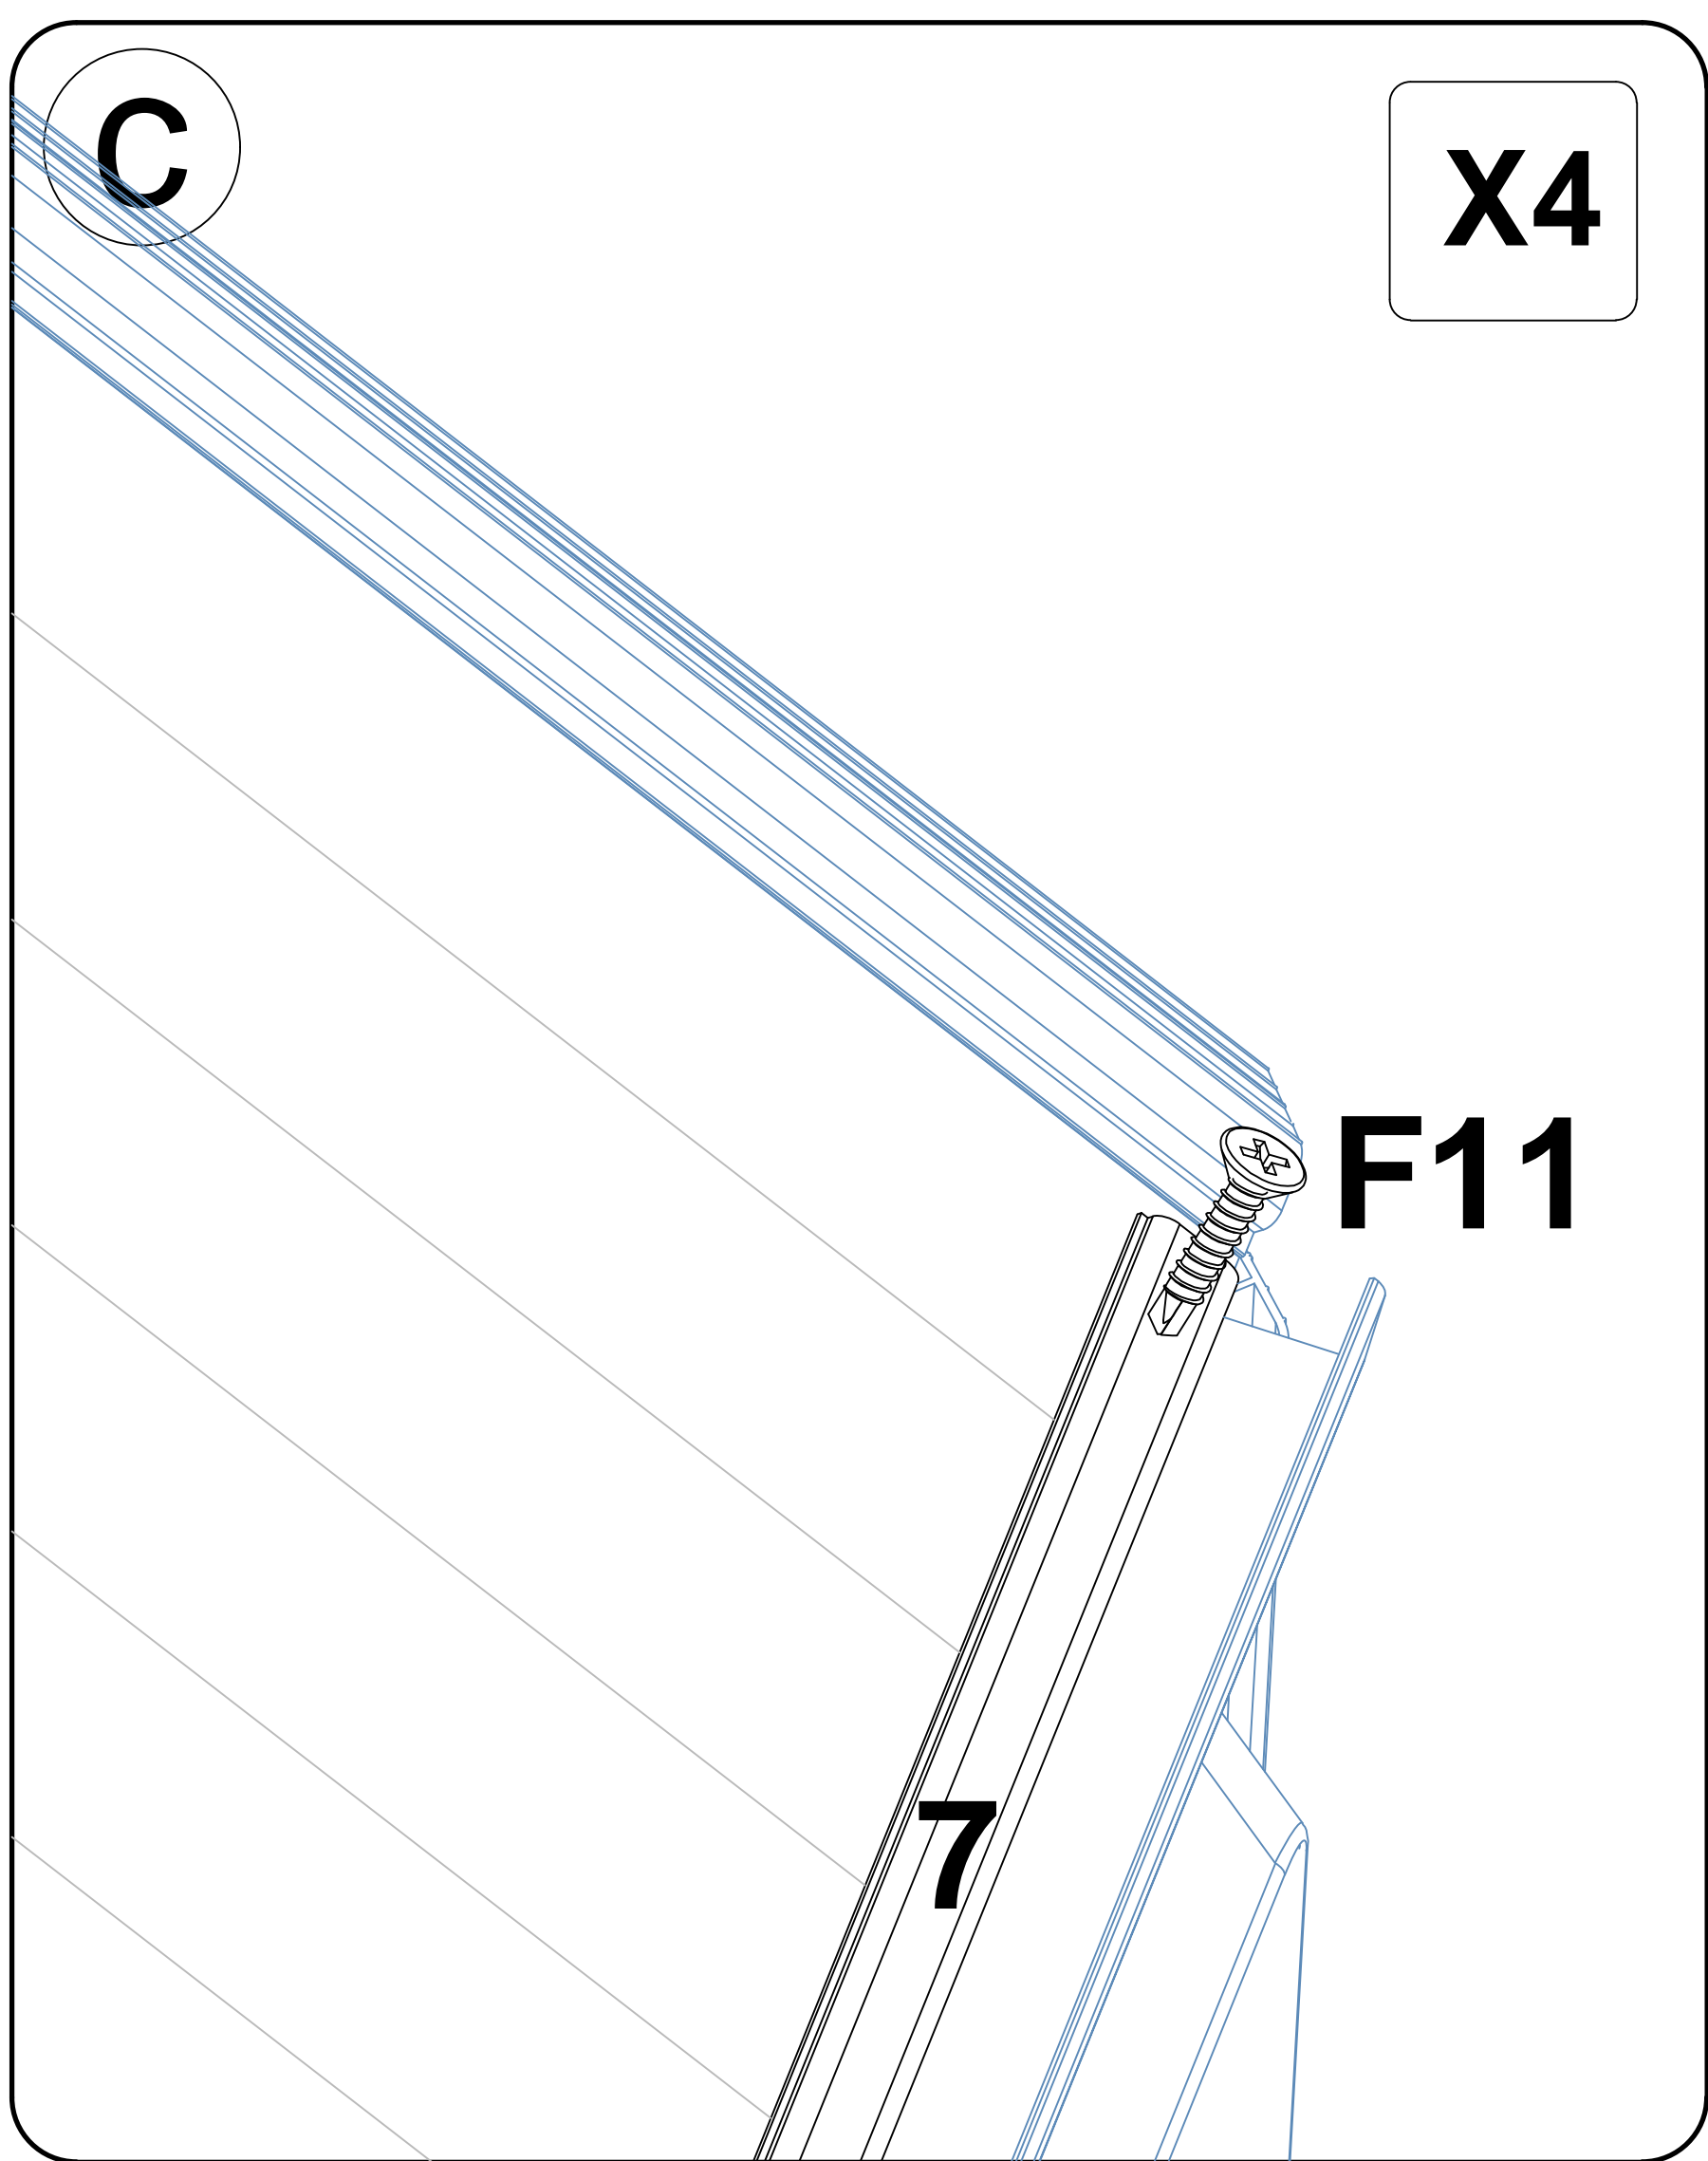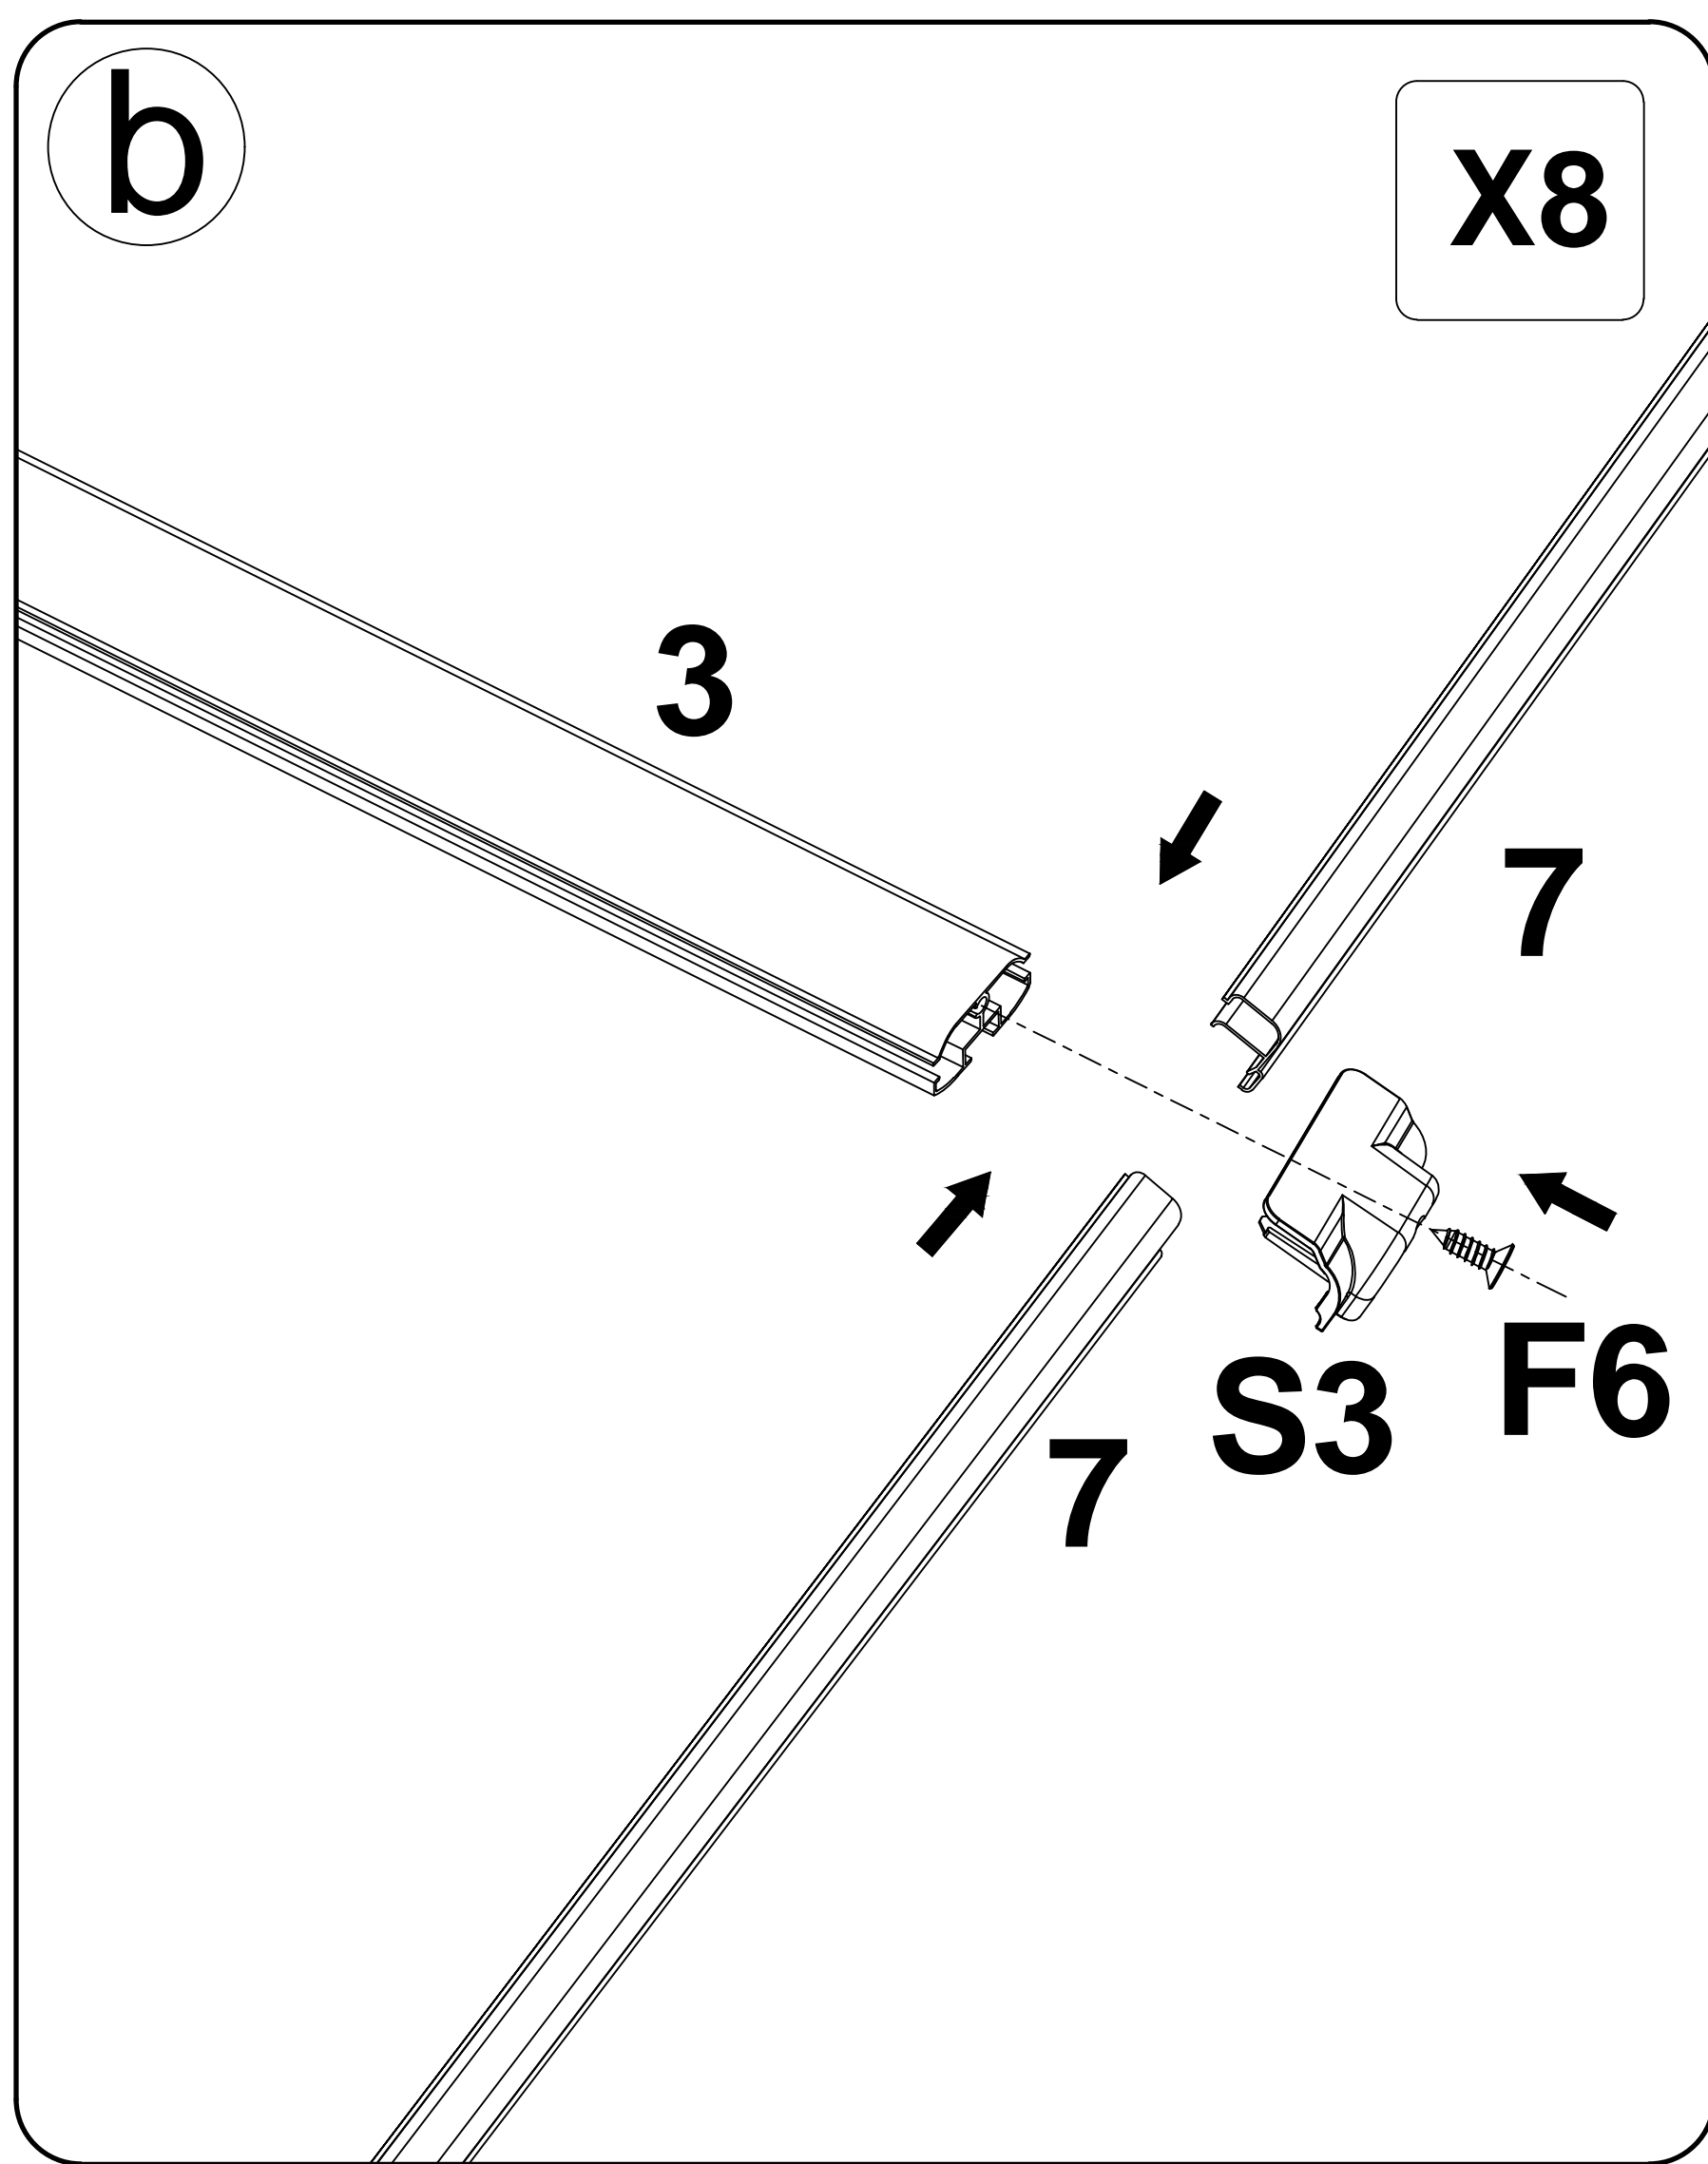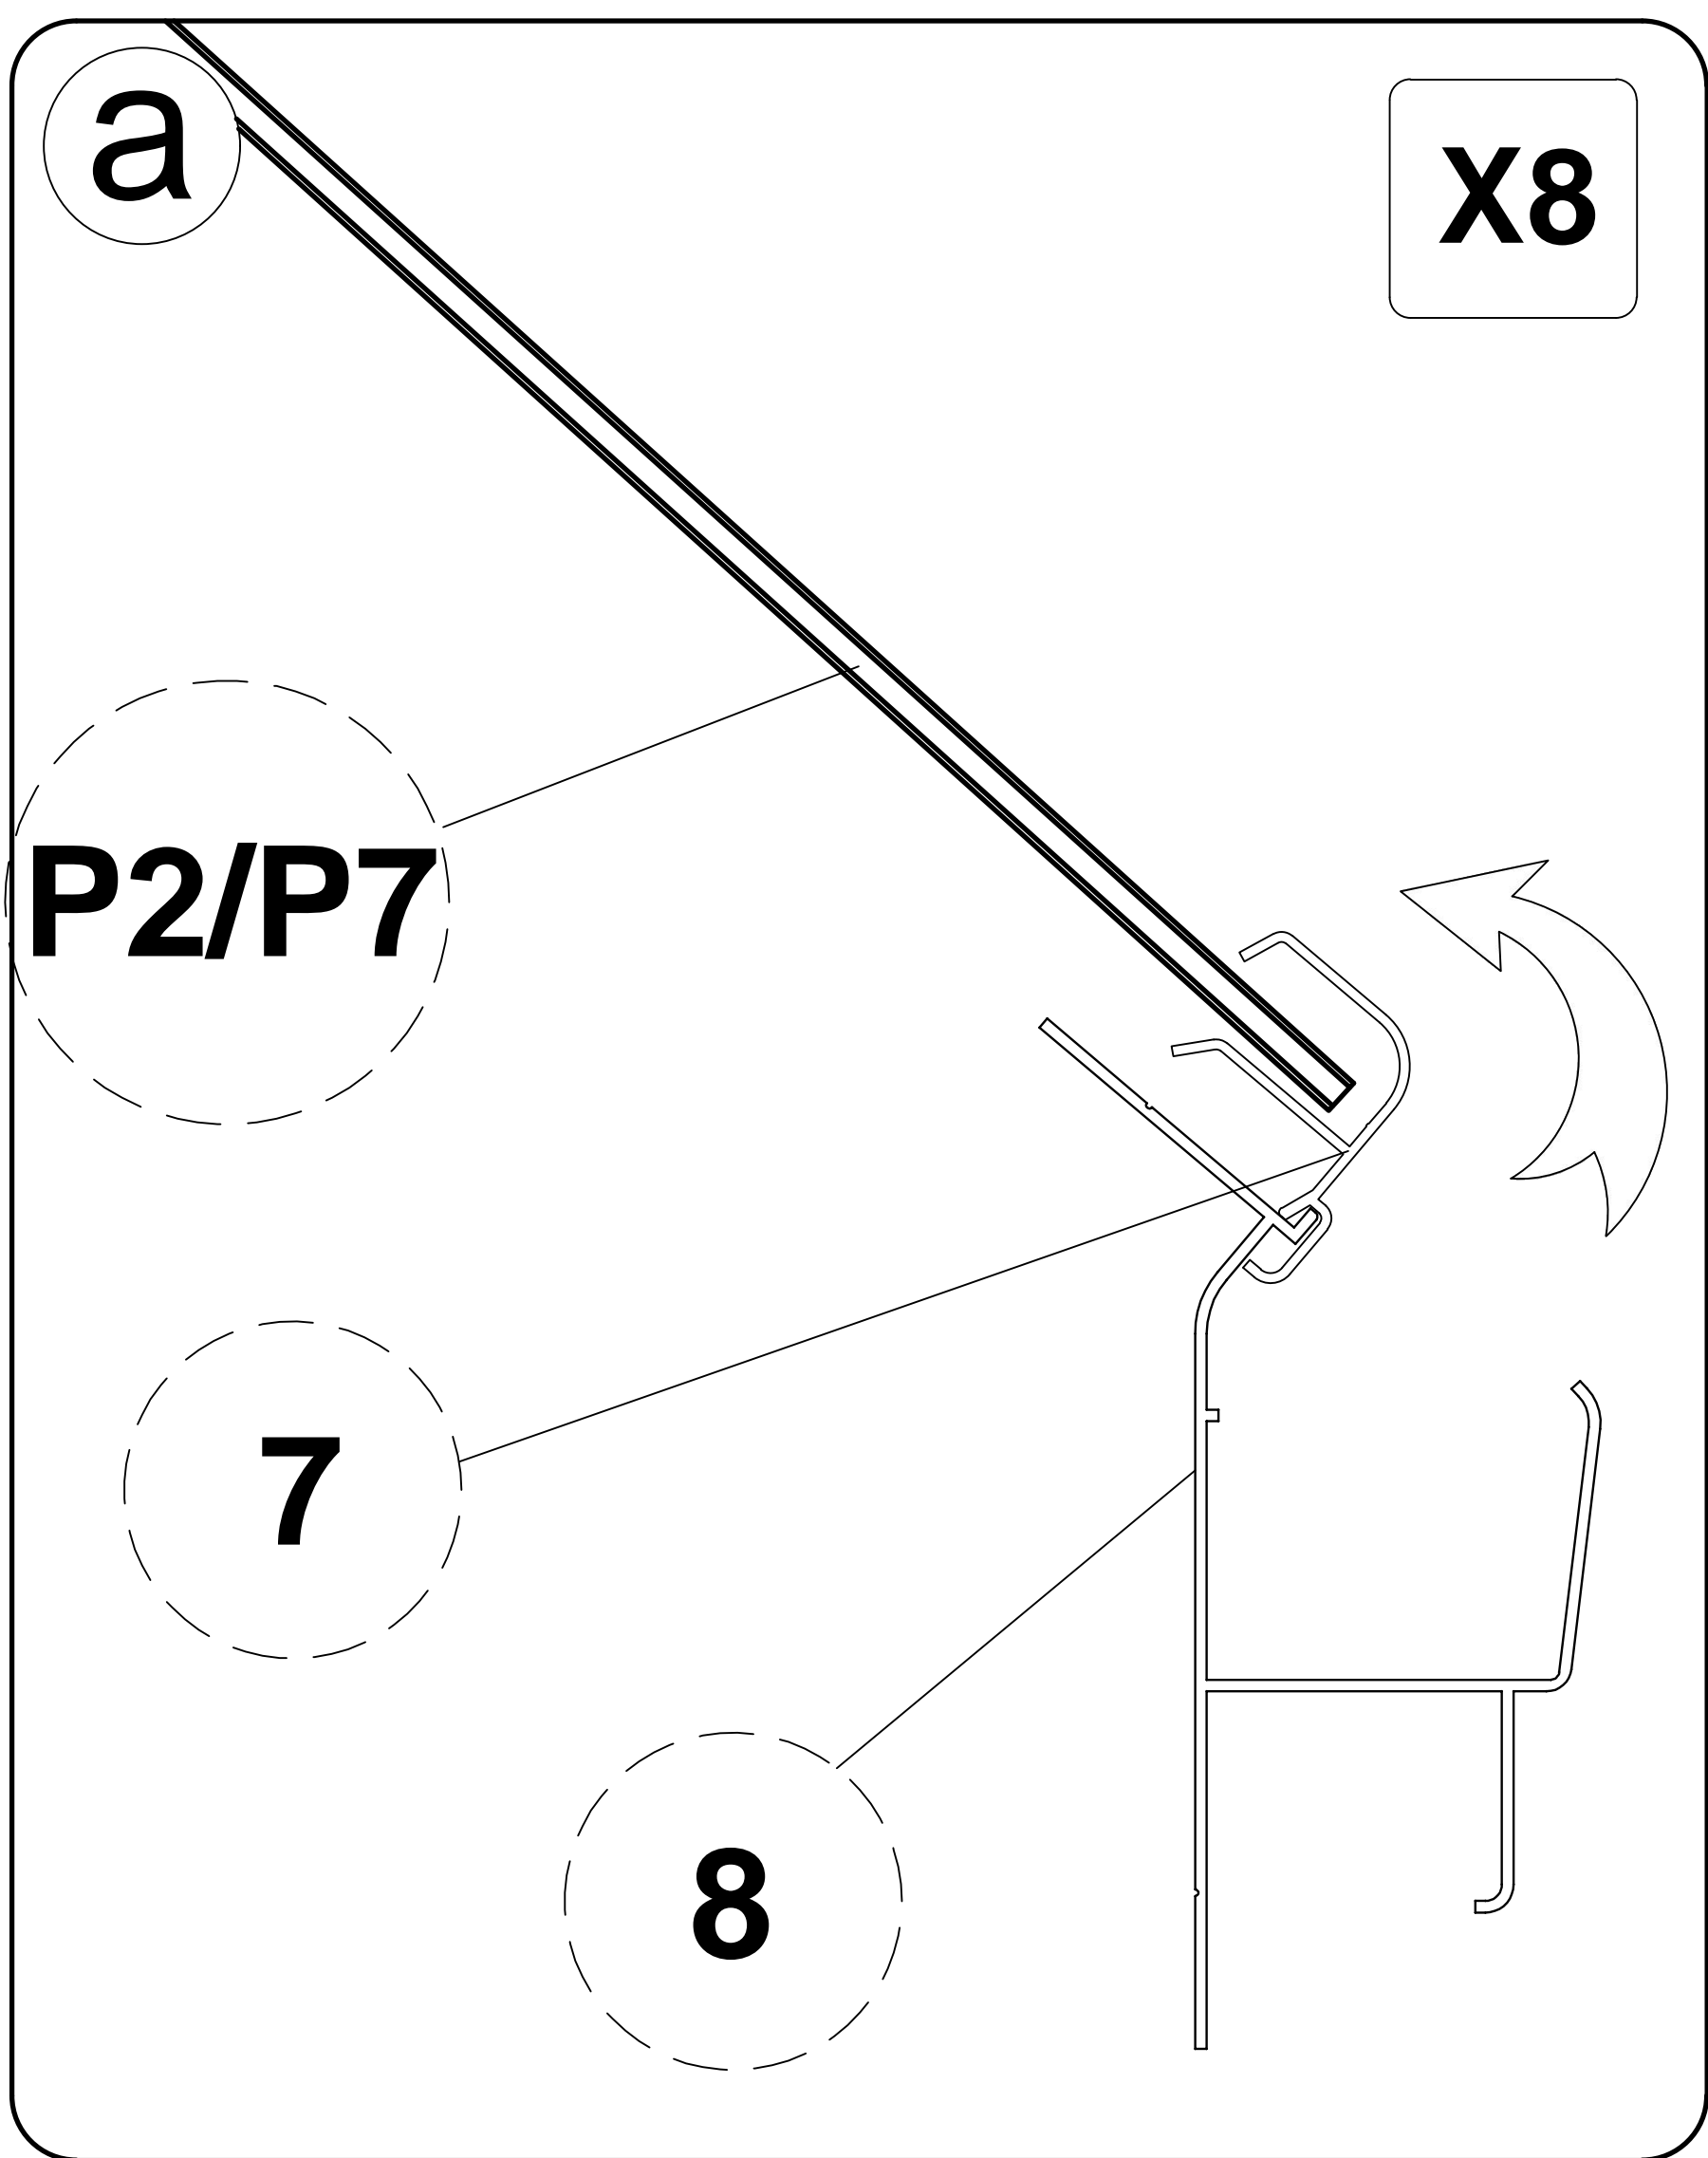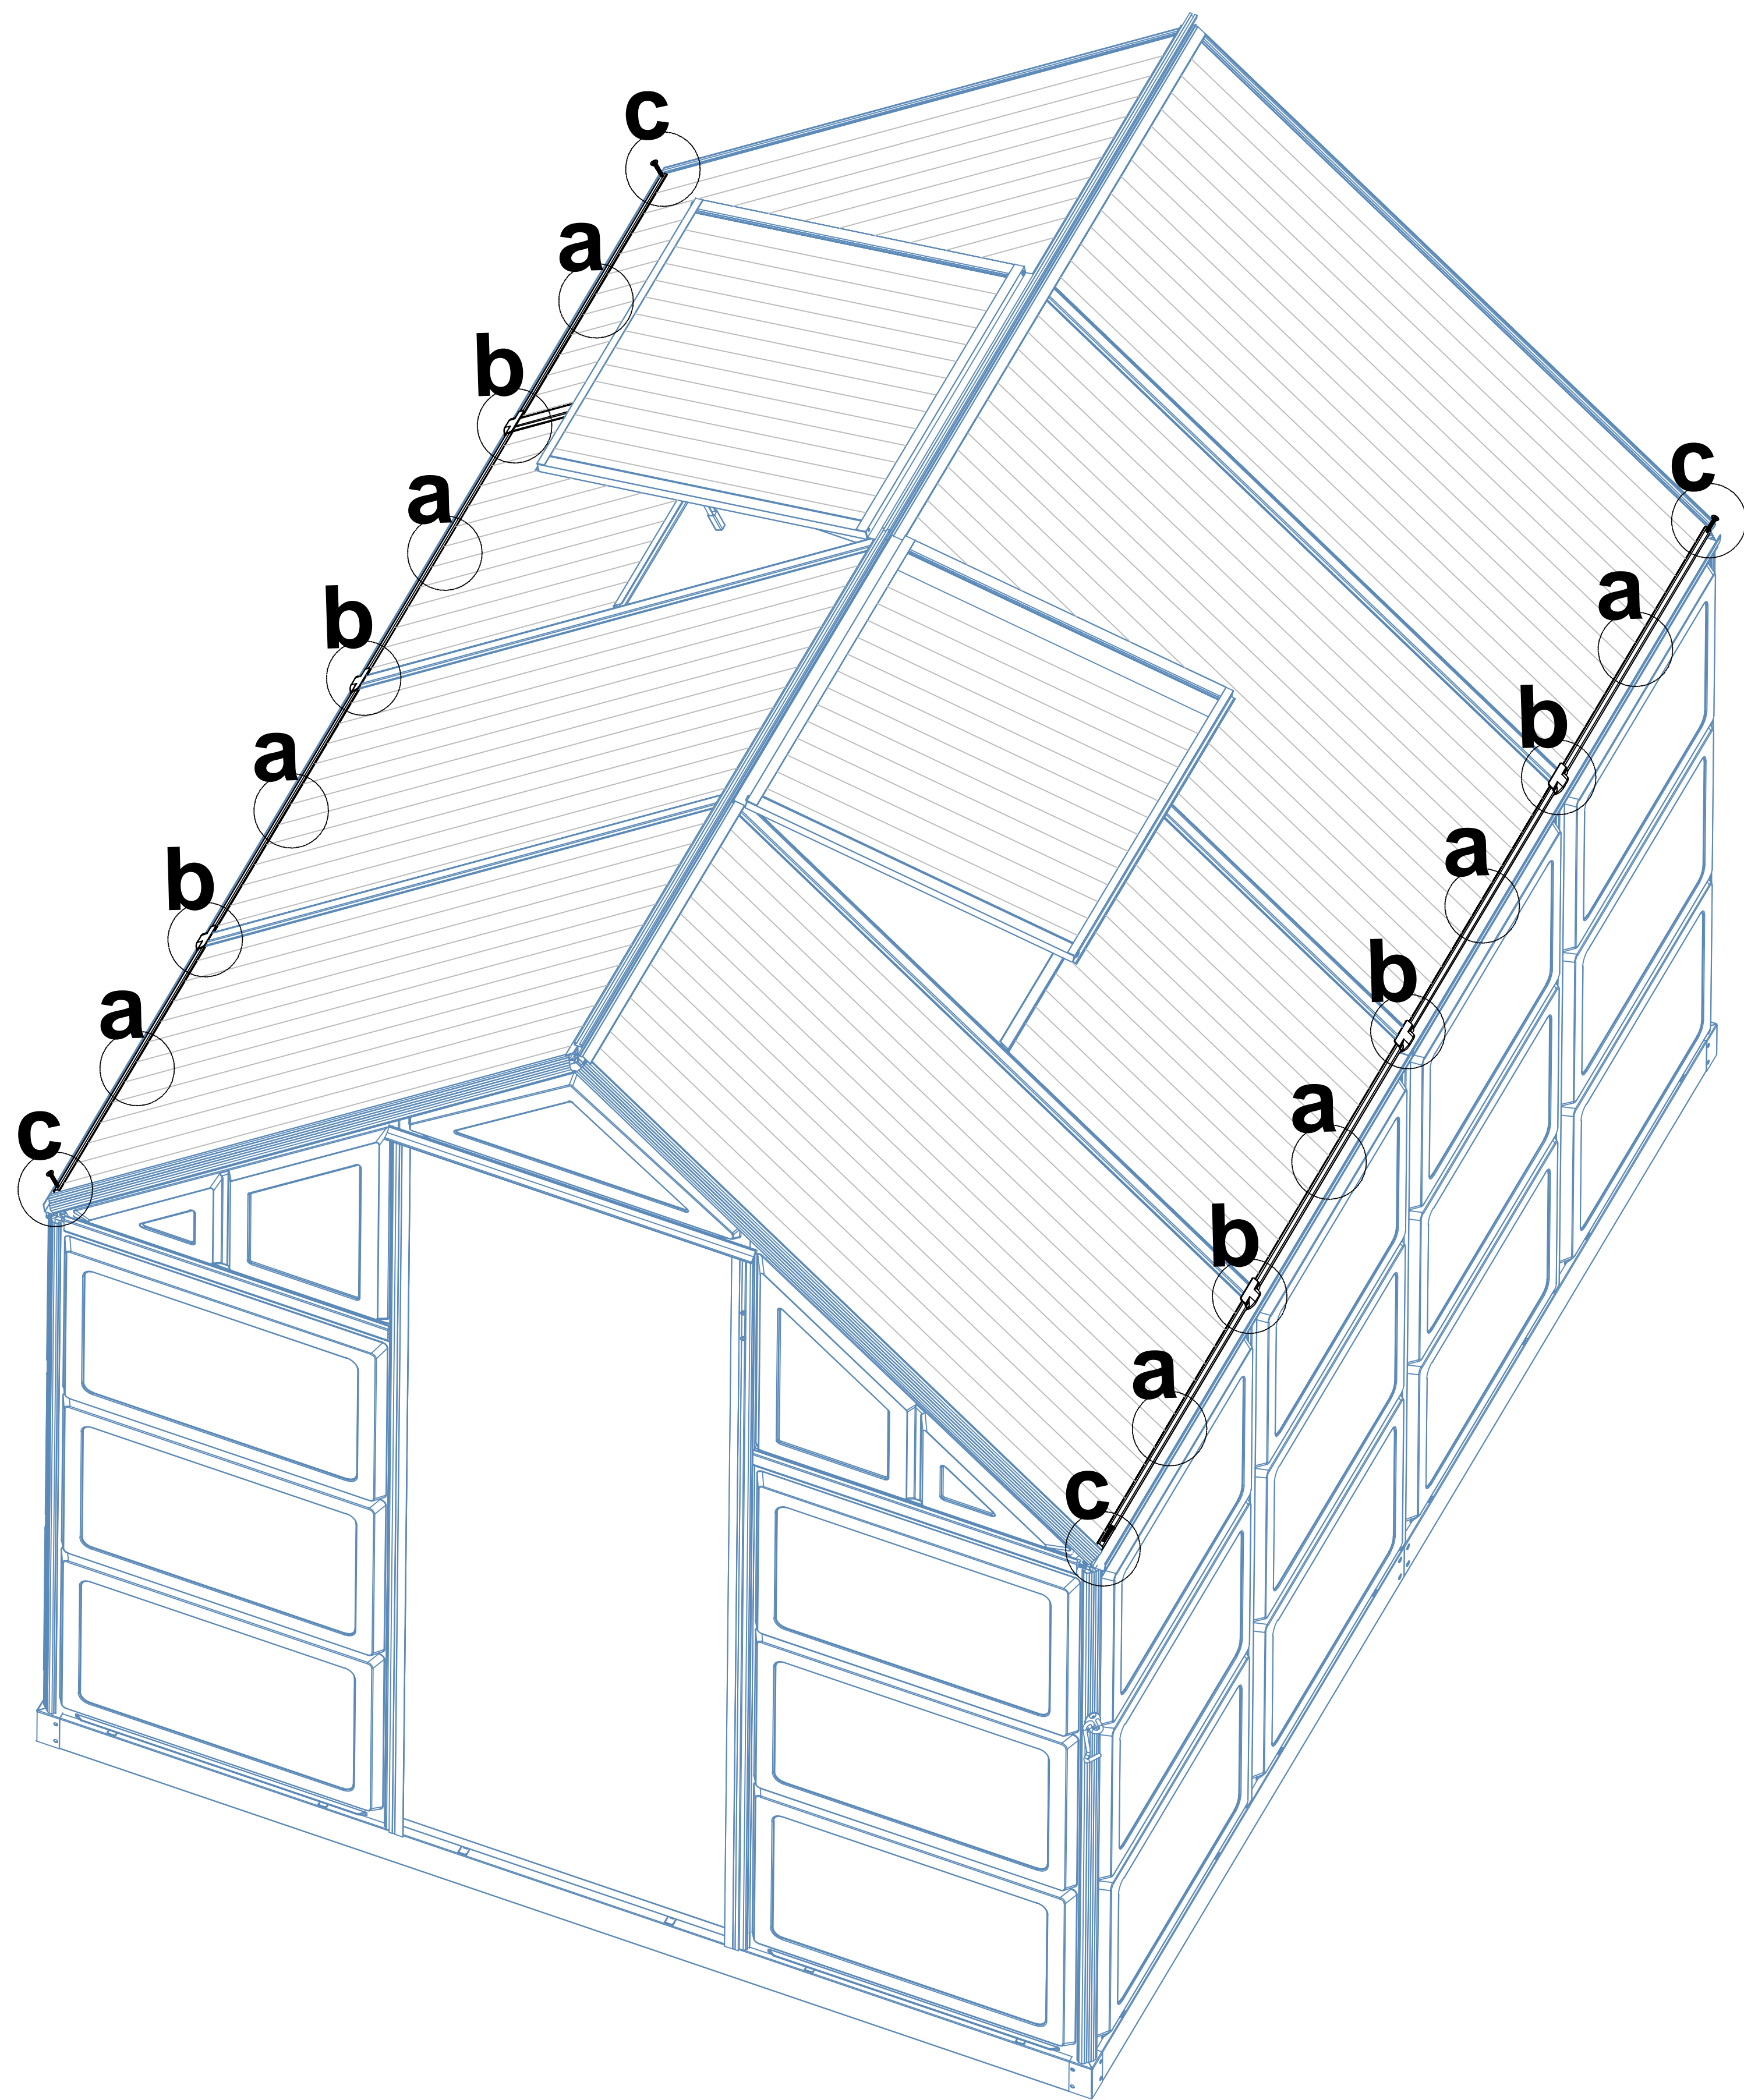




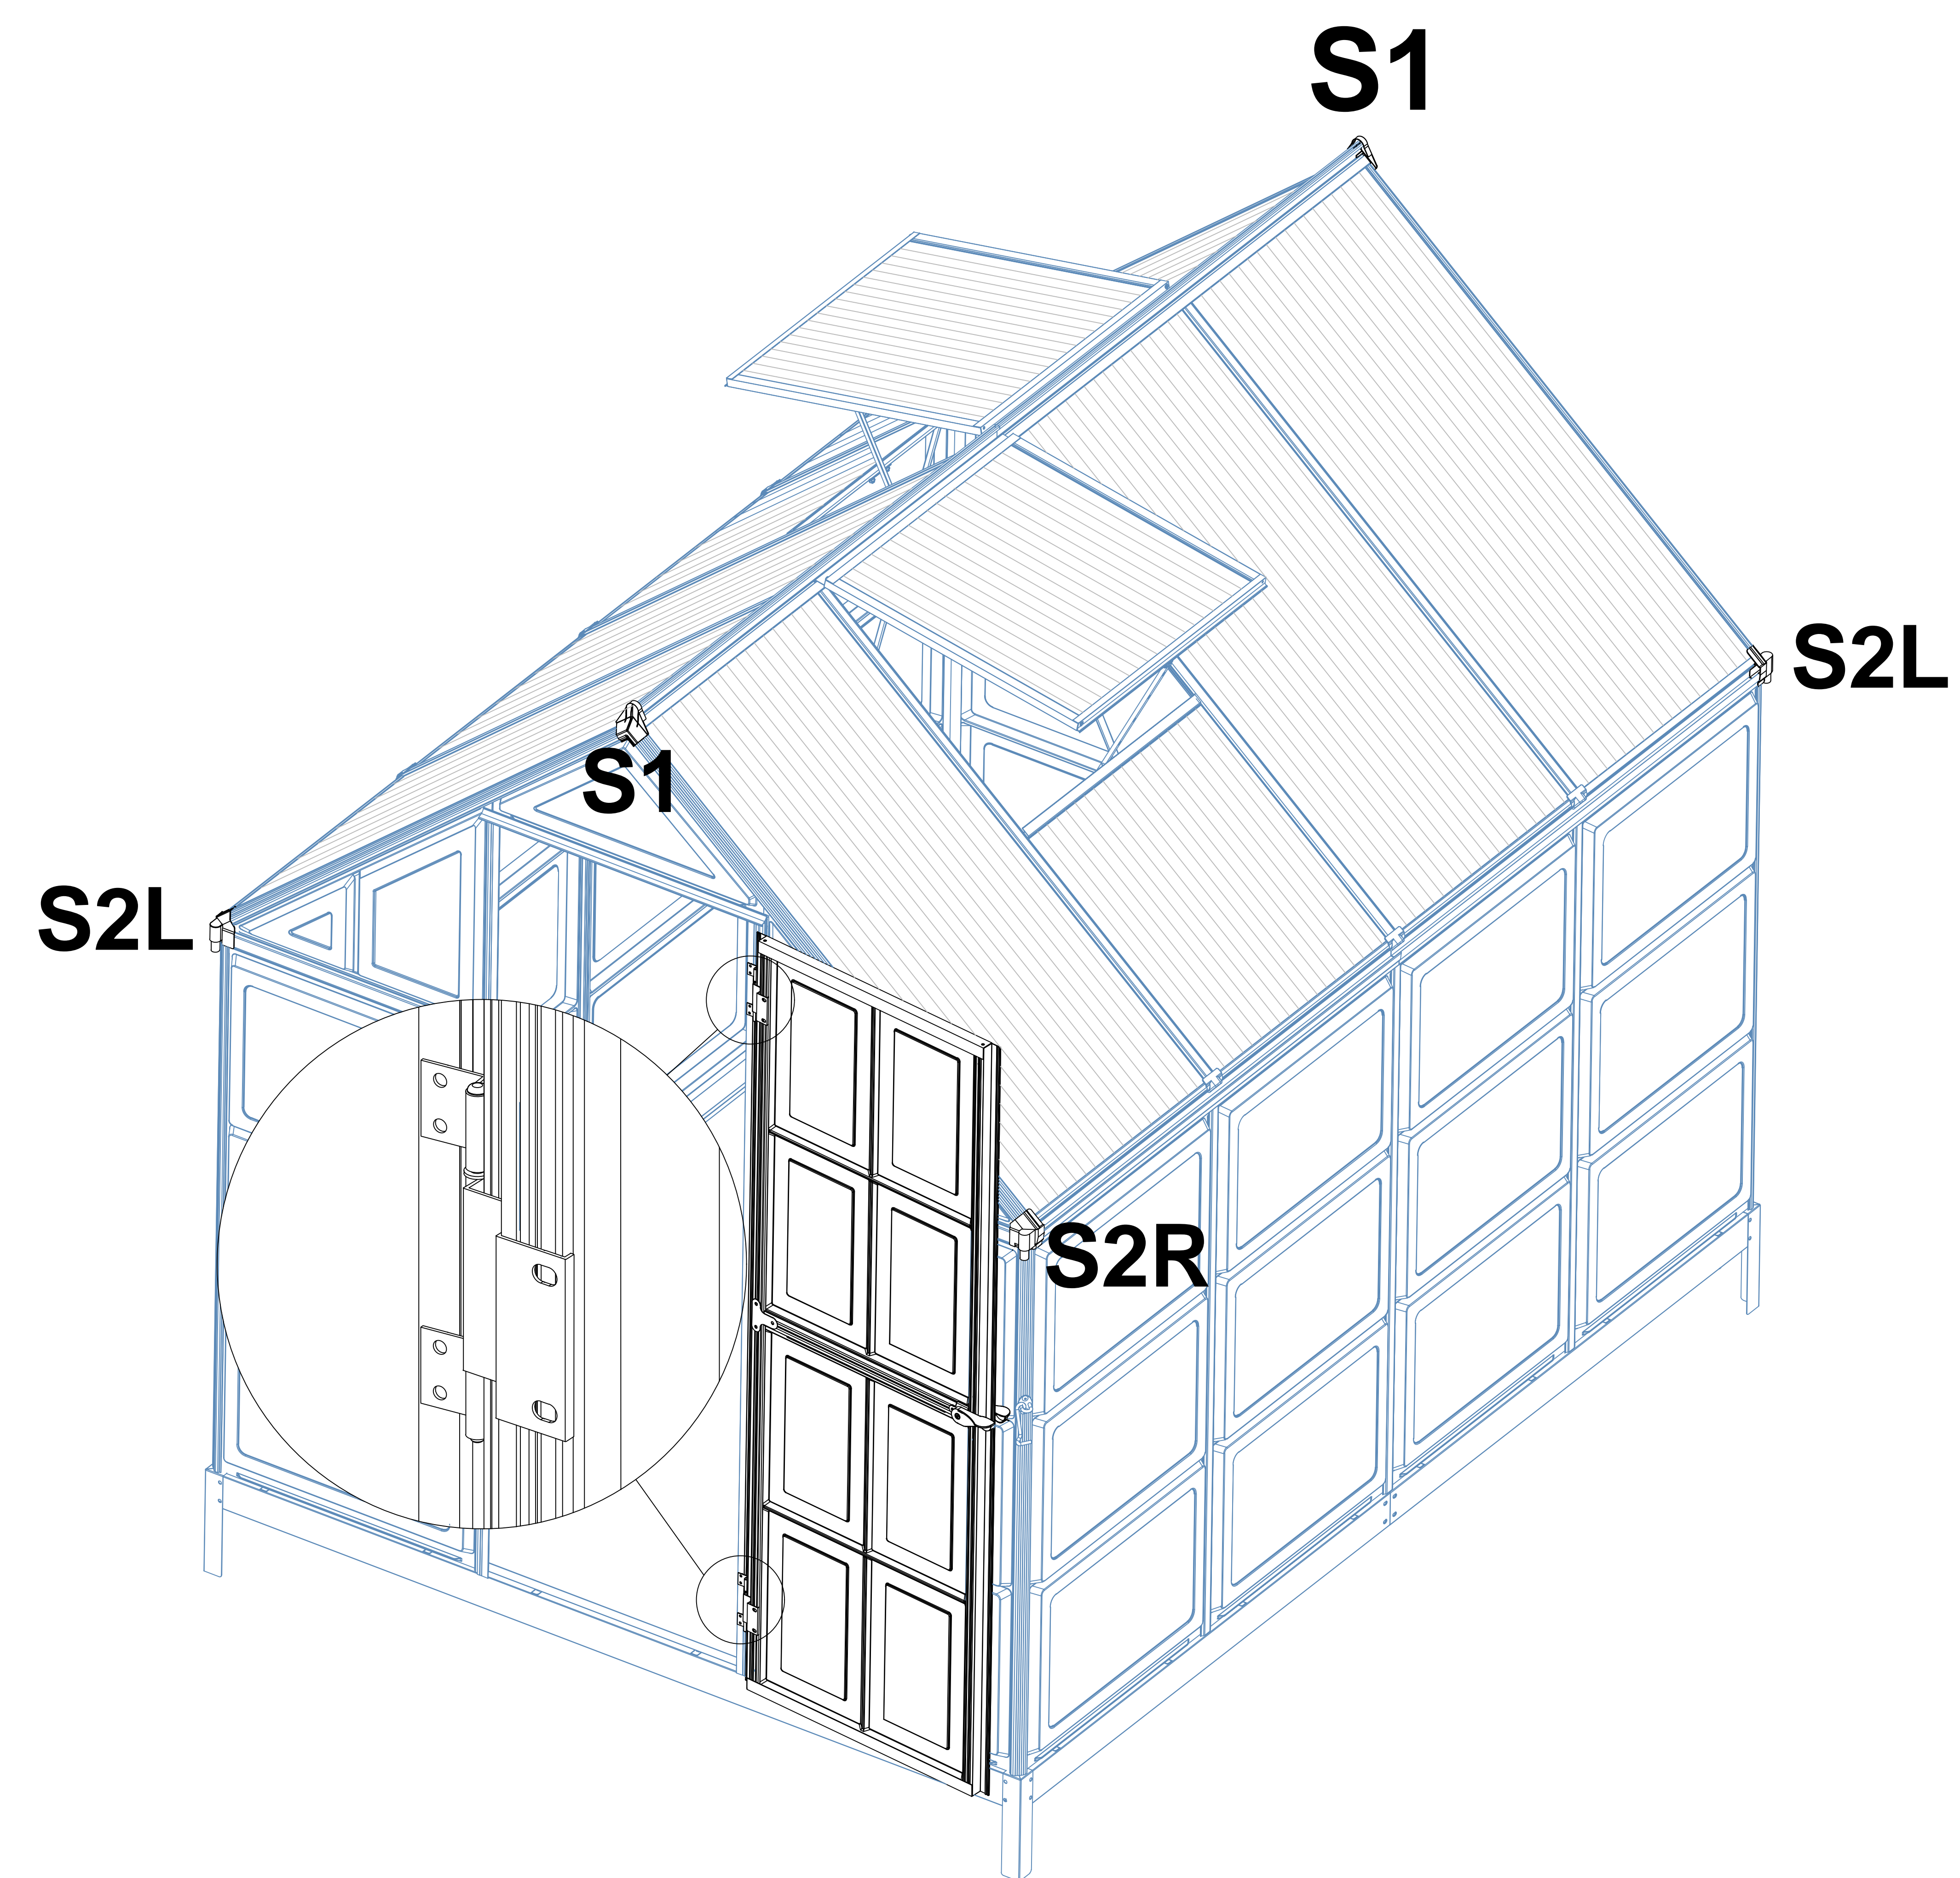

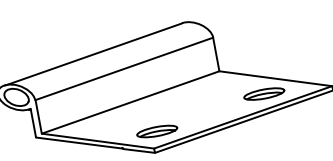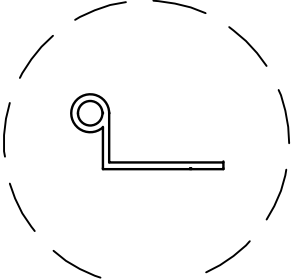
			MM
15		4 PCS	 25
S1		2 PCS	
S2L		2PCS	
S2R		2PCS	
F2		8 PCS	
F7		2 PCS	
F8		4 PCS	




S1

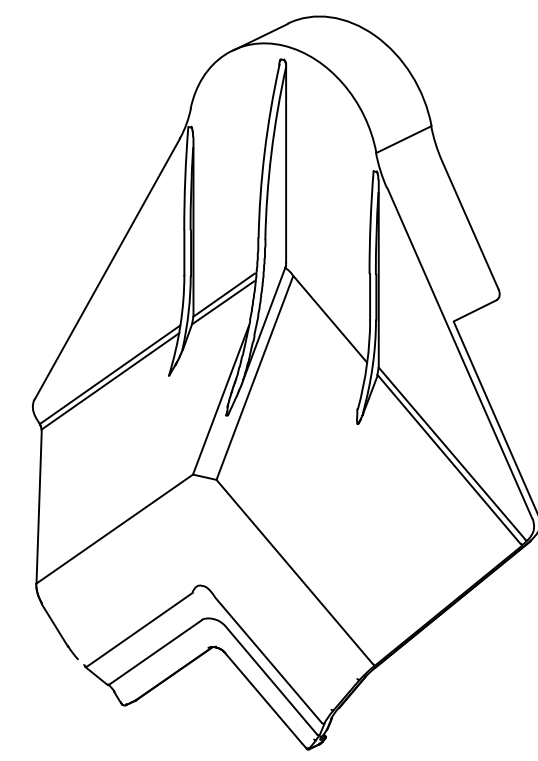


2 PCS

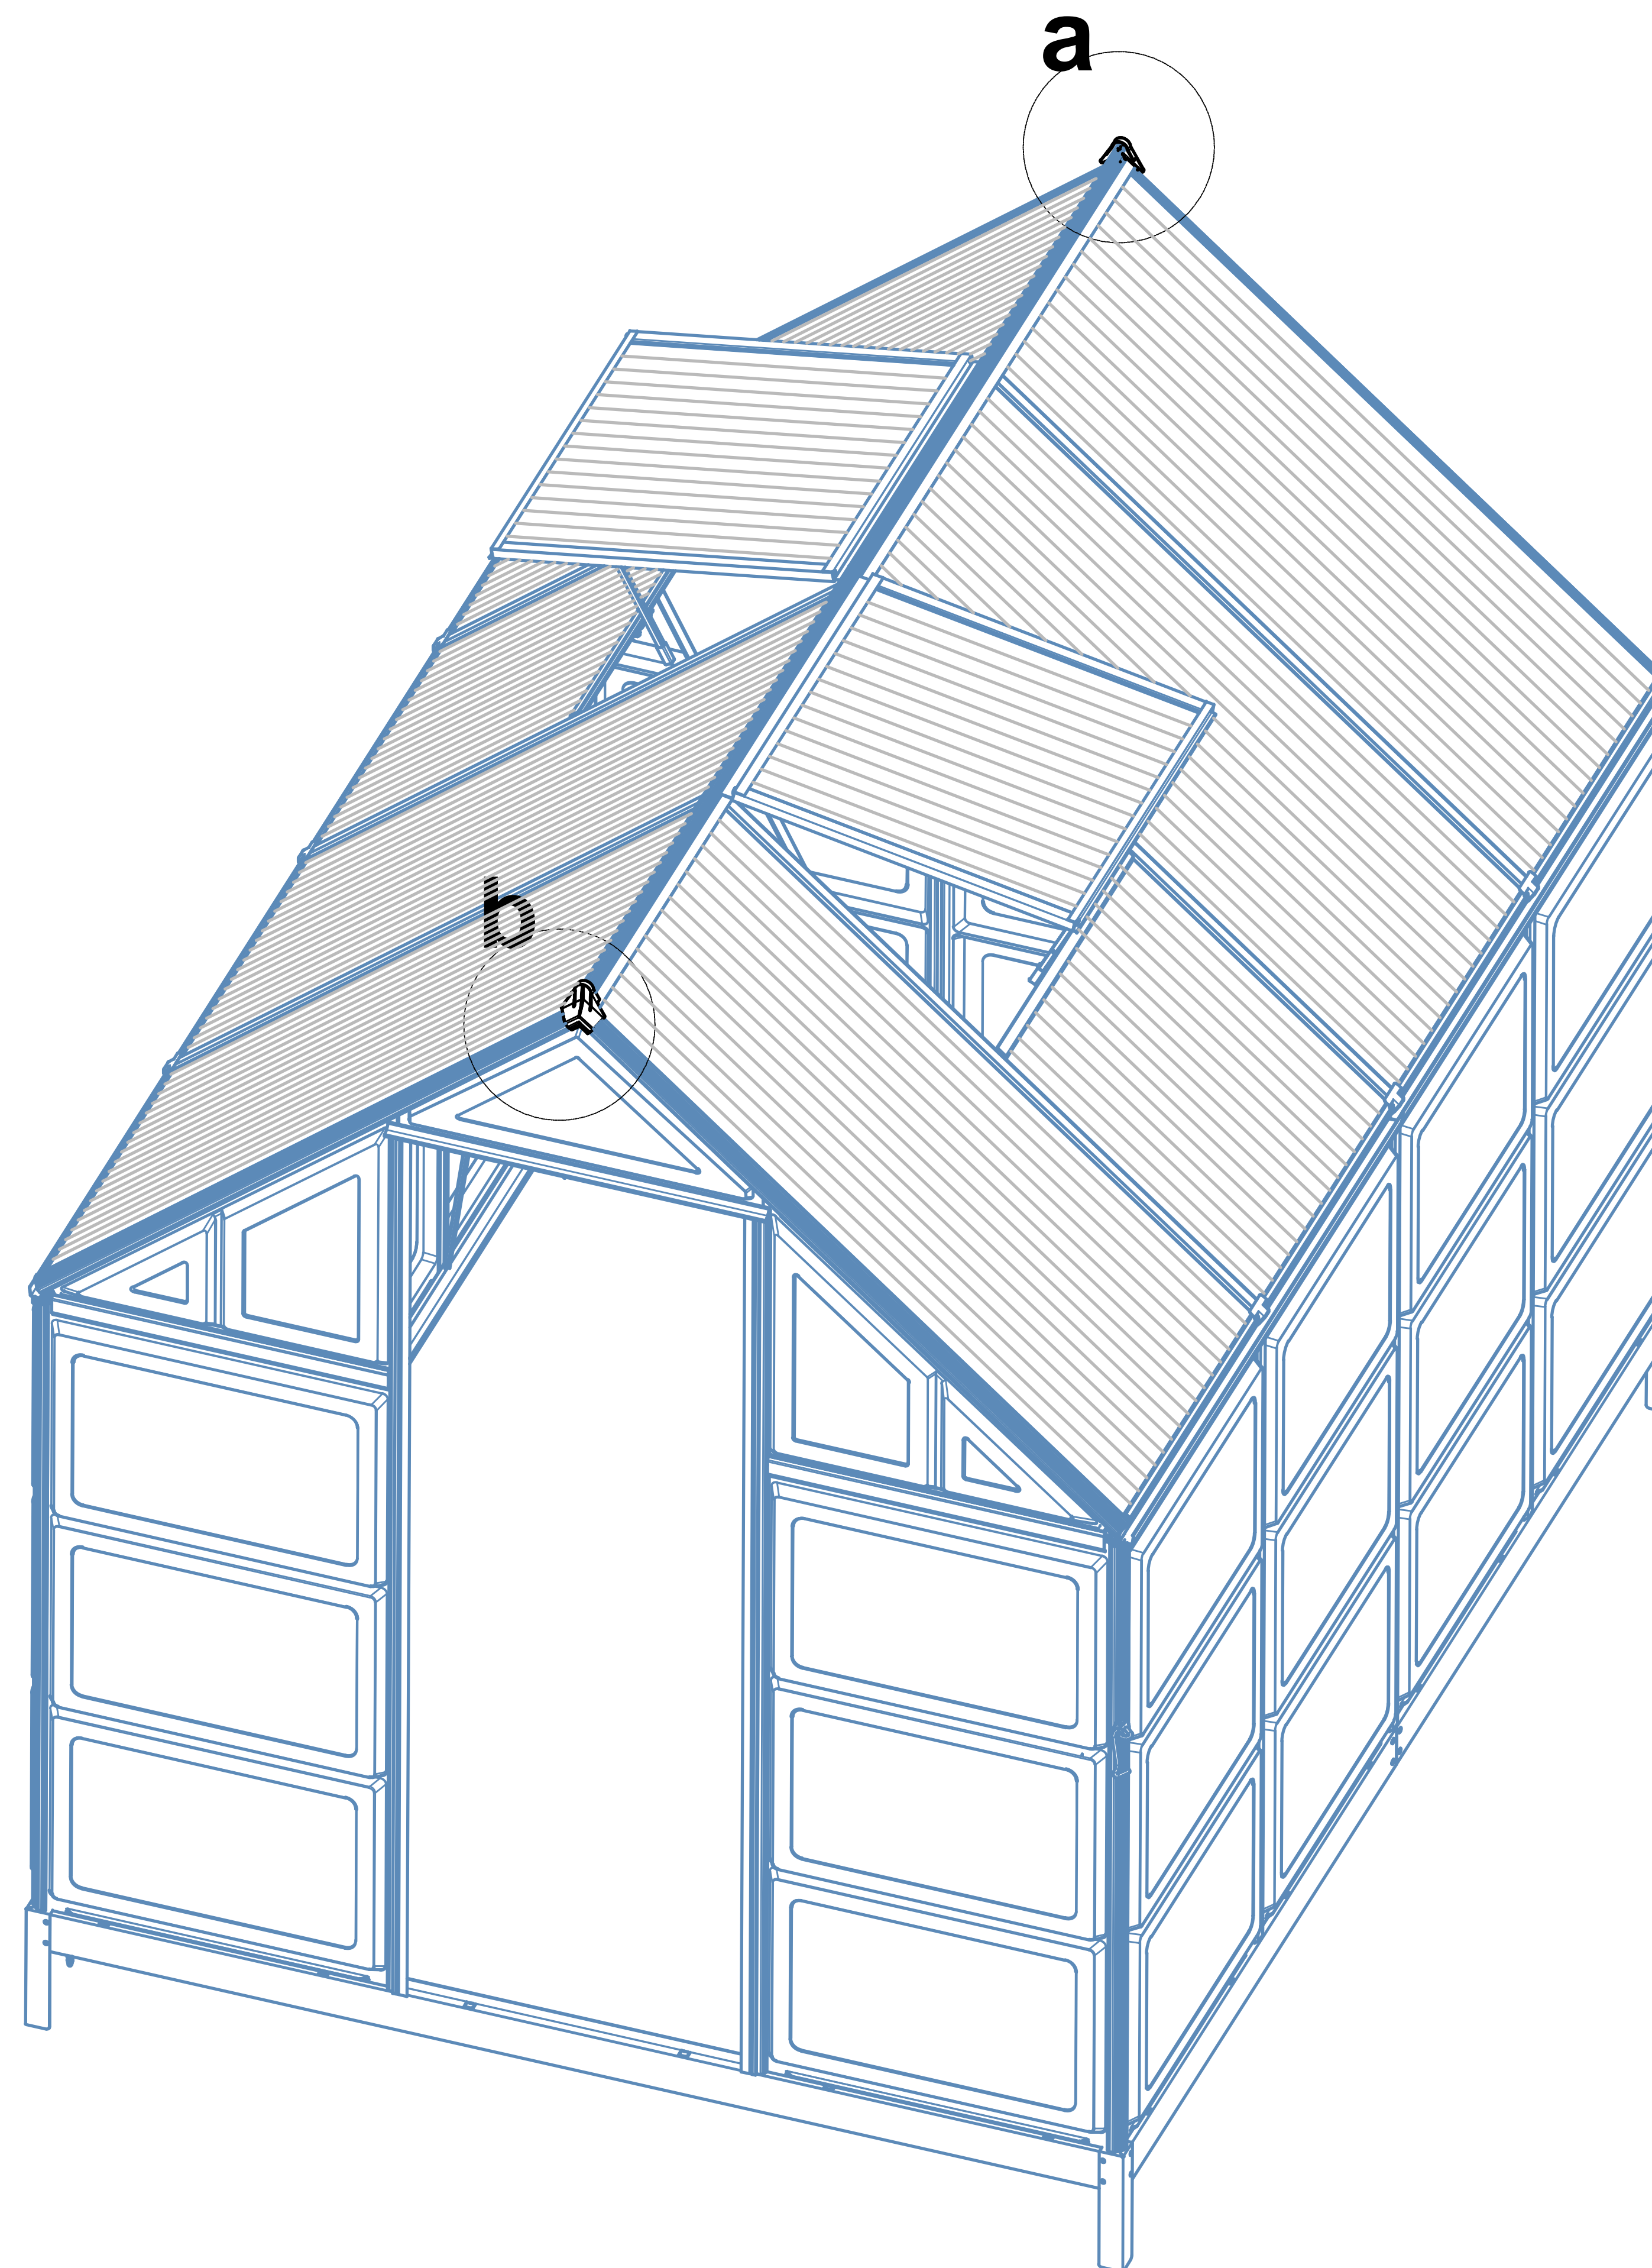

a

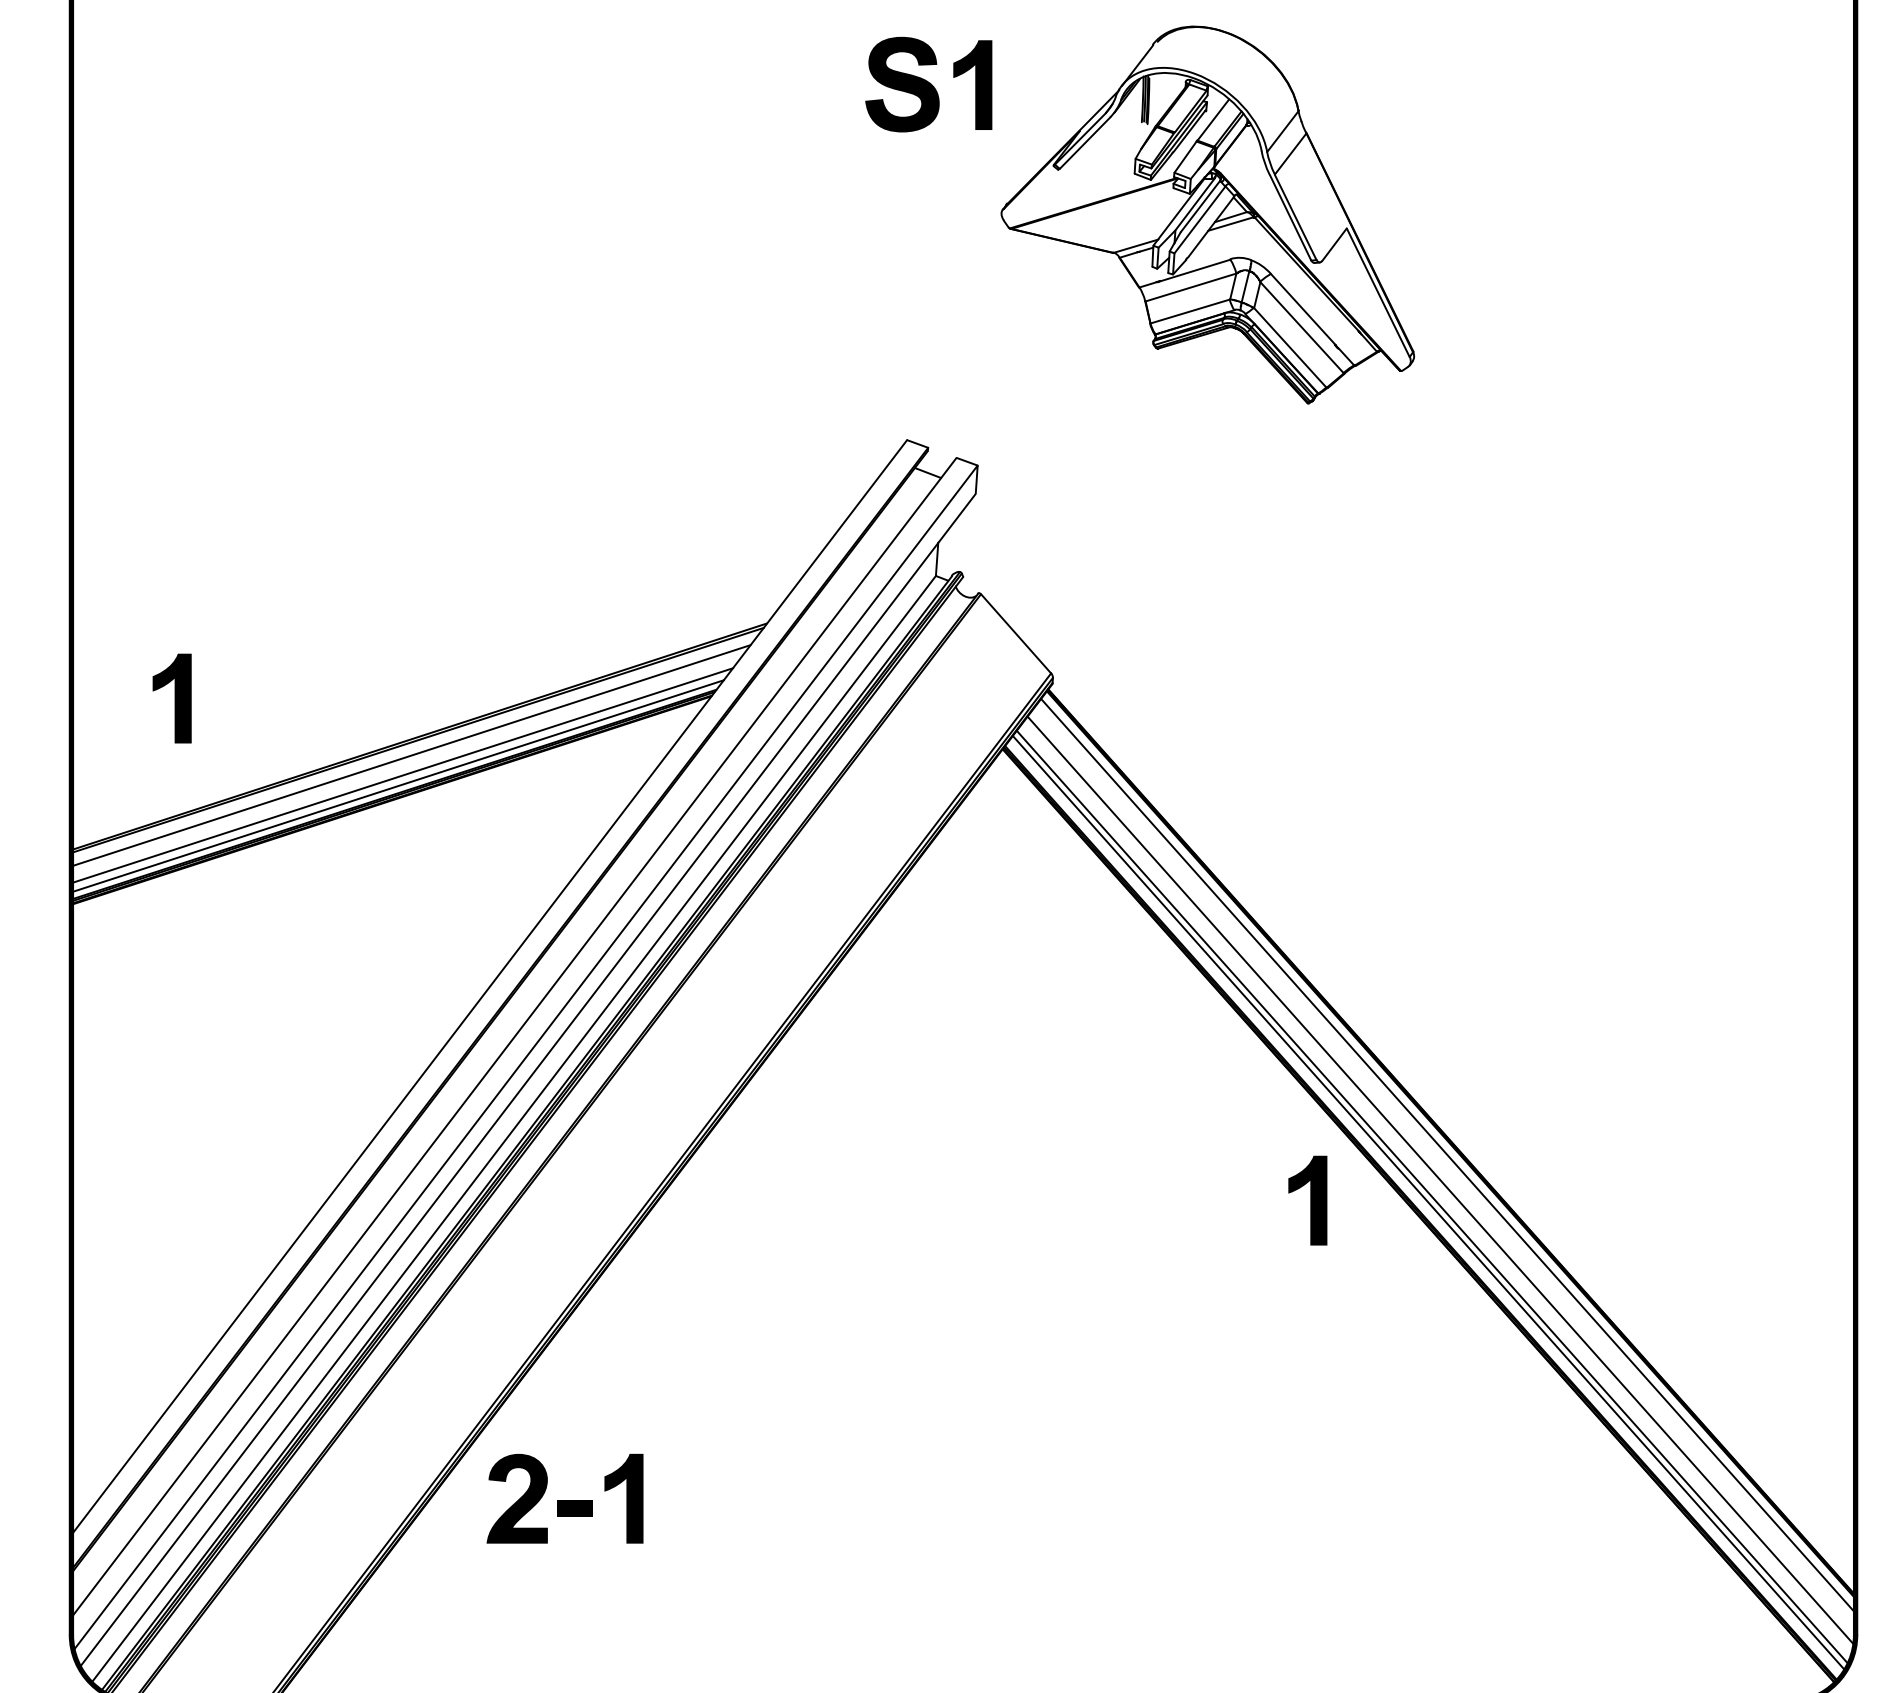


b

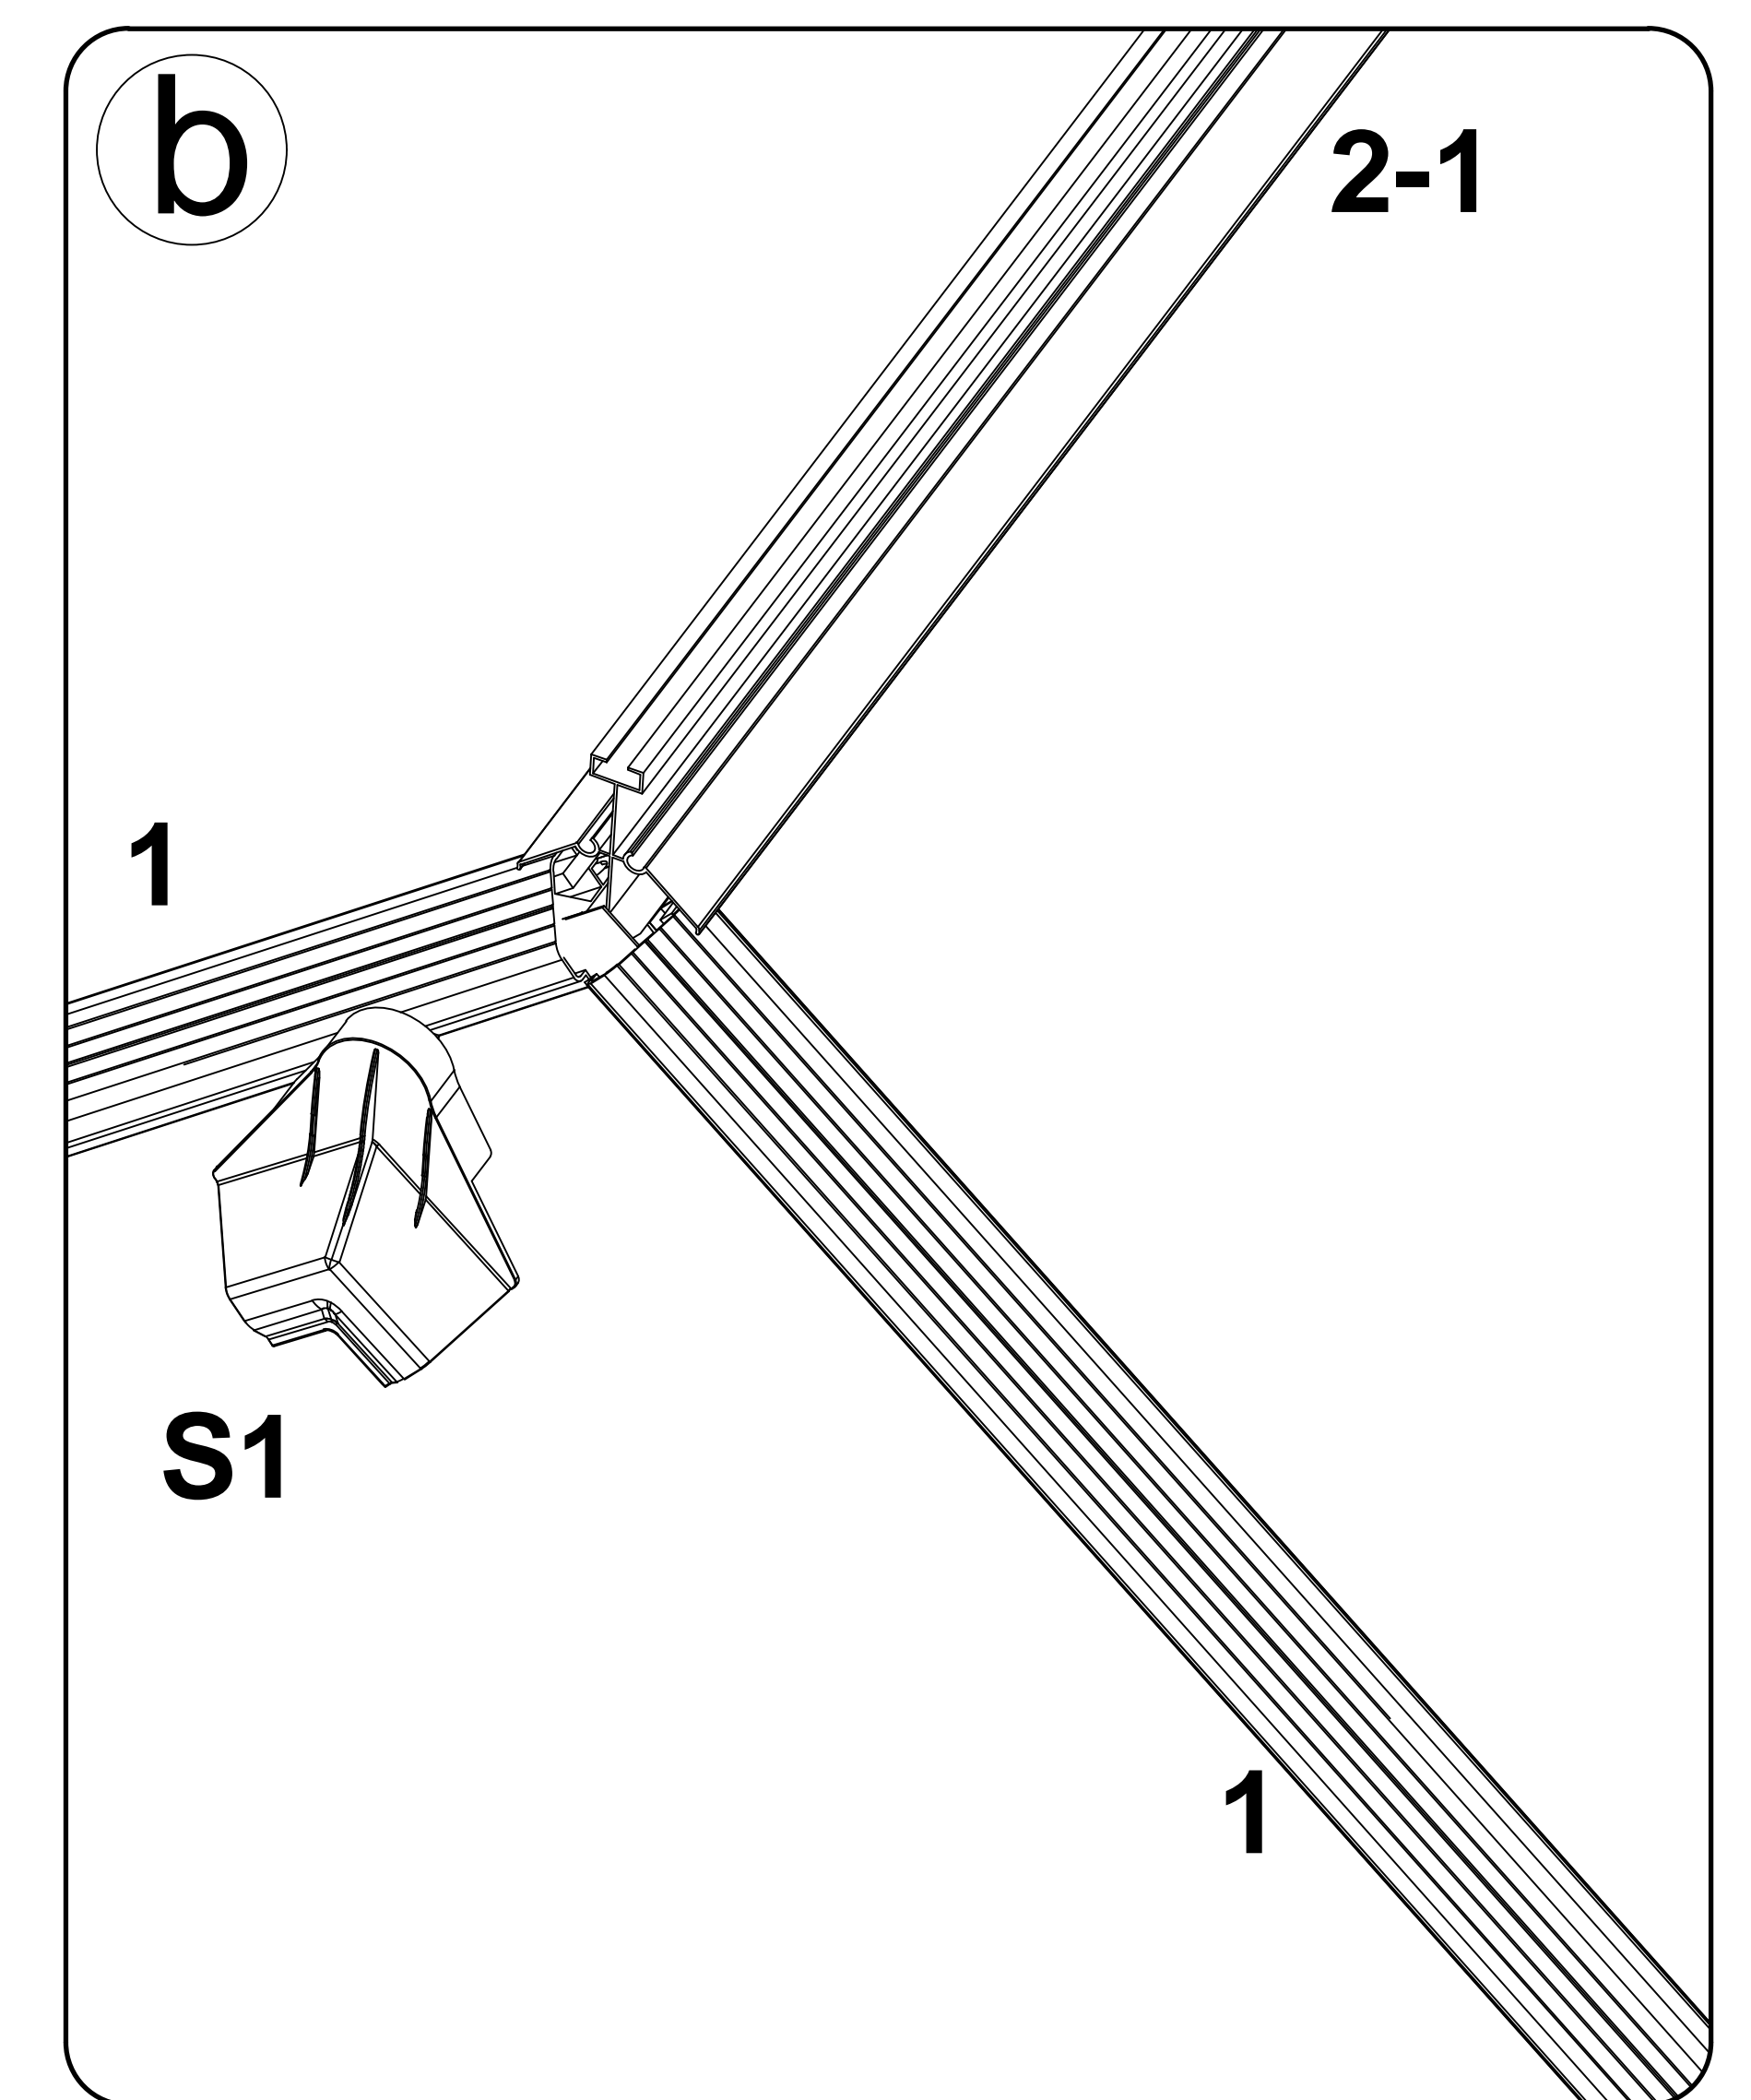




S2L



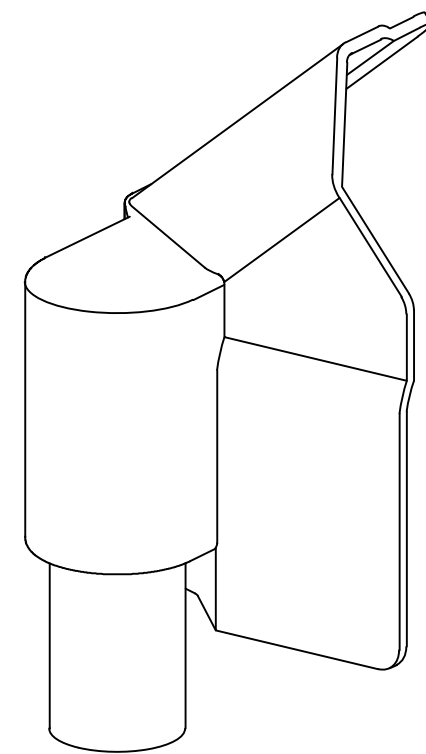


2 PCS

S2R

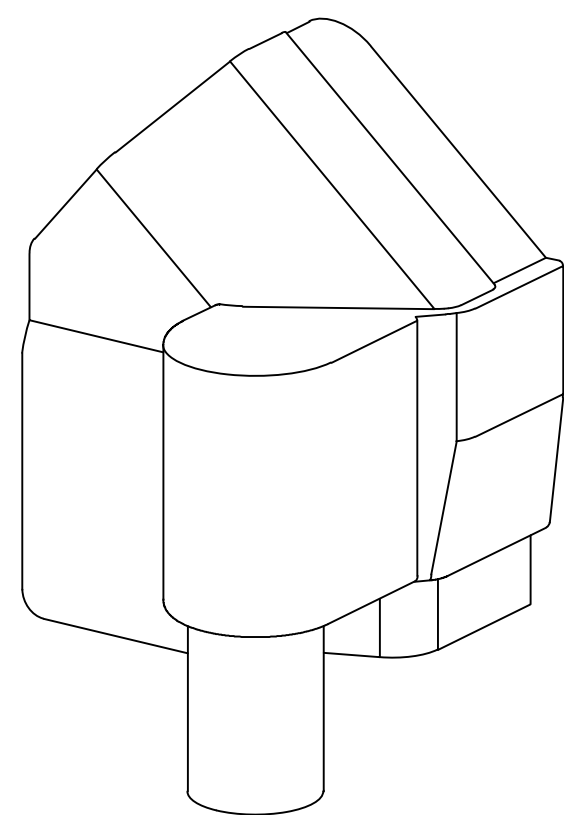


2 PCS

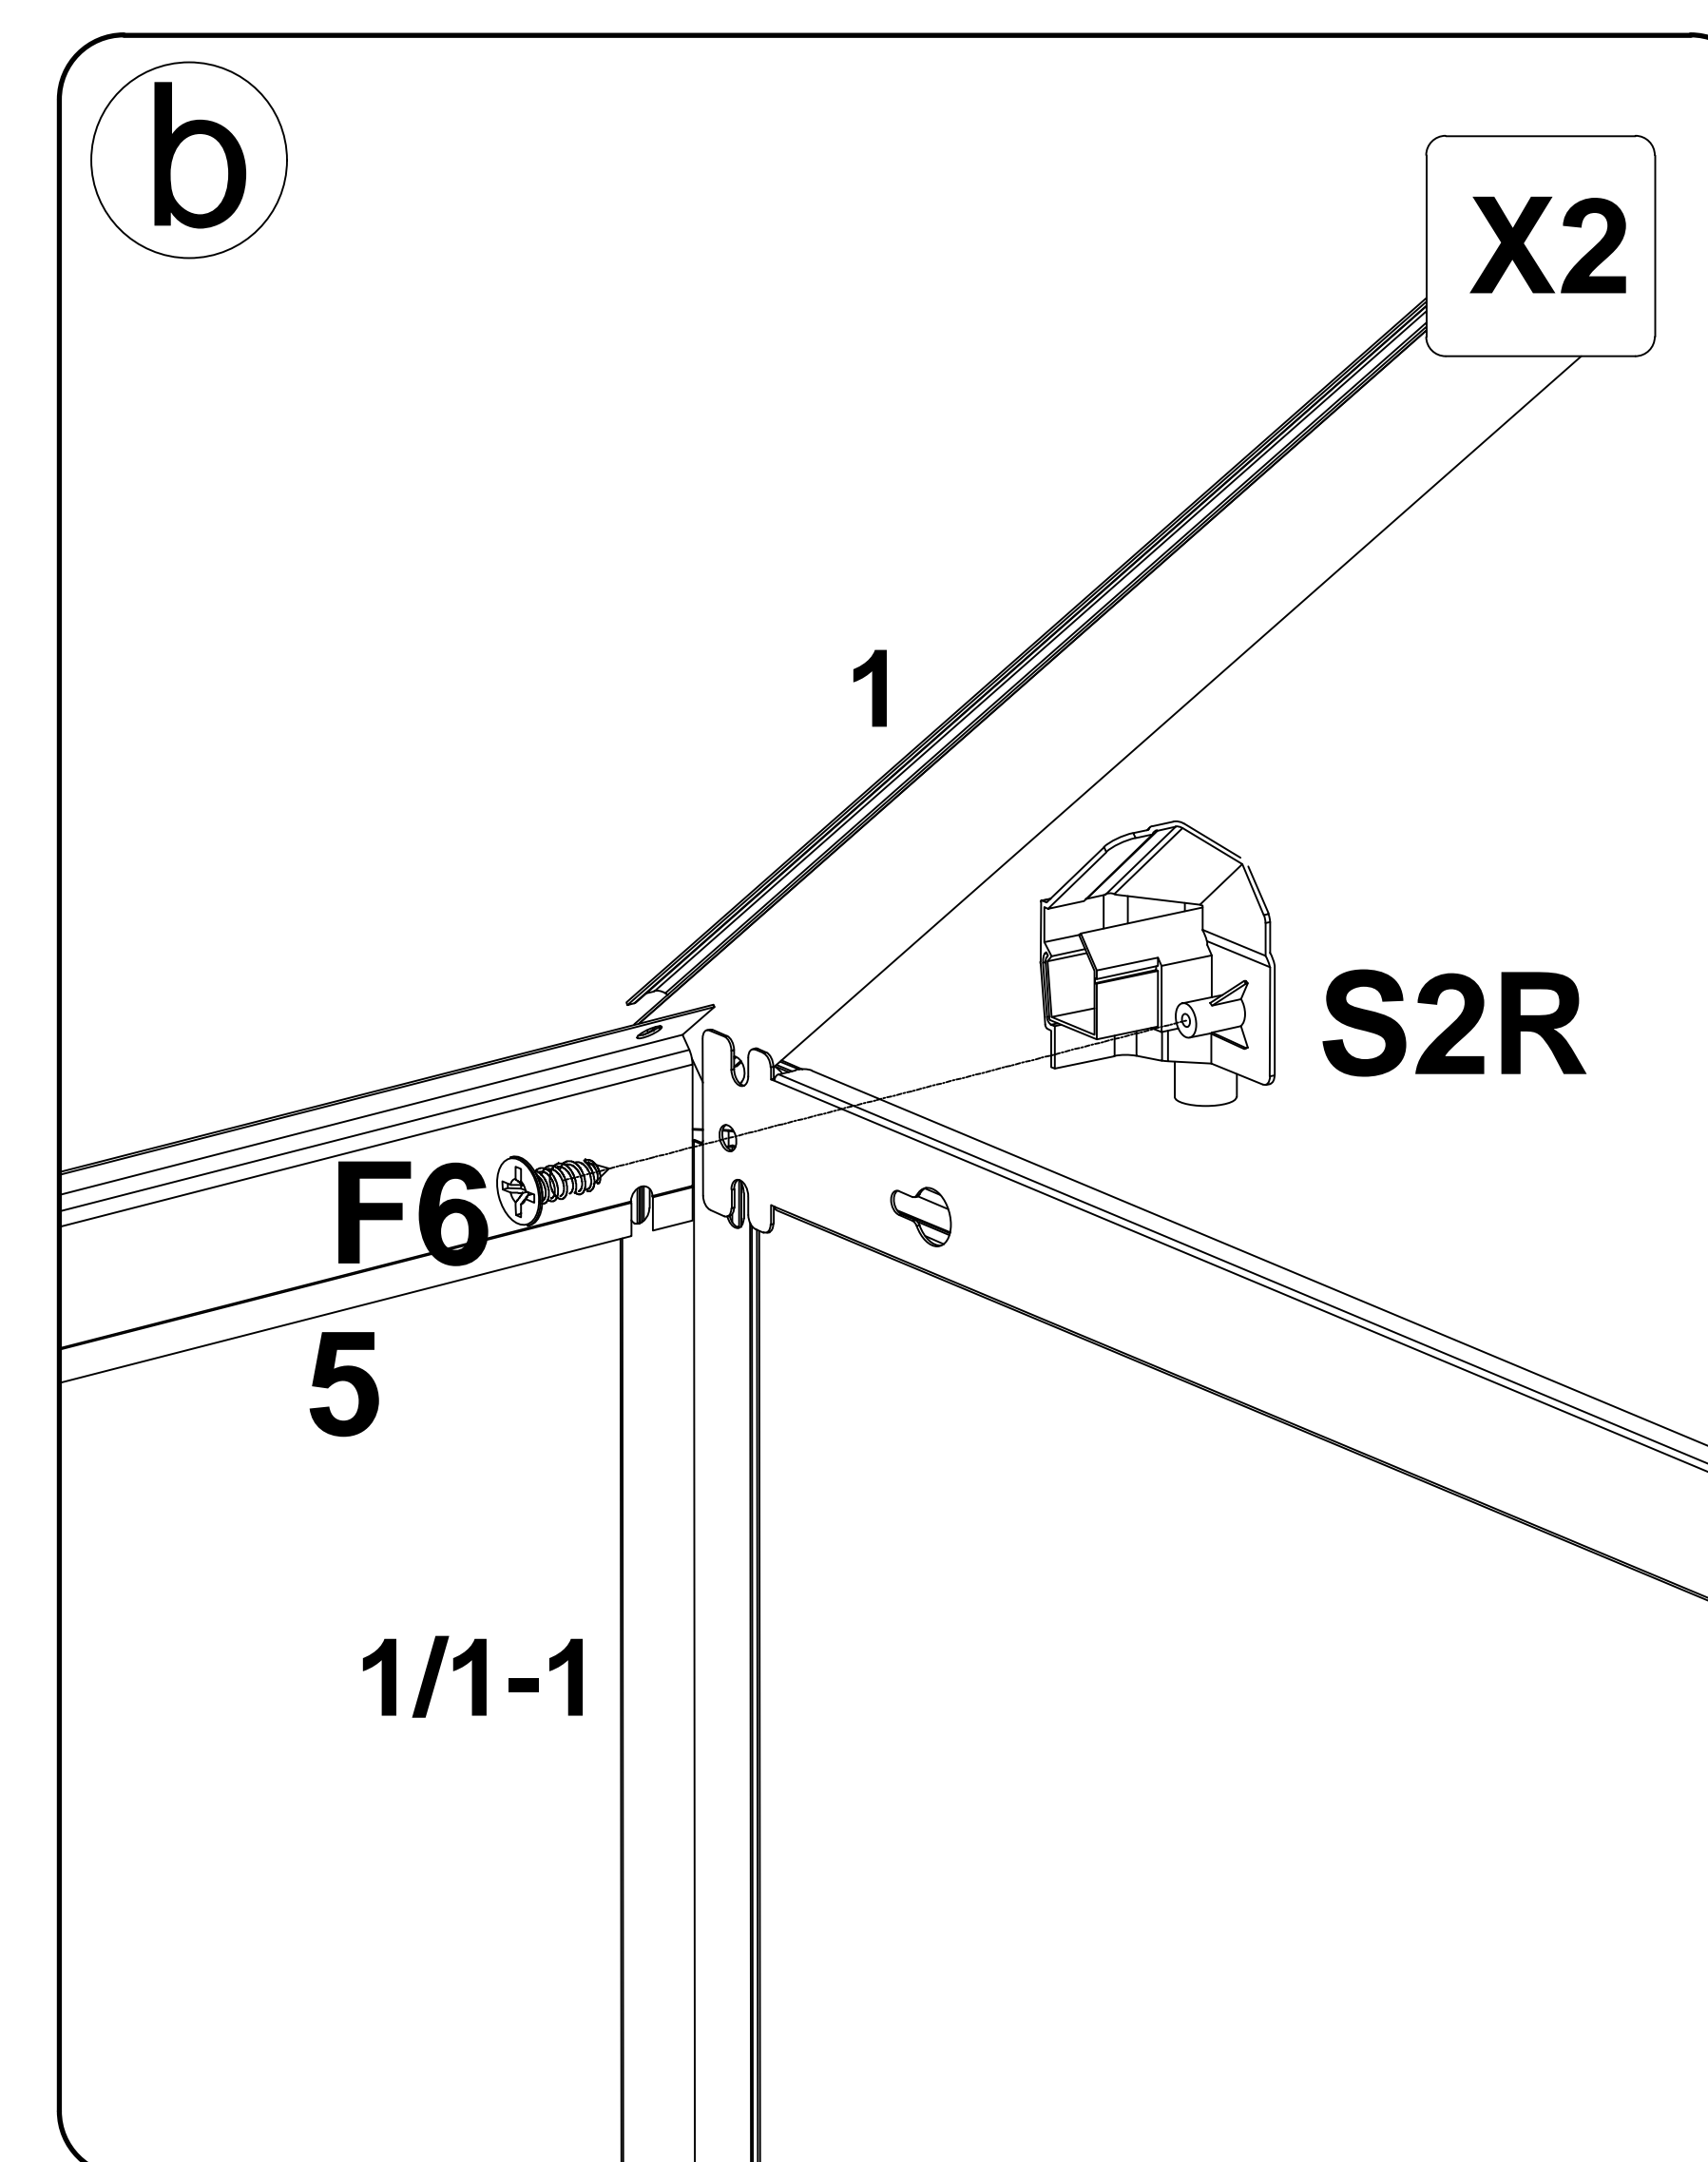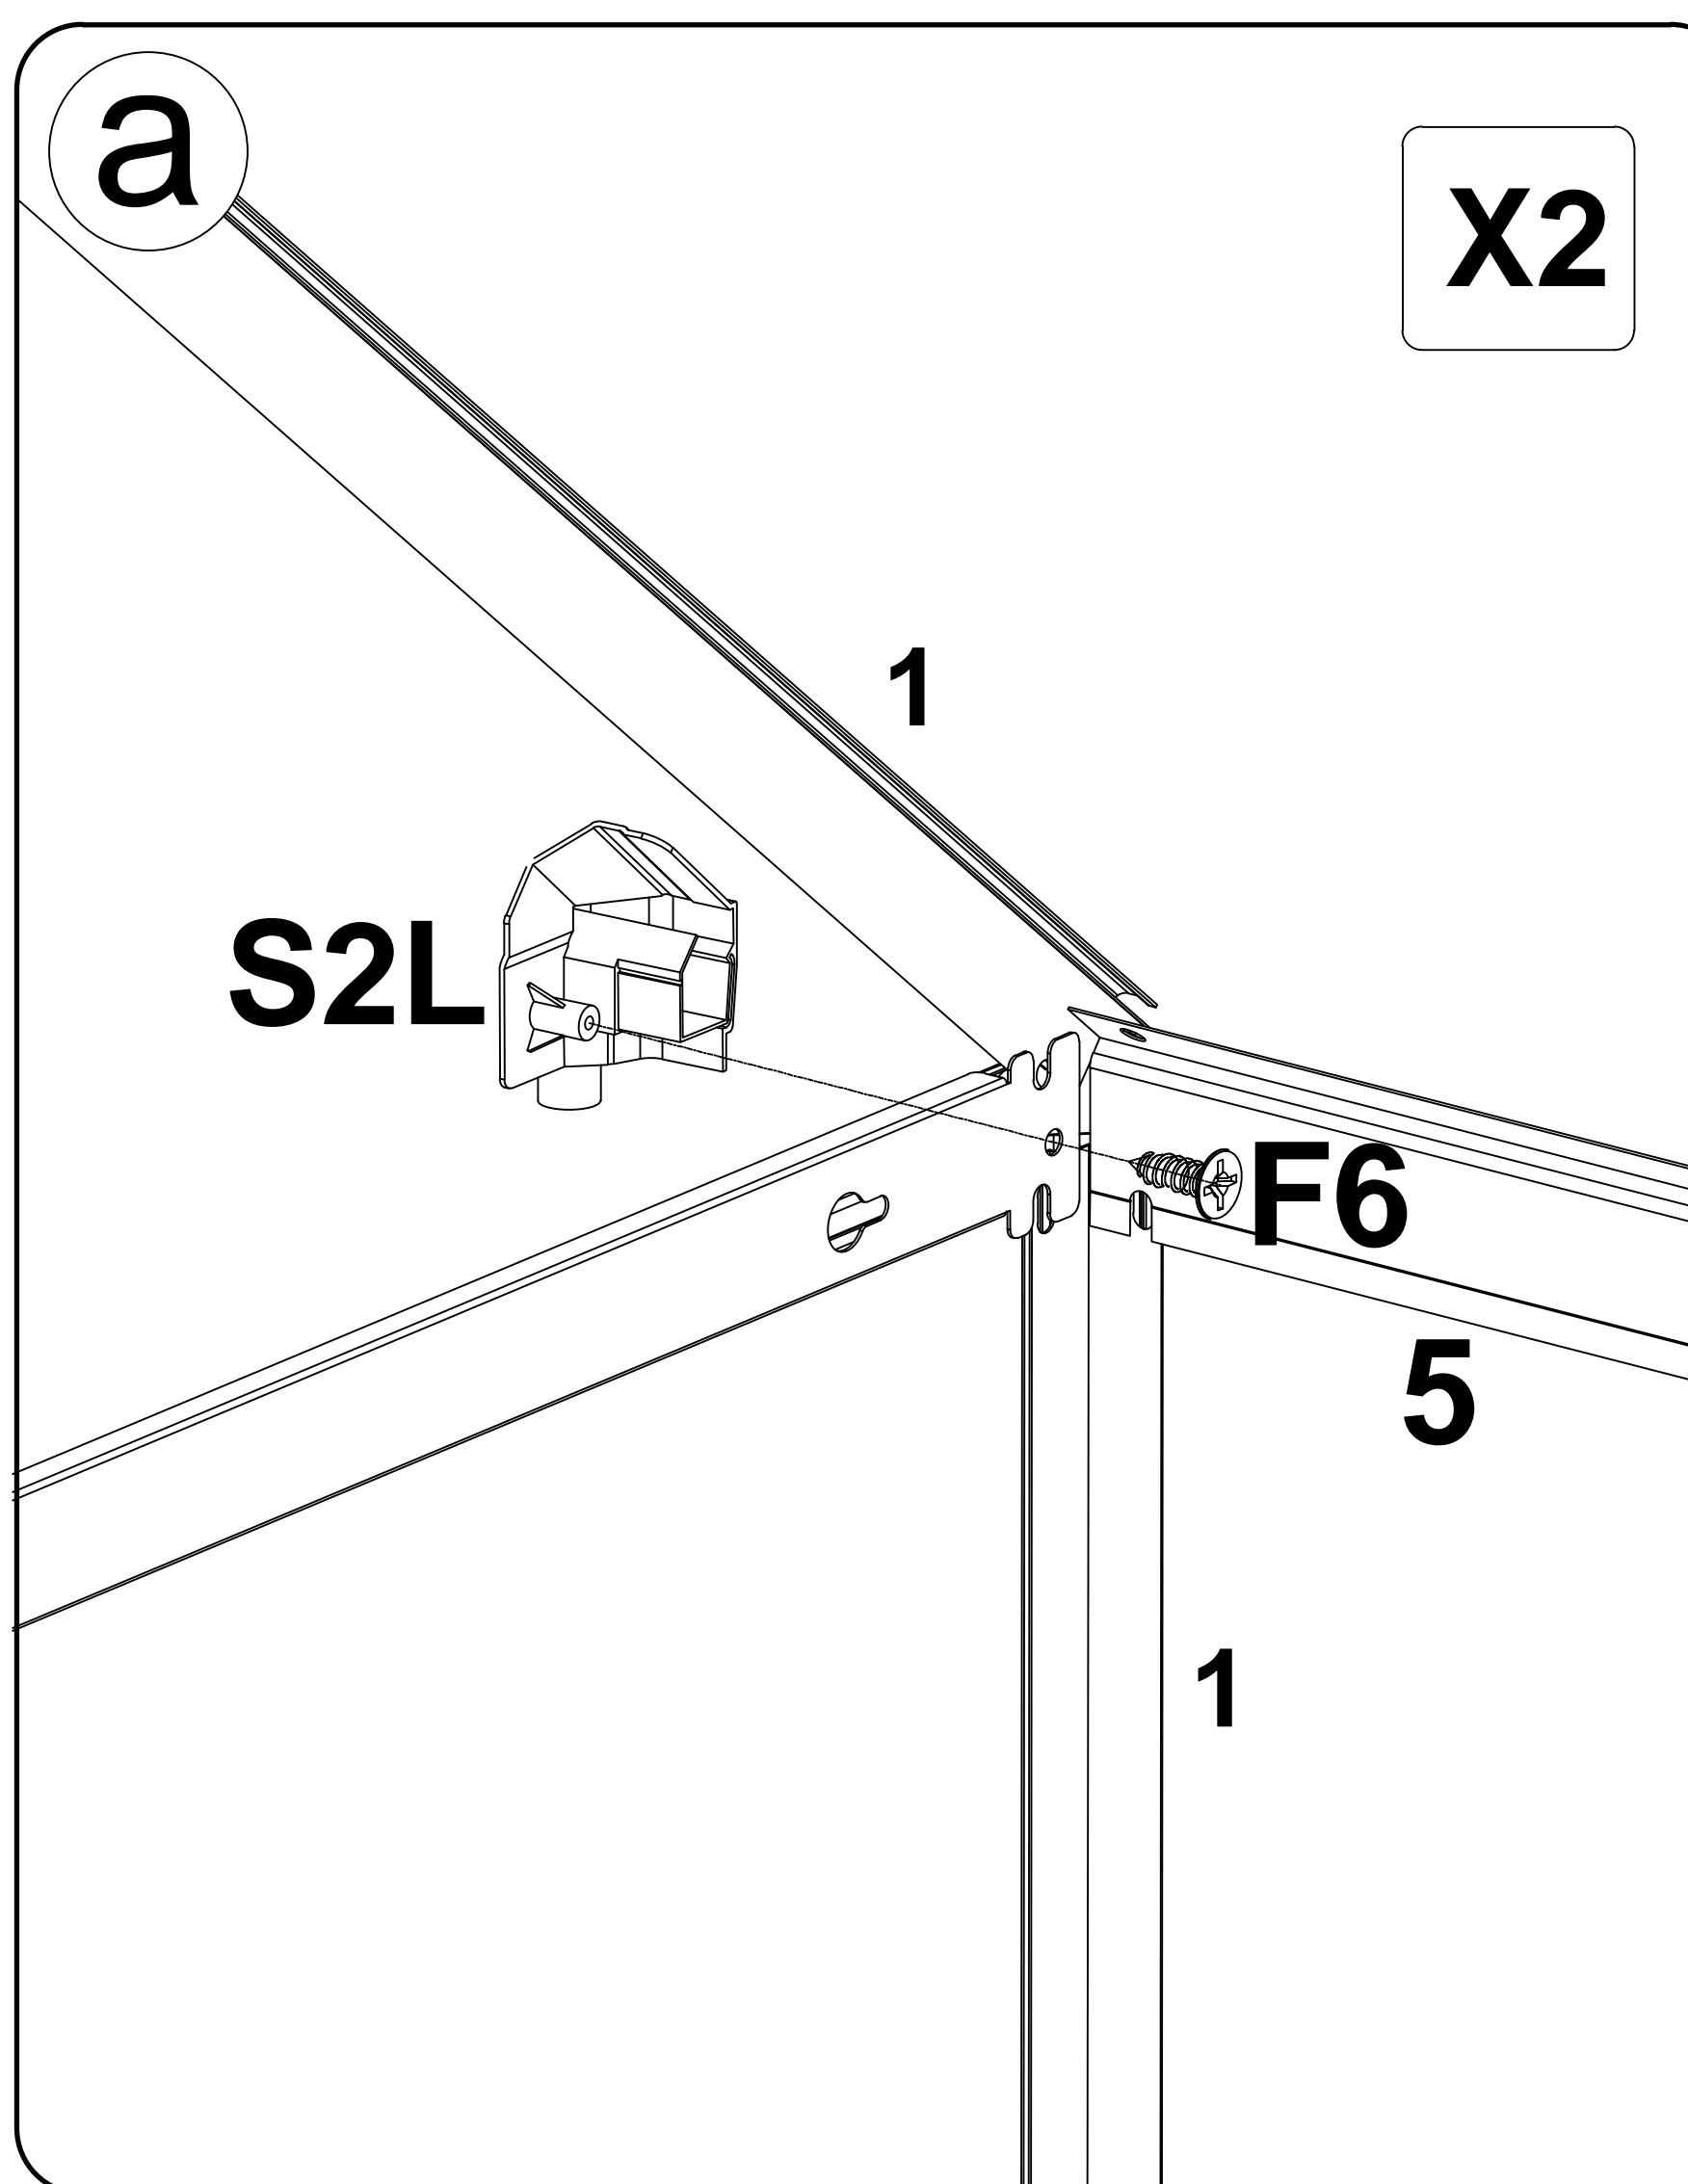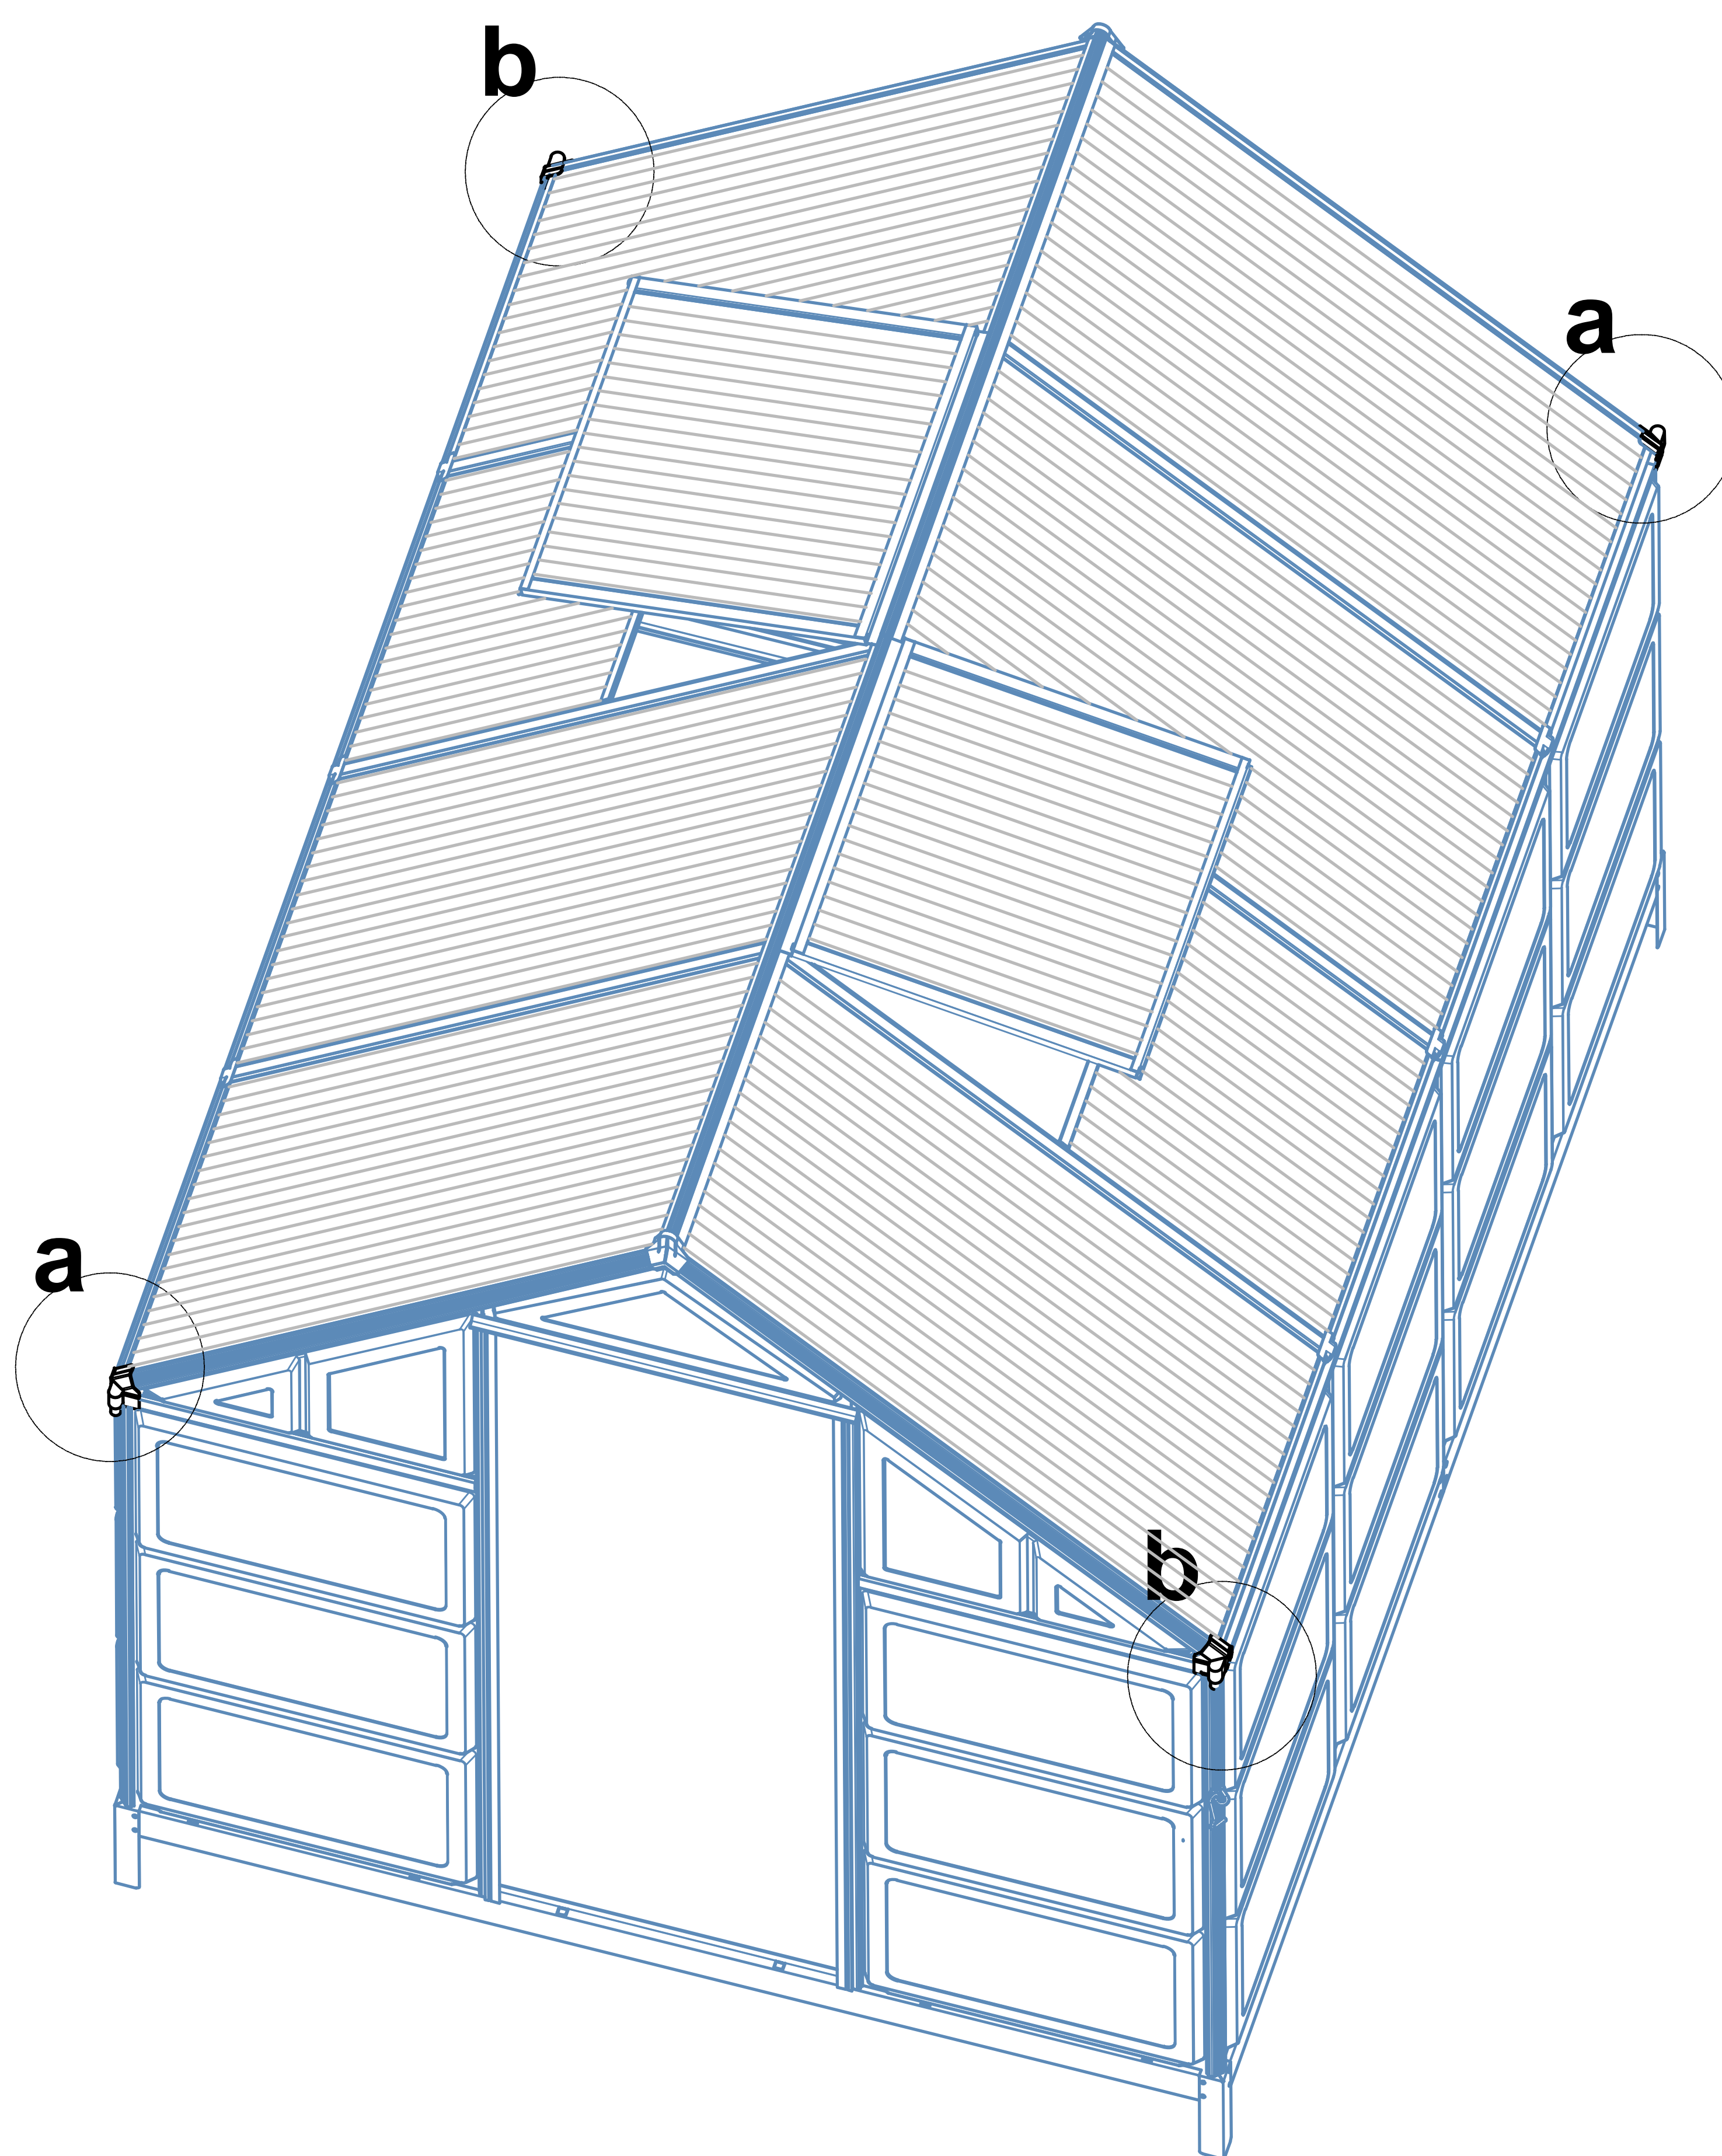




15

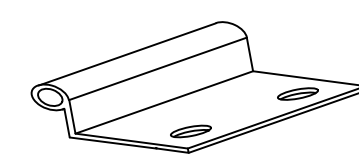


4 PCS

F2

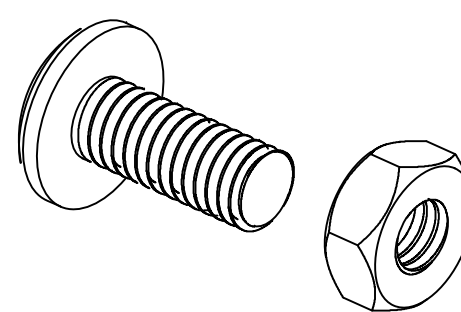


8 PCS

F7


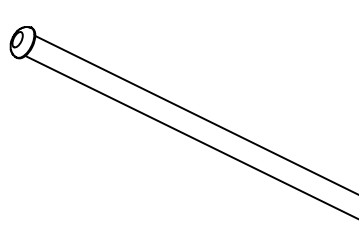


2PCS

F8

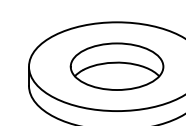

4 PCS

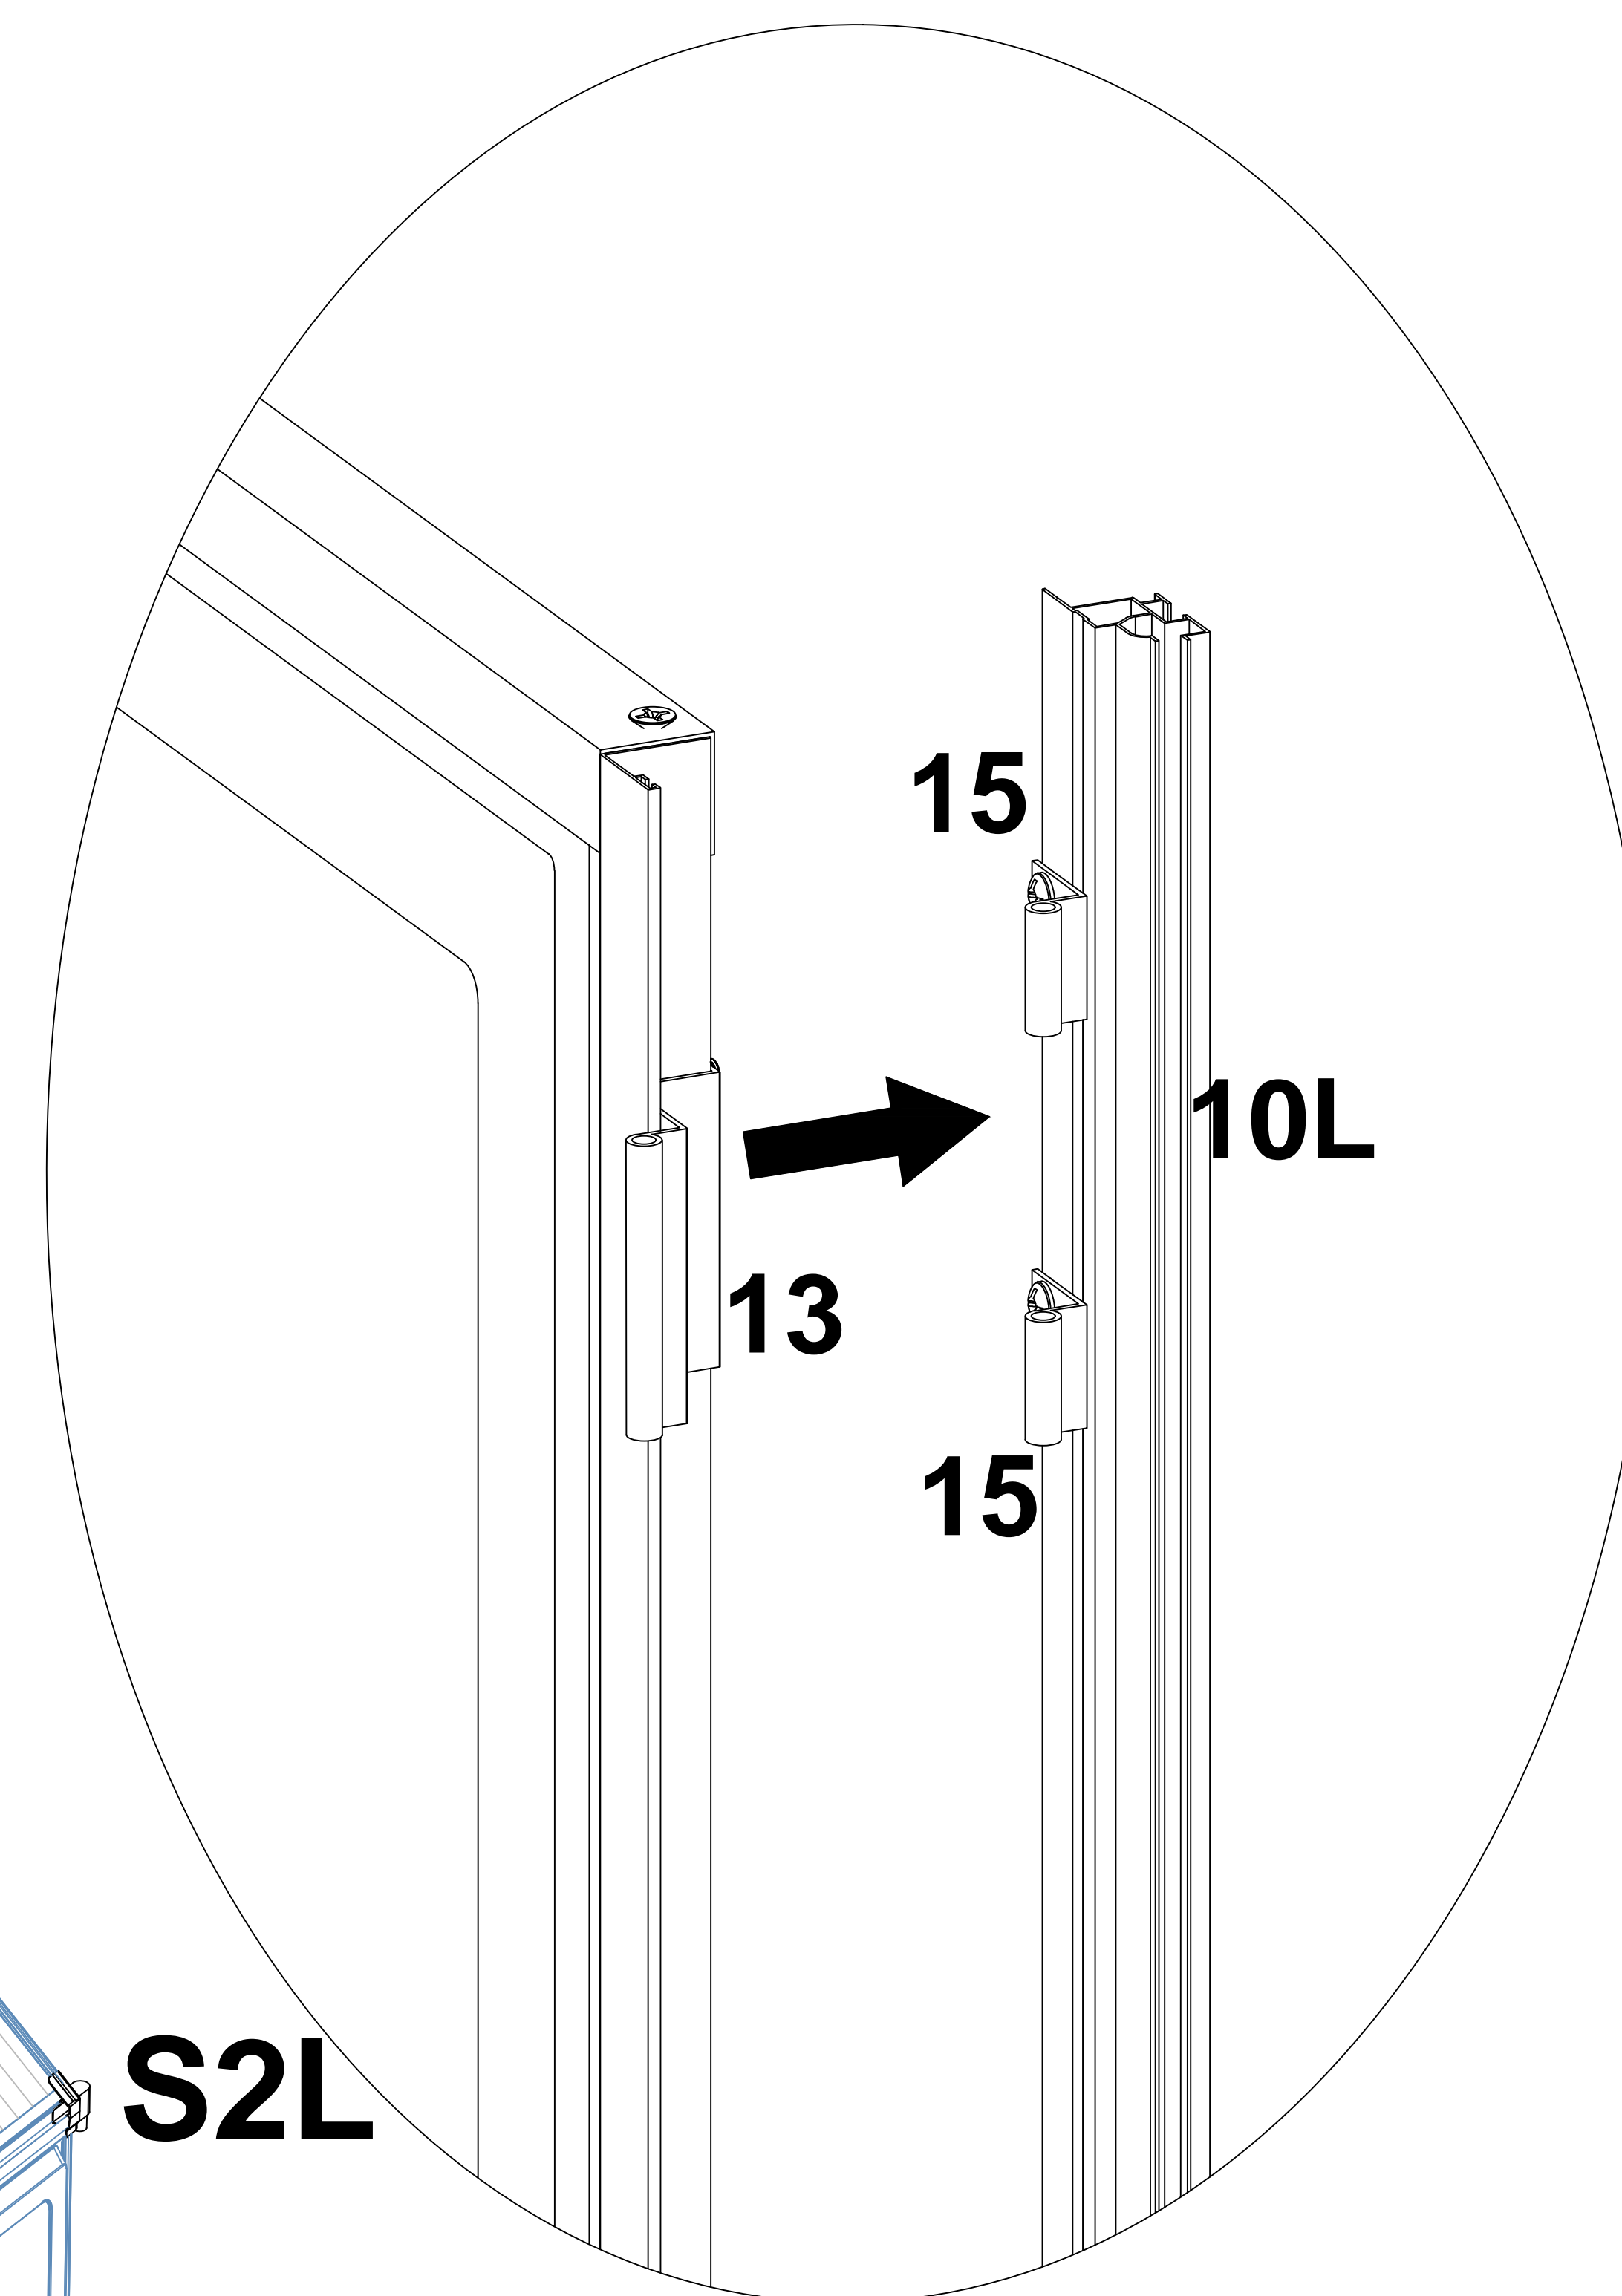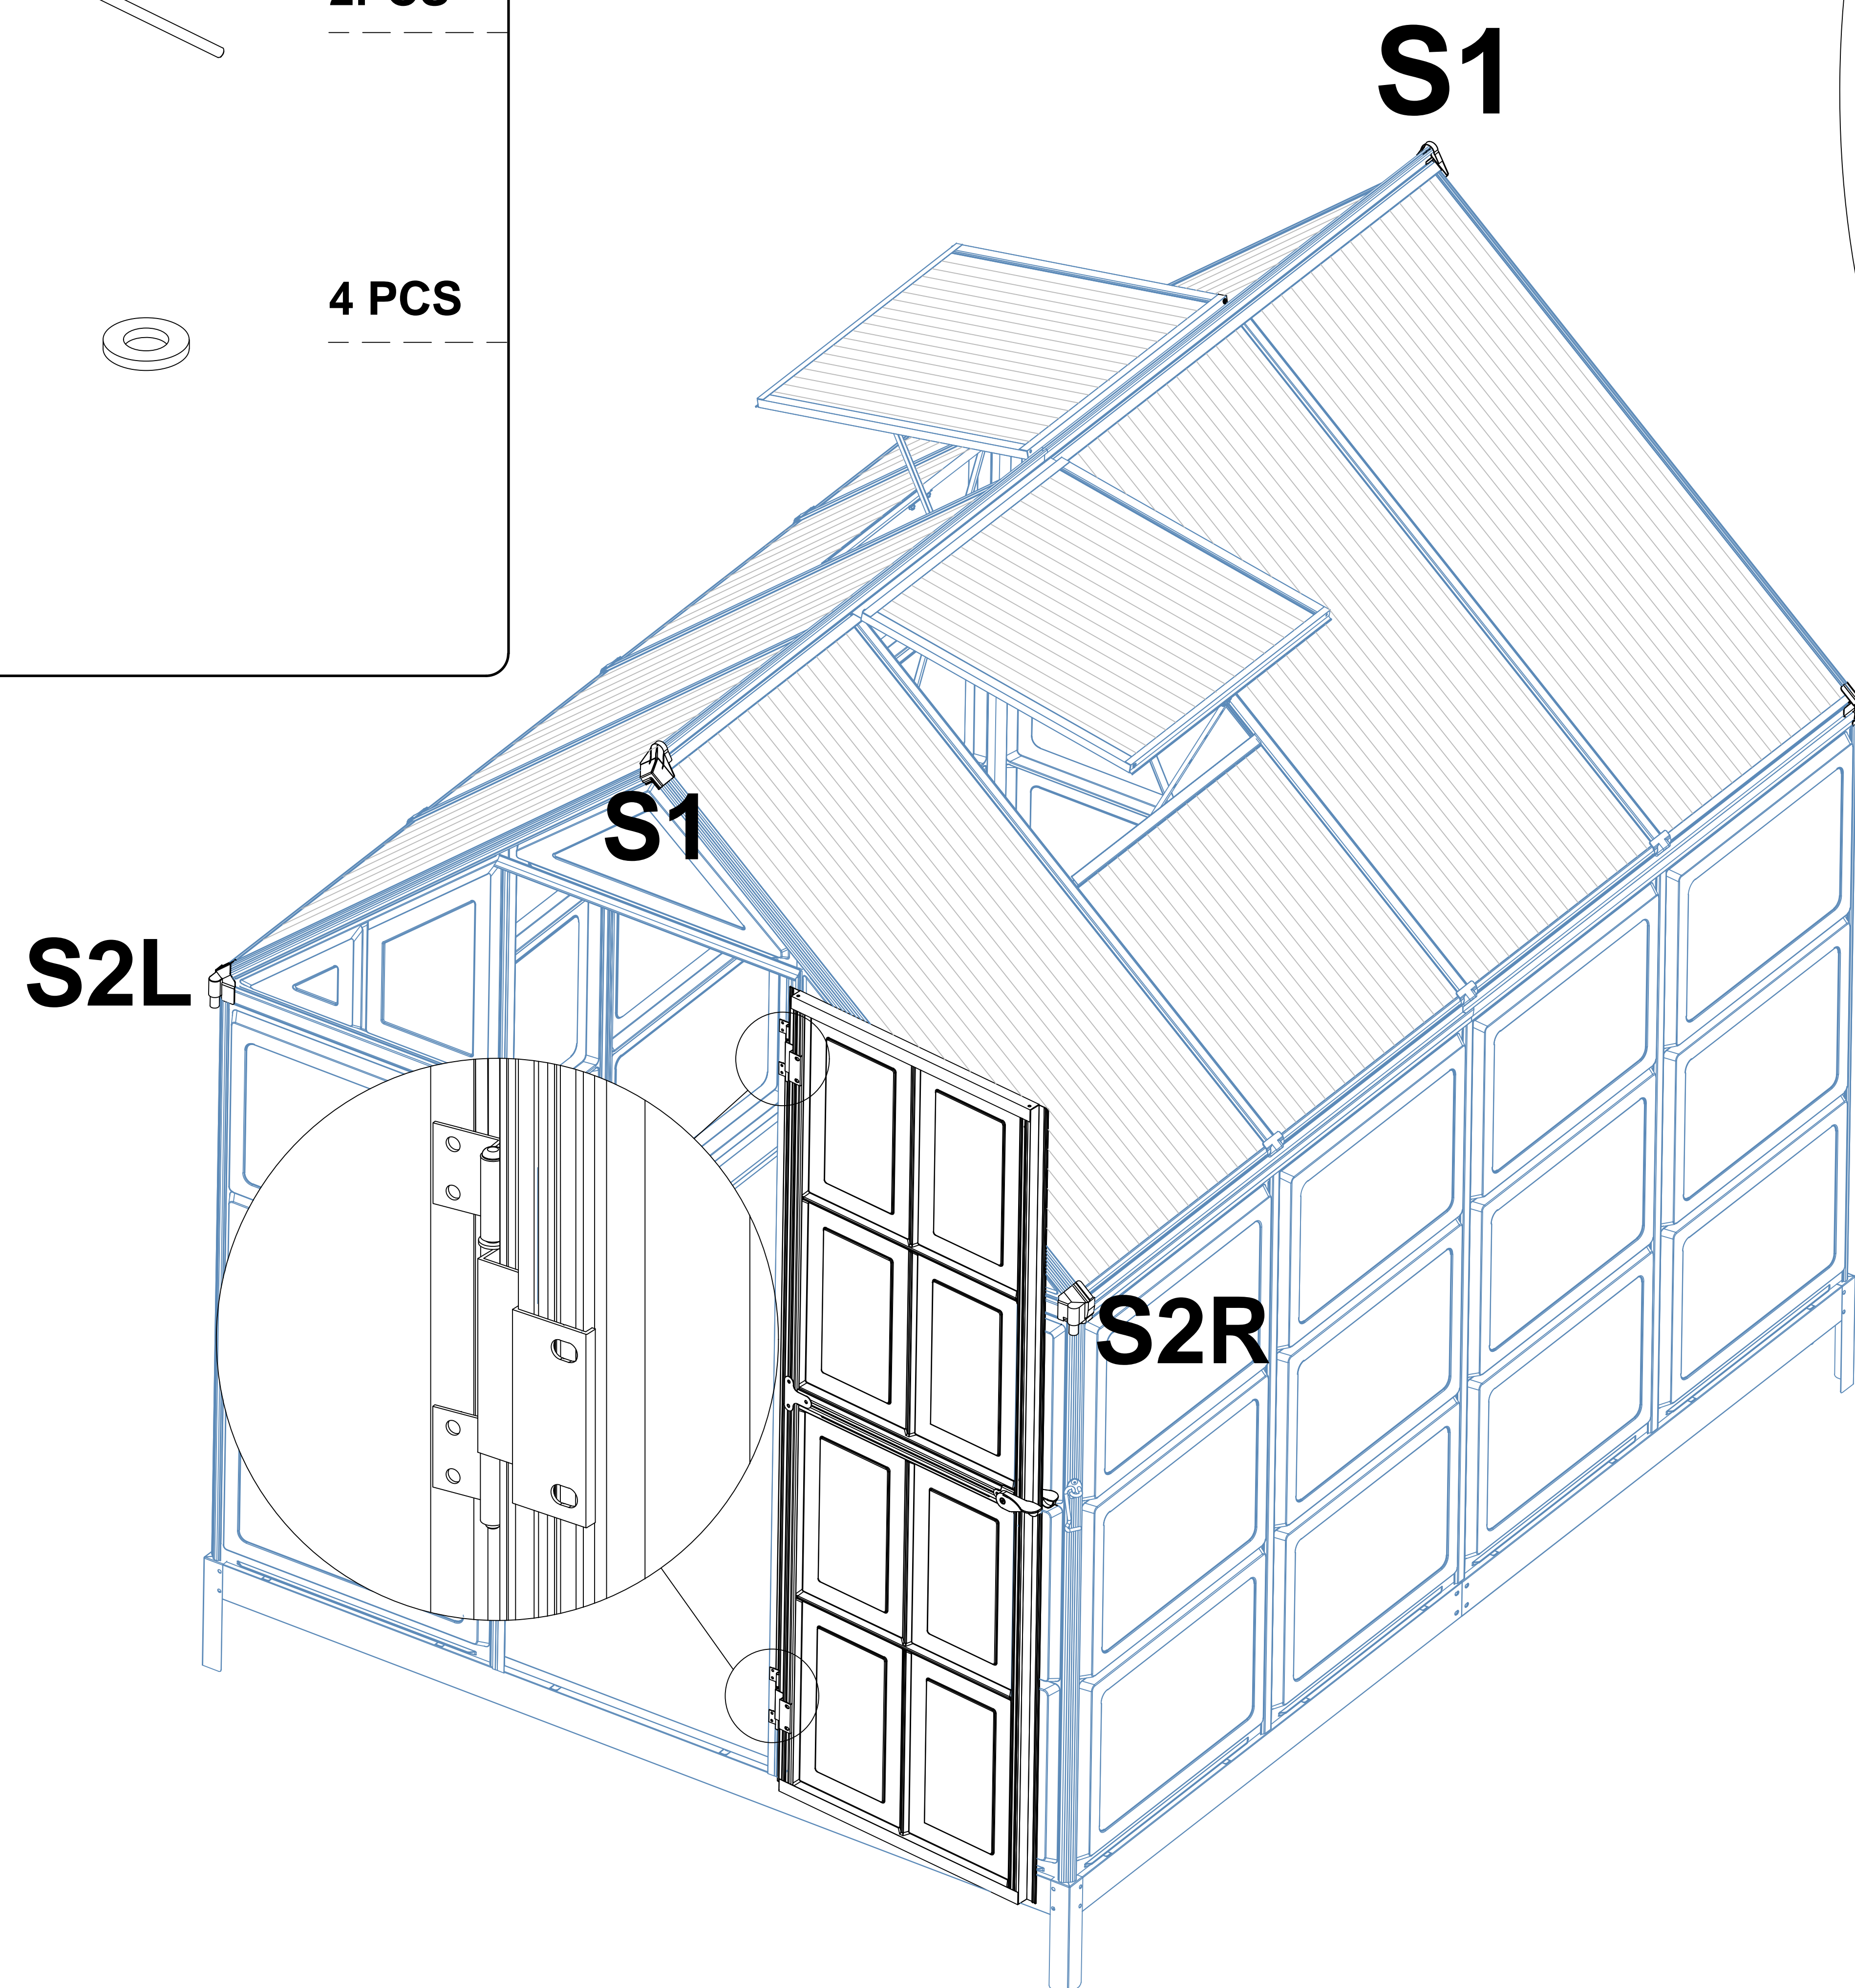

a

X2

15

F2

a1

X2

F7

F8