


Instructions:




1) Measure the length of the total circumference to clamp. Add 1-1/2" extra to allow for installation of the fastener.




2) Cut the band to length using metal shears or snips.

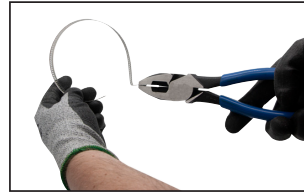

3) Using pliers, fold up one end of the band, generally 6 to 8 gear slots in will work well.

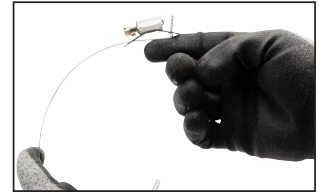

4) Slide the fastener onto the band, starting with the screw side first.

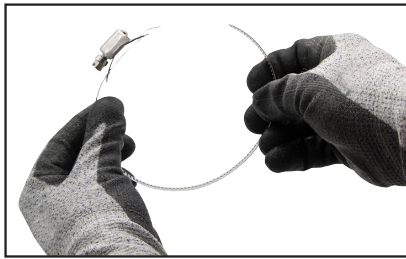

5) Once the fastener is on the band, fold the bend back down to secure the fastener into place.



6) Feed open end of the band into the worm gear of the fastener.



7) Using a 5/16" nut driver or slotted screw driver, tighten the clamp. *Optional: use the included caps to slide over the exposed end of the band to prevent injury.*